

SuntNeew

Tire Inflator & Jump Starter


USER&CARE INSTRUCTIONS

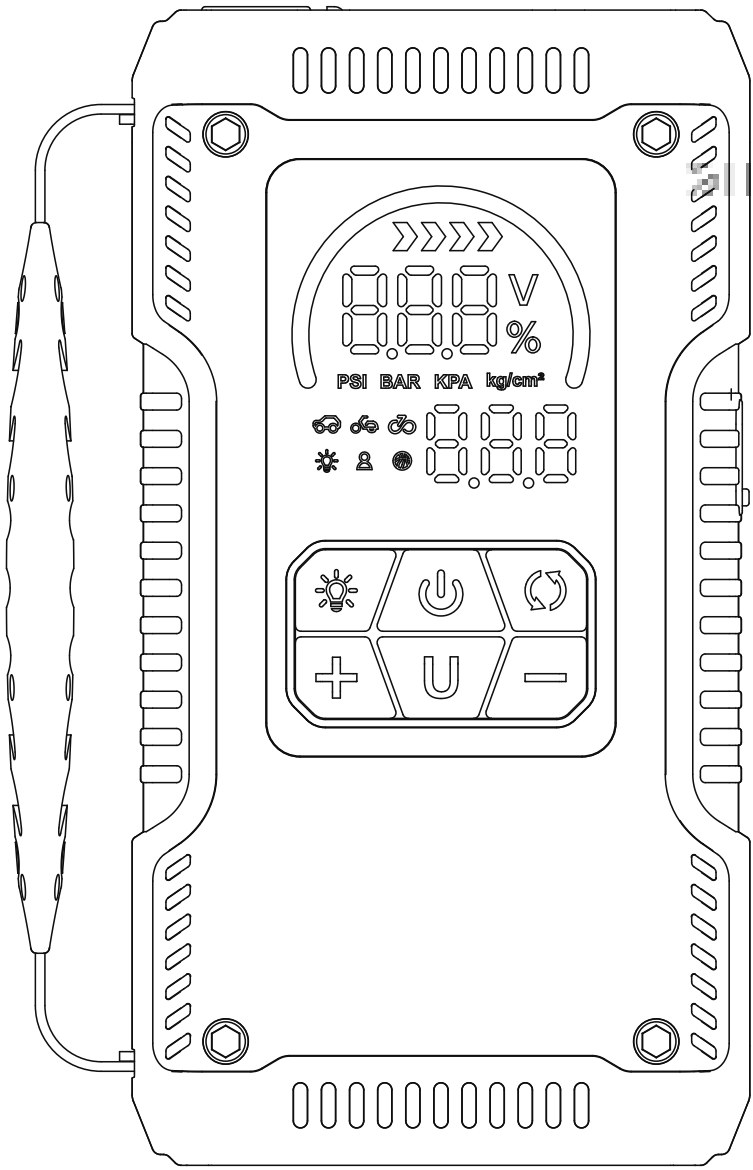


LISTS OF PACKAGING

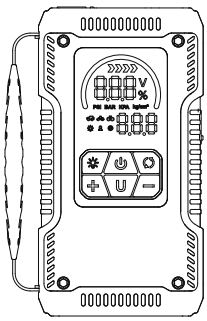


Inflator
X1



Air hose
X1

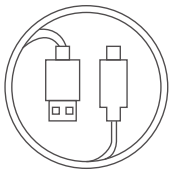

USB cable
X1



Ball needle adapter
X1




Air nozzle adapter
X1




Air nozzle adapter
X1



Presta valve adapter
X1

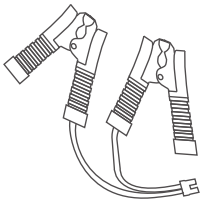

Battery clip
X1

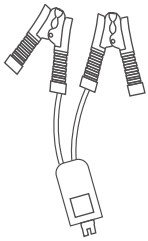


Smart battery clip
(optional)X1




Instruction manual
X1

Note: The power clip is an optional item, and only one of the options can be chosen.

PRODUCT INTRODUCTION

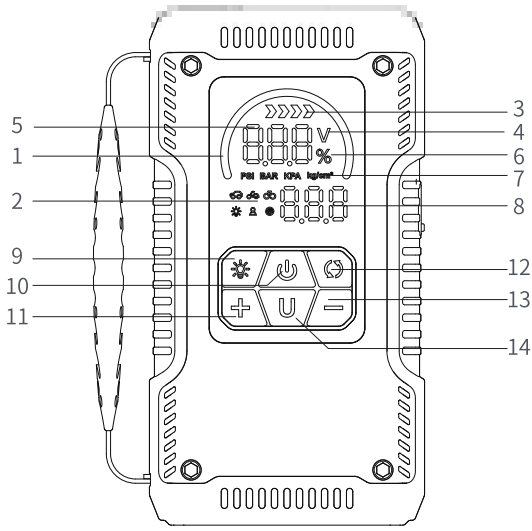

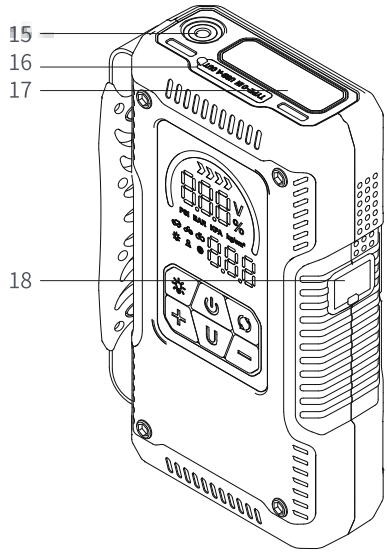

1.Colorful display (changes with pressure)
2.Mode display
3.4-grid battery indicator
4.Battery voltage display symbol
5.Current pressure value display
6.Battery percentage display
7.Unit display
8.Set pressure display
9.Light control button
10.Power on/off button / Start & stop button
11.Pressure increase button
12.Mode switch button
13.Pressure decrease button
14.Unit conversion button
15.Air hose interface
16.Type-C charging input port, USB output port
17.LED light
18.battery clip interface

Long press for 2 seconds to power on/off; short press to start or pause inflation.

In off state: Long press for 2 seconds to turn on the light.In on state: Short press to turn the light on / off;Short press again to switch light modes;Press once more to enter SOS flashing mode.

Short press to decrease preset pressure; long press to decrease rapidly.

Short press to increase preset pressure; long press to increase rapidly.


Mode switch button: short press to switch inflation modes, including Car Mode, Bicycle Mode, Motorcycle Mode, Ball Mode, and Custom Mode.

Unit switch button: short press to switch units, including PSI, BAR, KPA,kg/cm².

⚠Note: Each time the custom mode is used, the preset air pressure value will be saved. When the device is turned on next time, the value set and used last time will be displayed.

INSTRUCTIONS

1. Product startup method:
Battery powered status, long press the power button to turn on/off, and start/stop the inflation pump.
2. Install the inflation tube, connect the product at the screw cap, connect the air nozzle to the tire, and press the handle downwards. The display screen will show the current tire pressure.
3. Set tire pressure: The "↻" key is the mode unit conversion key. Press the "-" or "+" key to preset tire pressure.
4.After the tire pressure is preset, press the key to start inflating; Inflate to the preset tire pressure and automatically stop charging.
5.After the work is completed, long press the power button to turn off the device.

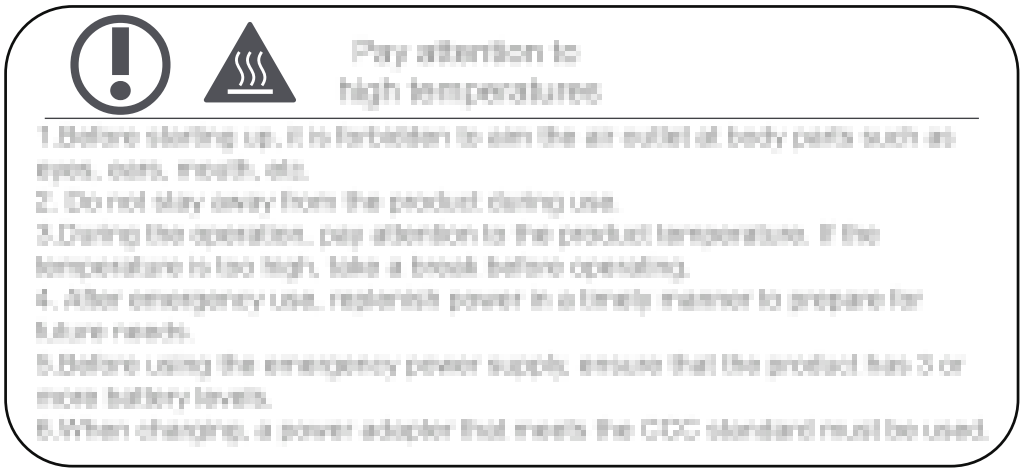


MODE SWITCHING

Short press the [↻] icon button to select 6 inflatable scene modes for scene mode switching, namely:

Preset mode	Preset value of air pressure	Adjustable range of air pressure
Bicycle	40Psi	30-145Psi
Motorcycle	35Psi	28-45Psi
Car	35Psi	28-50Psi
Ball	8Psi	5-16Psi
Self-setting	35PSI(Mnemonic settings)	3-150Psi


Long press the mode switch button to switch the air pressure display unit.
Unit conversion formula: 1bar=14.5psi.
Note: The custom mode will remember the set value.

Inflating operation steps

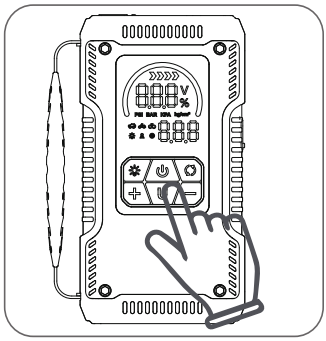


Long press to enter inflation mode
press Select Mode
Press+- to adjust the air pressure value

①

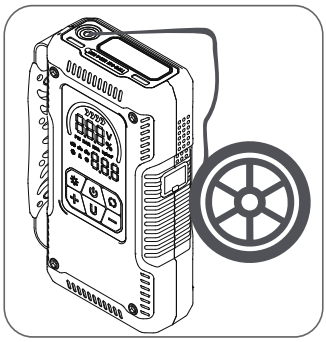


Connect the air outlet to the tire valve with the air hose

②

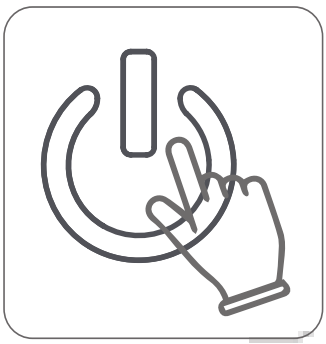


Short button
Start inflation

③

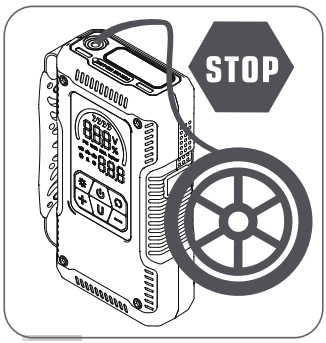

The pump will automatically stop when the set pressure is reached


④

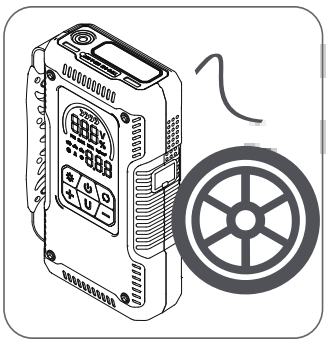


Disassemble air hose and disconnect the connection

⑤


Emergency power start operation

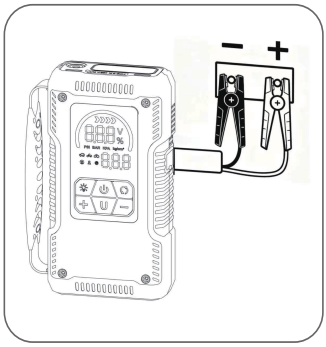

Insert the DC plug into the DC5 socket

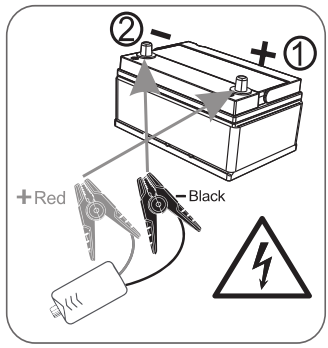


Connect the red clip to the positive pole, the black clip connected to negative pole

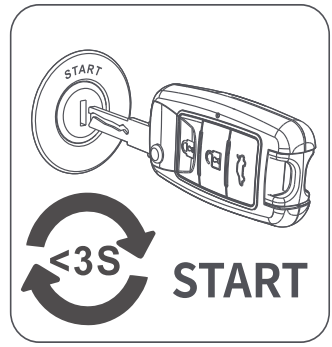


Start the car
Start<3 seconds

① ② ③

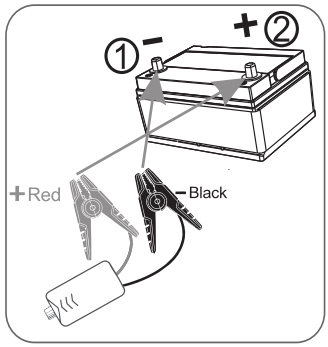


Disconnect

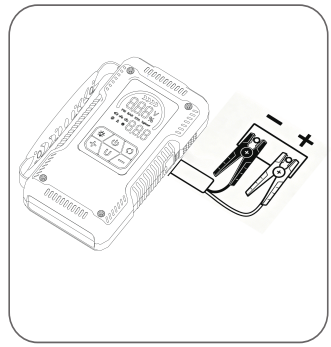


Remove the clip

④ ⑤

Important Note

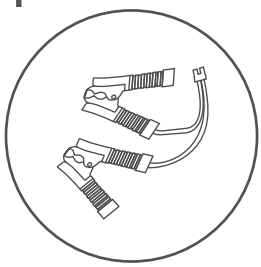

Battery clip

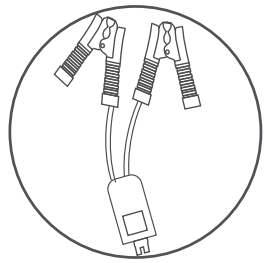

Smart battery clip

1. Before use, ensure the red clamp is connected to the positive terminal (+) of the battery, and the black clamp to the negative terminal (-).

2.The standard clamps must be connected strictly as required; otherwise, the battery or the product may be damaged.

3.Before using the emergency jump starter, ensure the product has a battery level of 3 bars or more.

RECOMMENDS ABOUT SETTING PRESSURES

Bicycle	12,14,16 inches bicycle tries	30-50 Psi
	20,22,24 inches bicycle tries	40-50 Psi
	26,27.5,29 inches mountain bicycle tries	45-65 Psi
	700c road bike open tire	80-120 Psi
	700c road bike tube	100-130 Psi
Motorcycle	Motorcycle,electric motorcycle tire	30-36 Psi
Balls	Basketball	7-9 Psi
	Football	8-16 Psi
	Volleyball	4-5 Psi
	Rugby	12-14 Psi
Car	Ordinary tire	34-36 Psi
	Reinforced tire	40-45 Psi
Scooter	32-50Psi	
The recommended inflation pressure is for reference only. Please refer to the Instruction Manual of the product for the specific inflated pressure.		

PARAMETER INFORMATIONS

Product name	Tire Inflator & Jump Starter
Charging parameters	5V ⎓ 2A
Rated voltage	14.8V
Rated power	96W
Inflatable range	3-150psi
Working noise	<82dB
Charging interface	Type-C
Working temperature	14 °F to 113 °F (-10 °C to +45 °C)
Storage Temperature	-4 °F to 158 °F (-20 °C to +70 °C)

IMPORTANT SAFETY INSTRUCTIONS

WARNING - When using this product, basic precautions should always be followed, including the following:

a) Read all the instructions before using the product.

b) To reduce the risk of injury, close supervision is necessary when the product is used near children. Children should not operate this device unless under strict supervision by a person responsible for their safety.

c) Do not put fingers or hands into the product.

d) Do not use any attachment that is not sold by jump starter manufacturer which may result in a risk of fire, electric shock, or injury to persons.

e) To reduce the risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the jump starter.


f) Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

g) Do not operate the jump starter with a damaged cord or plug, or a damaged output cable.

h) Do not disassemble the jump starter; take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or electric shock.

i) To reduce the risk of electric shock, unplug the jump starter from the outlet before attempting any instructed servicing.

j) WARNING - RISK OF EXPLOSIVE GASES

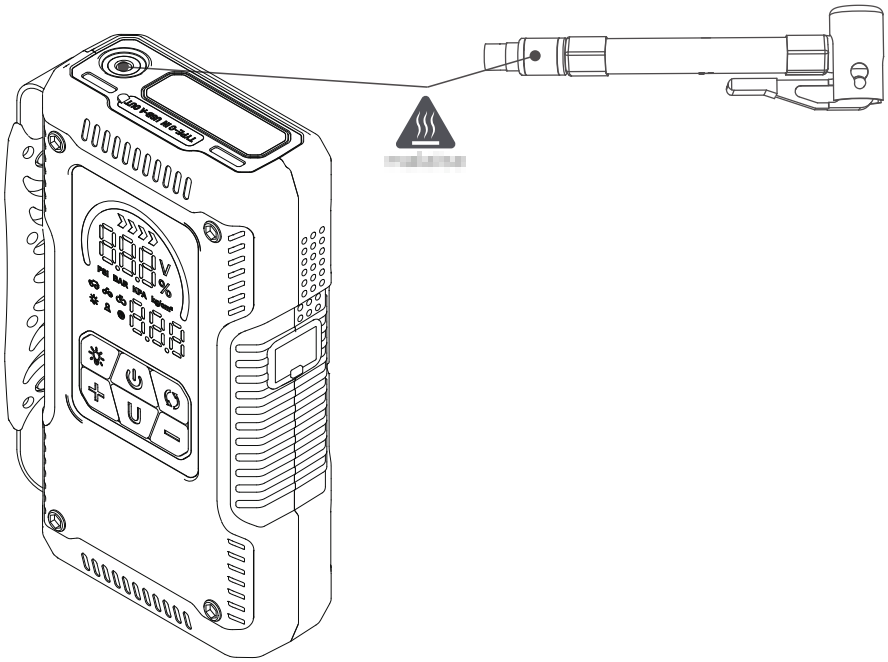

1.WORKING IN VICINITY OF A LEAD ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS OF THE UTMOST IMPORTANCE THAT YOU FOLLOW THE INSTRUCTIONS EACH TIME YOU USE THE JUMP STARTER.
2.To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of the battery. Review cautionary marking on these products and on engine. k) The device shall be stored indoors and protected from the elements; l) The unit shall not be charged outdoors; m) When in use, steps should be taken to reduce the exposure to rain, sleet, snow, and the like. n) PERSONAL PRECAUTIONS
3.Consider having someone close enough by to come to your aid when you work near a lead-acid battery.
4.Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.

WARNING CONT.:

1.Wear complete eye protection and clothing protection. Avoid touching eyes while working with battery.
2.If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.
3.NEVER smoke or allow a spark or flame within the vicinity of battery or engine.
4.Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
5.Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.
o) When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.
p) Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
q) Do not expose a jump starter to fire or excessive temperature.

Exposure to fire or temperature above 130°C (266°F) may cause explosion.
r) Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
s) Attach output cables to a battery and chassis as indicated below. Never allow the output clamps to touch one another.
t) Dropping, hitting, or other excessive amounts of force to the Jump Starter may damage the unit (external and internal), which may result in loss of operation, electrical fire, or cause other serious damage.
u) Do not overcharge the internal battery or short circuit output connector.
v) This product is suitable for use in home, office, household workshop or garage. Do not operate in rough environment such as repair facility.

WARNING: This Jump Starter is only intended to jump start 12V cars, trucks, boats, or motorcycles with an internal combustion engine and single lead-acid battery systems. Do not use this device to jump start batteries outside of these four types of vehicles; doing so may cause a fire or other serious injuries. Refer to the user manual for additional safety information.

SAVE THESE INSTRUCTIONS

FCC warning:
This device compli tion is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.