
SuntNeew

JUMP STARTER
WITH AIR COMPRESSOR

INSTRUCTION MANUAL

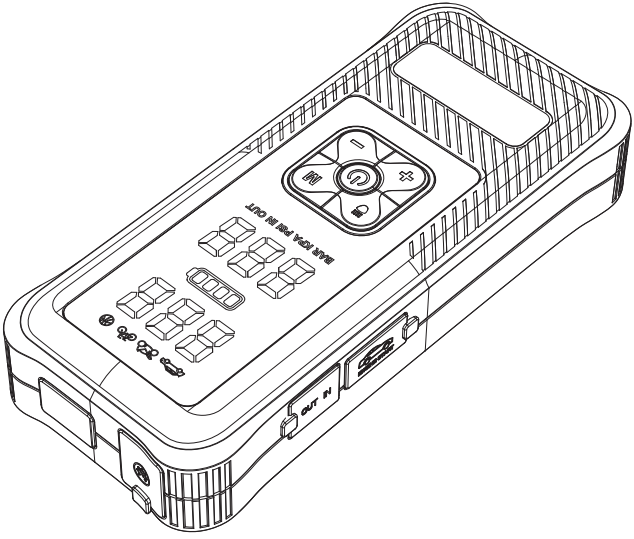

Model: M7 EN

Thank you for choosing this Jump Starter.To ensure a good user experience,personal safety,and property security,please read all of the instructions carefully before using this product, please keep this manual for reference.

⚠ CHARGE IT FIRST

While reading through the user manual, you can start to charge your Jump Starter with the wall charger and type-c cable provided(wall charger Not Included).

⚠ WARNING

This unit is for vehicle (equipment)with 12V batteries. It may be dangerous if it is used withother types of batteries.Read and understand the safety information before using the jump starter. Failure to follow the safety information may cause damage to the jump starter,and may also result in electric shock, explosions, fire, property damage, and personal injury.

⚠ CAUTION

Risk of Injury To Persons. Do not use this product if the power cord or the battery cables are damaged in any way. This device is not intended for use in a commercial repair facility. This device is intended to be stored indoors when not in use. This device shall not be stored or left outdoors when not in use.

IMPORTANT SAFETY INSTRUCTIONS

WARNING

When using this product, basic precautions should always be followed. Including the following:

1. Save these instructions.
2. Read all the instructions before using the product.
3. To reduce the risk of injury, close supervision is necessary when the product is used near children.
4. Do not put fingers or objects into the product.
5. Use of an attachment not recommended or sold by the jump starter manufacture may result in a risk of fire, electric shock, or injury to person.
6. To reduce the risk of damage to the electric plug, pull on the plug rather that the cords when disconnecting the jump starter.
7. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhaust unpredictable behavior resulting in fire, explosion, or risk of injury.
8. Do not operate the jump starter with a damaged cord or plug.
9. Do not disassemble the jump starter, only a qualified service technician should service the product. Incorrect reassembly may result in a risk of fire or electric shock.
10. To reduce the risk of electric shock, unplug the jump starter from the outlet before attempting any instructed servicing.

WARNING

RISK OF EXPLOSIVE GASES

1. WORKING IN THE VICINITY OF A LEAD ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS THE UTMOST IMPORTANCE THAT YOU FOLLOW THE INSTRUCTIONS EACH TIME YOU USE THE POWER PACK.

2. To reduce the risk of battery explosion, follow these instructions and those published by the battery manufacture and manufacture of any equipment you intend to use in the vicinity of the battery. Review all cautionary marking on these products and on engine.

PERSONNEL PRECAUTIONS

1. Consider having someone close enough by to come to your aid when working near lead-acid battery.
2. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
3. Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
4. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with cold water for at least 10 minutes and get medical attention.
5. NEVER smoke or allow a spark or flame in vicinity of battery or engine.
6. Be extra cautious to reduce the risk of dropping a metal tool onto the battery. It might spark or short-circuit battery or other electrical part that may cause explosion.
7. Remove personnel metal items such as rings, bracelets, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing severe burn.

WARNING

1. When charging the jump starters internal battery, work in a well-ventilated area and do not restrict ventilation in any way.
2. Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burn.
3. Do not expose a jump starter to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
4. Have servicing performed by a qualified technician using only factory replacement parts.

CAUTION

1) Do not immerse in water.
2) Do not use or store the JUMP STARTER WITH AIR COMPRESSOR near sources of fire or a heater.
3) Do not put the JUMP STARTER WITH AIR COMPRESSOR into a fire or apply direct heat to it.
4) Do not pierce the JUMP STARTER WITH AIR COMPRESSOR casing.
5) Do not strike, throw, or subject the JUMP STARTER WITH AIR COMPRESSOR to severe physical shock.
6) Do not attempt to modify the JUMP STARTER WITH AIR COMPRESSOR in any way.
7) Do not place the JUMP STARTER WITH AIR COMPRESSOR in a microwave oven or pressurized container.
8) Do not use the JUMP STARTER WITH AIR COMPRESSOR if it gives off an odor or generates heat.
9) Do not insert any metal object into the cable input opening as this could cause a spark and electric shock.

Technical Specification

Model Number: M7

Operating Temperature: -20°C to 50°C

Charging Temperature: 0°C to 40°C

Storage Temperature: -20°C to 50°C(avg Temp.)

Type-C (Input/Output): 5V/2A

USB-A (Output): 5V/2A

Air pump: 19 cylinder

Inflator power: 1-150PSI

Dimensions (L x W x H): 94.5*46*221mm

PRODUCT OVERVIEW

Below is a list of items that should be included in your retail box:


1) JUMP STARTER WITH AIR COMPRESSOR x1
2) Intelligent battery clamps with starter cable x1
3) USB C Cable x1
4) Inflator Hose x1
5) Inflator Nozzles (4)
6) Instruction Manual



Intelligent battery clamps with starter cable



High quality type-C charging cable




Inflator Nozzles



Inflator Hose

OPERATING INSTRUCTIONS


❶ Increase Pressure
❷ Power button
❸ Decrease Pressure
❹ Inflator Mode
❺ Light button
❻ LED display
❼ EC5 Jump Start Output
❽ Type-C In/Out
❾ USB Output
❿ PORTABLE INFLATOR CONNECTION
⓫ LED light

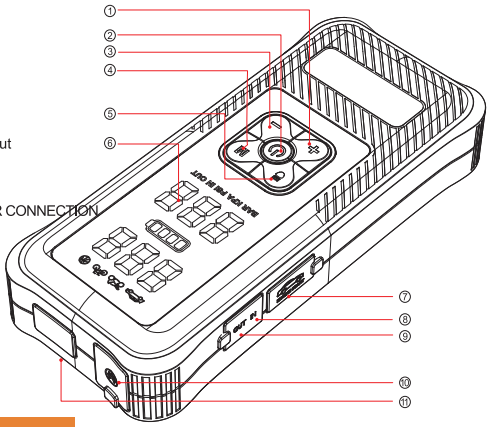


JUMP STARTING A VEHICLE

1) Before jump starting your vehicle always check the manufacturer instructions/recommendations/warnings first.
2) Check the internal battery charge status of the Vehicle Jump Pack by pressing the **"Power Button"** for 2 seconds before jump starting your vehicle.
3) Power will come on; the battery percentage will be displayed on the LCD screen.
4) **There must be at least 50% of battery level available.**
5) Insert the smart cable connector into the end of the EC8 Socket.
6) Connect the RED positive clip to the positive post on the battery, then the BLACK negative clip to the negative post on the battery.
7) **CAUTION:** Ensure the Vehicle Jump Pack and smart alligator clip cables are clear of all vehicle fan blades/belts/pulleys etc. before proceeding.
8) The LED on the smart cable will then turn solid GREEN. Wait 5 to 10 seconds then start your vehicle
9) Remove the clips **IMMEDIATELY** after the vehicle has started.
10) DO NOT use the Vehicle Jump Starter to repeatedly try and start your vehicle. Wait at least thirty (30) seconds between attempts. Check vehicle after three attempts.

PORTABLE INFLATOR FEATURES

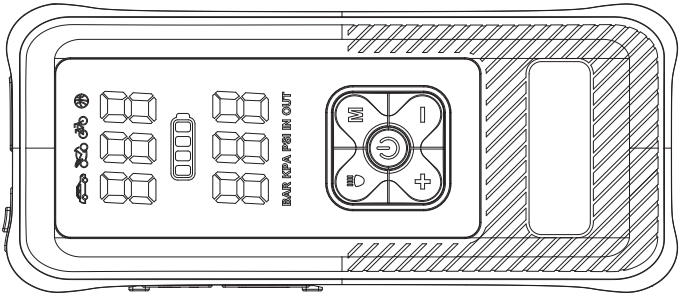

1) Connect the supplied air hose to the connection on the end on the unit.
2) Press and hold the **"Power Button"** for 2 seconds and the power will come on; the battery percentage will be displayed on the LCD screen.
3) Short press the M to change different inflator mode.
   Long press 2 seconds the M to change different inflator unit from PSI/BAR/KPA.
4) Inflator Mode Screen



❶ Pound per square inch
❷ 100 Kilopascals
❸ KiloPascals

5) To adjust the automatic cut off pressure setting, press either the **+ or –** **button** to adjust the value up or down.
6) Connect inflator hose to valve stem.
7) To Start/Stop the inflator press the **"Inflator Start/Stop"** **button**
8) The inflator will shut off at the preset pressure.

Jumper Clamp Indicator Instruction		
Item	**Technical parameters**	**Instruction**
Standby indication	support	When the clamp is in standby state, the red and green lights flash alternately.
Work instructions	support	When the clamp is in the conduction working state, the green light is always on.
Input high voltage protection	17.50V±0.5V	When the clamp is in standby mode, and the voltage at the EC8 terminal is higher than this value, the protection will be triggered, and the red light will always be on, and the protection will be automatically released after the fault is eliminated.
Input low voltage protection	14.0V±0.4V	When the clamp is in standby mode, and the voltage of the EC8 terminal is lower than this value, the protection will be triggered, and the red light will always be on, and the protection will be automatically released after the fault is eliminated.
High temperature protection	support	When the detection temperature of the clamp is ≥ 80°C±10°C, the output is automatically disconnected, and the red light is always on, and the buzzer does not sound; when the temperature of the clamp is lower than the protection value, the protection is automatically released.
Reverse polarity protection	support	When the wire clip is reversely connected to the car battery that is higher than 1.0V, the protection will be triggered, the red light will always be on, and the buzzer will continue to beep, beep, beep for a short time, and the protection will be automatically released after the fault is eliminated.

Jumper Clamp Indicator Instruction		
Item	**Technical parameters**	**Instruction**
Anti charge protection	support	When the protection is triggered, the output is automatically disconnected, and the red and green lights flash alternately; the protection can be automatically released after the fault is eliminated.
Start overrun protection	support	During the conduction process, the clamp detects that the voltage of the start port is lower than 7.0V and lasts for 0.5s, then automatically disconnects the output, the red light is always on, and the buzzer does not sound; it needs to be powered on again to release the protection.
Boot timeout protection	support	1. After the car is correctly connected, it has not been started. The output will be automatically disconnected after the clamp is turned on for 30 seconds, and the red light is always on. It needs to be powered on again to release the protection. 2. The voltage at the start port of the wire clip detection drops by 3.0V±0.2V, and it is judged to start the car. At this time, the wire clip continues to conduct for 5 seconds and then disconnects the output. The red light is always on, and it needs to be powered on again to release the protection.
Short circuit protection	support	In the standby state, when the red/black clips are short-circuited, there will be no sparks and no damage. When the protection is triggered, the red light will always be on and the buzzer will sound for a long time.


Jumper Clamp Indicator Instruction		
Item	**Technical parameters**	**Instruction**
Relay sticking alarm	support	After the relay of the wire clip is stuck, when the power is turned on again, an alarm will be triggered, the red light will be on, and the buzzer will continue to beep quickly and briefly.
Clip off detection	support	If the red and black clips of the cable clamp fall off when starting the car, it will automatically return to the standby state after about 2.5 seconds.

How to charge a mobile phone or digital products?




With powerful capacity and USB Quick Charger(5V/3A,9V/2A,12V/1.5A),it can full charge your smart phones and tablets up to 75% faster than a standard charger.

Operating instructions




First step:

Press the power button, then check the battery shown on the LED display



Second step:

Plug the USB port of the charging cable into the product USB



Third step:

Insert the other side into the input port of the mobile phone

CAUTION

1) The inflation air pressure of balloons, balls, swimming rings/floats and other products is less than the range of the air pump, and the inflation cannot be automatically stopped at the preset air pressure. Please be careful when using it under these conditions.
2) Always check the required air pressure and the maximum air pressure when inflating any tires.

CHARGING THE VEHICLE JUMP STARTER & PORTABLE INFLATOR

1) Use the supplied USB cable to charge the Vehicle Jump Starter & Portable Inflator. **NOTE:** While charging none of the other features and functions are active.
2) Once the internal battery level has reached 100% the charge is complete, and the unit will turn off after 10 seconds.
3) The battery level should be checked and charged every three (3) months.
4) When charging the internal battery, work in a well-ventilated area and do not restrict ventilation in any way.

CAUTION

1) The device shall be stored indoors and protected from the elements.
2) The unit shall not be charged outdoors.
3) When in use, steps should be taken to reduce the exposure to rain, sleet, snow, and the like.

USB PORTS

There are two (2) USB ports contained in your Vehicle Jump Starter & Portable Inflator.

1) Type – C USB, (IN) port – 5V, 2Amp for charging the internal battery contained inside the Jump Starter & Portable Inflator.
2) Type USB (OUT), 5A, 2.1Amp.

LED FLASHLIGHT

1) To turn the LED lights ON simply hold the ON/OFF Button down for at least two (2) seconds.
2) To turn the LED lights OFF hold the ON/OFF Button down for at least two (2) seconds.

USER MAINTENANCE INSTRUCTIONS

1) The battery level should be checked, and the Vehicle Jump Starter & Portable Inflator should be charged every three (3) months. Keeping the internal battery fully charged will ensure the Vehicle Jump Starter & Portable Inflator in ready to use when needed. This will also extend the life of the internal battery.
2) Store the Vehicle Jump Starter & Portable Inflator in a clean dry environment at room temperature if possible.
3) If you see a bulge in the case or notice a chemical smell STOP using the Vehicle Jump Starter & Portable Inflator immediately and seek technical help.

TROUBLE SHOOTING

PROBLEM	SOLUTION
The vehicle will not start	Check the connection of the alligator clips to the battery terminals and ensure the LED is solid green and not flashing on the smart alligator clips. Ensure you have a minimum of 50% value for the internal battery.
Vehicle Jump Pack & Portable Inflator will not charge	Check the cable and connection and try charging a different device.

FCC WARNING

Title 47 Subpart, 15.105(b)

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio television reception, which can be determined by tuning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

SuntNeew