Instructions for LCD Quartz watch

Six bit digital universal Edition (A1)

Note: This manual is generic version, LCD pattern as inconsistent with the physical circumstances, does not affect the use of the calibration method.

Function Schematic Drawing of Sports Watch

Week Expressions

SU-Sunday MO-Monday TU-Tuesday WE-Wednesday

TH-Thursday FR-Friday SA-Saturday

AM-Morning PM-Afternoon

How to use buttons

RESET(S1)- Reset Button START (S2)-Start Button

MODE (S3)- Mode Button LIGHT (S4)- Light Button

ALARM CHIME

General Guide

- In normal time display, press and hold S1 to display the alarm time, release to resume the normal time display.
- After all operation, press S3 return to the normal timing state.
- After alarm set, when the alarm time arrives, it will sound (can be turned on and off).
- After chime set, the watch will sound once per hour (can be turned on and off).
- Animation area is only for decoration and has no other function.

1 How to calibrate standard time, date, week

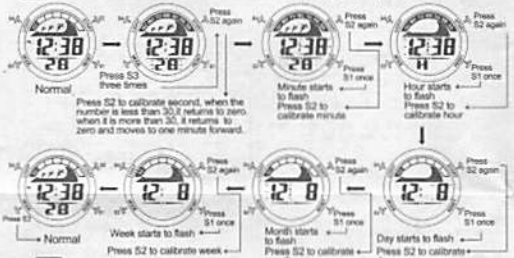

2 How to use stopwatch (1/100 second)

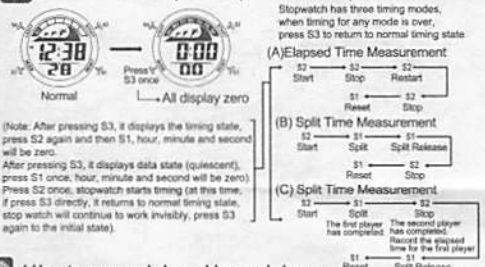

3 How to set the alarm

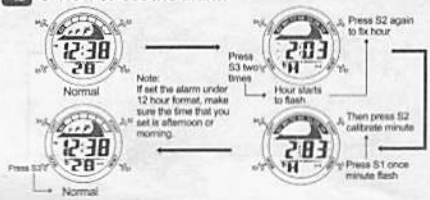

4 How to open and close chime and alarm

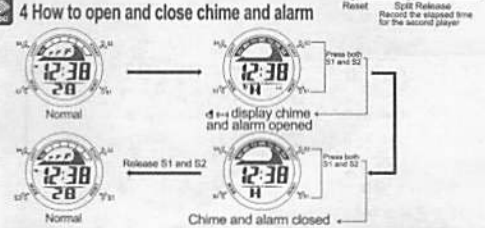

5 How to use cold light

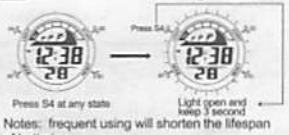

Notes: frequent using will shorten the lifespan of batteries.

6 How to change 12/24 hour format

7 How to set up Chime

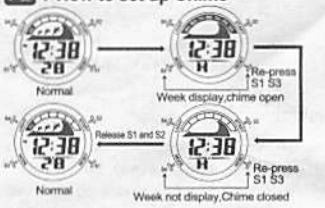

Notices:

- Don't operate underwater when swimming or diving.
- Long-term use of cold light will consume power of battery. For extending the battery lifespan, pls don't operate exceed three time every day.
- Avoid wearing watch in conditions of strong electric fields, magnetic fields and electrostatic high frequency.
- Normal physical exercise won't be damaged. But avoid to be fallen on the ground and collide with hard objects.
- When battery is used up and watch stop, pls take out the battery from watches. Otherwise, it will damage inside watches parts.
- If there is water fog or mist inside watch case, pls go to repair at once in our authorized repairing services centers to avoid damaging and corroding inside watches parts.
- Avoid using in the circumstance of extremely hot and severe cold and keep using in normal temperature between -5 and 50 degree. The difference per month is +-30 seconds (conforms to int'l standards).
- Don't clean watches surface in Chemical washing liquid especially for soap liquid. It will damage and corrode the rubber ring inside result in leakage. The dry soft cloth is better for cleaning.
- Cold light won't be visible in the strong sunlight.
- The water resistance is up to 30 m (Tested in vacuum).
- When using this manual, we will continuously improve quality and some functions will be possibely added. If we can't update in time, please understand it.
- Our watch conforms to national standards of GB/T22780-2008 belong to Top Class quality.
- All the watches need install batteries to be tested before packing. When you buy, the batteries already consumed a part of power. So the lifespan of original batteries will be less than two years of valid lifespan.

Warning: LCD digital movement is CR2025. Quartz analogue movement is SR626SW.

Warranty Card(China Area)

From the date you purchased, the guaranted valid time is one year. It will be effective after this warranty card must be signed & stamped by distributor.

If watches arise quality problems, we will afford the obligation of free repairing.

Except for the below situations, we will collect essential costs of repairing & services.

- Breakage and damage without using and operation under the instruction of notice.
- Battery used up or fade within the scope of normal use.
- Warranty card need to be provided when repairing.

purchase date: _____Year _____Month _____Day

warranty date: _____Year _____Month _____Day

MADE IN CHINA

液晶式石英手表使用说明书

六位数字式通用版(A1)

注：本说明书为通用版，液晶显示图案如与实物不一致的情况下，不影响使用调校方法。

运动表功能示意图

星期的表示对照

SU—星期天　MO—星期一　TU—星期二　WE—星期三

TH—星期四　FR—星期五　SA—星期六

AM—上午　PM—下午

按键的使用

RESET（S1）—转换键　START（S2）—调校键

MODE（S3）—模式键　LIGHT（S4）—灯光键

秒或者ALARM（ALM）—闹铃　+或者CHIME（CHM）—整点报时

综合指南

- 在正常时间显示下，按住S1可显示闹铃时间，放手后恢复正常时间显示。
- 在正常时间显示下，按住S2可显示月/日，放手后恢复正常时间显示。
- 所有操作结束后，按S3即可回至到一般计时状态。
- 闹铃功能设定后，每日到达闹铃时间时，闹铃会发出响闹铃声（可开关）
- 整点报时功能设定后，则每小时会响闹一次（可开关）
- 动画区一般做装饰作用，并无特别功能。

怎样校正标准时间. 日期. 星期

怎样使用码表(1/100秒)

怎样设置闹铃时间

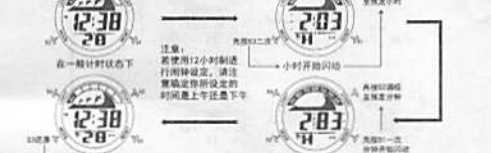

怎样开关闹铃功能

怎样使用冷光

注意：经常使用冷光照明时，会减少电池使用寿命。

6 怎样使用12/24小时制转换

怎样开关整点报时

注意事项

- 凡游泳、潜水时请勿在水面下操作按钮。
- 长期使用冷光将消耗大量电力，为延长使用寿命，每天按住亮灯不要超过三次。
- 避免在强力电场、磁场及静电高周波等状况下配戴。
- 轻松的体育活动，不会使阁下的手表受到损伤，但务请避免将手表掉落地面，或是和坚硬的物体碰撞，以免手表受到损伤。
- 电池用完后手表停止走动后，应尽量避免让电池留在表内，以防损坏内部电子零件。
- 如发现表面内有水雾或水滴，应立刻到指定维修部拆修，以防腐蚀内部电子零件。
- 避免在酷热或严寒中使用，在正常温度下-5℃～50℃，每月误差(±30秒（符合国际标准）。
- 不可使用化学品洗擦表面，仅可使用软布清洗，尤其不可使用肥皂液，会腐蚀表内之保定防水圈导致漏水。
- 在阳光下冷光将不容易表现。
- 本表防水深度达到30M（真空测试）。
- 在使用本说明书时，本公司将不断提高质量，优化产品，一些功能细节会有所增减，如本品及时补充说明，请予以谅解。
- 产品符合国家标准 GB/T 22780-2008 一等品要求。
- 由于所有手表在出厂前均要装上电池进行强机测试，在您购买手表时，手表电池已经过一段时间的正常耗电，因此，原配电池的更换周期有可能短于标定的3年使用寿命（正常使用范围内）。

警告：液晶电子机心使用LR1130或CR2025电池，请勿使用非上述指定型号电池。

保修卡（中国区域）

本运动表在正常情况下使用，自购买日起可享有国际性保用一年。

此保修卡经由经销商签章及盖章后，方能生效，产品如出现故障，本公司将免费予以维护，保修。但有下列状况时，本公司将酌情收取维修成本费：

- 未遵守注意事项使用而导致损坏者。
- 电池正常消耗及外表使用后之磨损，退色等。
- 在维护时需出示此保修卡。

购买日期：_____年_____月_____日

保证日期：_____年_____月_____日

经销商签章：

CE

中国制造