

# User Manual

Product Name:

Dikey BYD smart central control physical buttons

Applicable models:

BYD Atto/Seal/Sealion , DENZA


## Contents list

|                   |       |
|-------------------|-------|
| App Installation  | 01/02 |
| Device Connection | 02/11 |
| Scene mode        | 11/19 |
| Global Settings   | 19/25 |
| Settings          | 26/27 |
| Set Info          | 28/30 |


# App Installation

## App Installation


1. Insert the USB drive that came with the product into the car's USB port, and open the 'File Manager' on the central screen.

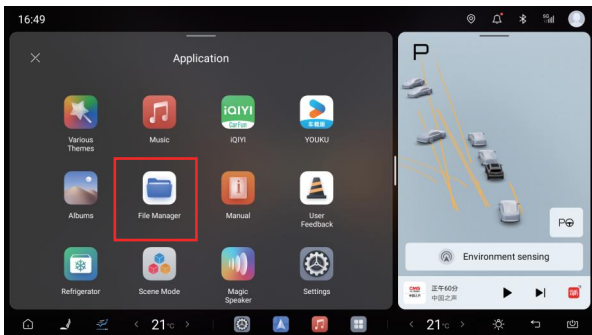

2. Click on USB, find 'Dikey Smart Connect', and click to open the apk file for installation.

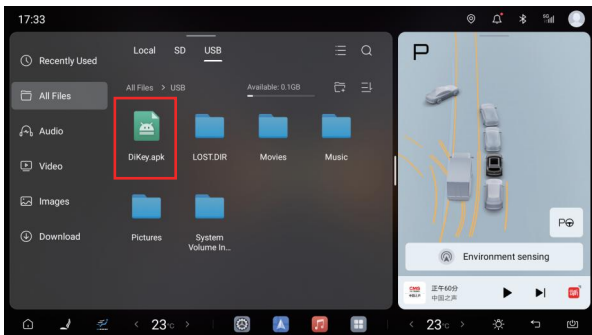

3. Click Install, and after the installation is complete, a new “Dikey Smart Connect” app will appear on the central control screen's system apps page

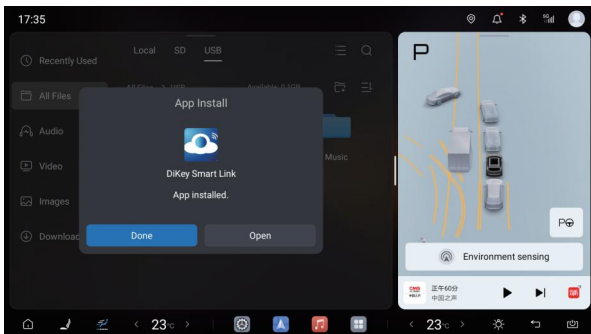


## Device Connection

### Device Connection


When you first run the 'Dikey Smart Link' app, you need to agree to the user agreement and permission settings, as well as the app initialization settings, etc. Here's how to do it:

1. Agree to the user agreement, check the box to agree, and click confirm

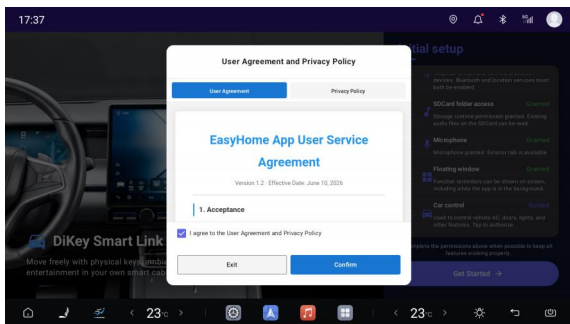


## 2. Initialize Permission Settings

On the right side of the figure below, 'Initialization Settings' has 7 permissions that need to be granted. Each one must be authorized according to the detailed steps 1-7 below.

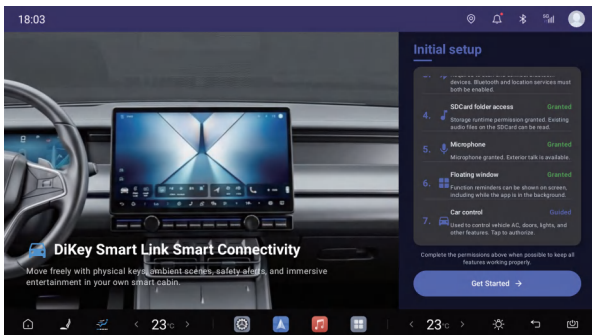


(1) Click 'Allow running in the background', then click 'App Accelerator' on the popup screen

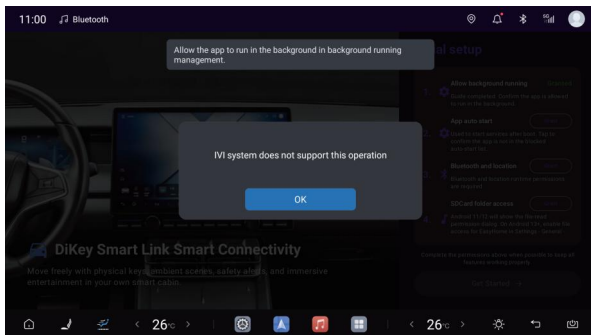


(2) Click 'Enable Auto-Start', then on the pop-up screen click 'Dikey Smart Link' to turn off the prevent auto-start feature.


**Note:** If you choose to turn it on, every time you lock the car, it will clear background apps. The next time you start the car, 'Dikey Smart Link' won't run automatically, and won't connect to your device, so you'll need to start 'Dikey Smart Link' manually. It's recommended to keep it off.

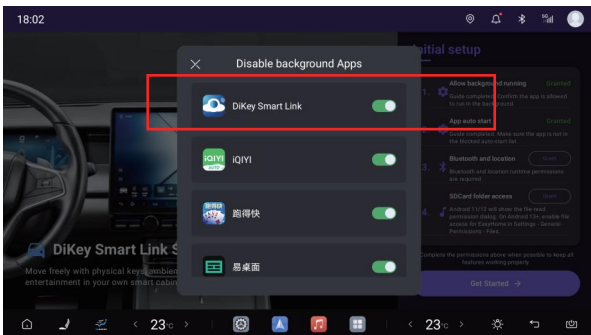


(3) Click on 'Bluetooth and Location Permissions,' then tap 'Allow' on the popup to complete the setup

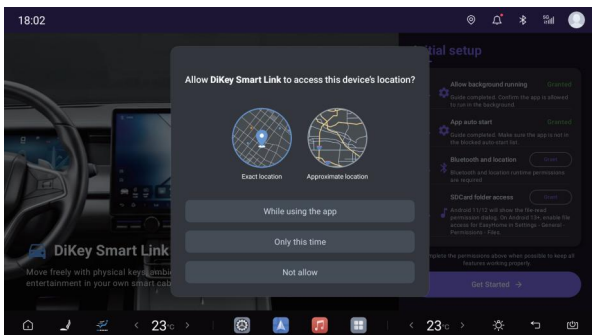


(4) Click 'SDCard Directory Access', and on the pop-up screen, tap 'Allow' to complete the setup.

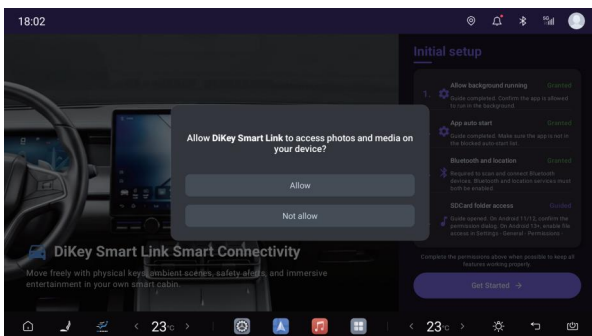

(5) Click 'Microphone Permissions', and on the pop-up screen, tap 'Allow' to complete the setup

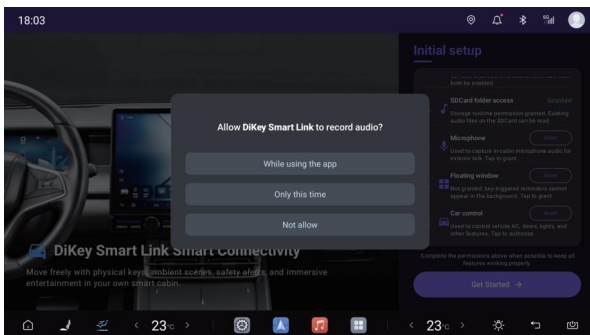


(6) Click on 'Floating Window Permission', and in the pop-up screen, turn on the switch for 'Allow to appear on top of other apps', then tap 'Back' to exit the screen.

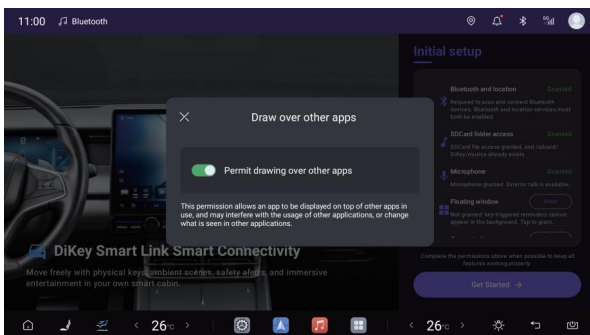




(7) Click on 'Car Control Permissions', turn on the three options shown in the picture below, and click 'OK' to exit the interface.

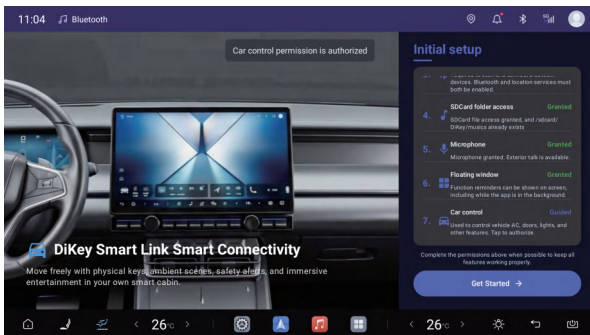


(8) After completing the steps 1-7 above, all permission settings are done. Click 'Start Using' to set up your vehicle information.

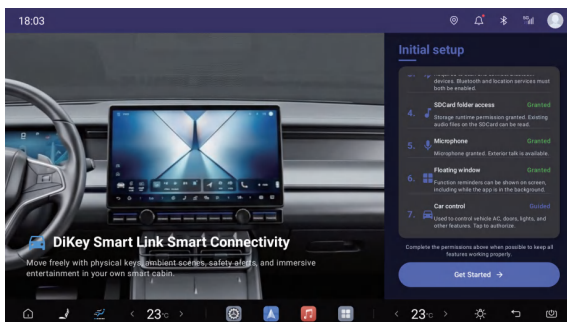


### 3. Set up vehicle information


(1) Set the car's air conditioning zones. Choose according to your car's actual zones. Most cars have two zones, while some high-end models have three or more. Please check your car manual.

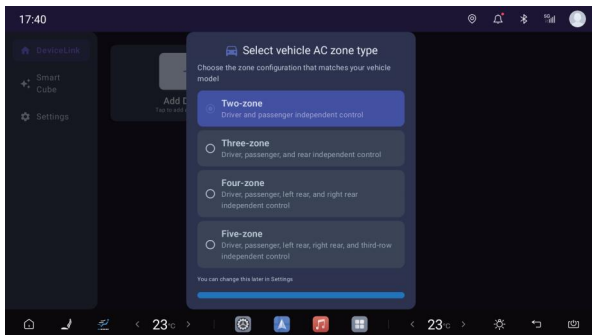

(2) Set the seat heating level according to your vehicle's actual 'level.' If you are not sure which level your vehicle has for heating, you can check the number of levels on the 'Seat Heating' interface of the central control screen to make the correct selection.

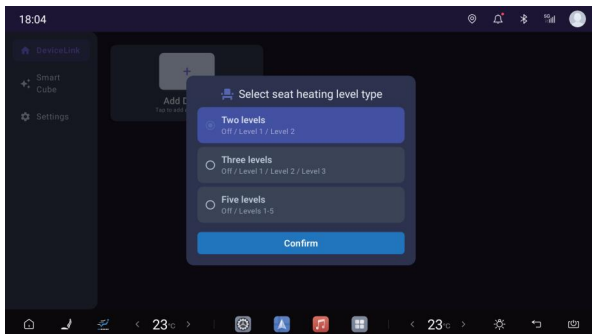


(3) Set the seat ventilation level according to your vehicle's actual 'level.' If you are not sure which level your vehicle's ventilation is, you can check the number of levels on the 'Seat Ventilation' interface on the central control screen to make the correct selection.

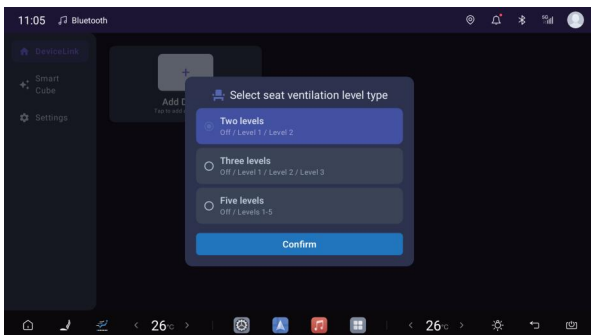


#### 4. Connecting Devices

(1) Click 'Add Device' to search and connect.

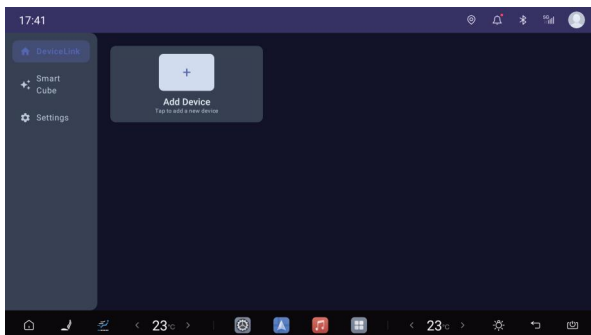


(2) If "DiKey physical button" appears in the scanning interface, click "Rescan" if the device is not found.


Note: Ensure the physical button is connected to power via a Type-C plug and that the indicator light turns on when powered on.

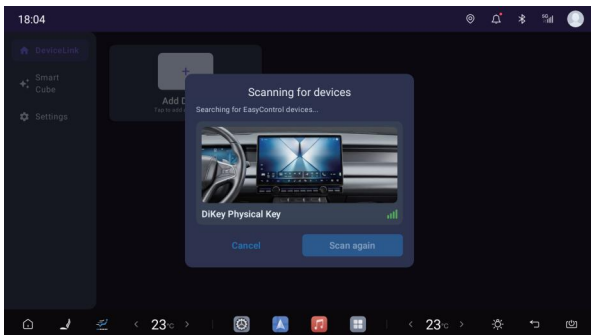


(3) Click "DiKey Physical Button" to connect. The connection process is shown in the figure below.

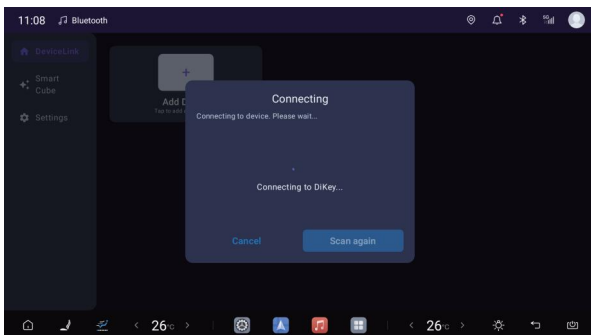

(4) After connecting successfully, the interface will show the 'DiKey physical button connected' icon.

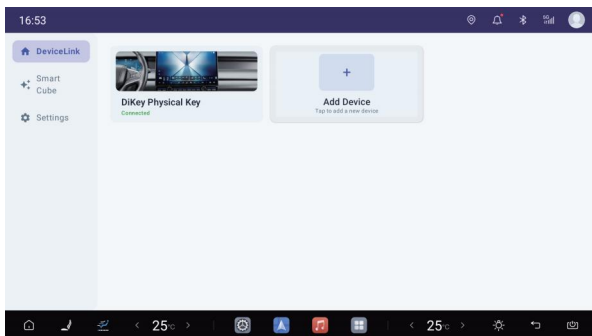

(5) Unbind Device: Long press the added device, a prompt to unbind will pop up, then click 'Unbind' to delete the device.

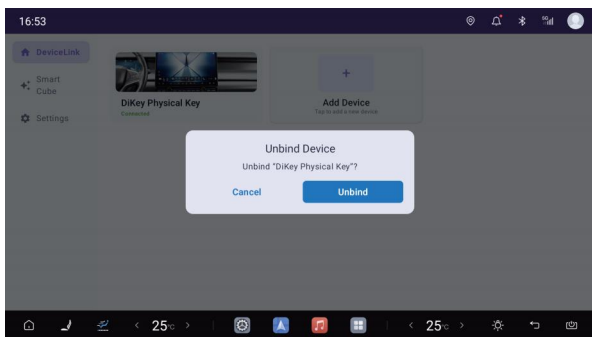

## Scene mode

### Scene mode

Explanation:

Scene mode represents a set of functions for a particular scenario: buttons and knobs, lighting settings, voice prompts, and interface notifications.

Different modes correspond to different sets of functions. For example: off-road mode, air conditioning control mode, nap mode, etc.

Scene modes are displayed in two positions: "Preset Scenes" and "Custom Scenes."

Preset scenes are the three default scene modes that come with the factory settings. Preset scene modes cannot be deleted, only copied.


Custom scenes are created by users through addition or copying, support storing multiple scene modes, and can be freely edited or deleted.

### 1. Added new scene mode

There are two methods to add a new scene mode, which are 'Copy Scene Mode' and 'Add Scene Mode'. The specific operations are as follows:


#### (1) Copy Scene Mode

In the preset scene mode, click the "Copy Scene" on the right of the default three scene modes. At this point, the "Name and Description" edit box for the scene mode will pop up. Enter the scene mode name and description, and click "Confirm" to complete the copy. The newly copied scene mode can be found in the "Custom Scenes" section. Click "Edit" on this scene mode to make functional changes and change it to your preferred key functions. The operation method is shown below in the [Edit Scene Mode] section.

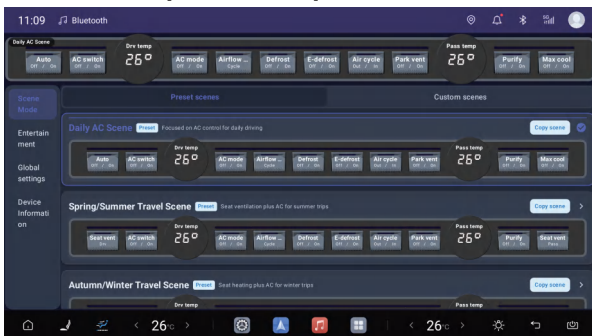

## (2) Add scene mode


Under the Custom Scenes section, click "Add," and a pop-up window for editing the scene mode "Name and Description" will appear. Enter the name and description of the scene mode, and click "Confirm" to complete the addition. The newly added scene mode can be found in the "Custom Scenes" section. The buttons and knob functions of the newly added scene mode are blank, so please click "Edit" for that scene mode to add functions and assign your preferred button functions. For operating instructions, see the following [Edit Scene Mode] content.

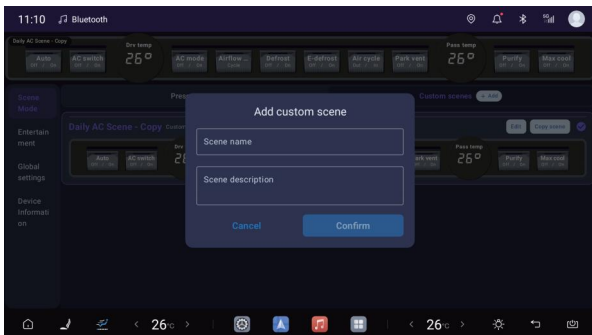

## 2. Edit Scene Mode

### (1) Button and knob function editing

In the Custom Scene section, click "Edit" to enter the editing interface. First, click the button you want to change, then select the desired function in the button function area. Note: You can drag the interface up, down, left, or right; there are over 200 functions available to choose from. To define the knob function, click the knob and select the desired function in the interface. The operation is similar to that of the buttons.[eos]

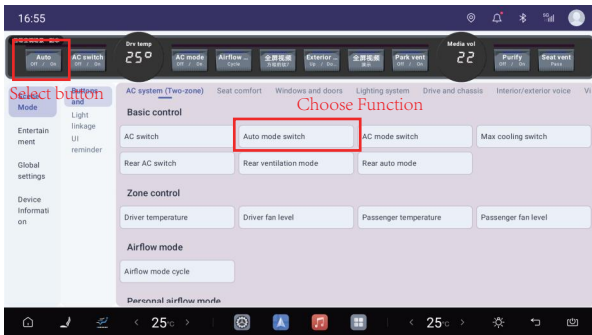

### (2) Lighting Settings - Set Various Lighting Effects

#### ① Set the ambient lights and button lights

Click 'Light Linkage' to enter the lighting settings interface.

Ambient Light Settings: This option is for the light strip settings. Key backlight settings configure the keyboard's indicator lights and backlight.

'Off' → The light strip will not light up.

'Always On' → The light strip stays on when the device is powered.

'Breathing Light' → The light strip will pulse in a pattern similar to human breathing.


'Rhythm' → Built-in rhythmic flashing function, flashing according to patterns based on the vehicle's ambient lights and the physical button changes.

'Color' bar → Drag the central box to your desired color position and the light strip will display the corresponding color.

'Brightness' → Set the brightness of the light strip.



'Sync with Vehicle Ambient Light' → When enabled, the light strip's color and brightness sync with the vehicle's ambient lights. This is a two-way adjustment: changing the light strip's color and brightness here will also affect the vehicle's ambient lights, and adjusting the vehicle's ambient lights (via vehicle settings or voice control) will likewise sync with the light strip's color and brightness.

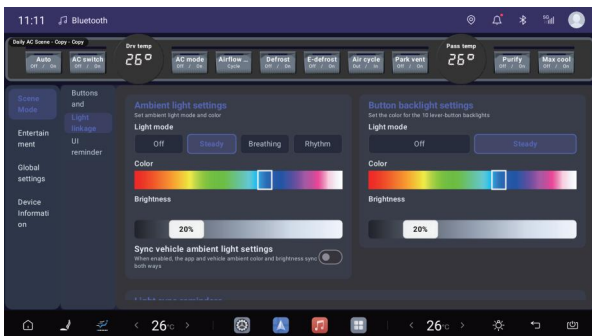


## ② Light Sync Reminder

Swipe up on the interface to enter the light synchronization reminder settings.  
 “Turn signal on” → When turned on, the light strips on both sides will sync with the vehicle's turn signal flashing.

“Hazard lights on” → When turned on, the light strips on both sides will sync with the vehicle's hazard lights flashing.

“Gear shift indication” → When turned on, the center light strip will sync with the vehicle, showing different colors for different gear shifts. For color settings, refer to the section below: [IV Global Settings--Light Settings].

“Lighting mode” → There are two options. Selecting “Brief reminder” will turn on the light for 1–2 seconds when the above three settings are triggered. Selecting “Continuous” will keep the light on steadily when the above three settings are triggered.

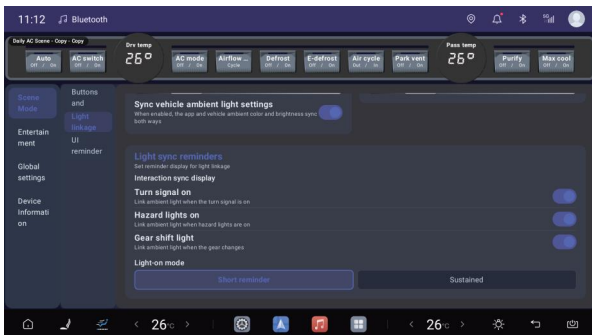


### ③ Charging Animation Settings

Swipe up on the interface to enter the charging animation settings

"Charging animation master switch" → When turned on, the device's light bar and buttons will indicate the charging level with the set color.

"Light bar style" → If set to off, the light bar won't show the charge level. If set to middle, only the middle light bar shows the charge. If set to all, the middle and side light bars together display the charge.

"Button style" → There are two options. If set to off, the button lights won't show the charge. If set to 10 buttons, all button lights will indicate the charging level.

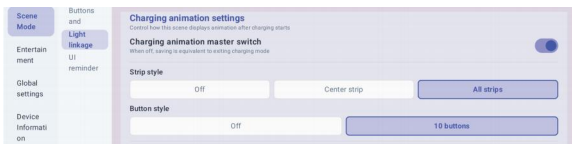

Swipe up on the interface to enter the 'Flowing Light Effects - Color and Brightness' settings. There are three color settings items, and clicking on them will bring up the settings window.


'Charged Amount' → Sets the light color display for the current battery level when charging.

'Uncharged Amount' → Sets the light color display for the portion of the battery that is not yet full during charging. The default color for this device is black.

'Flowing Light Animation' → Sets the color of the blinking flowing light animation during charging.



Color settings: click on the 'Charged Amount' in the picture above, and a color settings window will pop up. Slide the color bar to choose your favorite color. Slide the brightness bar to adjust the light's brightness. Click 'Default' to use the system's preset color and brightness. Click OK save and exit. The settings for 'Uncharged Amount' and 'Flow Animation' are the same.

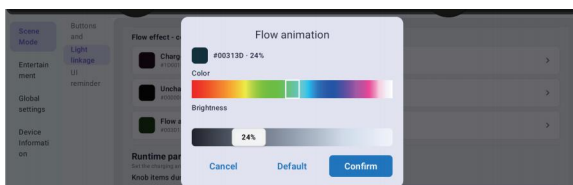

Swipe up on the interface to enter the 'Operating Parameters' settings. During charging, the left knob displays the battery level, and the right knob shows the remaining charging time.

Charging knob options are as follows:

'Lock Knob' → When selected, the knob functions are disabled during charging. The knob will only indicate battery level and remaining time, and all other functions are prohibited.

'Normal Operation' → When selected, the knob can be used normally during charging.

'Number of Flowing Lights' → Click to bring up a dropdown menu, and select a quantity from '1 to 5' lights. 1 means the flow animation lights up only 1 light, 2 means it lights up 2 lights, and so on.


'Light-on Time (ms)' → Click to bring up the numeric keyboard to directly input a number. This indicates the duration that each light stays on during the flowing animation, in milliseconds (ms). Enter a value within the range of 200-3000 ms; values outside this range are invalid.

'Light-off Time (ms)' → This indicates the duration that each light stays off during the flowing animation. The input method is the same as that for 'Light-on Time (ms)'.

'Preview' → After completing the above charging animation settings, click

'Preview' to simulate the charging animation effect using the physical buttons.

'Save' → Click to save the charging animation settings.

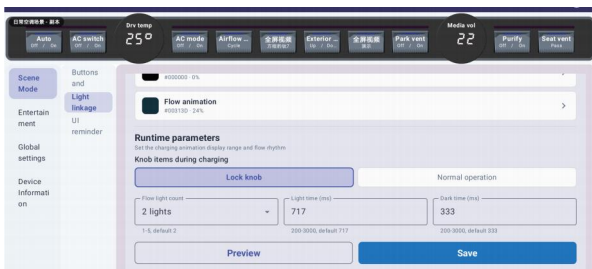

### (3) Interface Prompt

This setting configures the 'Function Tip Pop-up' for the current scene mode.


'Follow Global' → When selected, the 'Function Tip Pop-up' for this scene mode will sync with the settings in the global configuration.

'Independent of Global' → When selected, the 'Function Tip Pop-up' for this scene mode will display independently.

'Main Switch for Interface Tips' → When turned off, all operations in this scene mode will not display 'Function Tip Pop-ups'.

The settings below are the same as those in 'Interface Tips' in the global settings.

[Section 4, Global Settings - Interface Alerts].

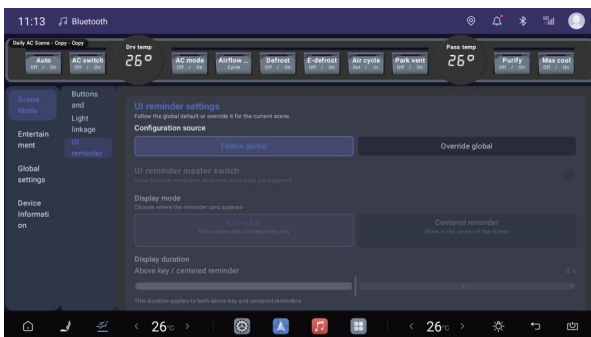

## Global Settings


### Global Settings

#### 1. Lighting Setup

##### Ambient light settings

"Gear Shift - Color and Brightness (Middle Light Bar)": This setting applies to the middle light bar. Click "P Gear" to bring up the color setting window, then slide the color bar to choose your favorite color. Slide the brightness bar to adjust the light brightness. Click "Default" to use the system's preset color and brightness. Click confirm to save and exit. The settings for "R, N, and D Gears" are done the same way.

"Turn Signal / Hazard Light Color and Brightness (Left and Right Bars)": This setting applies to the left and right light bars. Click "Turn Signal Color" to bring up the color setting window, slide the color bar to pick your favorite color, and slide the brightness bar to adjust light brightness. Click "Default" to use the system's preset color and brightness. Click confirm to save and exit.

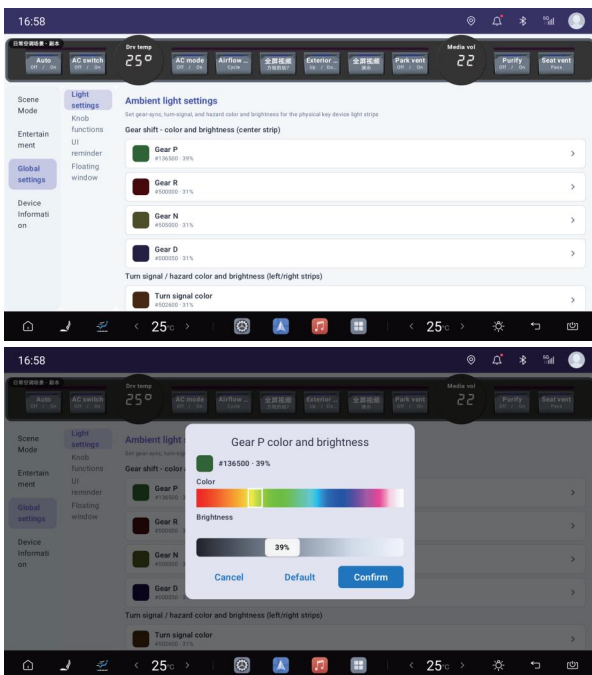

## 2. Knob Functions

### Default Temperature Display Style

"Numeric Display" After selection, the screen on the knob displays the air conditioning temperature, unit is °C

"Type Prefix" After selection, the screen on the knob displays the air conditioning temperature, but the number is prefixed with a "T" to indicate temperature, unit is °C

"Degree Symbol Display" After selection, the screen on the knob displays the air conditioning temperature, but a "." is added at the end to indicate degrees, unit is °C

### Knob Long Press Function Selection

#### Left Knob Long Press Function


"Off" → After selection, the knob has no long press function.


"Switch Temperature Zone" → After selection, long press the knob for 1-2 seconds to switch the knob operation to another temperature zone.

"Switch Scene Mode" → After selection, long press the knob for 1-2 seconds to perform scene mode switching. At this time, the word "Settings" will appear in the lower right corner. Click the word "Settings" to pop up a pull-up menu.

In the menu, the left side has checkboxes for scene modes; the scene modes that are "checked" will be included in the knob long press switching function.

The small arrow on the right can be clicked to change the scene mode order, and when long pressing, the switching will follow this order.

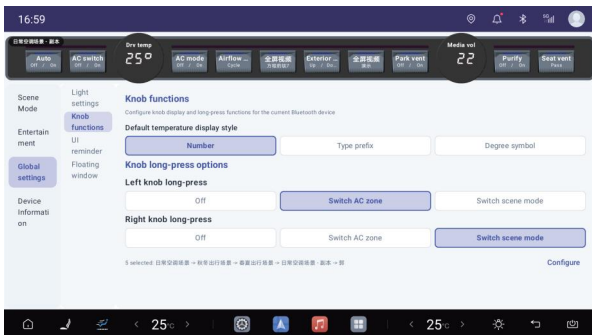

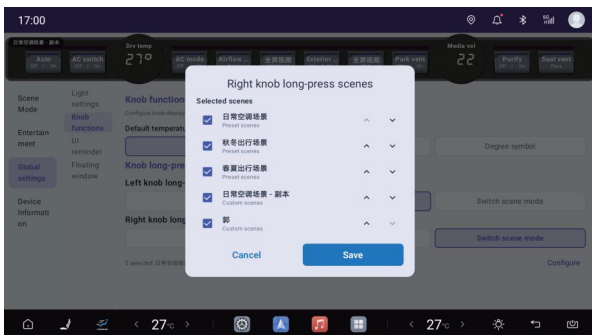

### 3. Interface Reminder

"Interface Prompt Master Switch" → When turned on, operating the physical buttons will trigger a pop-up function prompt on the screen. If turned off, no pop-up will appear.


"Display Mode" → After selecting, the function prompt pop-up will appear above the corresponding button.

"Centered Reminder" → After selecting, the function prompt pop-up will appear in the center of the screen.

"Display Duration" → Drag the slider to choose from 5 time options. For example, if you select 1 second, the function pop-up will automatically disappear after 1 second on the screen; other options correspond to their respective durations.

"Prompt Box Y Coordinate" → This sets the height of the function prompt pop-up. Click the small box on the right to open the prompt box, then drag it up or down to the desired position, and click the checkmark to save and exit.



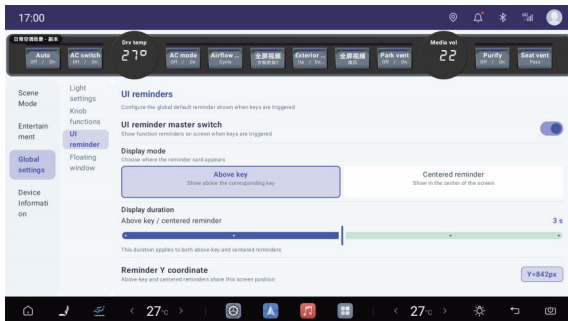

#### 4. Floating window

This setting determines the position and size of this device on the main interface.


"Scene Mode Floating Window Master Switch" → When off, the settings panel and floating ball will not be displayed on the main interface. When on, it can be displayed at the position set below.

"Floating Ball" → Tap to enter the floating ball settings.

"Floating Ball Position" → Tap, and a "floating ball" will pop up on the screen. Drag the floating ball to the desired position and tap the "checkmark" to save and exit.


"Floating Ball Size" → Tap, and a "floating ball" will pop up on the screen. Use two fingers to zoom in or out to adjust the size, then tap the "checkmark" to save and exit.

"Device Panel" → Tap to enter the panel settings. The setup method is the same as for the floating ball.

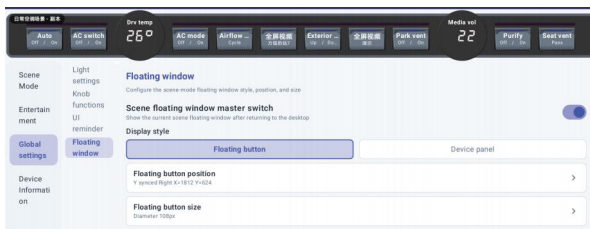

## (1) How the device panel is displayed on the main interface

Click the “-” sign at the bottom left or bottom right, and the panel will shrink to a floating ball style. Click the “X” at the top right to close the panel display. After closing, if you want to open the panel again, you need to open the “Dikey Smart Link” launch panel on the app page.

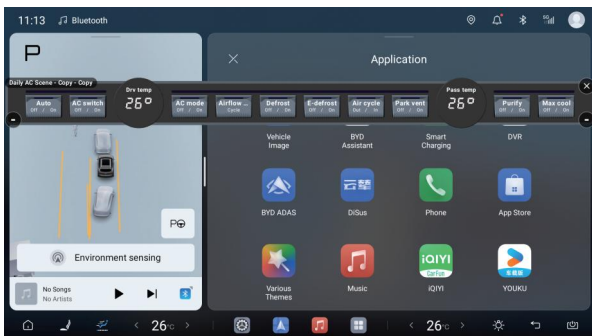


## (2) Display style of the floating ball on the main interface

Clicking the 'floating ball' will enlarge it into the device panel display.




### (3) Switch scene mode

On the main interface, click the name of the current scene mode, and select a different scene mode from the drop-down menu that appears. If you've set the knob to switch scene modes with a long press, you can long-press the knob to switch. Of course, you can also go to the 'Preset Scenes' or 'Custom Scenes' screens to choose a scene mode.

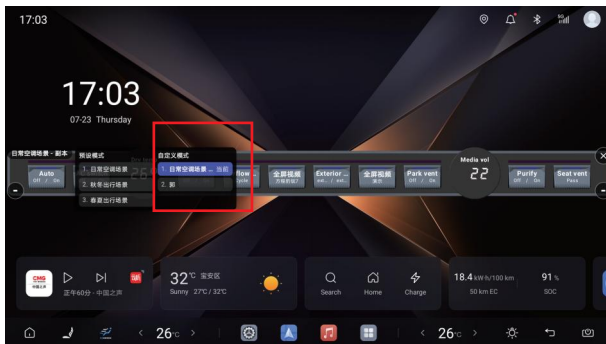

Choose the scene mode on the 'Preset Scenes' and 'Custom Scenes' screens.

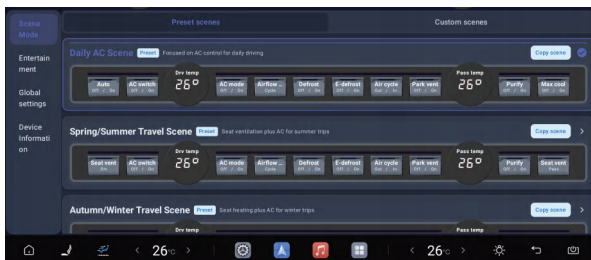

# Settings

## Settings



### (1) Theme

The theme options have two mode choices: 'Dark Mode' and 'Light Mode'.

'Follow System' → After selecting this, the theme of 'DikeySmart Connect' will automatically switch between Dark Mode and Light Mode according to the system's day and night modes.

'Dark Mode' → After selecting this, the theme of 'Dikey Smart Connect' will be fixed in Dark Mode.

'Light Mode' → After selecting this, the theme of 'Dikey Smart Connect' will be fixed in Light Mode.

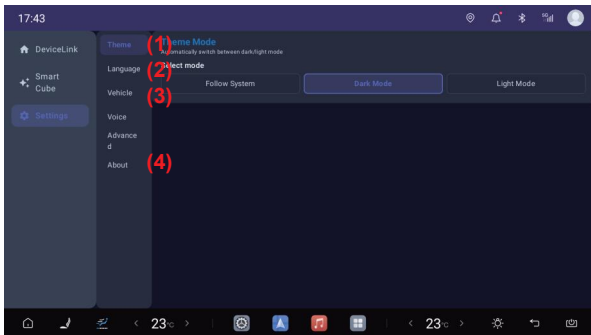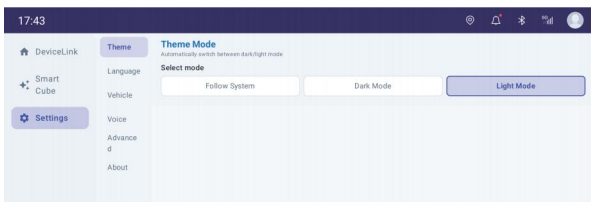

## (2) Language

"Dikey Smart Connect" currently only supports two language interfaces: Simplified Chinese and English. Future updates will support more languages, so please stay tuned.

"Follow System" → Turn this on, and the "Dikey Smart Connect" language interface will change according to the system language.

**Note:** When the system language is Simplified or Traditional Chinese, "Dikey Smart Connect" will use Simplified Chinese. After switching the system language to other languages, if "Dikey Smart Connect" does not have a corresponding language, it will switch to English.

## (3) Car system

"Car system settings" covers vehicle information settings. It's explained in the previous section [Set Vehicle Information]. If there was a mistake in those settings, you can correct it on this page."

## (4) Version Update

Click "About" to enter the version information page, where you can view the user agreement and version information. Click the "Check for Updates" button next to the version information, and an update window will pop up. If a new version is released, it will display content such as "New version found, new version number," etc. Click "Update" to proceed to the next step to complete the update. If no new firmware is released, it will show "Currently the latest version," and click "Confirm" to exit the page.

**Note:** This item refers to the "DiKey Smart Connect" app version update, not the firmware update for DiKey physical buttons or other devices. For DiKey firmware updates, please see [Device Information → Device Firmware Update → Check for Updates].

# Device Info

## Device Info

Click 'Device Info' to go to the device information view. This page shows the device's 'Bluetooth MAC address' and 'Firmware version'.


### Device firmware update

Click the “Check for Update” button next to the firmware version number. A pop-up update window will appear. If a new version is released, it will show messages like “New firmware found, new version number,” etc. Click “Update” to proceed to the next step to complete the update. If no new firmware is released, it will display “The current firmware is already the latest version.” Click “Confirm” to exit the page.

Note: This firmware update updates the software for DiKey physical keys and other devices, not the “DiKey Smart” app.

For updates to the “DiKey Smart” app, please go to [Settings → About → Version Number → Check for Update].


## (1) Check for updates

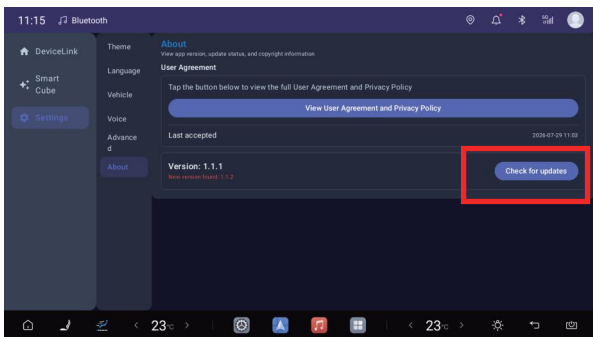

## (2) Start updating


Click 'Start Update', and the device will automatically begin downloading the update.

**Note:** During the update process, do not turn off the power, lock the device, or press any DiKey physical buttons, otherwise the update may fail, causing the device to crash or not start.

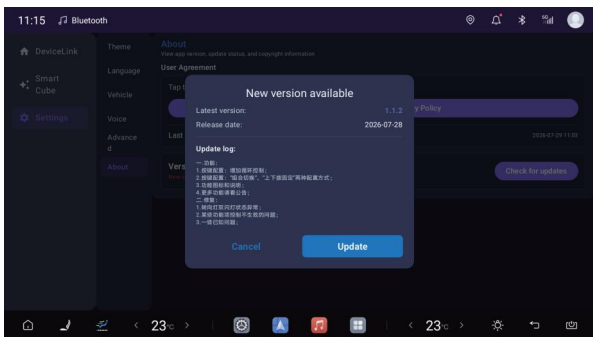

### (3) Updating

Be careful not to cut the power or lock the car during the update, or it could cause the update to fail and lead to crashes or the car not starting.

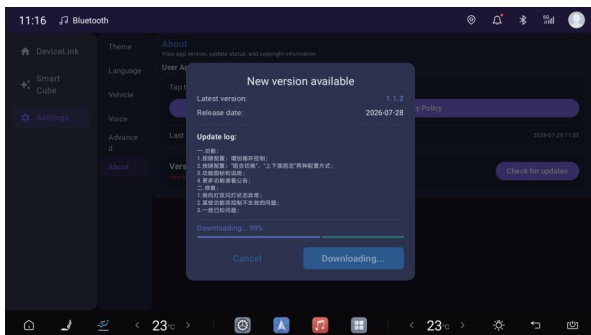

### (4) Update successful

Update successful, click 'Confirm' to exit the upgrade screen.

