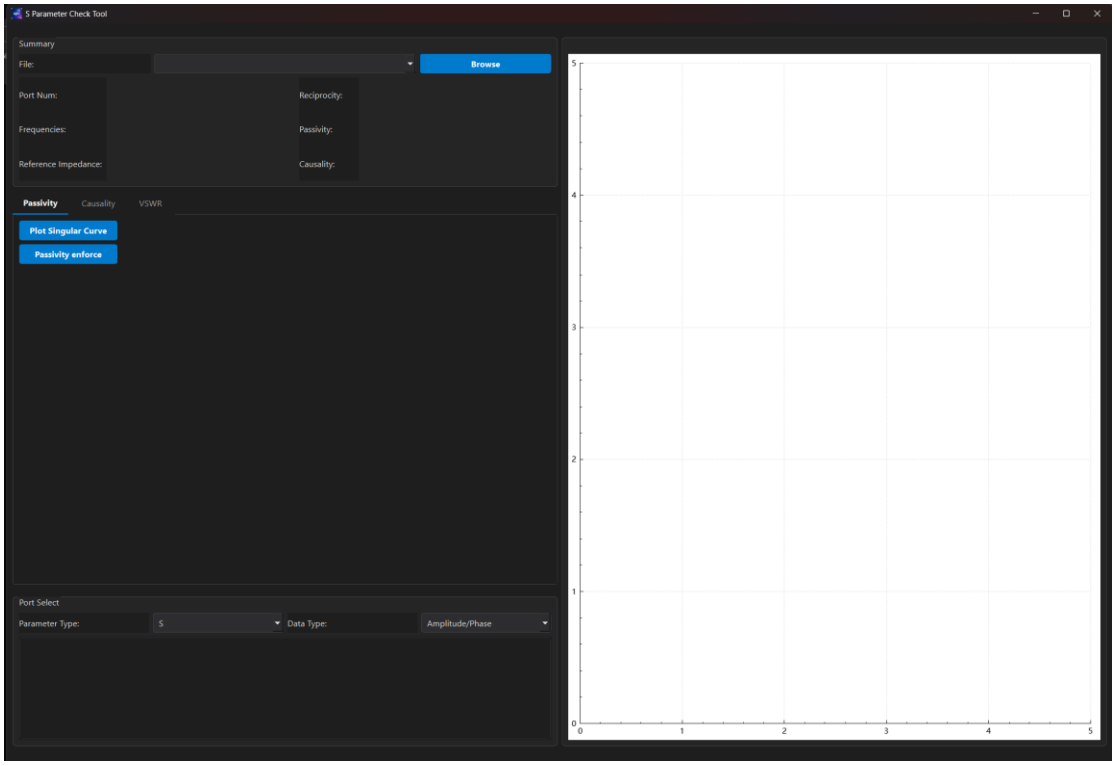
Operation Manual

The main interface of the S parameter check tool is shown in the following figure.:



This interface can be divided into four parts：

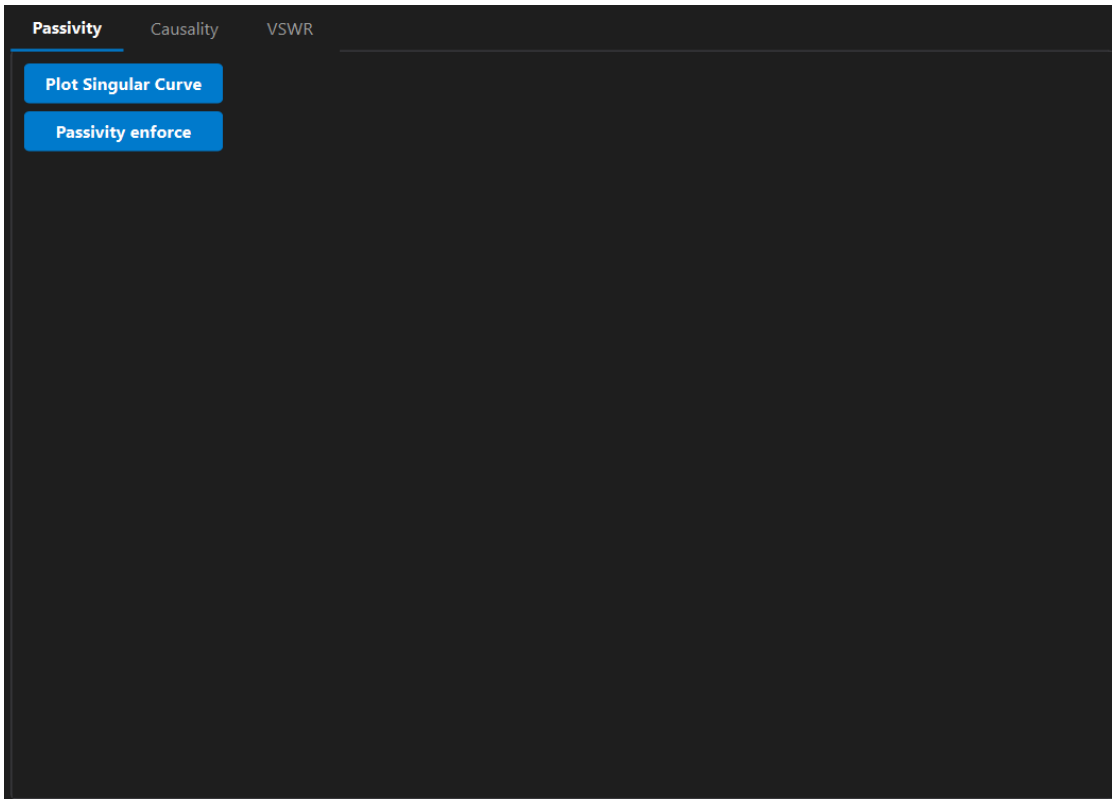
Part One：



Import of S-parameter files and display of related file information。

Click the "Browse" button, and a file import dialog box will pop up. Select the S-parameter file to be imported. After the import is successful, the number of ports, frequency range, and frequency points of the S-parameter, as well as reference impedance, reciprocity, passivity, and causality will be displayed below..

Part Two:

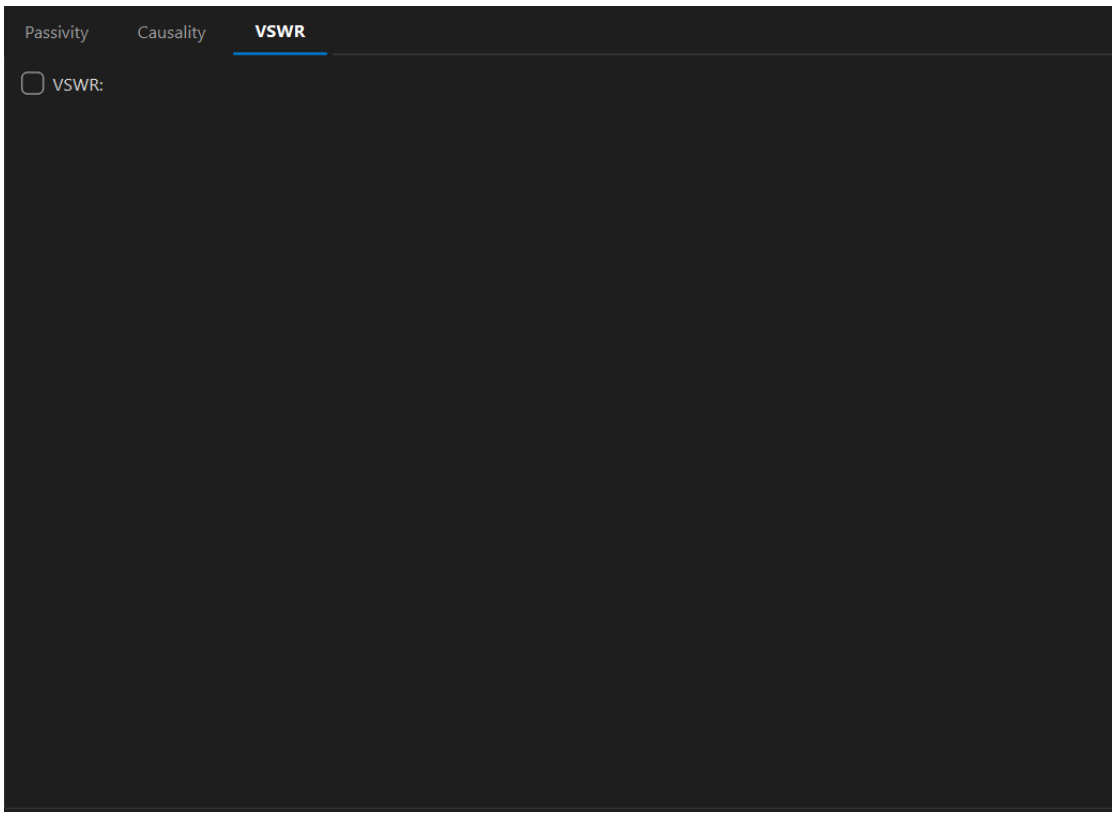


The curves of passivity, causality, and VSWR are shown.

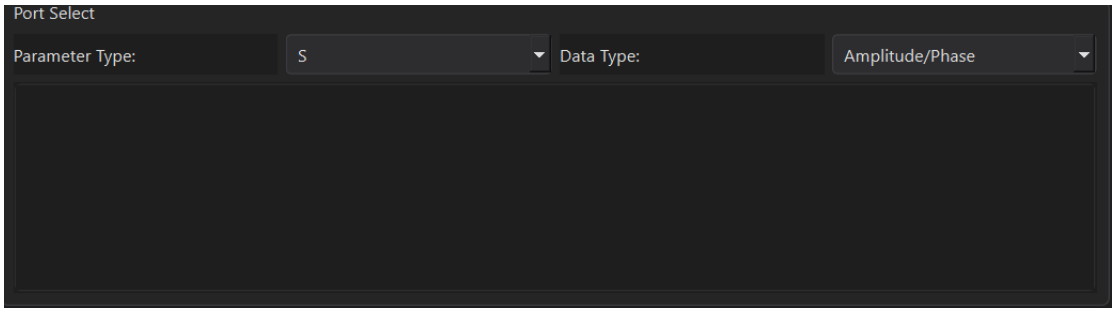
After importing the S-parameter file, click on the "Passivity" tab, as shown in the above figure. After clicking the "Plot Singular Curve" button, the S-parameter singular value curve will be plotted. After clicking the "Passivity enforce" button, the S-parameter will be subjected to passive enforcement, converting the active S-parameter into a passive S-parameter.

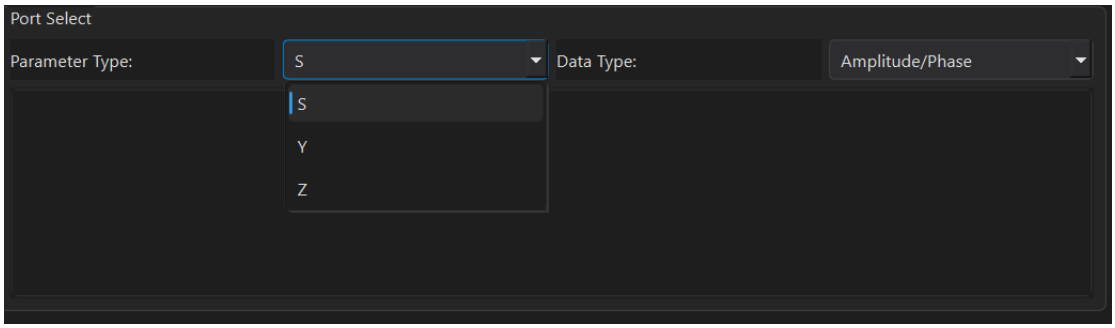
The VSWR curve shows:

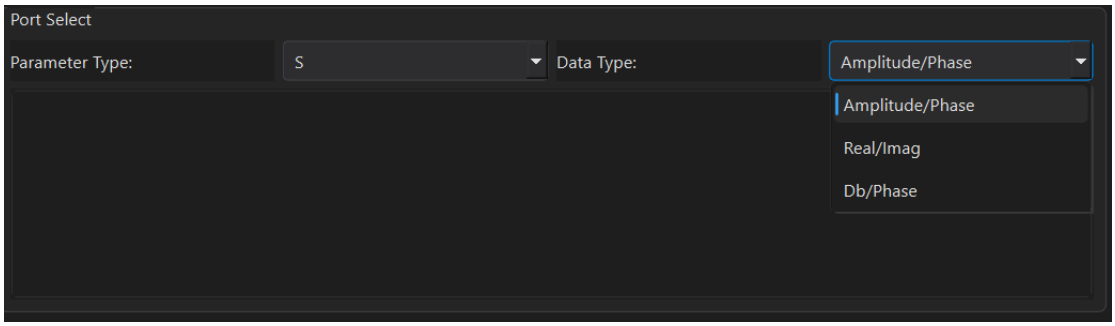
Click on the "VSWR" tab, as shown in the figure below. Check the "VSWR" checkbox, and the drawn curve will represent the S-parameter VSWR.


Passivity
Causality
VSWR
VSWR:

Part Three:


Port Select
Parameter Type:
S
Data Type:
Amplitude/Phase


Port Select
Parameter Type:
S
Data Type:
Amplitude/Phase
S
Y
Z



The displayed ports and data format selection.

There are two dropdown boxes. Parameter Type and Data Type. The Parameter Type dropdown box is used to select the type of parameters to be displayed, with three options: S, Y, and Z. The Data Type dropdown box is used to select the data content to be displayed, with options such as amplitude and phase, real part and imaginary part, and DB.

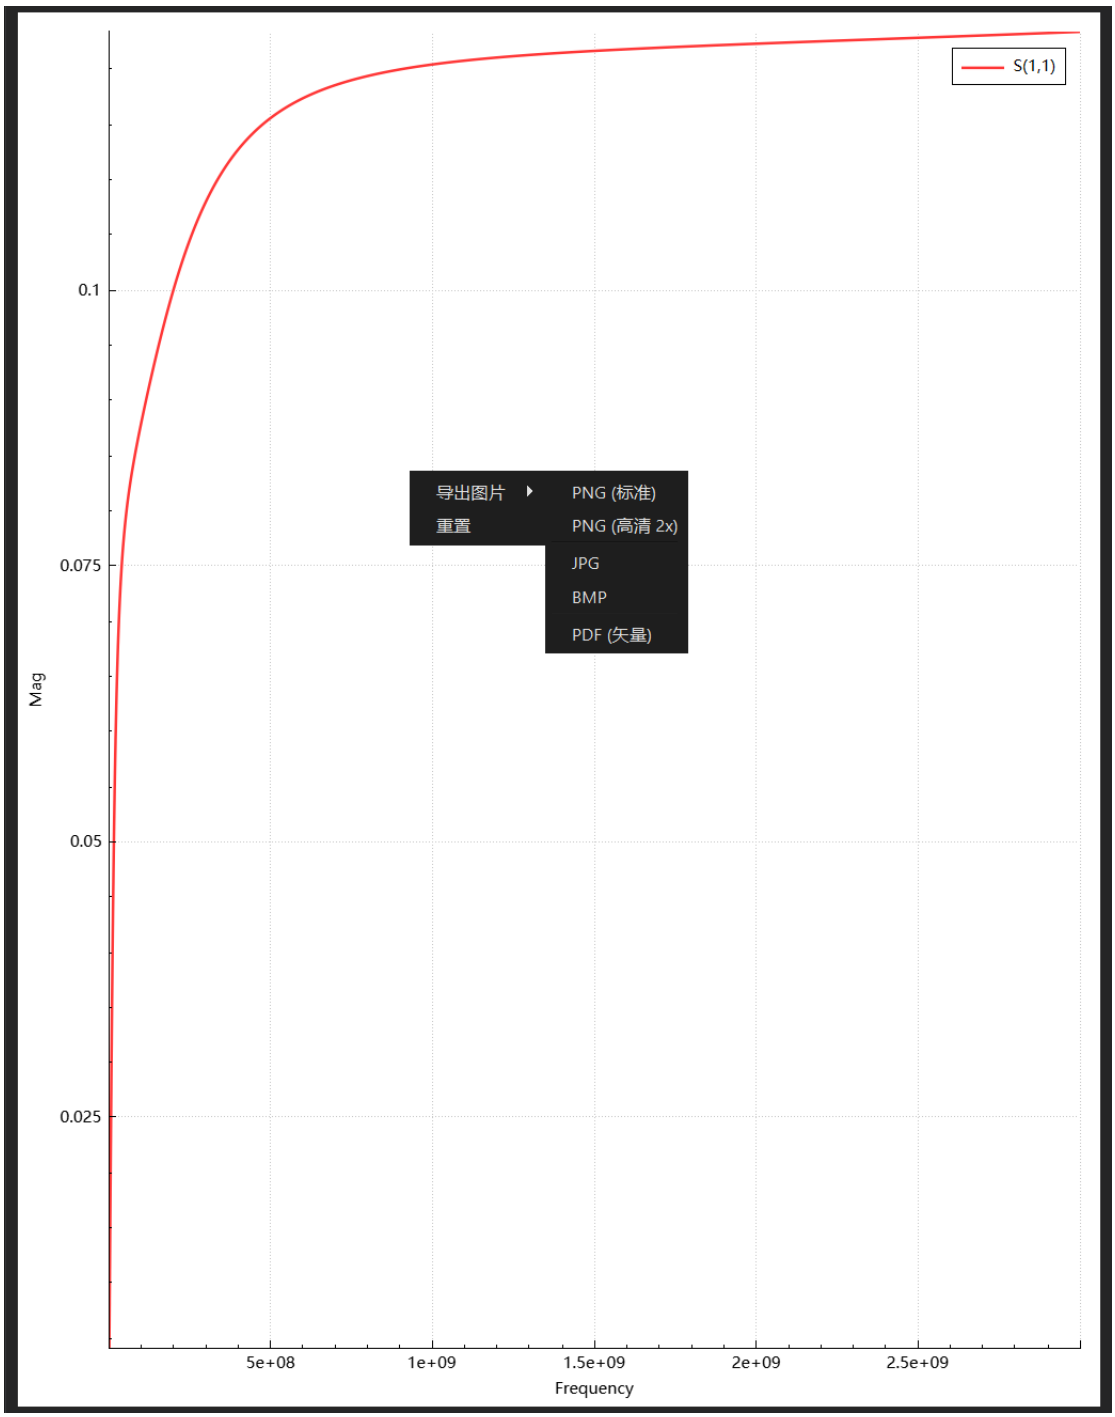
Part Four：

The curve is displayed.

The curve can be zoomed in or out by scrolling the mouse wheel. The left button can be used to drag the curve to move it.

Right-click on the graph, and a label as shown below will pop up. You can select to export images in different formats.

Clicking "Reset" will restore the curve to its original state.


S(1,1)
0.1
0.075
0.05
0.025
Mag
5e+08
1e+09
1.5e+09
2e+09
2.5e+09
Frequency
导出图片
重置
PNG (标准)
PNG (高清 2x)
JPG
BMP
PDF (矢量)