

Touch Screen to Start




STATE
CAPITOL

Please select the room(s) mode

Separate

Combine



Current Room Mode: Separated

For Assistance With This Room Please Call 801-538-3074

Routing

N.Audio
Current Source:

NE. Projector
Current Source:

N. Projector
Current Source:



Speakers



Presets

Preset 1

Preset 2

Preset 3

Preset 4

Preset 5

Sources

A E. HDMI


A NE. HDMI


A N. HDMI

A W. HDMI



Select the source and location you would like to route the source to.






Current Room Mode: Separated

For Assistance With This Room Please Call 801-538-3074

Display Control

N Projector

Screen

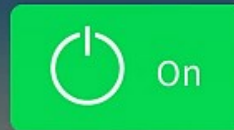

NE Projector


Screen



Privacy



Speakers



Current Room Mode: Separated

For Assistance With This Room Please Call 801-538-3074


Power On

Power Off

Zoom +

Zoom -

Home

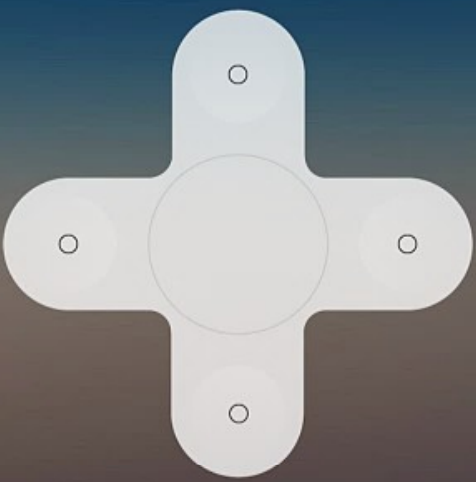

Camera Control

Press and hold to save preset.

Preset 1

Preset 2

Preset 3

Preset 4



Speakers



Select far End Source

A E. HDMI

A NE. HDMI

A N. HDMI

A W. HDMI



 Routing

 Display Control

 Camera Control

 Shades and Lights

 Audio Control

 Advance

 Power


Current Room Mode: Separated

For Assistance With This Room Please Call 801-538-3074

Shades and Lights

All On	Scene 1	Up
All Off	Scene 2	Down

Privacy



Black out	Shades	Partial
-----------	--------	---------



Speakers



 Routing

 Display Control

 Camera Control

 Shades and Lights

 Audio Control

 Advance

 Power

Current Room Mode: Separated

For Assistance With This Room Please Call 801-538-3074

Audio Control



Speakers

HDMI Media

Aux

Bluetooth

USB



Line

Mic





Current Room Mode: Separated

For Assistance With This Room Please Call 801-538-3074

Mic Control



Line

Mic

Privacy	Wireless Mics	Wired Mics
+	+	+
—	—	—
🎤	🎤	🎤



Routing



Display
Control



Camera
Control



Shades and
Lights



Audio
Control



Advance



Back

Current Room Mode: Separated

Please Call 801-538-3074

Line

Mic

1

2

3

4

5

6

7

8

9

Enter

0

Clear

?



Routing



Display
Control



Camera
Control



Shades and
Lights



Audio
Control



Advance



Power

Preset 1

Preset 2

Preset 3

Preset 4

Preset 5



Outputs

N.Audio
Current Source:
No Source

N.Spareout2
Current Source:
A NE. HDMI

N.Mediaport
Current Source:
No Source

N. Projector
Current Source:
No Source

N.Spareout1
Current Source:
A E. HDMI

NE. Projector
Current Source:
No Source



A E. HDMI



A NE. HDMI



A N. HDMI



A W. HDMI



A Stream



A Camera



A Spare 1



A Spare 2



A Airserver



Clear

Save

Recall

Take



Preset
Manager



Settings

 Routing

 Display Control

 Camera Control

 Shades and Lights

 Audio Control

 Advance

 Power



N Projector's Lift

NE Projector's Lift



Maintenance
Mode

Maintenance
Mode

 Preset
Manager

 Settings

Confirm Shutdown

Are you sure you want to shutdown

Yes

No





Current Room Mode: Combined

For Assistance With This Room Please Call 801-538-3074

Routing

N. Projector
Current Source:

S. Projector
Current Source:


Green Room Display
Current Source:

NE. Projector
Current Source:

SE. Projector
Current Source:



Speakers



Presets

Preset 1

Preset 2

Preset 3

Preset 4

Preset 5

Sources

A E. HDMI

A NE. HDMI

A N. HDMI

A W. HDMI

A Stream

A Spare 1

A Spare 2

B E. HDMI

B SE. HDMI

B S. HDMI

B W. HDMI

B Stream

B Camera

B Spare 1

B Spare 2

N.Audio
Current Source:
No Source

Clear

Select the source and location you would like to route the source to.





Routing



Display Control



Camera Control



Shades and Lights



Audio Control



Advance



Power

Current Room Mode: Combined

For Assistance With This Room Please Call 801-538-3074

Display Control

Green Room Display



On



Off

NE Projector



On



Off

Screen



SE Projector



On



Off

Screen



N Projector



On



Off

Screen



S Projector



On



Off

Screen



Speakers



Privacy





Routing



Display
Control



Camera
Control



Shades and
Lights



Audio
Control



Advance



Power

Current Room Mode: Combined

For Assistance With This Room Please Call 801-538-3074



Power On



Power Off



Zoom +




Zoom -



Home

Camera Control

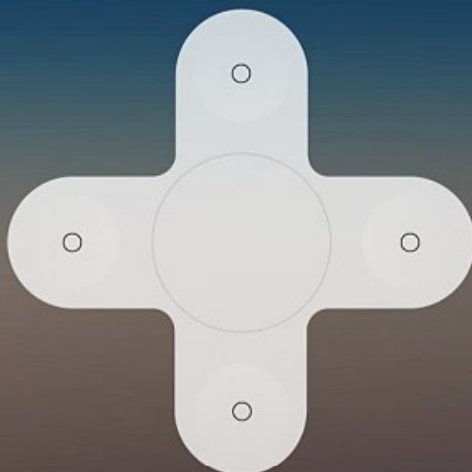

Press and hold to save preset.



Preset 1



Preset 2



Preset 3



Preset 4



Camera A



Camera B



Speakers



Select far End Source



A E. HDMI



A NE. HDMI



A N. HDMI



A W. HDMI



A Stream



A Spare 1



A Spare 2



Privacy



 Routing

 Display Control

 Camera Control

 Shades and Lights

 Audio Control

 Advance

 Power

Current Room Mode: Combined

For Assistance With This Room Please Call 801-538-3074

Shades and Lights

All On	Scene 1	Up
All Off	Scene 2	Down



Privacy



Speakers



Room A

Room B

Black out

Shades

Partial

Black out

Shades

Partial






Routing



Display
Control



Camera
Control



Shades and
Lights



Audio
Control



Advance



Power

Current Room Mode: Combined

For Assistance With This Room Please Call 801-538-3074

Audio Control



Speakers

HMDI Media

Aux





Bluetooth

USB



Line

Mic





Routing



Display
Control



Camera
Control



Shades and
Lights



Audio
Control



Advance



Power

Current Room Mode: Combined

For Assistance With This Room Please Call 801-538-3074

Mic Control



Line

Mic

Privacy

Wireless Mics

Wired Mics



 Routing

 Display Control

 Camera Control

 Shades and Lights

 Audio Control

 Advance

 Power

Preset 1

Preset 2

Preset 3

Preset 4

Preset 5



Outputs

N.Audio Current Source: No Source	N.Spareout2 Current Source: A NE. HDMI	S. Projector Current Source: No Source
N.Mediaport Current Source: No Source	N. Projector Current Source: No Source	SE. Projector Current Source: No Source
N.Spareout1 Current Source: A E. HDMI	NE. Projector Current Source: No Source	Green Room Display Current Source: No Source

  A E. HDMI

  A NE. HDMI

  A N. HDMI

  A W. HDMI

  A Camera

  A Spare 1

  A Spare 2

  B E. HDMI

  B SE. HDMI

  B S. HDMI

 Clear

Save

Recall

Take

 Routing

 Display Control

 Camera Control

 Shades and Lights

 Audio Control

 Advance

 Power



N Projector's Lift



Maintenance Mode

NE Projector's Lift



Maintenance Mode

S Projector's Lift



Maintenance Mode

SE Projector's Lift



Maintenance Mode



Preset Manager



Settings