
COMGROW SH03 Manual V1.4

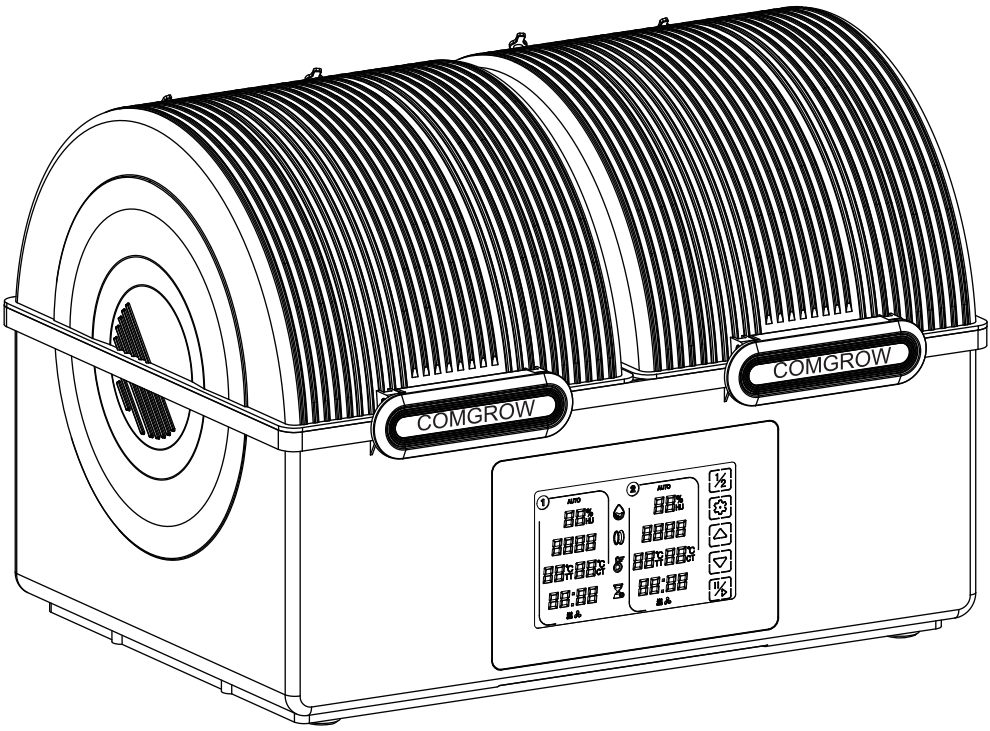

Product specifications

Input Voltage	Us Regulations：100-120v 60hz National Standard, British Standard, European Standard：200-240v 50hz
Rated Power	400W
Filament Diameter	1.75mm/2.85mm
Maximum Consumable Capacity	Place Four Rolls Of Consumables, Each Roll Is ≤70mm (Width) Or Place A Single Roll Of Consumables ≤150mm (Width)
Display Humidity Range	0-99%
Display Temperature Range	0-99℃
Work Temperature Range	45℃-85℃
Machine Size	372(L)*288(W)*263(H)
Equipment Weight	3.4KG
Environmental Parameters	5℃-40℃
Applicable filament	PLA、ABS、PETG...（For detailed types, please refer to the following.）


Precautions


- Please read this manual carefully.
- When not in use, please disconnect the power supply.
- When heating, do not touch the shell near the air outlet to prevent burns.
- Do not allow children to operate without adult supervision.
- Please use it on a flat table or platform to prevent the product from falling.
- If the power cord is damaged, it must be replaced by the manufacturer or its service agent, to avoid hazards.
- No flammable or explosive materials are allowed inside the box.
- There is a high-voltage part in the equipment circuit. Please do not disassemble and repair it by yourself. If any abnormality occurs, please contact us.
- When the same paramenters are set for both chambers of the drying box simultaneously,there might be difference in the temperature display.

Maintenance and Care

- Cleaning the Drying Box Interior
  Remove residues from the chamber, which can be cleaned with a brush box hoover.
- Keep the Workplace Clean
  Ensure that the work area around the drying box is neat and free from dust and debris to prevent them from entering the drying chamber.
- Environmental Precautions
  Do not dispose of products as household waste.


Product description

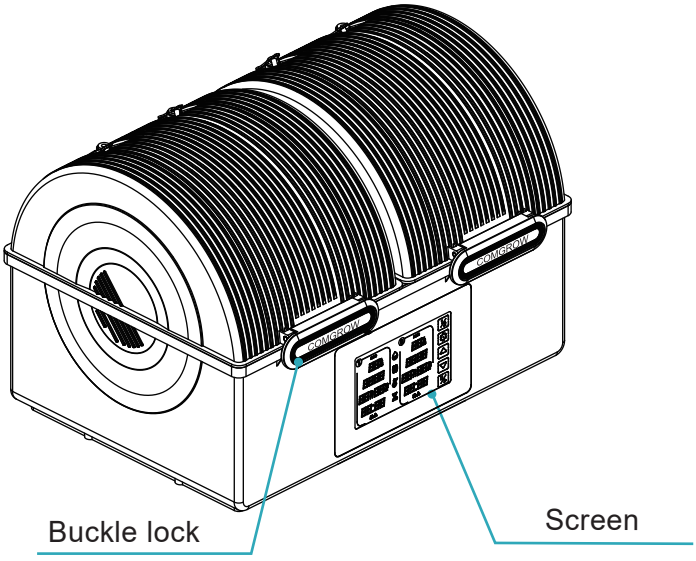

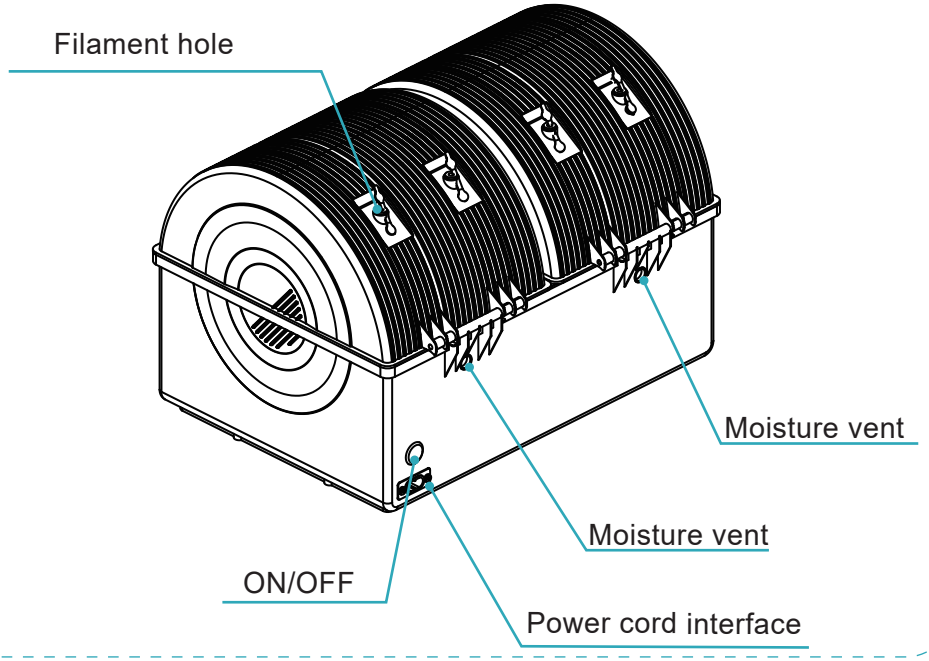

Instructions for use

Remove the four sealing plugs from the top cover of the drying box and install the Teflon tube to the air fitting.If the filaments do not feed smoothly during use you can follow the instructions below to add a PTFE tube.

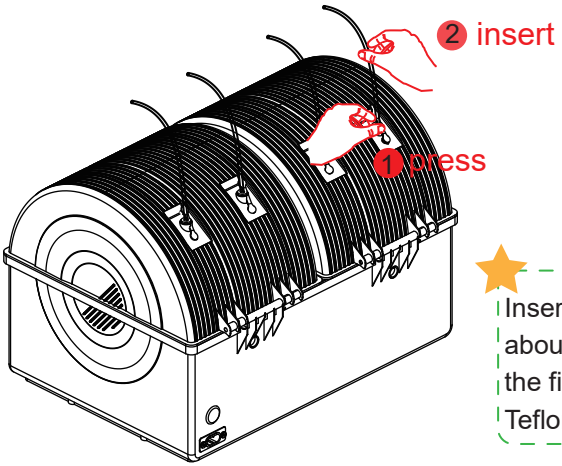



Insert the sharp end into the dry box cover about 15mm to the proper position,and use the filaments by passing them through the Teflon tube from the inside.

How to start storage mode of SH03?


1.SH03 can be sealed to store dried filaments without power.Please remove the teflon tubes and press the rubber plug tightly.

2.Press  to end the drying process or complete drying according to setting time,the moisture vents would be closed automatically to ensure SH03 sealed for better sealing effect.(Press ON/OFF directly cannot close moisture vents automatically,the SH03 cannot be sealed.)

3.Close the lid of chamber and fasten the buckle lock.

Button


From top to the botton,they are chamber switching、setting selection key,up key,down key and end key.

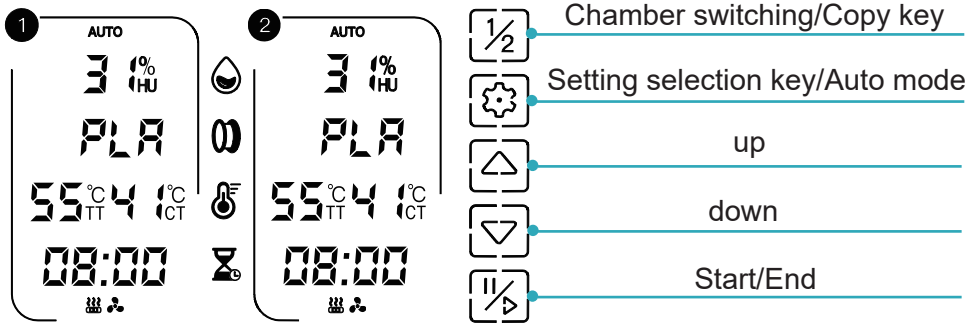

: Short press to switch chamber 1,chamber 2 or dual-chamber simultaneous working mode. Long press 2S to copy parameter of one chamber to another one directly.

: Short press to switch parameters, long press 2S to enter/leave auto mode.


Screen parameters

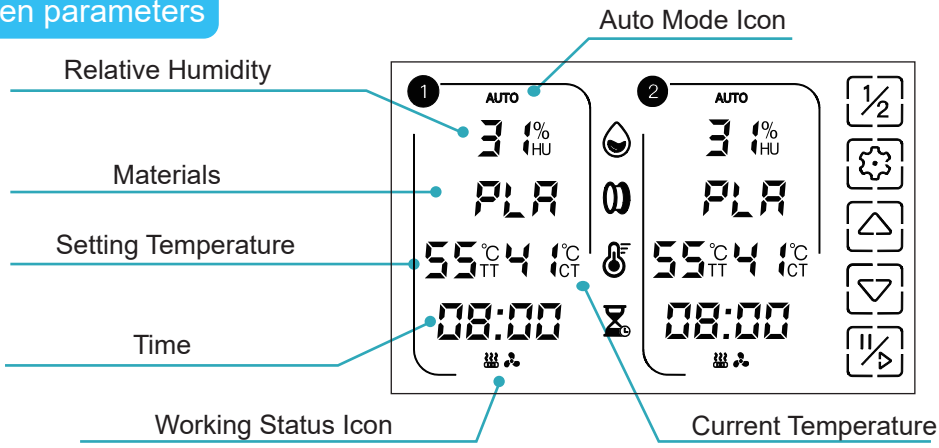

- Constantly lit working status icon means during drying process.
  Please make sure working status icon constantly on before completing setting.
- Press to choose chamber before ending drying process of any one chamber.
- Relative Humidity: the current humidity in the chamber.
- Materials: selected filaments type.
- Current Temperature:The current temperature in the cavity.
- Time:Countdown time.

Instructions for use

Step 1:

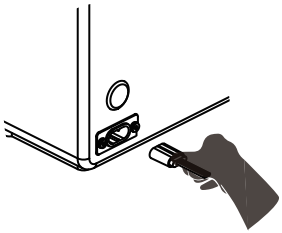


Plug in the power cord of the drying box and press the power switch above the outlet to activate the drying box.

Step 2:

① Open the top cover and put in the filament to be dried.


② Please refer to the picture below and place your filament into the drying box in the proper orientation to avoid excessive fricton between the filament and the filament hole.

(If the filament delivery method is not carried out according to the instructions below the diagram, stuttering or abnormal noise may occur during the delivery process.)

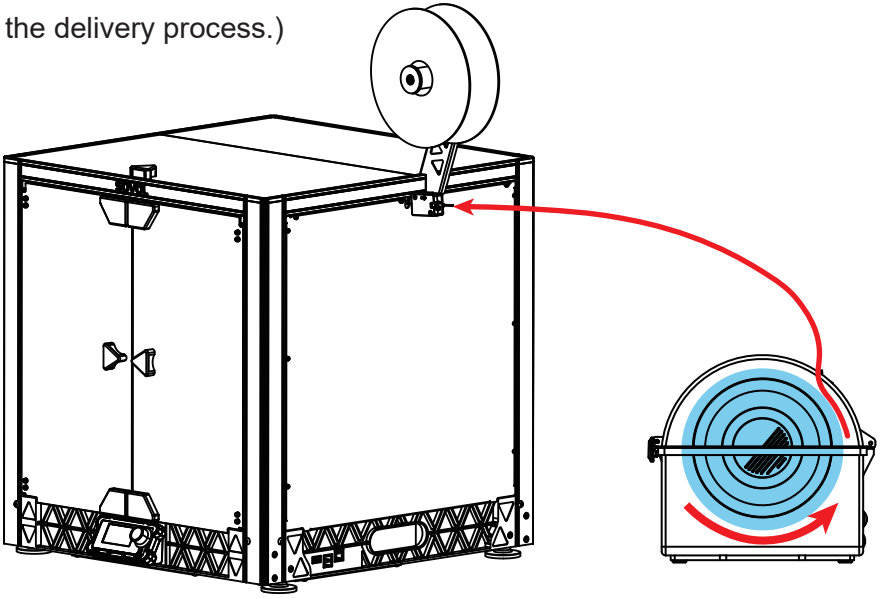

Step 3:

After connecting the power cord and pressing the on/off button, press ½, the drying box automatically selects a chamber, the press the bottom ⏯ to start working according to the default parameters (PLA 50℃ 8 hours); by pressing the bottom start/end button, you can control the drying box to start or end the work.

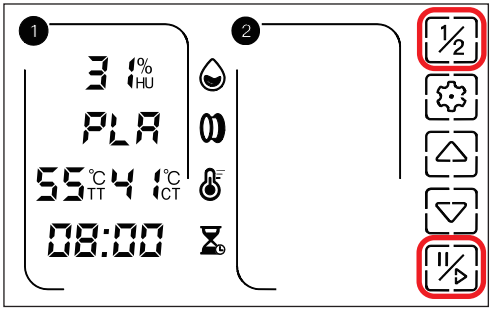

Fast Start:

a:Only use chamber 1

½ → ⏯

b:Only use chamber 2


½ → ½ → ⏯

c:Use chamber 1 and 2 at the same time

½ → ⏯ → ½ → ⏯

1

Switch between different parameters within the same chamber by pressing ⚙. The selected parameter will blink and clicking the setup selection button again will jump to another parameter. (If no operation is performed within 10 seconds, the current paraments will be saved automatically)

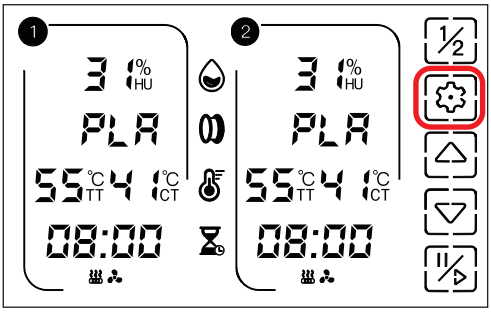


2


After modifying the parameters in one chamber, it is possible to switch between different chambers via ½ to modify the parameters of another chamber.

Button Expansion Function

A Press [½] to choose chamber,then long press [½] for 2 seconds to copy the parameters of the currently selected chamber to another chamber.

B Press [½] to choose chamber,then long press [⚙] for 2 seconds to enter the automatic drying mode (AUTO mode).

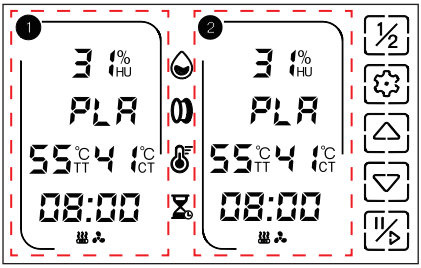

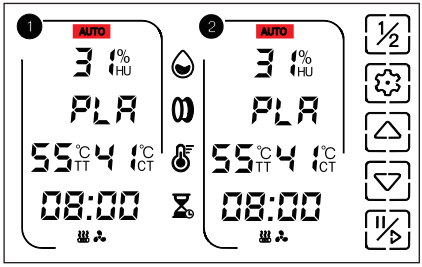


A Chambers 1 and 2 parameters can be copied from each other, provided that the copied chamber is already working


B When AUTO mode is turned on, the screen will display the word “AUTO”.

When the automatic drying mode is activated, if the humidity inside the chamber is below the set threshold(the default value is 20%), the fan and heating module in that chamber will not start, and countdown will appear “--:--” . If the humidity exceeds the set threshold, the fan and heating module in that chamber will activate, with an icon appearing at the bottom and 2 hours countdown commencing. After enabling the automatic drying mode,the chamber will continuously cycle between these two scenarios. To exit the mode, simply press [½] to choose chamber,then long press [⚙] for 2 seconds until the "AUTO" label disappears.

Step 4:

After pressing [⚙] to select a parameter,If you need to adjust the parameter, click Up key or Down key.

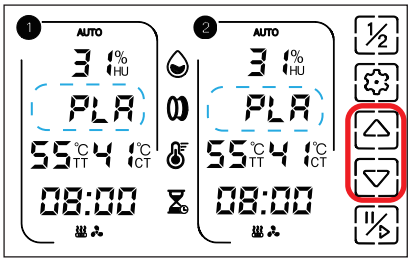

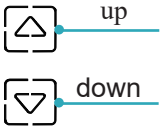

PLA	PLA
PETG	PETG
ABS	ABS
TPU	TPU
PVA	PVA
ASA	ASA
PA	PA
PP	PP
PC	PC
PET	PET

Filament Type

Confirm parameters: After adjusting to the appropriate parameters, no operation is required. Wait for 10 seconds before the cursor disappears, and the system will automatically confirm the parameters and complete the settings.


Filaments drying parameter reference

Filaments	Drying temperature	Drying time
PLA	50℃	4-12h
PETG	65℃	4-8h
ABS	80℃	8-12h
TPU	70℃	4-8h
PVA	50℃	4-8h
ASA	80℃	8-12h
PA	80℃	≥12h
PP	55℃	4-8h
PC	80℃	8-12h
PET	80℃	8-12h

When the drying box is working and the temperature inside the chamber reaches the preset target temperature, the intake and exhaust vents of the automatic dehumidifying module of the drying box will open.

Exception code

When an abnormality occurs in the drying box and the self-monitoring program of the drying box detects that it is working abnormally, the ptc heating block and fan will be forcibly shut down, and then the drying box will sound a buzzer alarm and an abnormality code will be displayed in the center of the screen.

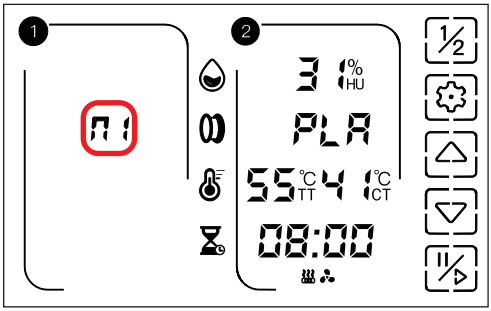


The illustration takes N1 alarm as an example

- F1：The fan rotates abnormally.
- F2：Fan Disconnect
- H1：PTC the heating block does not heat properly.
- H2：PTC the heating block heats uncontrollably.
- N1：NTC thermistor short circuit.
- N2：NTC thermistor is blocked.
- G1：Temperature and humidity sensor reading abnormality
- G2：Temperature and humidity sensor communication abnormality


In the settings mode, press ½ , select the chamber with the error code to eliminate the abnormal alarm status of that chamber.

(Note: Please contact our after-sales staff in time to find a solution after an abnormal alarm occurs on the machine.)


Replacement of desiccant

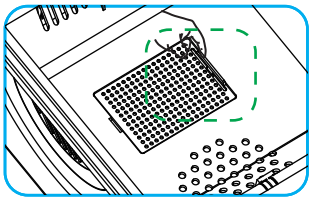


1.Turn off the power and use your fingers to open the cover.

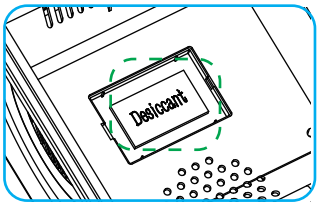

2.Put the desiccant into the tank.

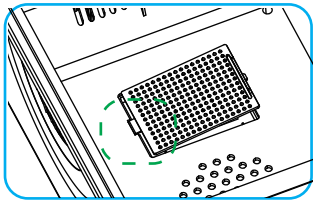

3.Place the flap of the cover against its notch.

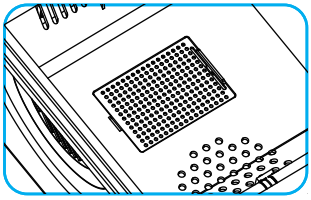

4.Then install the cover plate.

comgrow facebook group

comgrow.com

Shenzhen Comgrow Techology CO.,LTD.

Official website： comgrow.com

Email： service@comgrow.com