
DRÄXLMAIER

Bezeichnung: Name	**Bending device for A4816948 (A= 9mm B=-60°) and A4412402 (A=9mm B=-90°)**

Beschreibung: Description

See image description on page 2
The bending angle can be adjusted over the bending stop!
With the aid of the positioning aid, the bending angles can be changed more easily!
Preset bending edge: A=9mm
Observe default values according to customer drawing!

A4816948 A4412402

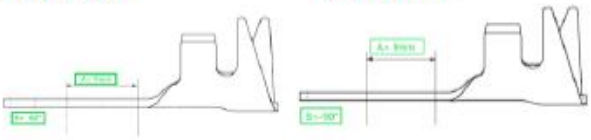


Verwendung für: Usage for

A 44 12 402 A 48 16 948

Bemerkungen: Notes


Damaged parts have to be renewed!!
The positioning of the bending edge has to be adjusted by the stop!

Zeichnung / Foto: Drawing / photo

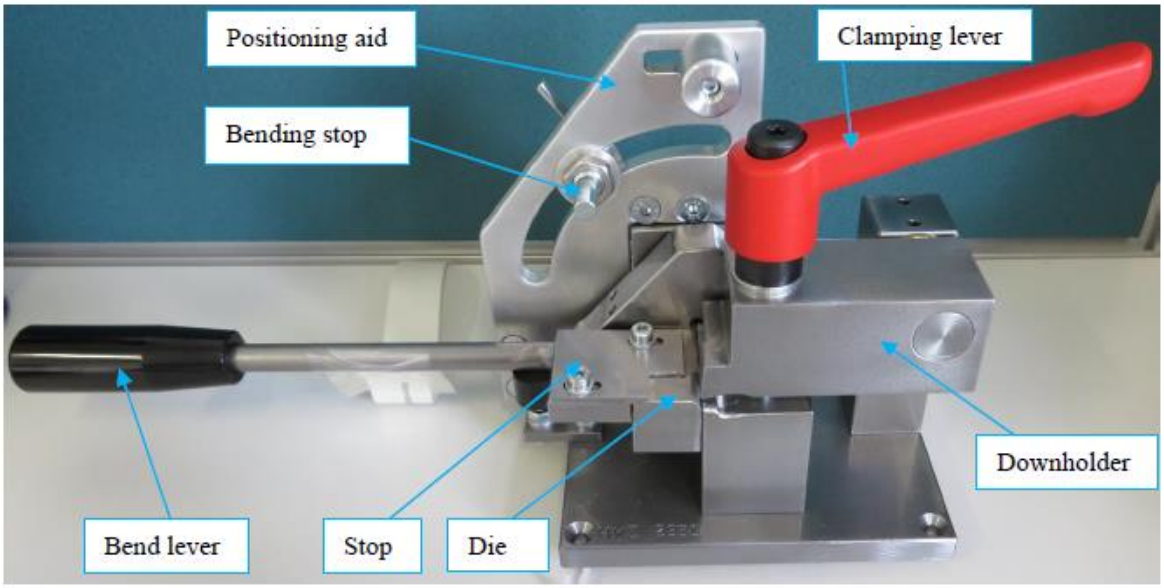


1. If closed, open the clamping. A spring will be push the downholder upwards.


2. Insert terminal in the right position. Pay attention that the terminal lays proper at the stop.

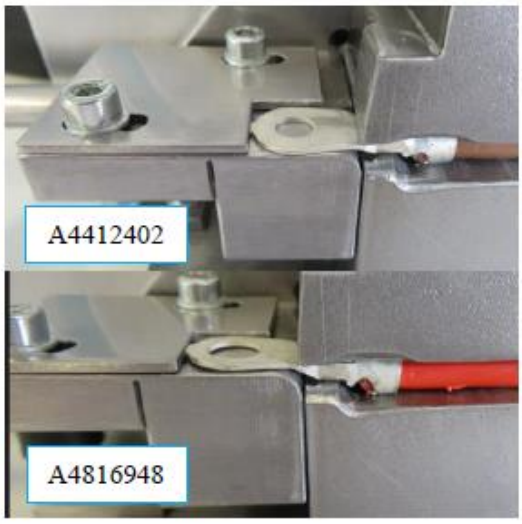


3. Clamp the terminal with the downholder. Therefore rotate the clamping lever clockwise.

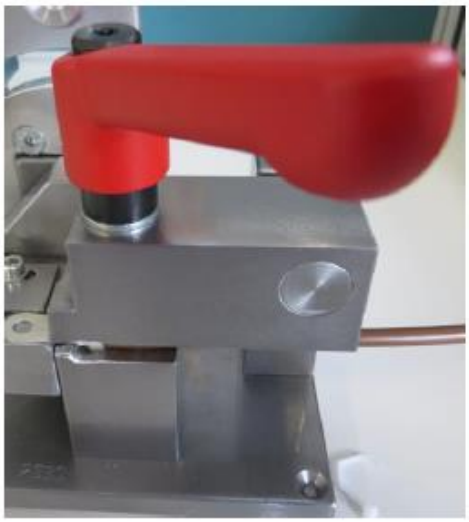

4. Bend the contact until it reaches the adjusted angle (-60°/ -90°).

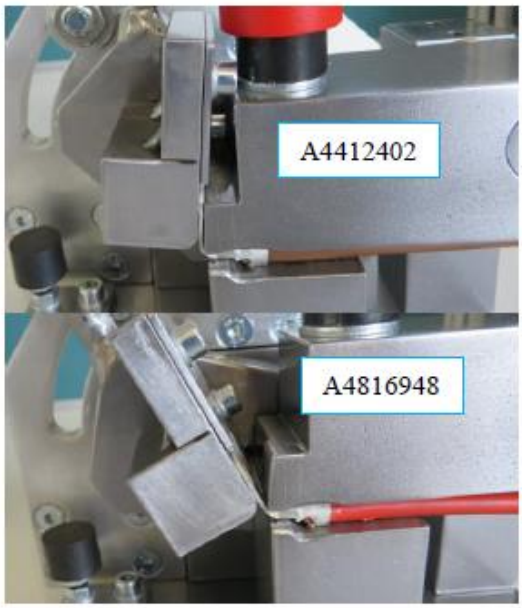


5. Open the clamping again, therefore rotate the clamping lever anti-clockwise. Afterwards take out the bent contact.

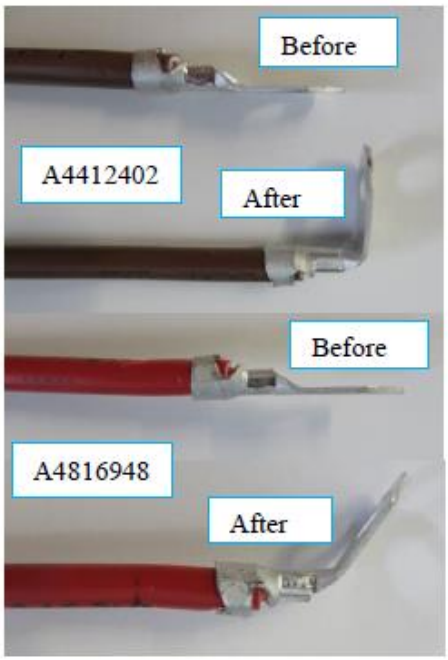

DRÄXLMAIER

Bezeichnung: Name	**Bending device for A4813709 (A10 +0,5mm B +45°)**


Beschreibung: Description
See image description on page 2
The bending angle can be adjusted over the bending stop!
With the aid of the positioning aid, the bending angles can be changed more easily!
Preset bending edge: A: 10 +0,5 mm
Observe default values according to customer drawing!

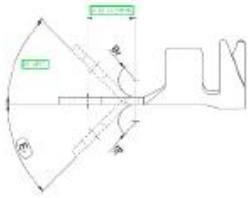

Verwendung für: Usage for
A 48 13 709

Bemerkungen: Notes
Damaged parts have to be renewed!!
The positioning of the bending edge has to be adjusted by the stop!


Zeichnung / Foto: Drawing / photo

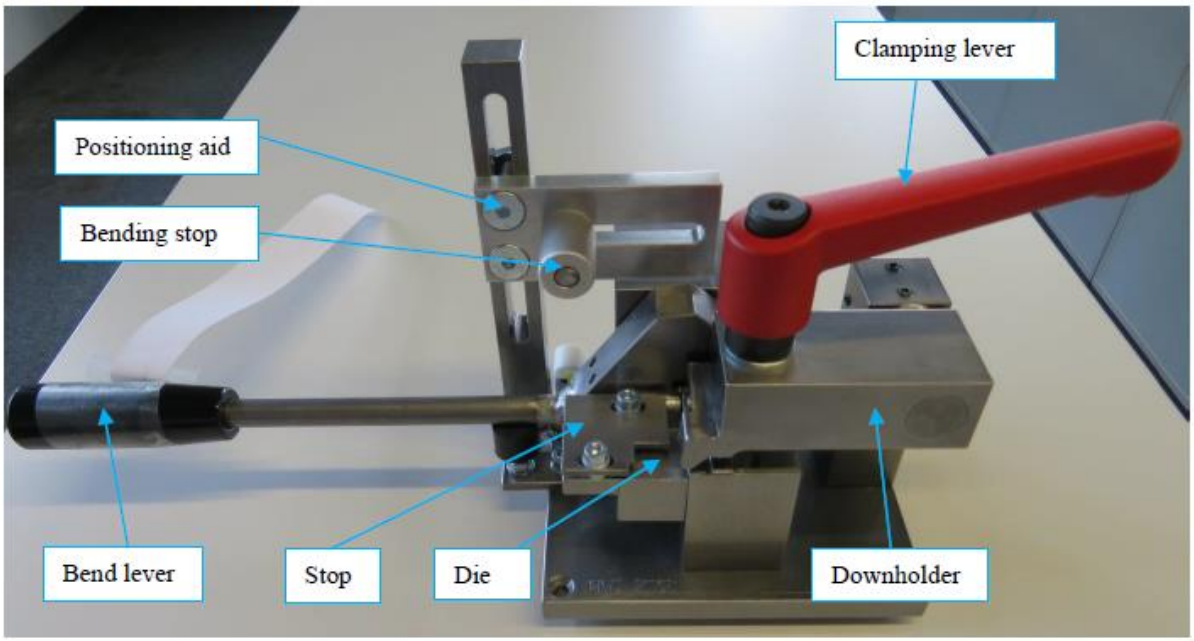


Beschreibung: Description

1. If closed, open the clamping. A spring will be push the downholder upwards.


2. Insert terminal in the right position. Pay attention that the terminal lays proper at the stop.

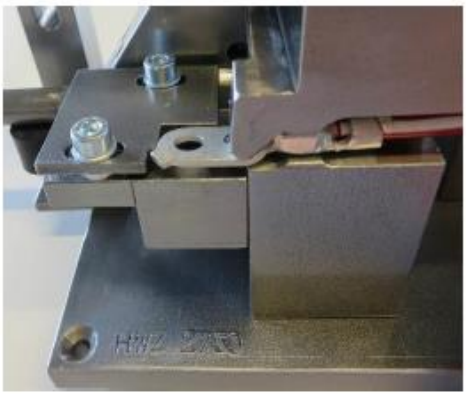

3. Clamp the terminal with the downholder. Therefore rotate the clamping lever clockwise.

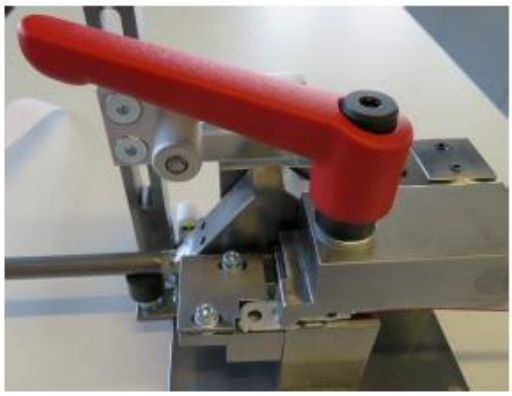

4. Bend the contact until it reaches the adjusted angle (+45°).

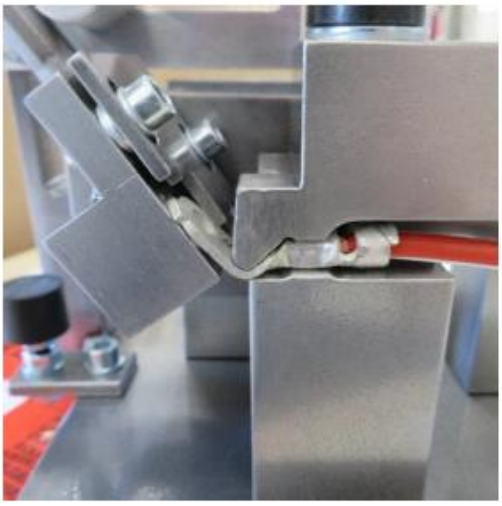

5. Open the clamping again, therefore rotate the clamping lever anti-clockwise. Afterwards take out the bent contact.

