



Connector B"

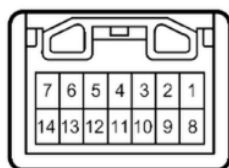

Connector A"

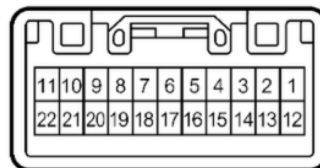

Pin	ESP32 GPIO	Trigger	Normally
A1 - Backlight	IO8 / GPIO8	GND	Off
A2 - Left Signal	IO12 / GPIO12	12v	Off
A3 - Right Signal	IO11 / GPIO11	12v	Off
A5 - High Beam	IO18 / GPIO18	GND	Off
A7 - Check Engine	IO17 / GPIO17	GND	Off
A8 - Airbag	IO16 / GPIO16	GND	Off
A9 - ABS	IO15 / GPIO15	GND	On
A11 - RPM	IO10 / GPIO10	Pulsing 12V	0
A12 - Speed	IO7 / GPIO7	Pulsing GND	0
B3 - TRC OFF	IO6 / GPIO6	GND	Off
B4 - SLIP	IO5 / GPIO5	GND	Off
B5 - BRAKE	IO4 / GPIO4	GND	On
B6 - Rear Lights	IO9 / GPIO9	12V	On
B7 - Headlight Beam Level	IO46 / GPIO46	12V	Off
B8 - Security	IO13 / GPIO13	12V	Off

Constant 12v - A4 (High Beam), A15 (MPX-B), A16, A17, A22 (Backlight)

Constant GND - A18 (Signal), A19

MPX pins: A20 (MPX2), A21 (MPX1)

MPX controlled functions: Fuel, Coolant, Gear, MPG