





COMBINATION METER

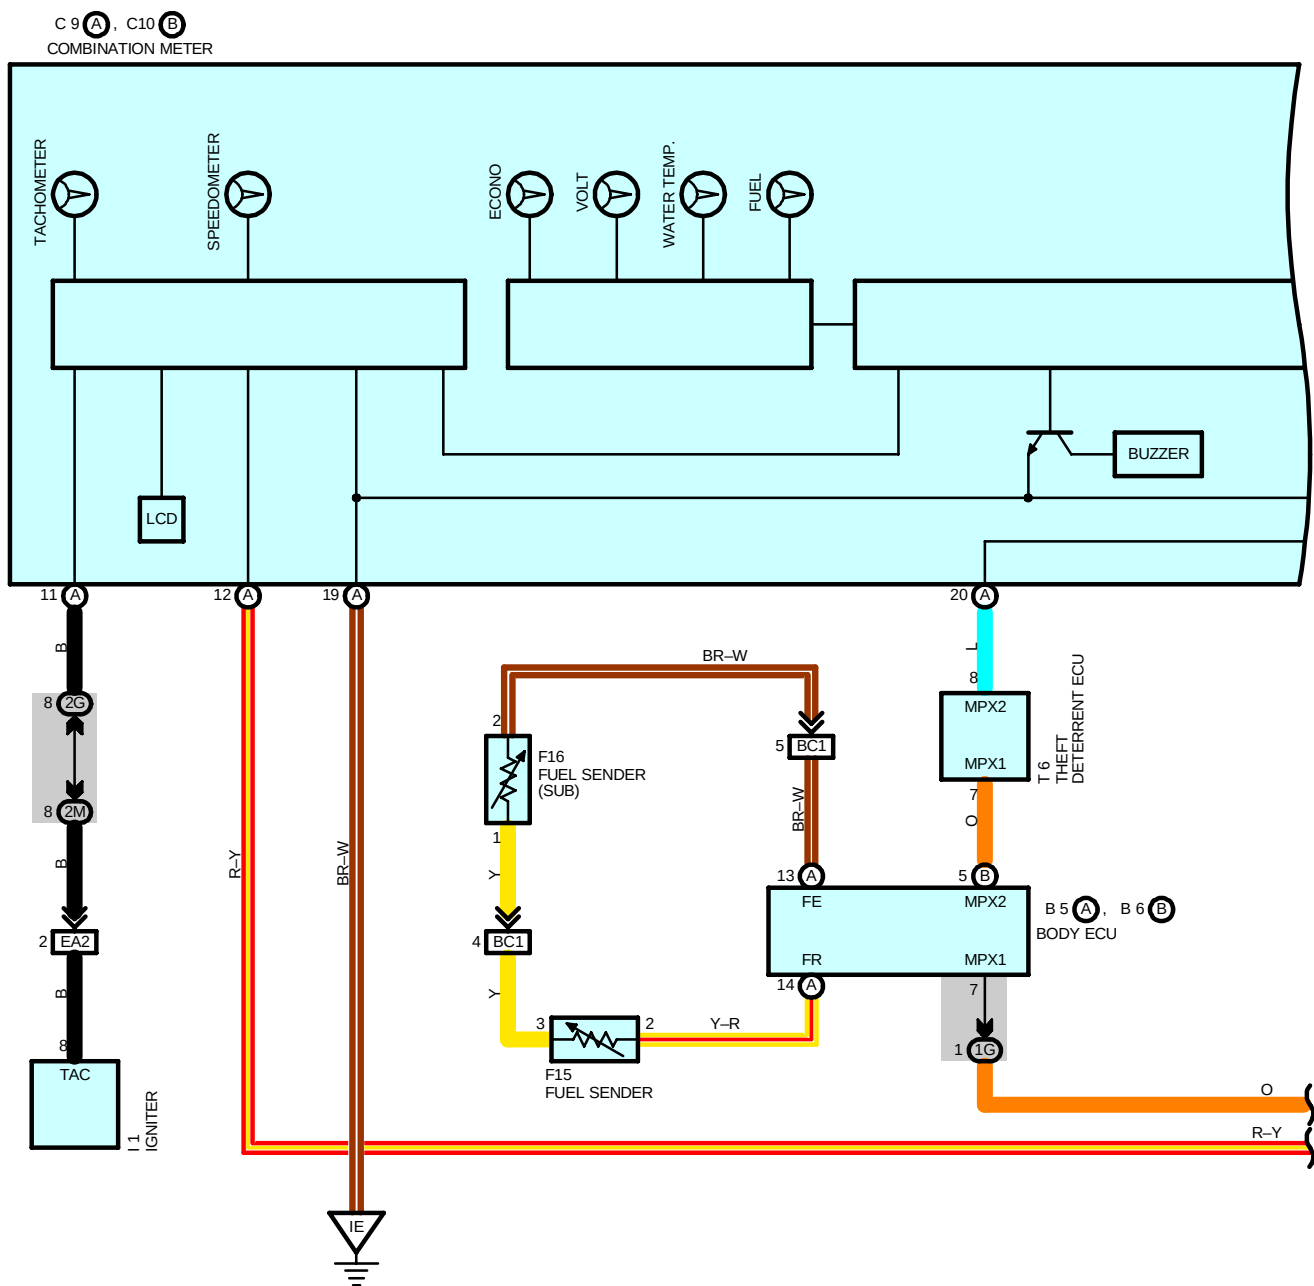

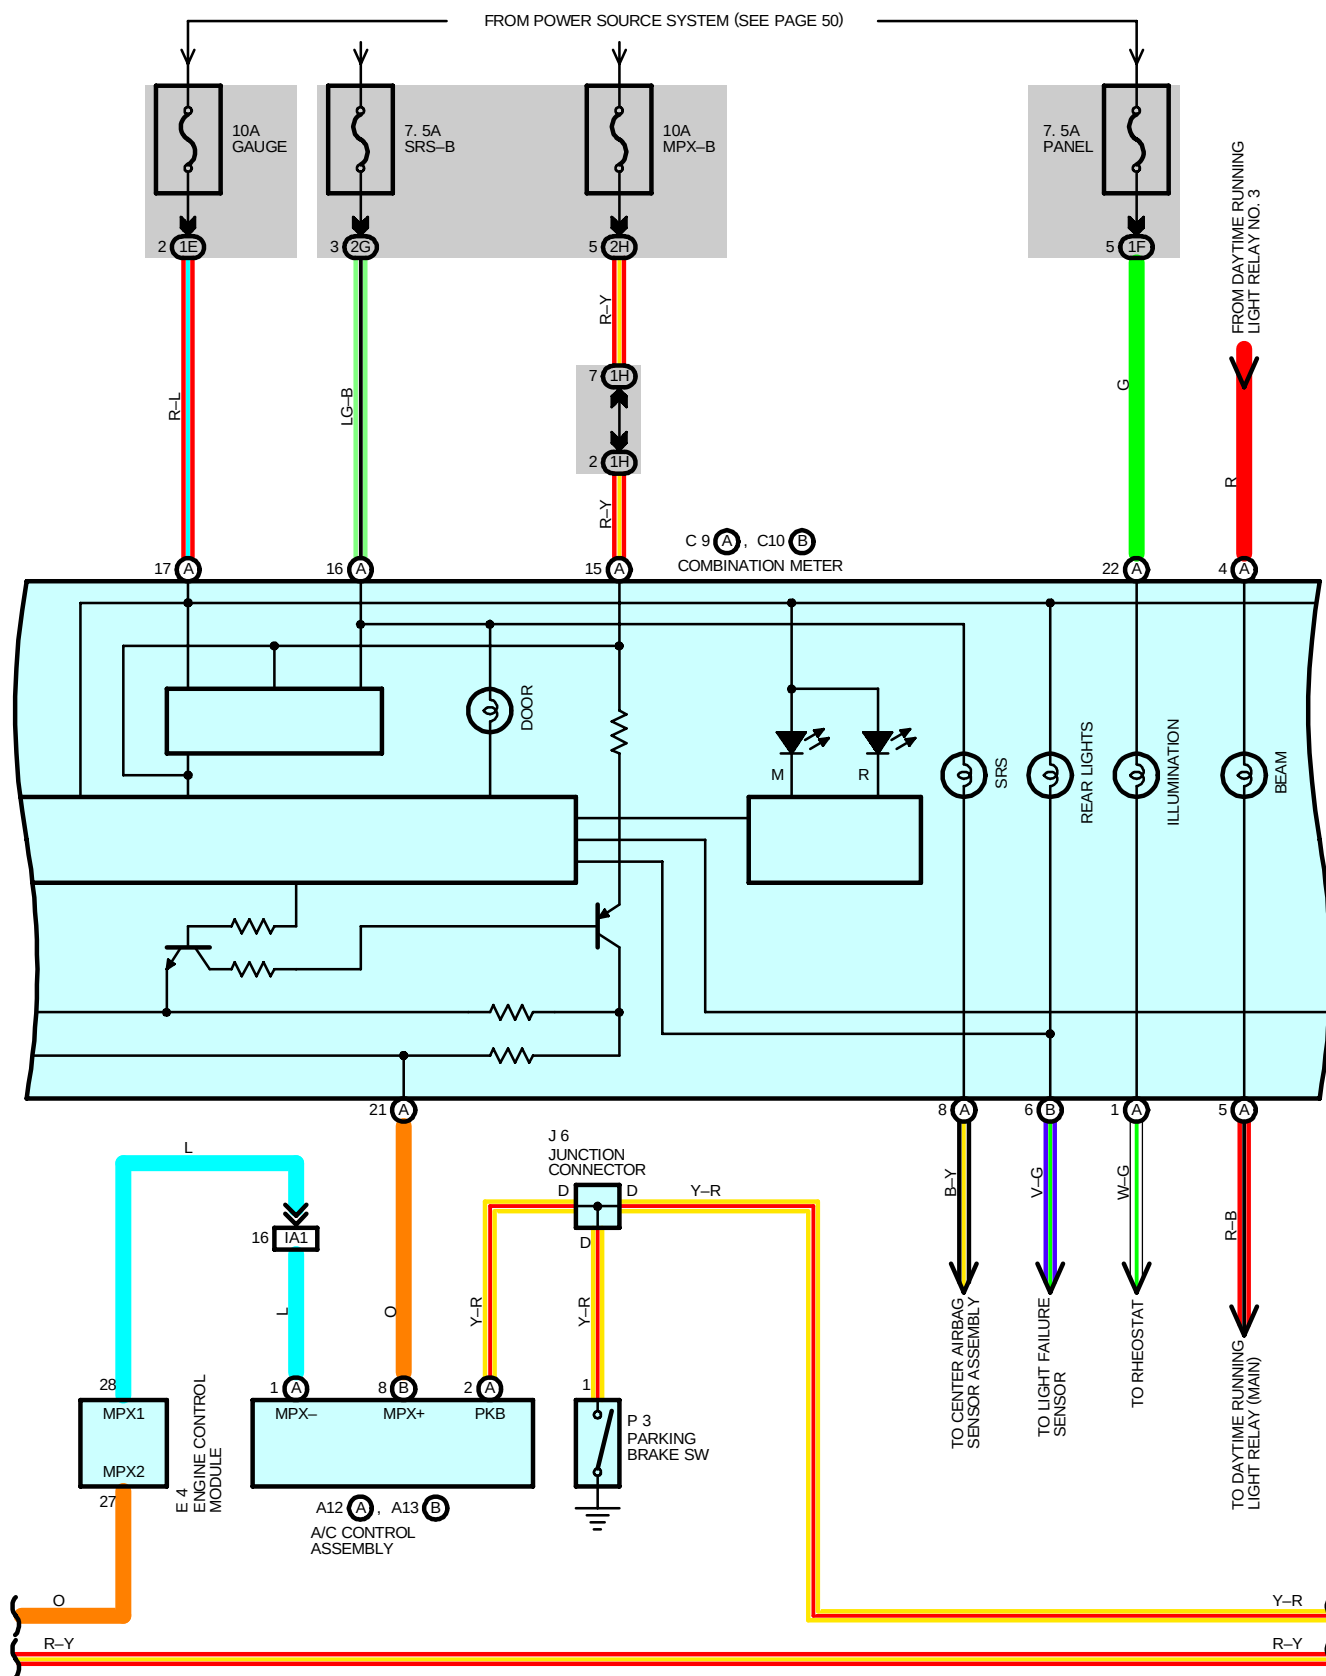

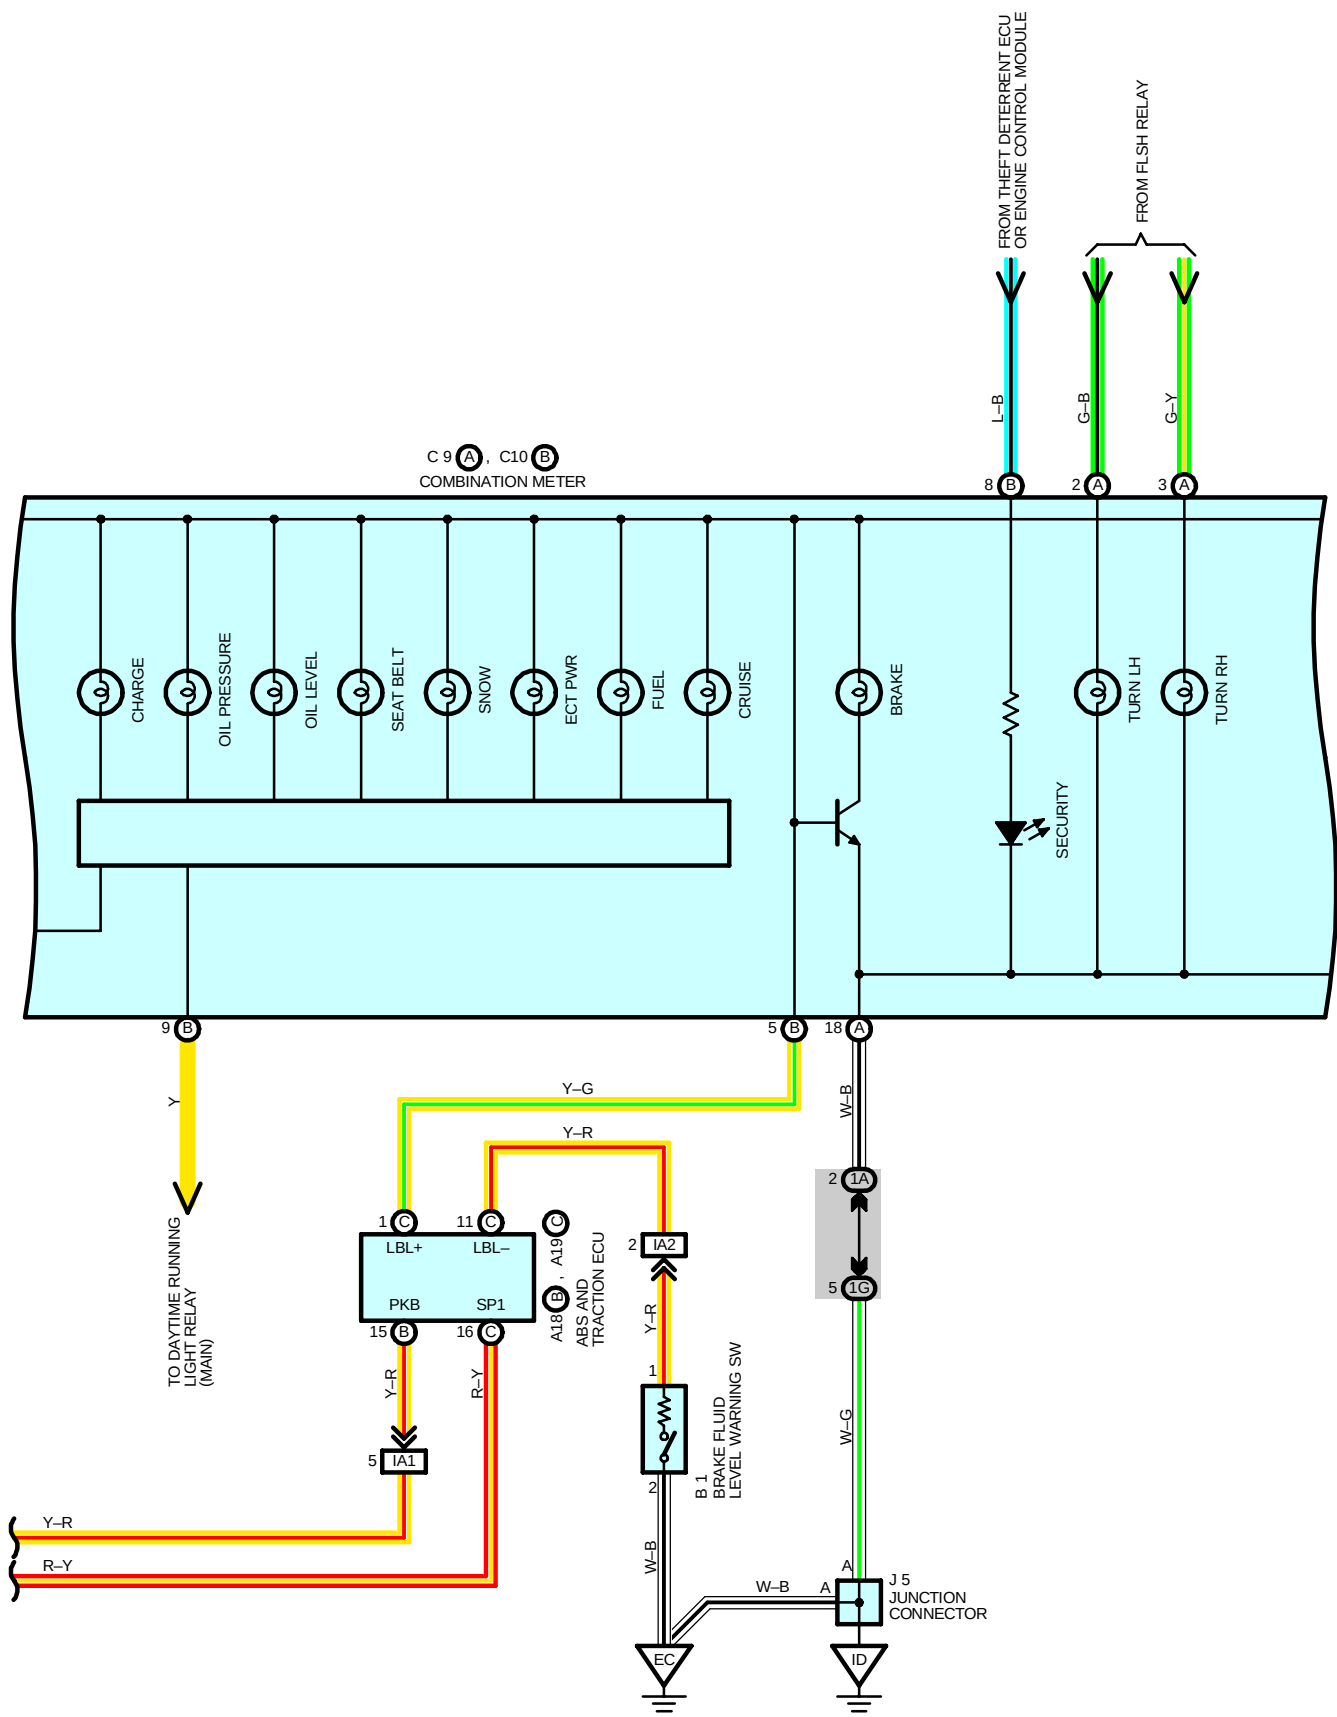

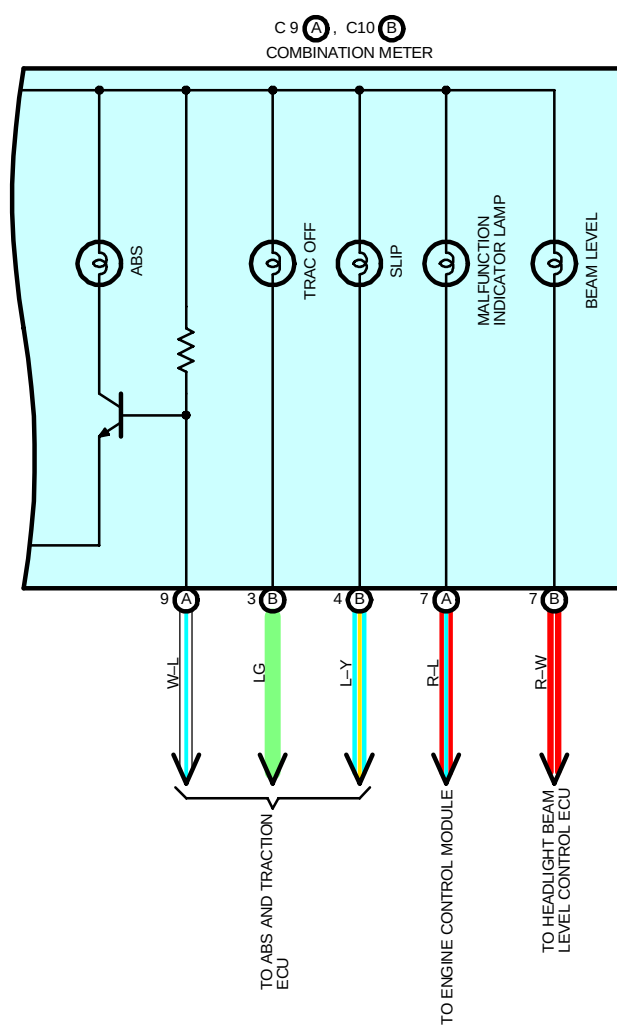

COMBINATION METER

SERVICE HINTS

P3 PARKING BRAKE SW

1-GROUND : Continuity with the parking brake lever pulled up

F15 FUEL SENDER

2-3 : Approx. **2.0** Ω at fuel full
Approx. **55.0** Ω at fuel empty

C9 (A) COMBINATION METER

(A)17-GROUND : Approx. **12** volts with the ignition SW at **ON** position
(A)18-GROUND : Always continuity
(A)19-GROUND : Always continuity
(A)15-GROUND : Always approx. **12** volts
(A)16-GROUND : Always approx. **12** volts

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A12	A 32	B6	B 32	I1	31
A13	B 32	C9	A 32	J5	33
A18	B 32	C10	B 32	J6	33
A19	C 32	E4	30	P3	33
B1	30	F15	34	T6	33
B5	A 32	F16	34		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	24	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
1E		
1F		
1G	24	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
1H	24	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
2G	26	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
2H		
2M	26	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	38	Engine Wire and Engine Room Main Wire (Inside of the ECU Box)
IA1	40	Instrument Panel Wire and Engine Room Main Wire (Near the Driver Side J/B)
IA2		
BC1	44	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel RH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EC	38	Left Fender Apron
ID	40	Cowl Side Panel LH
IE	40	Front Floor Panel Center LH

