Connect a Zap ETH.

For the installer, on site. Meters with an RJ12 P1 port. Online over Ethernet or Wi-Fi. P1 only: no RS485.

00 BEFORE YOU GO

- **P1 port enabled** — By the grid operator, beforehand.
- **Network** — Ethernet with DHCP, or 2.4 GHz Wi-Fi.
- **App and Bluetooth** — Sourceful Energy, signed in.
- **Cables** — RJ12 P1 cable and network cable.

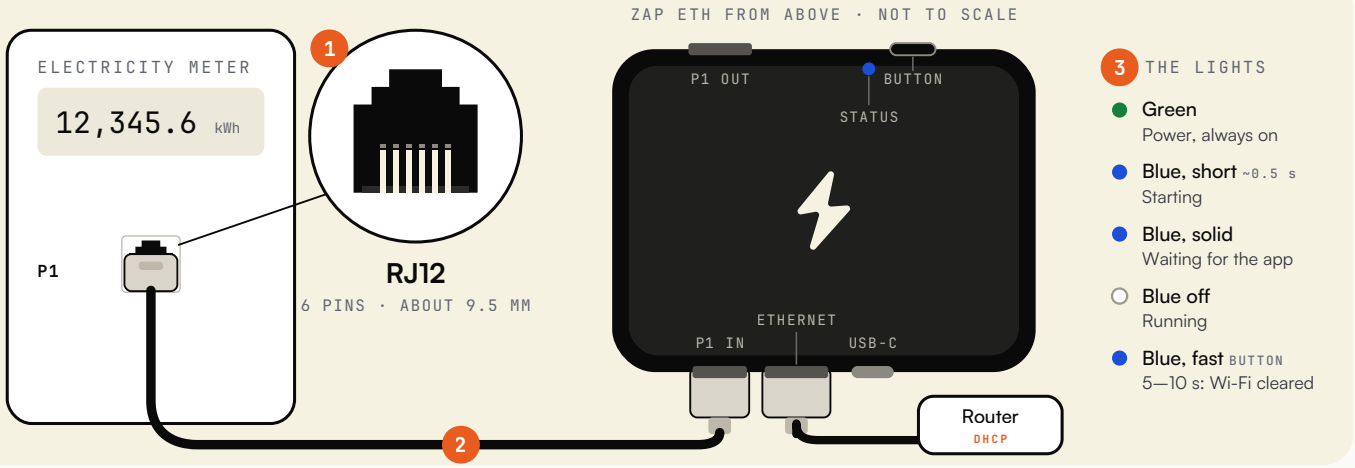

1 Find the port

The small socket, like an old phone jack. Labelled **P1**, **Customer**, **User** or **RJ12**. Six pins. Often behind a cover.

Eight pins is the wrong socket, even if it says HAN. **Never force the cable.**

2 Plug in

The P1 cable into **P1 IN** and the meter. The network cable into **ETHERNET** and the router. All should click.

USB-C 5 V if the meter is not enough (green off). No PoE.

3 Check the lights

Green: power. Blue short at start, then solid: waiting for the app.

Bluetooth closes a minute after the network is up. Missed it: replug the Zap.

4 In the app

SAME FLOW AS ZAP P1

1. **Sign in** — Open Sourceful Energy. No profile or site yet: create them first.
2. **Onboard a new Zap** — Under **Get started**, or **More → My Zaps**.
3. **Pick the Zap** — Blue must be solid. Stand close, pick the one with most bars.
4. **Claim & Configure network** — The Zap joins the profile you have selected.
5. **Ethernet detected** — **Skip WiFi setup**, **Done**. Or Wi-Fi 2.4 GHz, **Connect**.
6. **The meter** — **Energy Meters → P1 / HAN meter → Detect meter**.

5 Done when

YOU SEE THIS

✓ **The app**
Shows meter data within two minutes of **Meter added**.

✓ **Blue off**
Bluetooth has closed. It does not show the network.

✓ **`ethConnected`**
`true` in `zap.local/api/network`.

IF NOT

The meter was not detected
Port not on, or cable not fully in. Ask the grid operator.

No Ethernet detected
No address from the router. Check cable and port, or use Wi-Fi.

The app does not find the Zap
Bluetooth has closed. Replug, try again.

CHANGE WI-FI

Hold the button 5—10 s (fast blue blink), let go. Then:

My Zaps → the Zap → **Reconfigure WiFi** → pick it → **Configure network** → network, password → **Connect**

ETH

GOOD TO KNOW

No RS485. For a Modbus RTU device: Zap P1, Zap HAN or Zap Ultra Mini.

P1 OUT passes nothing on with Zap firmware 7.0.5. Leave it empty.

An inverter on the network (Modbus TCP): **Add Energy Device**, as on the Zap P1.

DRAWING NOT TO SCALE · RJ12: OPEN CONNECTOR GRAPHICS, CC BY 4.0