Commission a Blixt.

For the installer on a commercial or industrial site. From mounting to the first battery test.

00 BEFORE YOU GO

Prepared by Sourceful
Software, identity and serial ports ready.

Site data
Fuse size, phases, voltage.

Device list
Model, IP, port, unit ID. A driver exists.

Laptop and cable
Laptop on the network, twisted pair, 9—36 V DC.

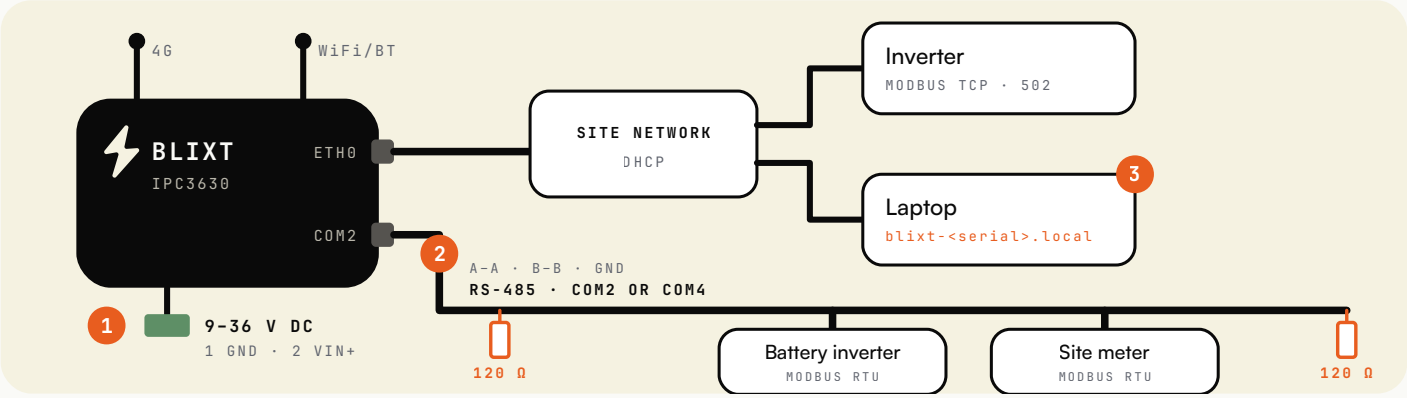

1 Mount and connect

Antennas on **4G** and **WiFi/BT**. Ethernet to the network (DHCP). Power 9—36 V DC: **pin 1 GND**, **pin 2 VIN+**. Check the polarity.

The first start downloads ~1.6 GB, 10—20 min. Keep the power on. Leave **PROGRAMMING** alone.

2 Wire RS-485

Only **COM2** or **COM4**. COM1 and COM3 drop Modbus frames.

PORT	B	A	DEVICE	120 Ω
COM2	1	3	`ttyAMA4`	J22
COM4	2	4	`ttyAMA3`	J24

GND on pin 5 or 6. Terminate only the ends of the bus. One Modbus master per device.

3 Open the dashboard

From the laptop: **http://blixt-<serial>.local/**. Plain `blixt.local` goes wrong with several Blixts. No answer over 4G.

Whoever reaches the dashboard can control the battery. Protected network, never the internet.

4 Set up the site

BEFORE ANY CONTROL

1. **Flow → Site configuration.**
2. Fuse, phases, voltage. Default: 63 A, 3 phases, 230 V.
3. Choose the site meter. It must give current and voltage per phase.

5 Add the devices

1. **Devices → Add device**. Driver and **version** from the registry. Pin the version.
2. **TCP:** IP, port (usually 502), unit ID.
3. **RTU:** `/dev/ttyAMA4` (COM2) or `/dev/ttyAMA3` (COM4), baud, parity, unit ID. The pre-filled `/dev/ttyAMA0` is COM3: change it.

6 Done when

YOU SEE THIS

✓ Devices: `live`
On every device.

✓ Flow
Power, state of charge and frequency within seconds.

✓ Battery test
Manual, ~10 % of rated power. Plus charges, minus discharges. **FAULT** off.

IF NOT

RTU device: `timeout`
Wrong port, A/B swapped, wrong baud or unit ID, no termination.

Garbage at every baud rate
The serial ports are not enabled. Contact Sourceful.

Controls greyed out
An aggregator is in control. That is intended.

SvK
RESERVE MARKET

Does the site take part in Svenska kraftnät's reserve market? Change nothing, do not restart and do not unplug anything without Sourceful's approval for that exact action.

Sourceful connects the **aggregator**. While it is in control, the local controls are locked.