Connect a Zap.

For the installer, on site. From the meter's P1/HAN port to meter data in the Sourceful Energy app on **mainnet**.

00 BEFORE YOU GO

- **P1/HAN port enabled** — By the grid operator, beforehand.
- **Wi-Fi, 2.4 GHz only** — Network name and password.
- **App and Bluetooth** — Sourceful Energy, signed in.
- **The RJ12 cable** — Comes with the Zap.

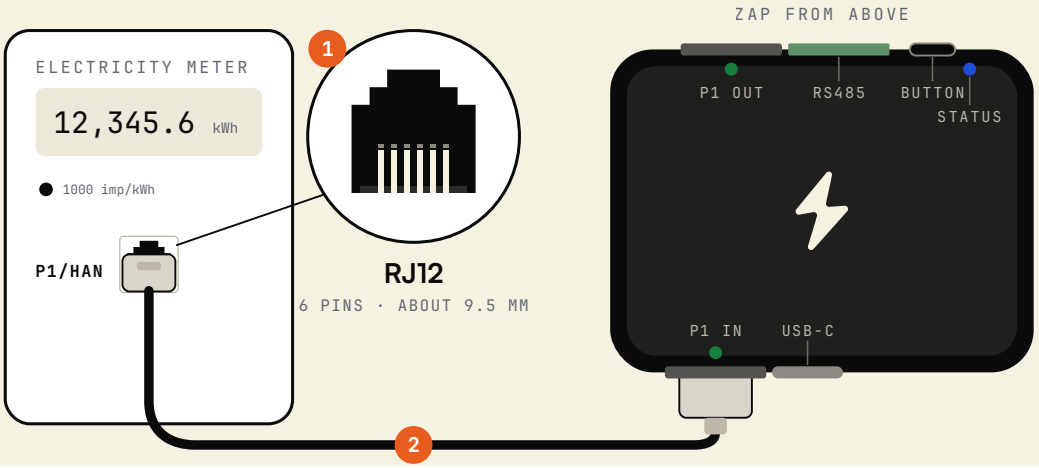

1 Find the port

The small socket, like an old phone jack. Labelled **P1**, **Customer**, **User** or **RJ12**, sometimes **HAN**. Six pins. Often behind a cover.

Eight pins is the wrong socket, even if it says HAN. **Never force the cable.**

2 Plug in

The cable is already in the Zap's **P1 IN**, on the long side with USB-C. Push the other end into the meter until it clicks. The meter powers the Zap.

USB-C only if the meter gives no power, the Wi-Fi is weak, or P1 OUT is in use.

3 Check the lights

Green in IN, solid: power. Blue, solid: the Zap is waiting for the app.

No green: check the cable or use USB-C. No blue: hold the button 5—10 s until it blinks fast, let go.

4 In the app

SOURCEFUL ENERGY · MAINNET

1. **Sign in** — Open Sourceful Energy. No profile or site yet: create them first.
2. **Onboard a new Zap** — Under **Get started**, or **More → My Zaps**.
3. **Pick the Zap** — Blue must be solid. Stand close, pick the one with most bars.
4. **Claim & Configure network** — The Zap joins the profile you have selected.
5. **Wi-Fi, 2.4 GHz** — Network, password, **Connect**. Hidden: **Enter manually**.
6. **Done** — Name the Zap if you like. It switches to Wi-Fi.

5 Done when

YOU SEE THIS

- **Green in OUT** — Blinks about every ten seconds. The meter is answering.
- **Blue double blink** — Shortly after start. Wi-Fi is up.
- ✓ **The app shows meter data**

IF NOT

- **No data blink after a minute** — Usually the port is not enabled, or the cable is wrong. Ask the grid operator to enable it.
- **Blue once, then nothing** — No Wi-Fi. Better coverage, or redo the Wi-Fi.
- **Seems stuck** — Hold the button 2—5 s, let go. The Zap restarts.

CHANGE WI-FI

Hold the button 5—10 s (fast blue blink), let go. Then:

My Zaps → the Zap → **Reconfigure WiFi** → pick it → **Configure network** → network, password → **Connect**

THEN · INVERTER

Supported model, fixed IP, same network. **More → Energy devices → Add Energy Device**: type, model, IP, port, unit ID.

SAJ

NOT IN THE APP

SAJ is not in the mainnet app. Do not add it as another inverter.

The Zap needs **internet**, and must be on the **same LAN** as the SAJ or connected to it by serial.

Sourceful does the integration, not the installer. About half a day once that is in place.

RJ12 JACK AFTER OPEN CONNECTOR GRAPHICS, WIKKE ANDEWEG, CC BY 4.0