Connect a Zap HAN.

For the installer, on site. For meters with an RJ45 HAN port. Meter with RJ12 P1: use **Zap P1**.

00 BEFORE YOU GO

- **HAN port enabled** — By the grid operator, beforehand.
- **Wi-Fi, 2.4 GHz only** — Network name and password.
- **App and Bluetooth** — Sourceful Energy, signed in.
- **Cable and power** — The RJ12—RJ45 cable. USB-C, 5 V, at least 1 A.

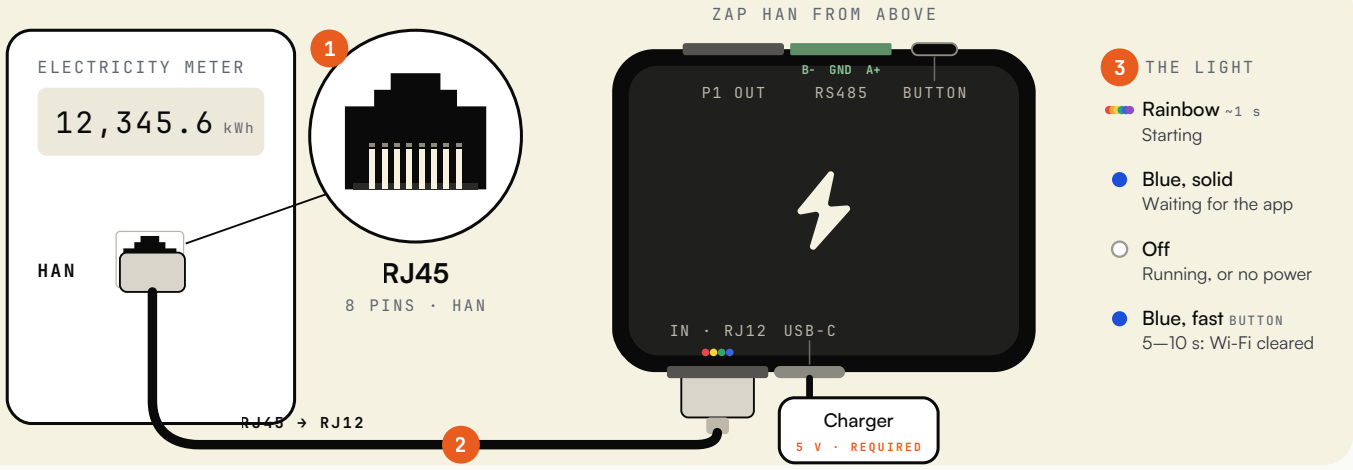

1 Find the port

The wider socket with eight pins (RJ45), labelled **HAN**. Often behind a cover.

Never a **Zap P1** or an adapter in RJ45 HAN. Only the Zap HAN and its cable.

2 Plug in

The RJ45 end into the meter, the RJ12 end into the Zap's **IN**, the long side with USB-C. Both should click. Plug in USB-C: the HAN port does not power the Zap.

The Zap HAN only starts on USB-C power.

3 Check the light

The light sits in the RJ12 socket. Rainbow for a second: starting. Then blue, solid: waiting for the app.

No blue: hold the button 5—10 s until it blinks fast, let go.

4 In the app

SAME FLOW AS ZAP P1

1. **Sign in** — Open Sourceful Energy. No profile or site yet: create them first.
2. **Onboard a new Zap** — Under **Get started**, or **More → My Zaps**.
3. **Pick the Zap** — Blue must be solid. Stand close, pick the one with most bars.
4. **Claim & Configure network** — The Zap joins the profile you have selected.
5. **Wi-Fi, 2.4 GHz** — Network, password, **Connect**, then **Done**. Hidden: **Enter manually**.
6. **The meter** — **Energy Meters → P1 / HAN meter → Detect meter**.

5 Done when

YOU SEE THIS

- ✓ **The app** — Shows meter data within two minutes of **Meter added**.
- ✓ **The light is off** — A minute after Wi-Fi is up. Bluetooth has closed.
- ✓ **`han_uart`** — On the meter in `zap.local/api/devices`.

IF NOT

- **The meter was not detected** — The HAN port is not on, or the cable is wrong. Ask the grid operator to turn it on.
- **Encrypted meter** — Not supported yet. Contact Sourceful.
- **All dark, not in the app** — No power. Check the USB-C charger.

CHANGE WI-FI

Hold the button 5—10 s (fast blue blink), let go. Then:

My Zaps → the Zap → **Reconfigure WiFi** → pick it → **Configure network** → network, password → **Connect**

THEN · RS485

Not the Zap P1's order: B−, GND, A+ from P1 OUT. A+ to A, B− to B, GND to GND. In the app: **Modbus RTU**.

HAN SUPPORTED METERS

Unencrypted HAN (DLMS/COSEM over M-Bus). Encrypted meters do not work yet.

Tested with **Kamstrup**. Other brands: ask Sourceful before you install.

The grid operator must turn the HAN port on. It is often off at first.

RJ45: OPEN CONNECTOR GRAPHICS, CC BY 4.0