Commission a Blixt.

For the installer on a commercial or industrial site. From the DIN rail to the first battery test.

00 BEFORE YOU GO

- **Prepared by Sourceful** — Software, identity, serial ports, dashboard address.
- **Site data** — Fuse size, phases, voltage.
- **Device list** — Model, IP, port, unit ID. A driver exists.
- **Laptop and cable** — Laptop, twisted pair, 120 Ω, 9—36 V DC.

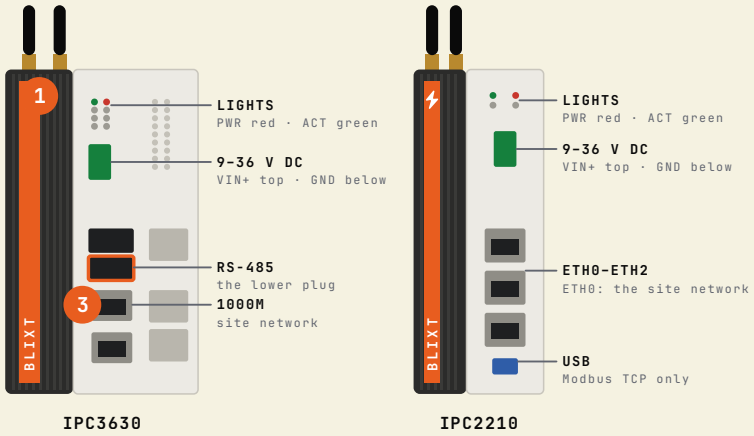

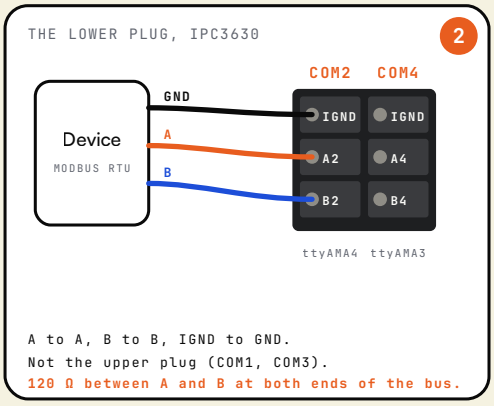

1 Mount and connect

On the DIN rail, antennas up. Ethernet in **1000M** (IPC3630) or **ETH0** (IPC2210). Power 9—36 V DC in the green plug: **VIN+** on top, **GND** below.

PWR red, solid: power. Blinking: bad supply, cut it. First start: 10—20 min.

2 Wire RS-485

IPC3630 only: the lower plug, **COM2** on the left or **COM4** on the right. The COM light blinks when Modbus traffic flows.

Not terminated from the factory. At a bus end: 120 Ω between A and B at the plug. IPC2210: Modbus TCP only.

3 Open the dashboard

From the laptop: **http://blixt-<serial>.local/**; Sourceful gives you the name. Or the IP from the router. No answer over 4G.

Whoever reaches the dashboard can control the battery. Protected network, never the internet.

4 Set up the site

BEFORE ANY CONTROL

1. **Flow → Site configuration.**
2. Fuse, phases, voltage. Default: 63 A, 3 phases, 230 V.
3. Choose the site meter. It must give current and voltage per phase.

5 Add the devices

1. **Devices → Add device.** Driver and **version** from the registry. Pin the version.
2. **TCP:** IP, port (usually 502), unit ID.
3. **RTU:** `/dev/ttyAMA4` (COM2) or `/dev/ttyAMA3` (COM4). The pre-filled `ttyAMA0` is wrong: change it.

6 Done when

YOU SEE THIS

✓ **Devices:** `live`
On every device.

✓ **Flow**
Power, state of charge and frequency within seconds.

✓ **Battery test**
Manual, ~10 % of rated power. Plus charges, minus discharges. **FAULT** off.

IF NOT

RTU device: `timeout`
Wrong plug or port, A/B swapped, wrong baud or unit ID, no termination.

The PWR light blinks
The supply is too weak or wrong. Cut the power and check it.

Controls greyed out
An aggregator is in control. That is intended.

SvK
RESERVE MARKET

Does the site take part in Svenska kraftnät's reserve market? Change nothing, do not restart and do not unplug anything without Sourceful's approval for that exact action.

Sourceful connects the **aggregator**. While it is in control, the local controls are locked.