Commission a Blixt.

For the installer on a commercial or industrial site. From the DIN rail to the first battery test.

00 BEFORE YOU GO

Prepared by Sourceful
Software, identity, serial ports. Termination agreed.

Site data
Fuse size, phases, voltage.

Device list
Model, IP, port, unit ID. A driver exists.

Laptop and cable
Laptop on the network, twisted pair, 9—36 V DC.

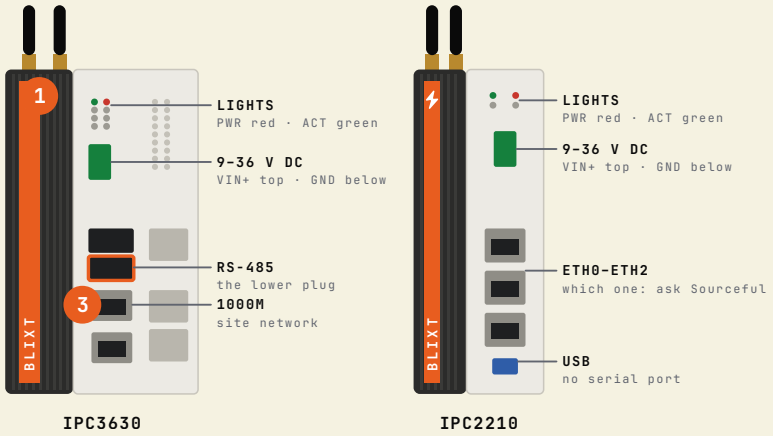

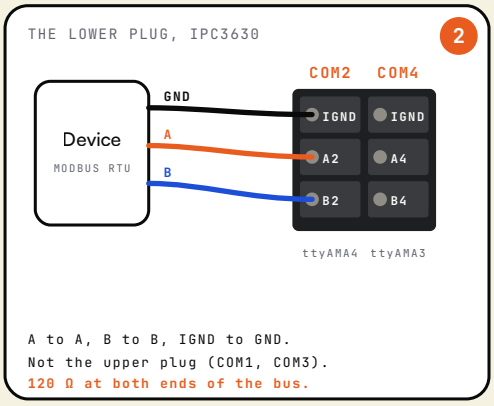

1 Mount and connect

On the DIN rail, antennas up. Ethernet in **1000M** (IPC3630). Power 9—36 V DC in the green plug: **VIN+** on top, **GND** below.

PWR red, solid: power. Blinking: bad supply, cut the power. The first start takes 10—20 min.

2 Wire RS-485

IPC3630 only: the lower plug, **COM2** on the left or **COM4** on the right. The COM light blinks when Modbus traffic flows.

The Blixt's 120 Ω jumpers are inside the case. Agree beforehand who terminates. The IPC2210 has no serial port.

3 Open the dashboard

From the laptop: **http://blixt-<serial>.local/**. Plain `blixt.local` goes wrong with several Blixts. No answer over 4G.

Whoever reaches the dashboard can control the battery. Protected network, never the internet.

4 Set up the site

BEFORE ANY CONTROL

1. **Flow → Site configuration.**
2. Fuse, phases, voltage. Default: 63 A, 3 phases, 230 V.
3. Choose the site meter. It must give current and voltage per phase.

5 Add the devices

1. **Devices → Add device**. Driver and **version** from the registry. Pin the version.
2. **TCP:** IP, port (usually 502), unit ID.
3. **RTU:** `/dev/ttyAMA4` (COM2) or `/dev/ttyAMA3` (COM4). The pre-filled `ttyAMA0` is wrong: change it.

6 Done when

YOU SEE THIS	IF NOT
✓ Devices: `live` On every device.	RTU device: `timeout` Wrong plug or port, A/B swapped, wrong baud or unit ID, no termination.
✓ Flow Power, state of charge and frequency within seconds.	The PWR light blinks The supply is too weak or wrong. Cut the power and check it.
✓ Battery test **Manual**, ~10 % of rated power. Plus charges, minus discharges. **FAULT** off.	Controls greyed out An aggregator is in control. That is intended.

SvK
RESERVE MARKET

Does the site take part in Svenska kraftnät's reserve market? Change nothing, do not restart and do not unplug anything without Sourceful's approval for that exact action.

Sourceful connects the **aggregator**. While it is in control, the local controls are locked.