Connect a Zap HAN.

For the installer, on site. For meters with an RJ45 HAN port. Meter with RJ12 P1: use **Zap P1**.

00 BEFORE YOU GO

- **HAN port enabled** — By the grid operator, beforehand.
- **Wi-Fi, 2.4 GHz only** — Network name and password.
- **App and Bluetooth** — Sourceful Energy, signed in.
- **Cable and power** — The RJ12—RJ45 cable. USB-C 5 V, 1 A.

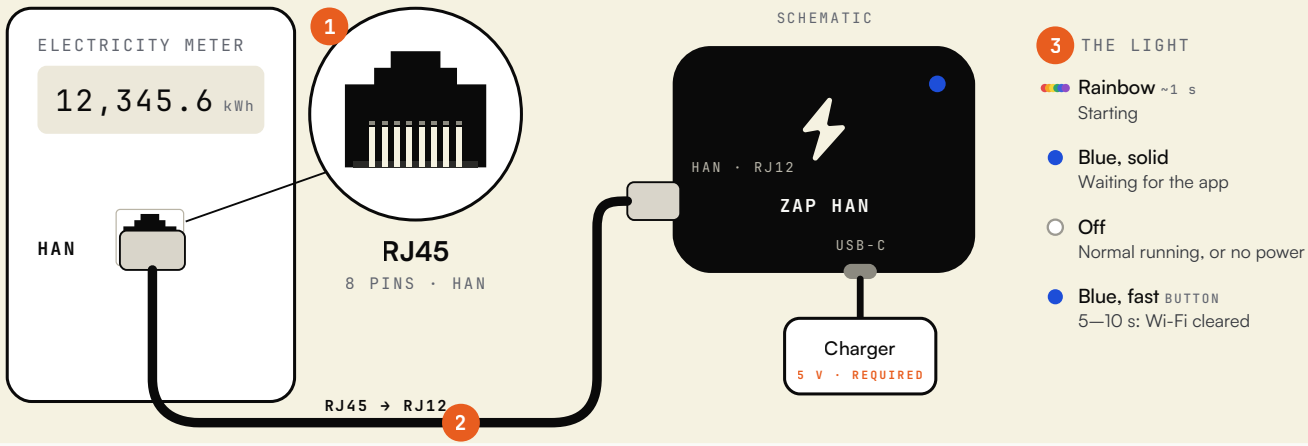

1 Find the port

The wider socket with eight pins (RJ45), labelled **HAN**. Often behind a cover.

Never a **Zap P1** or an adapter in RJ45 HAN. Only the Zap HAN and its cable.

2 Plug in

The RJ45 end into the meter, the RJ12 end into the Zap HAN. Both should click. Plug in USB-C power: the HAN port gives too little power, or none.

The Zap HAN only starts on USB-C power.

3 Check the light

Rainbow for a second: the Zap is starting. Then blue, solid: it is waiting for the app.

No blue: hold the button 5—10 s until it blinks fast, let go.

4 In the app

SAME FLOW AS ZAP P1

1. **Sign in** — Open Sourceful Energy. No profile or site yet: create them first.
2. **Onboard a new Zap** — Under **Get started**, or **More → My Zaps**.
3. **Pick the Zap** — Blue must be solid. Stand close, pick the one with most bars.
4. **Claim & Configure network** — The Zap joins the profile you have selected.
5. **Wi-Fi, 2.4 GHz** — Network, password, **Connect**, then **Done**. Hidden: **Enter manually**.
6. **The meter** — **Energy Meters → P1 / HAN meter → Detect meter**.

5 Done when

YOU SEE THIS

✓ The app
Shows meter data within two minutes of **Meter added**.

✓ The light is off
After Wi-Fi and Bluetooth. The Zap HAN has no data light.

✓ `han_uart`
On the meter in `zap.local/api/devices`.

IF NOT

The meter was not detected
The HAN port is not on, or the cable is wrong. Ask the grid operator to turn it on.

Encrypted meter
Not supported yet. Contact Sourceful.

All dark, not in the app
No power. Check the USB-C charger.

CHANGE WI-FI

Hold the button 5—10 s (fast blue blink), let go. Then:

My Zaps → the Zap → **Reconfigure WiFi** → pick it → **Configure network** → network, password → **Connect**

HAN SUPPORTED METERS

Unencrypted HAN (DLMS/COSEM over M-Bus). Encrypted meters do not work yet.

The firmware names **Kamstrup**. Other brands: ask Sourceful before you install.

The grid operator must turn the HAN port on. It is often off at first.