Connect a Zap Ultra X2.

For the installer, on site. Meters with an RJ12 P1 port. Online over Ethernet or Wi-Fi. Two module slots, one for RS485.

00 BEFORE YOU GO

- **P1 port enabled** — By the grid operator, beforehand.
- **Network** — Ethernet with DHCP, or 2.4 GHz Wi-Fi.
- **App and Bluetooth** — Sourceful Energy, signed in.
- **Cables** — RJ12 P1 cable and network cable.

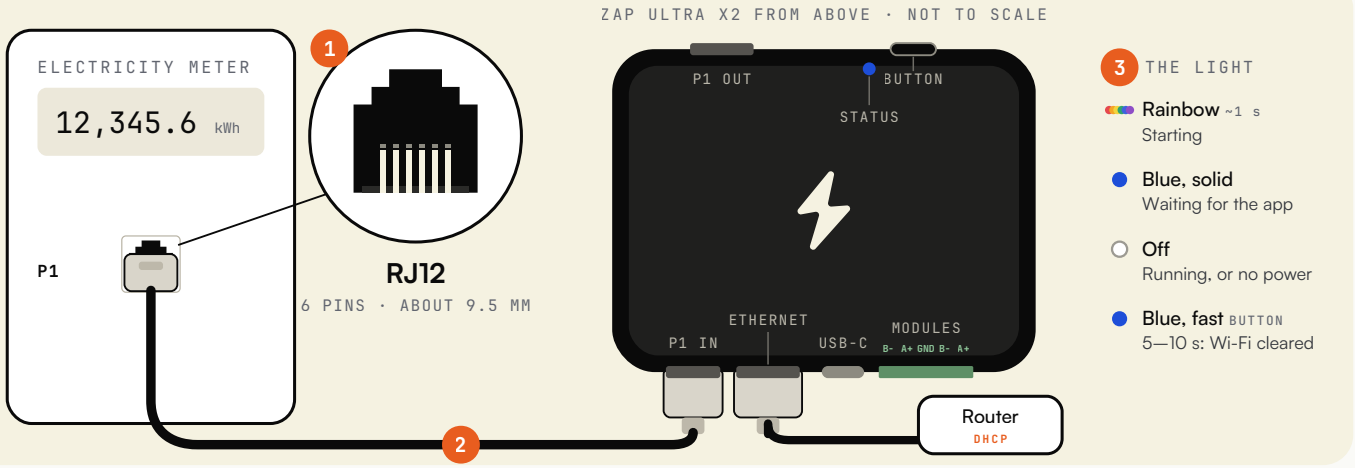

1 Find the port

The small socket, like an old phone jack. Labelled **P1**, **Customer**, **User** or **RJ12**. Six pins. Often behind a cover.

Eight pins is the wrong socket, even if it says HAN. **Never force the cable.**

2 Plug in

The P1 cable into **P1 IN** and the meter. The network cable into **ETHERNET** and the router. All should click.

USB-C 5 V if P1 OUT is used or the meter is not enough. No PoE.

3 Check the light

Rainbow for a second: starting. Then blue, solid: waiting for the app.

Bluetooth closes a minute after the network is up. Missed it: replug the Zap.

4 In the app

SAME FLOW AS ZAP P1

1. **Sign in** — Open Sourceful Energy. No profile or site yet: create them first.
2. **Onboard a new Zap** — Under **Get started**, or **More → My Zaps**.
3. **Pick the Zap** — Blue must be solid. Stand close, pick the one with most bars.
4. **Claim & Configure network** — The Zap joins the profile you have selected.
5. **Ethernet detected** — **Skip WiFi setup**, **Done**. Or Wi-Fi 2.4 GHz, **Connect**.
6. **The meter** — **Energy Meters → P1 / HAN meter → Detect meter**.

5 Done when

YOU SEE THIS

- ✓ **The app** — Shows meter data within two minutes of **Meter added**.
- ✓ **The light is off** — Bluetooth has closed. It does not show the network.
- ✓ **`ethConnected`** — `true` in `zap.local/api/network`.

IF NOT

- **The meter was not detected** — Port not on, or cable not fully in. Ask the grid operator.
- **No Ethernet detected** — No address from the router. Check cable and port, or use Wi-Fi.
- **The app does not find the Zap** — Bluetooth has closed. Replug, try again.

CHANGE WI-FI

Hold the button 5—10 s (fast blue blink), let go. Then:

My Zaps → the Zap → **Reconfigure WiFi** → pick it → **Configure network** → network, password → **Connect**

RS485

MODBUS RTU

Needs an **RS485 module in the left slot**, nearest USB-C. The Zap uses only that one.

Pins from USB-C: **B−**, **A+**, GND. A+ to the device's A, B− to B, GND to GND.

In the app: **Add Energy Device**, the model, **Modbus RTU**, then the device's settings.

DRAWING NOT TO SCALE · RJ12: OPEN CONNECTOR GRAPHICS, CC BY 4.0