


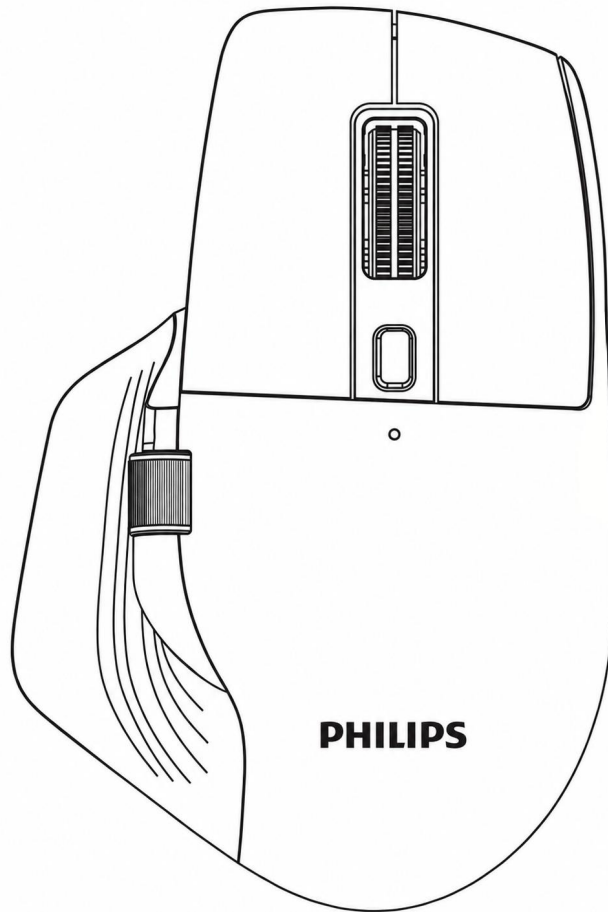

SPK7858B ERGONOMIC WIRELESS MOUSE

User Guide

Quick Start | Connection | Everyday Use | Customization | Troubleshooting



NEED HELP?

Use this document for quick setup, basic operation, compatibility answers, charging, care, and links to detailed support.

Customer Support: philips.us@top-support.net

Software Download (Scan): [PHILIPS U.S. Home & Office Mouse Support](#)



1. Know Your SPK7858B



Product Overview

Product: PHILIPS SPK7858B ergonomic rechargeable wireless mouse

Connection: 2.4 GHz USB-A | Bluetooth 5.0 | 2.4 GHz USB-C

DPI: 800 / 1600 (default) / 2400 / 3200 / 4000 DPI

Battery: Built-in rechargeable, 500 mAh lithium battery

Multi-device use: One host can be assigned to each mode for quick switching among up to three devices

1.1 Quick Start - 3 Steps

1	Turn the mouse on — Slide the power switch on the underside to ON.
2	Choose a connection mode — Short-press the mode button to select USB-A, Bluetooth, or USB-C.
3	Connect and test — Complete the matching setup on the next page, then confirm pointer movement and clicking.

1.2 What Is in the Box

Item	Qty	Notes
SPK7858B mouse	1	Rechargeable mouse
2.4 GHz USB-A receiver	1	Stored in the underside receiver compartment
2.4 GHz USB-C receiver	1	Stored in the underside receiver compartment
USB-A to USB-C charging cable	1	For 5 V USB charging
Printed materials	2	User Manual; After-sale Service Card

1.3 Main Controls

Left / Right Buttons	Primary and secondary click functions.
Vertical Wheel / Middle Button	Scroll vertically; press for the host or application middle-click function.
DPI Button	Cycle 800 / 1600 / 2400 / 3200 / 4000 DPI.
Forward / Back + Side Wheel	Navigate where supported; side wheel scrolls horizontally in supported applications.
Power Switch	Turns the mouse on or off.
Mode / Pairing Button	Short press changes mode; in Bluetooth mode, hold more than 5 seconds to enter pairing mode.

2. Connect and Switch Devices

The USB-A and USB-C receivers supplied with the mouse are factory paired. Use the matching USB-A or USB-C connection for each receiver. Use Bluetooth for Bluetooth connections. Each short press cycles through Mode 1 (USB-A), Mode 2 (Bluetooth), and Mode 3 (USB-C).

USB-A | 2.4 GHz RECEIVER



1. Remove the USB-A receiver from the underside storage compartment.
2. Insert it into an available USB-A port on the host device.
3. Short-press the mode button to select Mode 1 (USB-A). The mouse should connect automatically.

BLUETOOTH | 5.0



1. Short-press the mode button to select Mode 2 (Bluetooth).
2. Press and hold the mode button for more than 5 seconds to enter pairing mode.
3. Open Bluetooth settings on the host, select SPK7858B, then test the mouse.

USB-C | 2.4 GHz RECEIVER



1. Remove the USB-C receiver from the underside storage compartment.
2. Insert it into an available USB-C port on the host device.
3. Short-press the mode button to select Mode 3 (USB-C). The mouse should connect automatically.

2.1 Switching Between Up to Three Devices

1	Keep each host paired or connected — Leave the correct USB receiver connected to its host, or keep SPK7858 saved in the Bluetooth device list.
2	Short-press the mode button — Cycle to the mode assigned to the device you want to use.
3	Wait a few seconds and test — Previously connected devices normally reconnect when their mode is selected.

2.2 Connection Notes

- 2.4 GHz effective distance is about 15 m (49 ft) in open conditions; Bluetooth is about 10 m (33 ft). Actual range varies with interference, obstacles, and the host device.
- If Bluetooth pairing fails, keep the mouse within about 1 m / 3 ft during pairing, remove an old SPK7858 record if shown, and pair again.
- If a supplied receiver is lost, damaged, or mixed with another mouse, contact support. Do not use an unverified receiver-pairing utility.

TIP

For the most stable receiver connection during troubleshooting, connect the supplied receiver directly to the computer instead of an unpowered USB hub.

3. Controls, DPI, Scrolling and Charging

3.1 Everyday Controls

Control	Action	Result / Limitation
DPI button	Press	Cycles 800 → 1600 (default) → 2400 → 3200 → 4000 DPI
Vertical wheel	Rotate / click	Vertical scrolling; click function depends on the host/application
Horizontal thumb wheel	Roll left / right	Horizontal scrolling in supported pages, spreadsheets, timelines, and apps
Forward / Back	Press	Navigates where the operating system or application supports these commands
Mode button	Short press / hold >5 s	Switch connection mode / start Bluetooth pairing

3.2 Choosing a DPI Level

800 DPI Precise	1600 DPI Default	2400 DPI Faster	3200 DPI High	4000 DPI Maximum
---------------------------	----------------------------	---------------------------	-------------------------	----------------------------

Lower DPI gives slower, more precise pointer movement. Higher DPI gives faster movement across larger displays. The default is 1600 DPI.

3.3 Battery and Charging

1	Connect the cable — Insert the USB-C end of the supplied cable into the mouse.
2	Use a 5 V USB source — Connect the USB-A end to a 5 V computer USB-A port or other approved 5 V USB source.
3	Check the indicator — Flashing red means low battery; solid red means charging; solid green means fully charged. Charge the mouse before extended wireless use when the indicator flashes red.

CHARGING SAFETY

Use only a 5 V USB source as specified in the supplied product information. Keep the USB-C port dry and free of debris. Stop charging and contact support if the mouse, cable, or port becomes unusually hot, damaged, swollen, wet, or produces an odor.

3.4 If a Button or Wheel Seems Wrong

- Test the control in a standard browser or file window.
- Confirm that the active application supports Forward, Back, middle-click, or horizontal scrolling.
- If KeyLink is installed, temporarily close it and test the default behavior before changing a profile.

4. Philips KeyLink Software

KEYLINK IS OPTIONAL

Basic pointing, clicking, scrolling, DPI switching, and normal wireless use do not require KeyLink. Use KeyLink only for supported customization features.

4.1 System Requirements

Windows	Windows 10 or Windows 11 (x64)
macOS	macOS 12 or later (arm64)
Computer resources	At least 4 GB RAM and 2 GB free disk space
Internet	Required for download and certain application functions
Connection for SPK7858B setup	Connect the mouse through a supplied 2.4 GHz receiver

4.2 Set Up KeyLink

1	Download the current KeyLink installer — Use the SPK7858B Product Support Page.
2	Connect SPK7858B with a supplied 2.4 GHz receiver — Open KeyLink after the mouse is working normally in receiver mode.
3	Choose and test your settings — Apply changes, then test them in the application where you plan to use them.

4.3 Supported Customization May Include

Button actions and application profiles Assign supported actions and use different mappings for different applications.	Wheel and pointer settings Adjust supported wheel behavior, main-button orientation, and pointer sensitivity.
Factory reset Restore KeyLink custom software settings to default. This is not a hardware or receiver-pairing reset.	CrossGlide On supported setups, use KeyLink across two computers on the same local network.
Windows permission Run KeyLink as administrator when the target application also runs as administrator.	macOS permission Enable KeyLink in System Settings > Privacy & Security > Accessibility.
1	Use the same local network — Confirm both computers can access the same LAN.
2	Open KeyLink on both computers — Enable CrossGlide on both supported systems.
3	Reconnect if needed — Remove a disconnected device in CrossGlide and establish the connection again; restart KeyLink on both computers if necessary.

Feature availability depends on the operating system, connection mode, application, supported hardware, and KeyLink version.

5. Quick Problem Solver

Start with the matching problem below. Complete the steps in order and test the mouse after each step.

Mouse does not respond 1. Turn the mouse ON and select the intended mode. 2. Charge from a 5 V USB source for at least 30 minutes. 3. Restart the host and test on a clean, matte, non-glass surface.	USB receiver is not detected 1. Remove and reinsert the matching supplied receiver. 2. Try another direct USB port, then restart the host. 3. Test the mouse and receiver on another compatible computer.
Bluetooth device is not found / disconnects 1. Charge the mouse and keep it close to the host during pairing. 2. Forget the old SPK7858 Bluetooth record and pair again by holding the mode button for >5 seconds. 3. Reduce nearby interference and install current host Bluetooth or OS updates if available.	Pointer jumps, lags, or stops 1. Clean the optical sensor and use a clean, flat, matte surface. 2. Move closer to the receiver or Bluetooth host and reduce interference. 3. Try another DPI setting, USB port, connection mode, or compatible host.
Mouse does not charge 1. Connect the supplied cable to a 5 V USB-A computer port or approved 5 V source. 2. Try another 5 V USB-A port or a known-good USB-A to USB-C cable. 3. Leave connected for at least 30 minutes, then turn the mouse on and test.	KeyLink does not detect / actions do not work 1. Use a supplied 2.4 GHz receiver and confirm the KeyLink system requirements. 2. Restart KeyLink and the computer; on macOS enable Accessibility, and on Windows use administrator access if required. 3. Check the Global and app-specific profile or use KeyLink Factory reset for custom software settings.

5.1 Switching Modes Does Not Reconnect

Select the intended mode and wait several seconds. For receiver modes, confirm the matching receiver remains connected. For Bluetooth, confirm SPK7858 is still listed as connected on the host. If needed, repeat the original setup steps for that mode.

WHEN TO STOP TROUBLESHOOTING

Stop using the product and contact support if it is damaged, swollen, unusually hot, wet, emits smoke, sparks, or an odor; if a connector, cable, battery, or housing is visibly damaged; or if the next step would require disassembly, unauthorized repair, firmware recovery, or a non-approved tool.

For more symptom-by-symptom checks, use the separate SPK7858B Troubleshooting Guide.

6. Specifications, Compatibility, Care and Support

6.1 Technical Specifications

Wireless technology	2.4 GHz USB-A / Bluetooth 5.0 / 2.4 GHz USB-C
Effective distance	About 15 m (49 ft) for 2.4 GHz; about 10 m (33 ft) for Bluetooth in open conditions
Buttons / controls	Left / Right buttons; vertical wheel / middle button; DPI button; Forward / Back buttons; horizontal thumb wheel; Mode / pairing button
DPI	800 / 1600 (default) / 2400 / 3200 / 4000 DPI
Left / right button life	5 million clicks
Battery	Built-in rechargeable lithium battery, 500 mAh
Charging	USB-C port; supplied USB-A to USB-C cable; 5 V USB source
Mouse dimensions	123 × 82.7 × 44.8 mm (4.84 × 3.26 × 1.76 in)
Mouse weight	95 ± 5 g (3.35 ± 0.18 oz), without receiver
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10% to 85% RH

6.2 Compatibility

Basic product compatibility and KeyLink compatibility are separate.

- Basic mouse operation: compatible Windows, macOS, Android, iOS, and iPadOS devices that provide a suitable USB port or Bluetooth mouse support. Button behavior and horizontal scrolling can vary by operating system and application.
- KeyLink: Windows 10/11 (x64) or macOS 12+ (arm64), at least 4 GB RAM, 2 GB free disk space, internet access, and a supported Philips device.

6.3 Care and Safety

- Turn the mouse off before cleaning. Use a clean, dry, soft cloth.
- Do not immerse the mouse, spray liquid directly onto it, or use abrasive cleaners.
- Keep the optical sensor, USB-C port, and receiver storage area clean and dry.

- Use a clean, flat, matte surface if tracking becomes unstable; avoid reflective glass and highly glossy surfaces.
- Do not disassemble, crush, puncture, burn, short-circuit, or expose the product or battery to excessive heat or liquid. Keep receivers and small parts away from children.

6.4 Support and Product Information

Customer Support	philips.us@top-support.net
Prepare for Support	Model SPK7858B, Amazon order number, host device, operating system, connection mode, issue description, and steps already tried
Product / Origin	PHILIPS SPK7858B Ergonomic Wireless Mouse Made in China
Document	SPK7858B-UG-US-EN Version 1.0 Effective August 21, 2026