材质	封面100g书写纸 内页90g书写纸	尺寸	90*120mm	装订方式	骑马钉

North America support@customerafter-sales.com

EU&UK support-eu@customerafter-sales.com

S60 Dash Camera

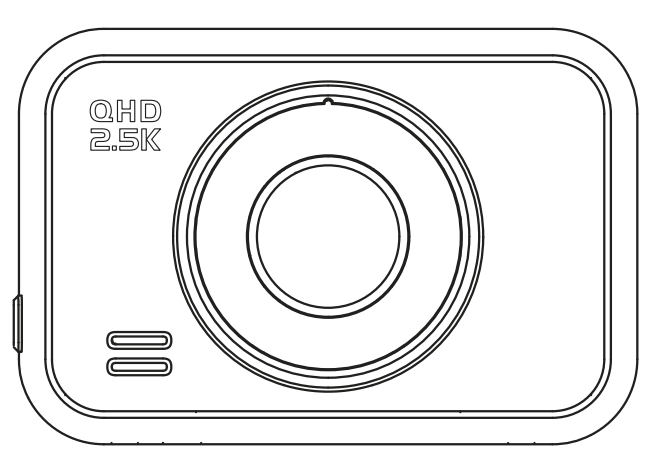

USER MANUAL

V 2.05

Please scan here to download a multi-language user manual

Contents

01 NOTICE
02 WHAT'S IN THE BOX
03 PRODUCT OVERVIEW
05 INSTALLATION INSTRUCTIONS
09 ALL BUTTONS EXPLANATIONS
11 FUNCTIONS OVERVIEW
16 SETTINGS
20 SPECIFICATIONS
21 WARRANTY POLICIES
21 TROUBLESHOOTING GUIDE
23 WARRANTY AND CUSTOMER SERVICE

Thank you for choosing our product. This user manual will guide you through the basic features of our camera.

NOTICE

1. Before using the camera, carefully review the instruction manual. It contains essential safety information, as well as instructions for operation and maintenance.
2. Adhere to all safety precautions to prevent damage resulting from improper use of the camera.
3. In case of improper use or mishandling, we cannot be held liable for any resulting damage.
4. Do not install the dash camera in a location that obstructs or impairs the driver's view. Ensure compliance with relevant vehicle codes in your area.
5. If recording sounds or other car-related information, inform occupants of the vehicle accordingly.
6. Avoid prolonged exposure of the dash cam to direct sunlight or extreme temperatures, as they may degrade its performance.
7. Do not attempt to open or repair the device yourself. For any accessory-related issues, contact the seller for assistance.
8. When cleaning the lens, use a soft, damp cloth to preserve video quality.
9. Front Camera: inside vehicle only. Rear Camera: back of the vehicle.
10. Protect the product from rain, moisture, or water at all times to prevent damage.
11. Do not operate or adjust the camera while driving.
12. Before initial use, ensure a formatted memory card is inserted into the product (refer to page 04).

WHAT'S IN THE BOX

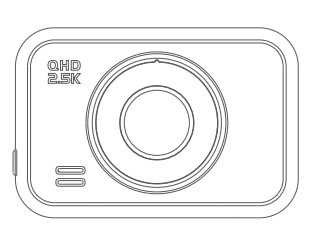
S60 Dash Camera


Easy Pry Tool

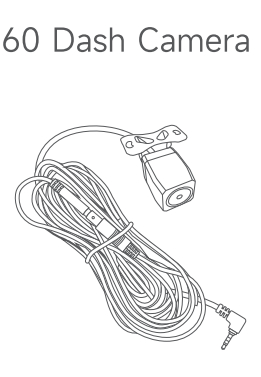
Rear Camera Kit

Tpye-C Car Charger

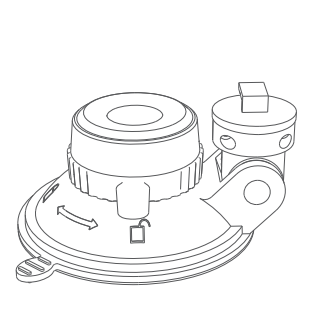
Suction Cup

User Manual

PRODUCT OVERVIEW

Camera

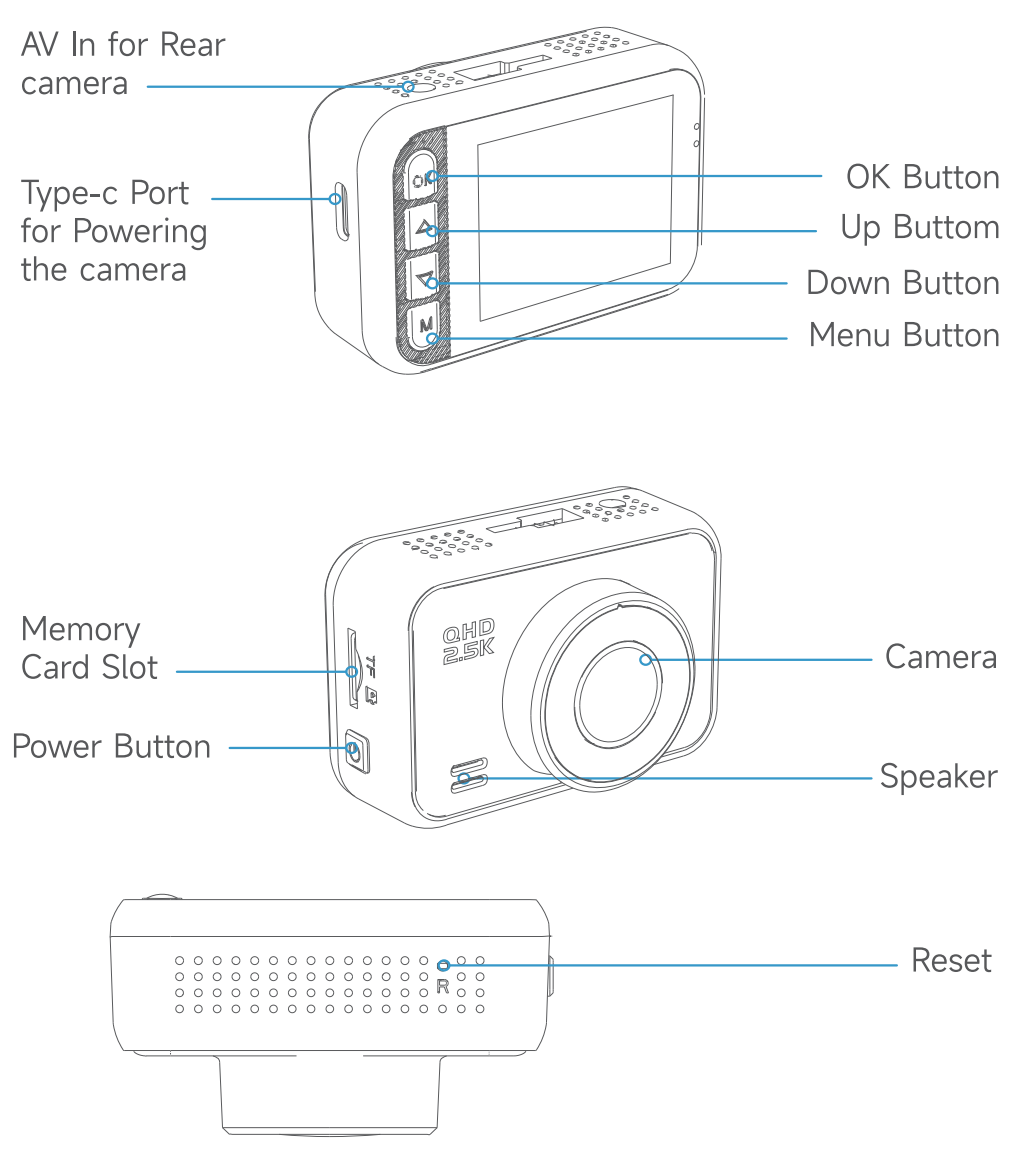

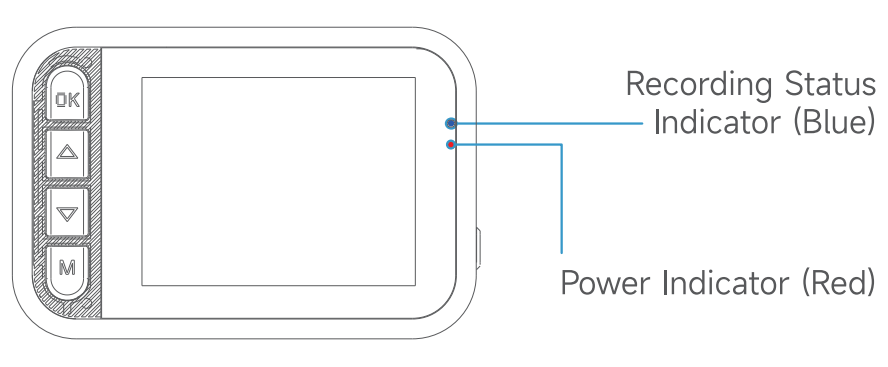

Rear Camera Kit

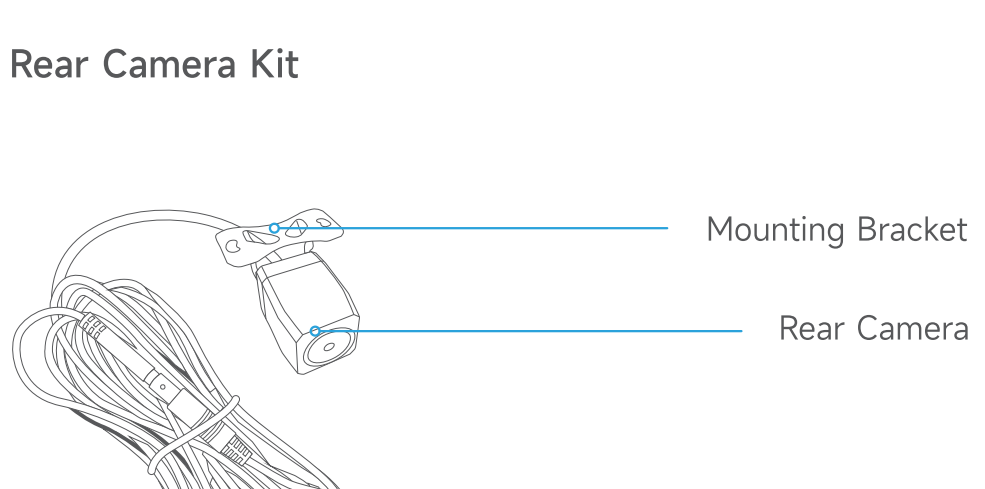

INSTALLATION INSTRUCTIONS

Important:

1. Power off the engine of the car before installing the dash camera.
2. The pre-install test is a must before final installation.
3. Due to the data rate of the video being recorded, a reputable U1 or higher speed memory card must be used.

Step 1:
Install the **Suction Cup** into the Dash Camera.
① Install with the **Suction Cup** provided.

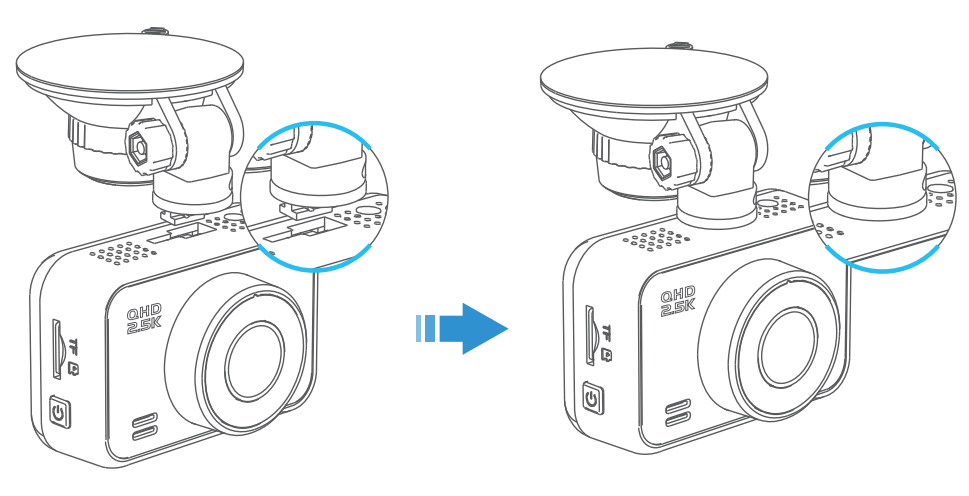

Align the end of the **Suction Cup** with the mounting hole, then insert and slide it inside.

Step 2:
Fix the Dash Camera onto the front windshield.
① Clean the windshield (Cleaning cloth not included).
② Move the buckle to lock 🔒 position to firmly fix the suction cup on the windshield.

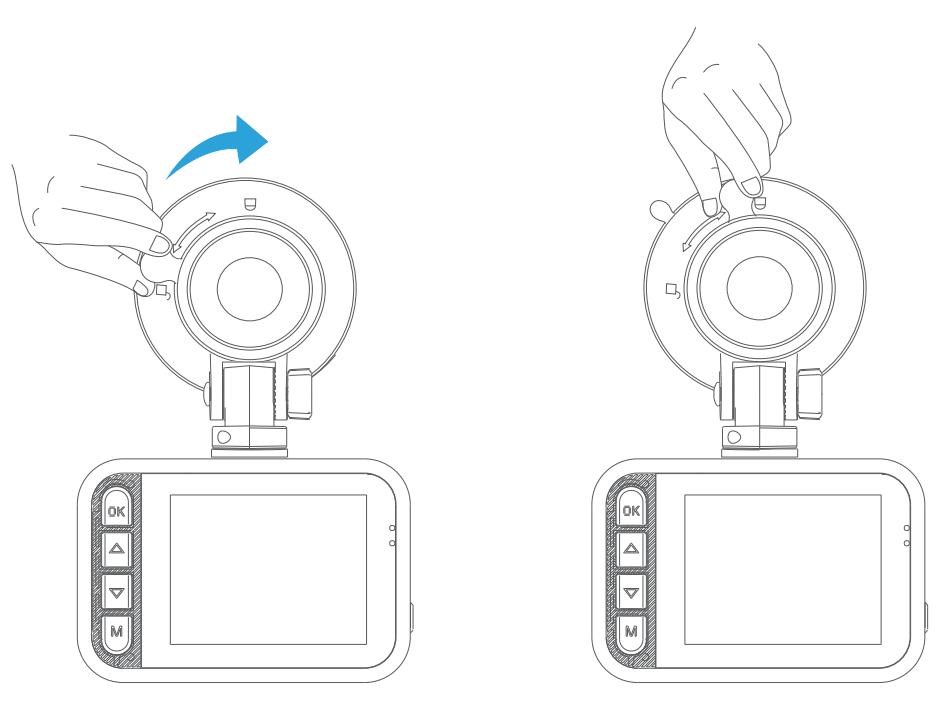

Scan for front camera setup video

Scan for rear camera setup video

Step 3 Connect the Car Charger Type-C connector to the Camera's Type-C Port, then plug the other end into the Cigarette Lighter Receptacle in the vehicle.

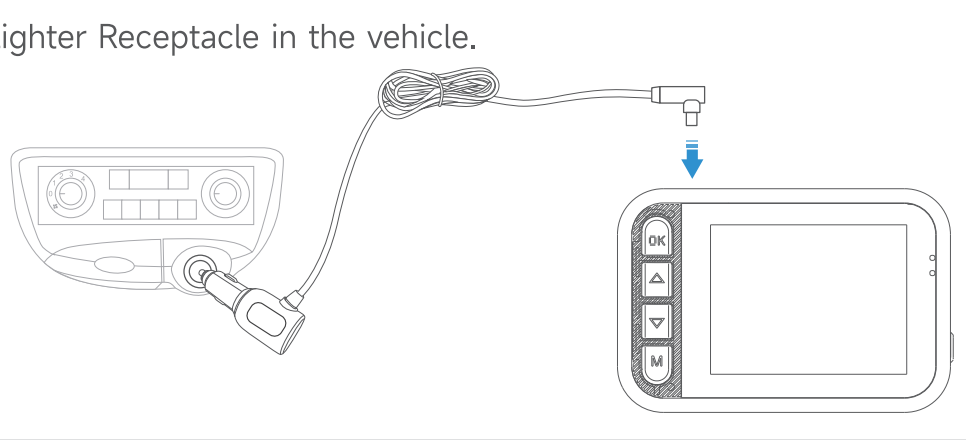

Note:
Suggest fixing the car charger cable along the edge of the windshield

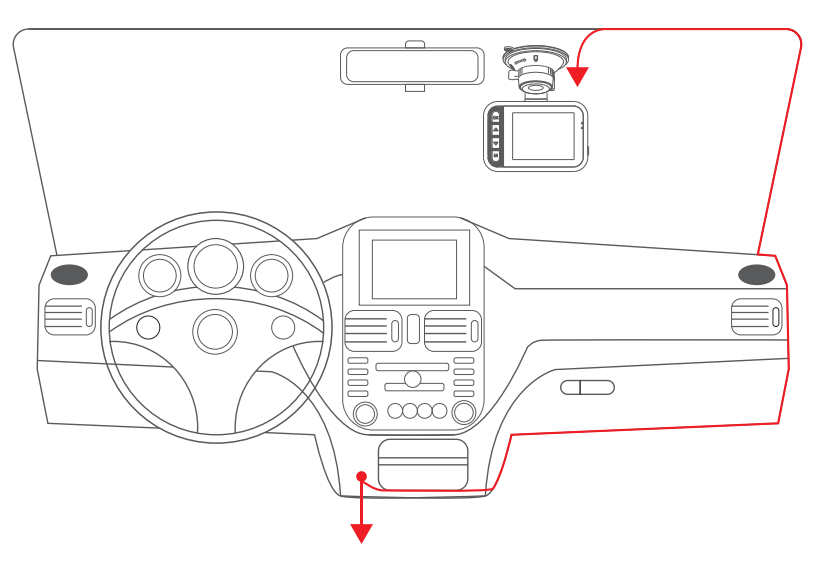
Cigarette Lighter Socket

Step 4 Adjust the position of the dashcam to get the best view from it.

Tip: Rotate the gear on the suction cup to adjust the position of the dash camera accordingly.

Step 5 If you need to use an SD card, please format it before your first use.

Step 6 Attach the AV Out connector of the rear camera to the AV Inport of the Dash Camera, then snake the black cable of the Rear Camera through the body of your vehicle to the rear of it.

Step 7 Please mount the rear camera at the back of the vehicle.

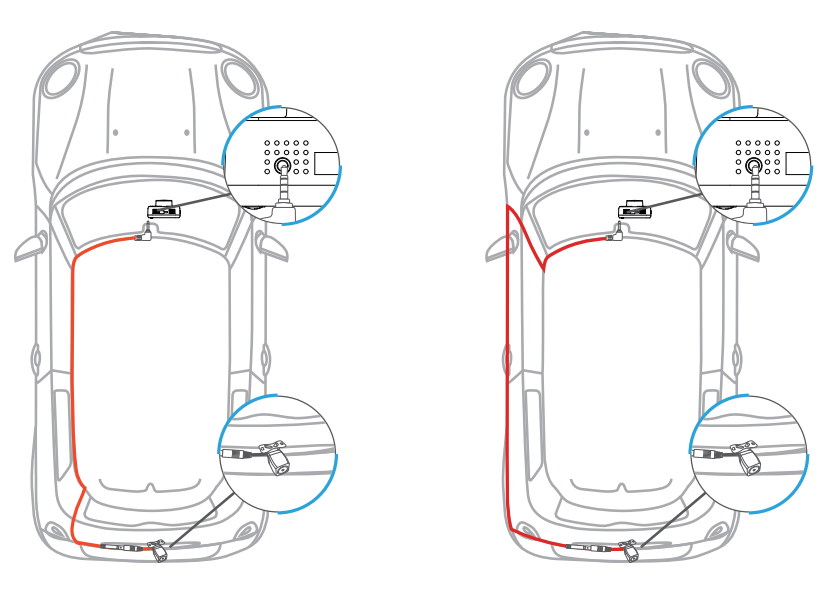

Step 8 Before checking if the dash camera is properly installed and works, start your vehicle's engine.

ALL BUTTONS EXPLANATIONS

⏻ Power Button	• Press and hold to power on or power off the dash camera • Shortly press to tum on or turn off the screen when the camera is working
OK OK Button	• Press to confirm your selection • Press to start / end recording • Press to play / pause the selected video in playback mode
∧ Up Button	• Press to take a photo in video mode • Press to switch camera views when the camera is not recording • Press to move to the previous option / file and adjust the value for the date & time
∨ Down Button	• Press to check the saved videos and photos when the camera is not recording • Press to enable or disable the microphone in video mode • Press to move to the next option / file and adjust the value for the date time
M Menu Button	• Press to lock and unlock the current video in video mode • Press to check all the detailed camera settings when the camera is not recording • Press to return

FUNCTIONS OVERVIEW

1. Video Mode

After the dash camera is powered on, it will enter the video mode by default. A flashing red dot on the top left corner indicates that camera is recording.

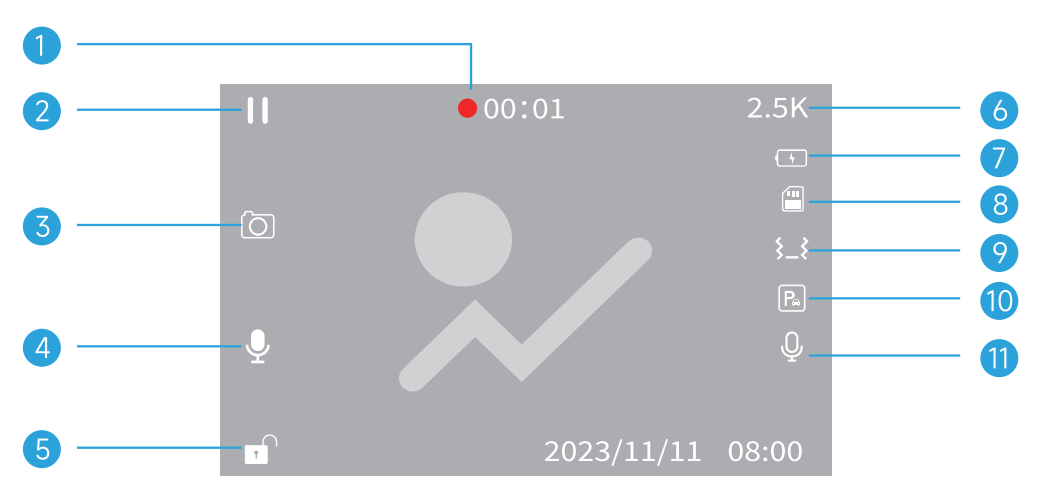

① Recording
② Start/Stop Recording
③ Photo
④ Microphone On/Off
⑤ Lock/Unlock
⑥ Resolution
⑦ Battery Power Status
⑧ Memory Card Inserted
⑨ G-Sensor Enabled
⑩ Parking Guard Disabled
⑪ Microphone Enabled

2. Homepage

Press OK to stop recording and save a video, then enter the homepage.

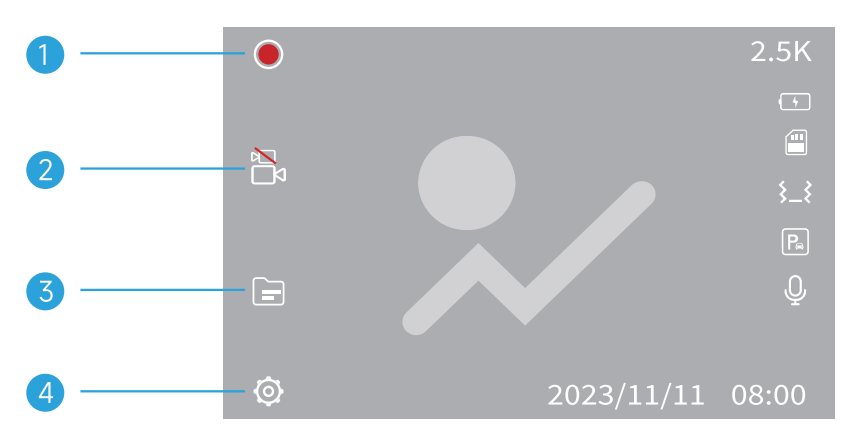

① Start recording another video
② To switch the views from the front camera,rear camera and both cameras
③ To check all the saved videos and photos
④ To check all the camera setting

3. Check the Videos and Photos

When the camera is not recording a video, press ∨ to check all the videos and photos.

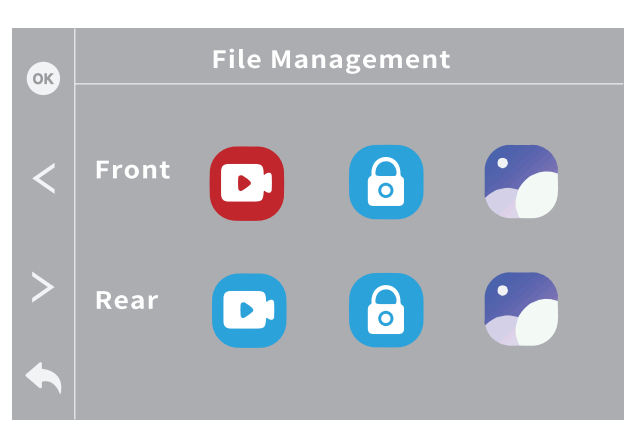

Front ordinary video

Cludes the videos recorded by the front camera.

Front urgent video

Includes the locked videos recorded by the front camera when there is a collision during driving or parking, and the videos that are manually locked by pressing 🔒 when the camera is recording.

Front photo

Includes the photos taken by the rear camera.

Rear ordinary video

Includes the videos recorded by the rear camera.

Rear urgent video

Includes the locked videos recorded by the rear camera when there is a collision during driving or parking, and the videos that are manually locked by pressing 🔒 when the camera is recording.

Rear photo

Includes the photos taken by the rear camera.

* How to play and delete a file?

We take a video as an example.

Step 1 Press OK to enter the selected folder.

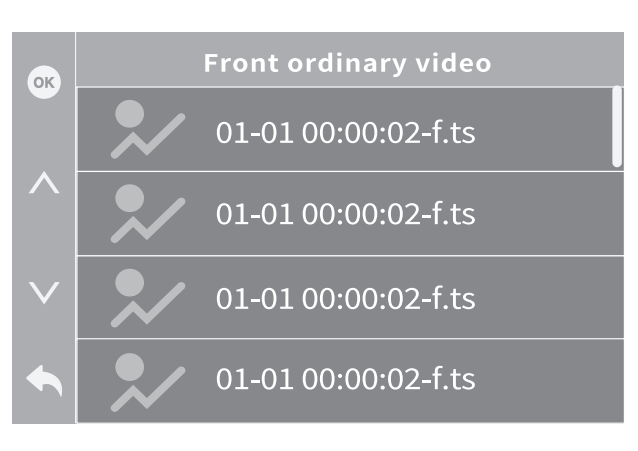

Front ordinary video
01-01 00:00:02-f.ts
01-01 00:00:02-f.ts
01-01 00:00:02-f.ts
01-01 00:00:02-f.ts

Step 2 Press ok to play

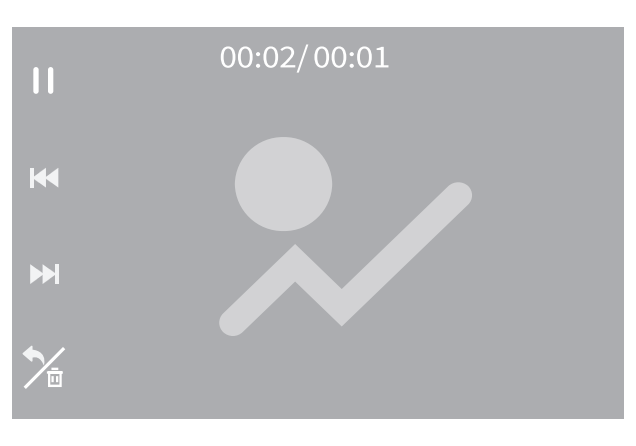

Step 3 Press 🗑 and hold to select a file

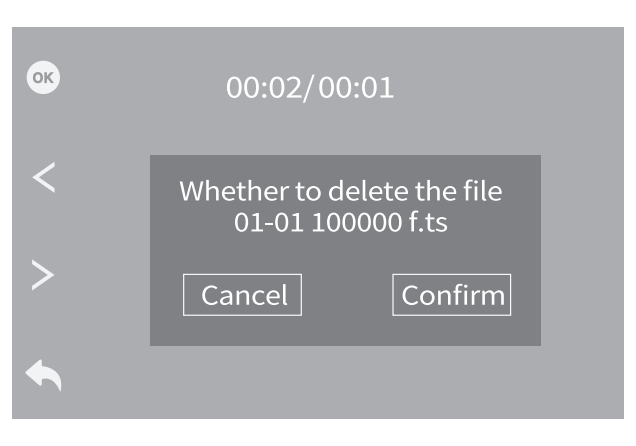

00:02/00:01
Whether to delete the file
01-01 100000 f.ts
Cancel Confirm

4. File Transfer

Remove the card from the camera, then connect it to your computer via a card reader(not included) to make a file transfer.

SETTINGS

When the camera is not recording a video, press M to check all the detailed settings.

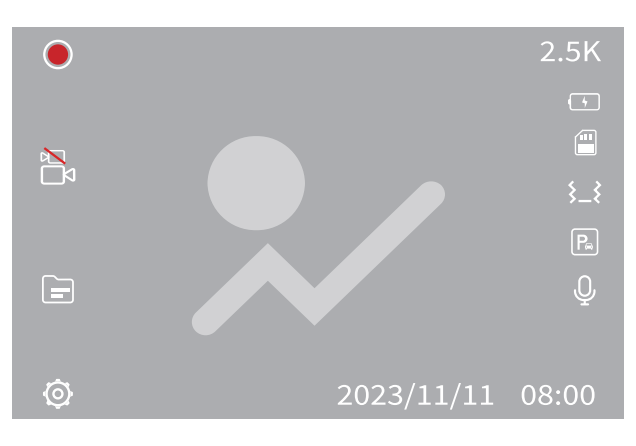

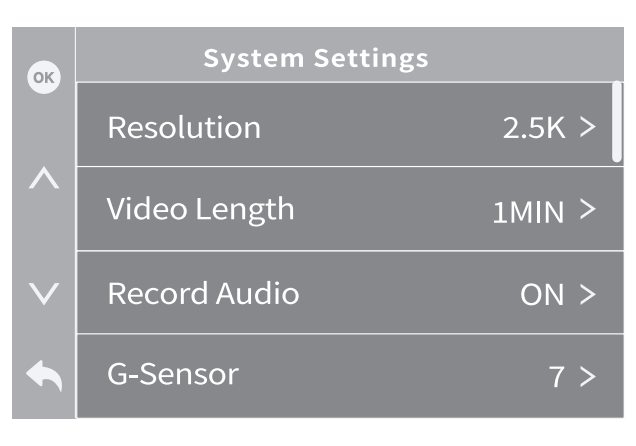

System Settings
Resolution 2.5K >
Video Length 1MIN >
Record Audio ON >
G-Sensor 7 >

Resolution

Change the resolution of the front camera. Options include **2.5K@25fps** and **1080P@25fps** . (The resolution of the rear camera is 1080P only.)

Video Length

Change the recording time of each video. The recording time is set to be 1 minute by default. You can choose from **1 min**, **2 mins**, and **3 mins**.

Record Audio

Turn on or turn off the audio when recording videos.

G-Sensor

Set G-sensor sensitivity for collision detection (0=least sensitive, 15=most sensitive).
Default sensitivity is 8. At 15, even a minor collision will lock the current video. A flashing yellow dot on the top left indicates locking. Locked videos are protected and will never be overwritten by loop recording. However, when the storage card is full, new recordings will stop unless you manually delete files or format the card. It is recommended to periodically back up and remove locked videos.

Parking Mode

{Closed} Turn off the parking mode function.
{G-sensor}Enabling G Sensor means that the dash camera will automatically start recording a video for about 30 seconds when the car experiences a collision while parked. The video will be locked and won't be overwritten.
{Time-lapserecord} When parking, the dash camera will automatically start recording at a frame rate of 1 frame per second, which will be merged to create a video.

Note : An extra Hardwire Kit is recommended for this function. Please contact our support team for more information.

Timestamp

Show or hide the date and time watermark on the recorded videos and captured photos.

Mirror Flip

Mirror or stop mirroring the view from the rear camera.

Screen Saver

Set the time to enter sleep mode after a certain period of inactivity. You can choose from **Closed,**

Keytone

Turn on or turn off the sound when pressing the buttons.

Speaker Volume

Set the volume of the speaker for the camera. You can choose from **Mute**, **Low**, **Medium**, and **High**.

Boot Sound

Turn on or turn off the sound when the camera is powered on and powered off.

Language

Set the language of the dash camera.

Date/Time

Set the date &time of the dash camera, and set the date & time format. Press ∨ to select, then press OK to confirm and move to the next option.

Summer Time

When set to ON, the clock will go forward by one hour. When set to OFF, the clock will go back by one hour.

Format

Tap to bring up the pop-up window to format the memory card.

Default

Tap to bring up the pop-up window to restore the dash camera to the factory settings.

Version

Check the product model and software version.

SPECIFICATIONS

Chipset	SA230C
Sensor	SC2336
Display Size	2'
Display Resolution	320x240
Speaker	1W
Memory Card	Support up to 256GB
Connection	Type-C Port, and Memory Card Slot
Resolution(Front Camera)	2560*1440P
Resolution(Rear Camera)	1920*1080P
Video Format	TS
Photo Format	JPG
Storage Temperature	-30°C~+75°C
Working Temperature	-10°C~+65°C

WARRANTY POLICIES

- 7*24H High-priority Customer Service [support@customerAfter-salescom]
- 7*24H [Amazon Message]
- 12-month product warranty for quality problems + 45-day money back &return guarantee.

TROUBLESHOOTING GUIDE

Q1. Memory Card Reading Error
- Ensure that the memory card is correctly inserted.
- Navigate to Settings > Format to format the memory card.
- Consider using a different U1 memory card from reputable brands like SanDisk, Samsung, Kingston, and others.

Q2. Video Recording Issues or the Latest Video is Overwritten
- Check that the memory card is not filled with locked videos. If it is, delete unnecessary videos or format the memory card.
- Navigate to Settings > G-sensor and set it to Low or Medium.
- Consider using a new memory card.

Q3. Camera Automatic Restart
- Make sure that the USB cable is securely connected.
- Remove the memory card to see if it's causing the issue.

Q4. A Pause or Frame Skipping Occurs When Playing the Videos or Photos
- Try using a different U1 memory card from a reputable brand and format it.
- Consider using a media player that can decode H.264 and H.265 compressed videos.

Q5. The Device Emits a Voice Reminder of Video Locking, and the Red Flashing Point on the Screen Turns Yellow
- While driving, the G-sensor function may activate due to sudden braking, collisions, or rough road conditions, resulting in a voice reminder and a change in the red flashing point on the screen to yellow. Adjust the G-sensor sensitivity in the settings or disable this as needed.

WARRANTY AND CUSTOMER SERVICE

We provide a 12-month warranty that covers any product quality issues. We also offer a 45-day money-back and return guarantee for all our products. If you have any questions or need any assistance, please don't hesitate to contact us. Our dedicated customer service team is available 24/7 through email at support@customerafter-sales.com and via Amazon Messages.

CAUTION

RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

⎓ The symbol indicates DC voltage

RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE).This means that this product must be handled pursuant to European directive2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

FCC Caution:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
IMPORTANT NOTE:
Note:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.
FCC Radiation Exposure Statement:
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.