

Truss Grid Analyzer

User Guide

How to build a rig, load it, hang it and read the results

Written for version 1.26.0

24 September 2026

By **G.E. Simmons Falk**. Truss Grid Analyzer is an expansion, for indeterminate grids, of *Truss Load Analyzer - EOT* by **Delbert L. Hall and Jon Sogioian**, the originators of the program.

This guide is written for version 1.26.0 and is not updated for every release. Later versions may look or behave differently; the version you are running is shown next to the app name in the header. A searchable copy of this guide is supplied as an HTML file with the same name.

Contents

1	About This Guide	6
1.1	Which Version This Guide Describes	6
1.2	How to Use This Guide	6
1.3	Conventions	6
2	Introducing Truss Grid Analyzer	7
2.1	What It Checks	7
2.2	What You Need to Know First	7
2.3	Where It Came From	8
3	Getting Started	9
3.1	What You Need	9
3.2	Opening the App	9
3.3	Where Your Work Is Kept	10
3.4	Starting a New Rig	10
3.5	Naming the Rig	11
3.6	Dark or Light	11
3.7	Undo and Redo	11
4	The Screen	12
4.1	The Top Bar	13
4.2	The Steps Bar	15
4.3	The Plan	15
4.4	The Side Panel	15
4.5	The Grid	16
4.6	Resizing the Panels	16
5	Key Ideas	17
5.1	Trusses and Truss Lines	17
5.2	Corner Blocks and Bolting	17
5.3	Measuring Positions: Start, Centerline or End	17
5.4	Loads	17
5.5	Hoists, Low Hook and High Hook	17
5.6	Spans and Cantilevers	18
5.7	The Whole-Rig Analysis	18
5.8	Statuses	18
6	Entering Values	19
6.1	Lengths	19
6.2	Weights and Other Numbers	19
6.3	Metric or Imperial	19

6.4	Committing a Value	19
7	Working in the Grids	20
7.1	Moving Around and Typing	20
7.2	Adding Rows	20
7.3	Picking from a List	21
7.4	Pasting from a Spreadsheet	21
7.5	Choosing Several Hoists at Once	21
8	Step 1 - Structure	22
8.1	Adding a Truss	22
8.2	Choosing the Truss Type	24
8.3	Setting the Length	24
8.4	Corner Blocks in a Truss Line	25
8.5	Placing a Free Truss	27
8.6	Bolting a Truss to a Corner Block	27
8.7	Stacking or Clamping at a Crossing	29
8.8	Bolted Connections Table	29
8.9	UDL and Cable Allowance	30
8.10	Advanced	30
8.11	Duplicating and Deleting	30
8.12	The Structure Grid	31
8.13	Corner Block Panel	32
9	Building a Box, Step by Step	33
9.1	The Two Short Sides	33
9.2	The Long Sides	33
9.3	Loads and Hoists	33
10	Step 2 - Loads	35
10.1	Three Ways to Add a Load	35
10.2	The Loads Grid Columns	36
10.3	Mirrored Loads	37
10.4	Copying Loads to Another Truss	37
10.5	Working with the Plan Strip	37
10.6	The Load Panel	38
10.7	Loads in the Truss Panel	38
11	Step 3 - Hoists	40
11.1	Adding Hoists	40
11.2	Moving a Hoist	41
11.3	The Hoists Grid Columns	41
11.4	Editing Many Hoists at Once	42

11.5	Mirroring and Copying Hoists	42
11.6	The Hoist Panel	43
11.7	Hoist Models and the Dynamic Factor	44
11.8	Dead Hangs	44
11.9	Hoists Hung Below a Truss	44
11.10	Hoist Levels	45
11.11	Measured Loads (Load Cells)	45
12	Step 4 - Results	46
12.1	The Summary	46
12.2	Trusses Tab	47
12.3	Hoists Tab	47
12.4	Warnings Tab	48
12.5	A Rig with Problems	48
12.6	A Truss's Checks Section	50
12.7	Check Rig	50
12.8	What to Do When Something Fails	52
13	Plan and 3D Views	53
13.1	Moving Around the Plan	53
13.2	What the Plan Shows	53
13.3	Colour Modes	54
13.4	The 3D View	55
14	Rig Settings	56
14.1	Hoist Loads	58
14.2	Allowances	58
14.3	Truss Checks	59
14.4	Deflection	59
14.5	Plan	59
14.6	Display and Paper	59
15	The Calculation Sheet	60
15.1	Opening, Filling In and Printing	60
15.2	What Is on It	61
16	Files, Export and Sharing	63
16.1	Saving a Rig as a File	63
16.2	Opening a Rig File	63
16.3	Sharing a Rig	63
16.4	The Export Menu	64
16.5	Using the App on Another Computer	64

17	Calculators and Databases	65
17.1	Circular Truss	65
17.2	Simple UDL	65
17.3	Fixture Weights	66
17.4	Databases	67
18	How the App Calculates	69
18.1	From Loads to Hoist Loads	69
18.2	Truss Checks	70
18.3	Hoist Checks	70
18.4	Checked Against	70
19	Warnings and Messages	71
19.1	Truss Checks	71
19.2	Hoists	72
19.3	Bolting, Corner Blocks and Geometry	72
19.4	Check Rig (Input Mistakes)	73
19.5	Other Messages	74
20	Troubleshooting and Questions	75
21	Keyboard and Mouse Reference	77
21.1	Anywhere (Not While Typing in a Box)	77
21.2	In a Grid	77
21.3	In a Search List	77
21.4	Mouse on the Plan	78
21.5	Mouse in 3D	78
21.6	Help and Search in This Guide	78
22	Glossary	79
23	Credits, Licence and Disclaimer	81
23.1	Credits	81
23.2	Licence	81
23.3	Disclaimer	81
23.4	About This Guide	81

1 About This Guide

Written for Truss Grid Analyzer version 1.26.0

24 September 2026

This guide explains how to use Truss Grid Analyzer: how to find your way around the screen, build a rig, put loads on it, hang it from hoists, and read and print the results. It is written for riggers, production managers and anyone else who plans truss rigs. You do not need to know structural engineering to follow it.

1.1 Which Version This Guide Describes

Everything here - the screenshots, button names, menu items and numbers - is taken from version **1.26.0**. The guide is **not** updated for every new release, so a later version may add features or look a little different. To see which version you are running, look next to the app's name at the top left of the screen, or open **File > About, method & version history**, which also lists what changed in each version since this one.

1.2 How to Use This Guide

- **New to the app?** Read the *Quick Start* (a separate short PDF), or chapters 2-6 of this guide, then work through Building a Box, Step by Step.
- **Looking for one thing?** In the HTML copy of this guide, type in the **Search** box at the top (or press **/**). In the PDF, use your PDF reader's search (**Ctrl** + **F**) or the bookmarks.
- **Something looks wrong?** See Warnings and Messages and Troubleshooting and Questions.

1.3 Conventions

Looks like	Means
+ Truss	A button in the app.
File > Save	Open the File menu and choose Save .
Ctrl + Z	Hold the first key and press the second. On a Mac, use Cmd where this guide says Ctrl .
Truss pieces	The name of a field, column or section on screen.
12-6	Something you type.

Screenshots use the **light** theme so they print clearly. The app starts in the **dark** theme; both show exactly the same things (see Dark or Light). Screenshots use feet and pounds; everything works the same in metres and kilograms.

Tip - boxes like this

Green boxes are tips, amber boxes are things to watch out for, and red boxes are safety points.

2 Introducing Truss Grid Analyzer

Truss Grid Analyzer works out the load on every chain hoist in a truss rig and checks every truss against its manufacturer's published limits. You describe the rig in four steps:

1. **Structure** - the trusses: their make and model, length, where they sit on the plan, and how they are bolted together at corner blocks.
2. **Loads** - what hangs on them: lights from a library of fixtures, or any weight you type, plus spread loads such as a drape or an LED wall.
3. **Hoists** - where the rig hangs from: chain hoists (or wire-rope dead hangs), their models and chain lengths.
4. **Results** - the load on every hoist, every truss check, and every warning.

Everything is recalculated the moment you change anything, so you can try ideas - move a hoist, add a light - and see the effect straight away.

2.1 What It Checks

- **Hoists:** the high hook load (the truss load on the hook plus the hoist, its chain and hardware) against the hoist's rated capacity, and the dynamic load (static $\times$ a factor for the hoist's speed).
- **Truss spans:** the point loads on every span against the manufacturer's load table for that span length, with the ANSI repetitive-use factor (0.85) unless the table already includes it.
- **Cantilevers:** the overhang past the last support: no longer than a quarter of the maximum span, and no more load than the table allows.
- **Bending moment and shear:** the whole length of each truss, which catches bending over supports and heavy loads next to a support that a span-by-span check misses.
- **Deflection:** how far each span sags, against the maker's published limit where there is one (otherwise a default of span/160).
- **The rig as a whole:** a *whole-rig analysis* works out how trusses bolted into a grid share load, including hoists that go slack and assemblies that would tip.
- **Input mistakes:** a load with no weight, two hoists at one point, bolted ends that do not meet, parts from different truss families bolted together, and more.

2.2 What You Need to Know First

A calculation aid, not an engineering approval

This tool is intended for entertainment rigging professionals to help them make rigging decisions. Every attempt has been made to be accurate, but the authors are not responsible for errors in the program or the results of its use. **You are responsible for verifying the results before using them to make rigging decisions.** Check results against the manufacturer's current data, and have a qualified person review every rig before it flies.

- The results are only as good as what you enter. Weigh or look up every load, and include cable, clamps and safeties (the app has allowances for these - see Rig Settings).
- Some figures are **estimates** and the app says so: truss stiffness, the allowable bending moment and shear, and deflection are worked out from the manufacturers' load tables, not published values.
- The app does not check the structure the hoists hang from (beams, roof steel, a ground-support system) - only the hoists and the trusses.

Indeterminate rigs (ANSI E1.6-3)

ANSI E1.6-3 (*Selection and Use of Serially Manufactured Chain Hoists in the Entertainment Industry*, section 2.11) calls a load system **indeterminate** when the way its load divides between the hoists depends on the stiffness of the structure as well as on where the loads and hoists are. In practice that is any rig on more than two hoists in a straight line, or more than three hoists not in a line: a truss on three hoists, and almost every grid or box. On these rigs load can shift between hoists as they run or if one is out of level, and the standard warns that stiff indeterminate structures can shift load very quickly.

Section 7.1 of the standard accepts a load calculation as a way to reduce the risk of overload only when all the weights are known and accounted for, an accurate calculation method is used, and any load shifting will not be enough to cause an overload. The whole-rig analysis in this app is built for these rigs - it solves the grid with hinged, semi-rigid and rigid joints and uses the worst - but it is still an estimate. Allow a margin for load shifting, level hoists carefully, and verify the loads (for example with load cells) where the margin is small.

2.3 Where It Came From

Truss Grid Analyzer, by G.E. Simmons Falk, is an expansion of *Truss Load Analyzer - EOT*, the Excel workbook created by **Delbert L. Hall and Jon Sogolian**, who are the originators of the program, for **indeterminate grids**. The workbook works truss by truss; Truss Grid Analyzer extends it to trusses bolted into grids and boxes and to trusses on three or more hoists - rigs whose hoist loads depend on the stiffness of the trusses and joints, not on the load positions alone (see *Indeterminate rigs* above). It uses their method and their truss, hoist and fixture data, adds manufacturers' own load tables, and adds the grid model, the whole-rig analysis, and the plan and 3D views. It is free, and must never be sold (see Credits, Licence and Disclaimer).

3 Getting Started

3.1 What You Need


- A computer with a current web browser: Google Chrome, Microsoft Edge, Mozilla Firefox or Apple Safari. A large screen (a laptop or bigger) works best; the app is not designed for phones.
- The app file. The whole app is a single file called `index.html` - on the project's GitHub page it is `dist/index.html`. It contains everything: the program, the truss, hoist, corner block and fixture databases.

There is nothing to install, no account, and no internet connection is needed. The app never sends your rig anywhere. (The only things that go online are the links to manufacturers' data sheets, which open in a new browser tab when you click them.)

3.2 Opening the App

- 1 Save `index.html` somewhere you will find it again, for example a *Truss Grid Analyzer* folder in Documents. You can rename it (for example `Truss Grid Analyzer 1.26.0.html`).
- 2 Double-click it. It opens in your default browser. (Or drag it onto an open browser window.)
- 3 Check the version at the top left, next to **Truss Grid Analyzer**.

The first time you open it, the app shows the **example box** - a small box truss with two inner trusses, loads and twelve hoists - so you have something to explore. You can bring it back any time with **File > Load example box**.

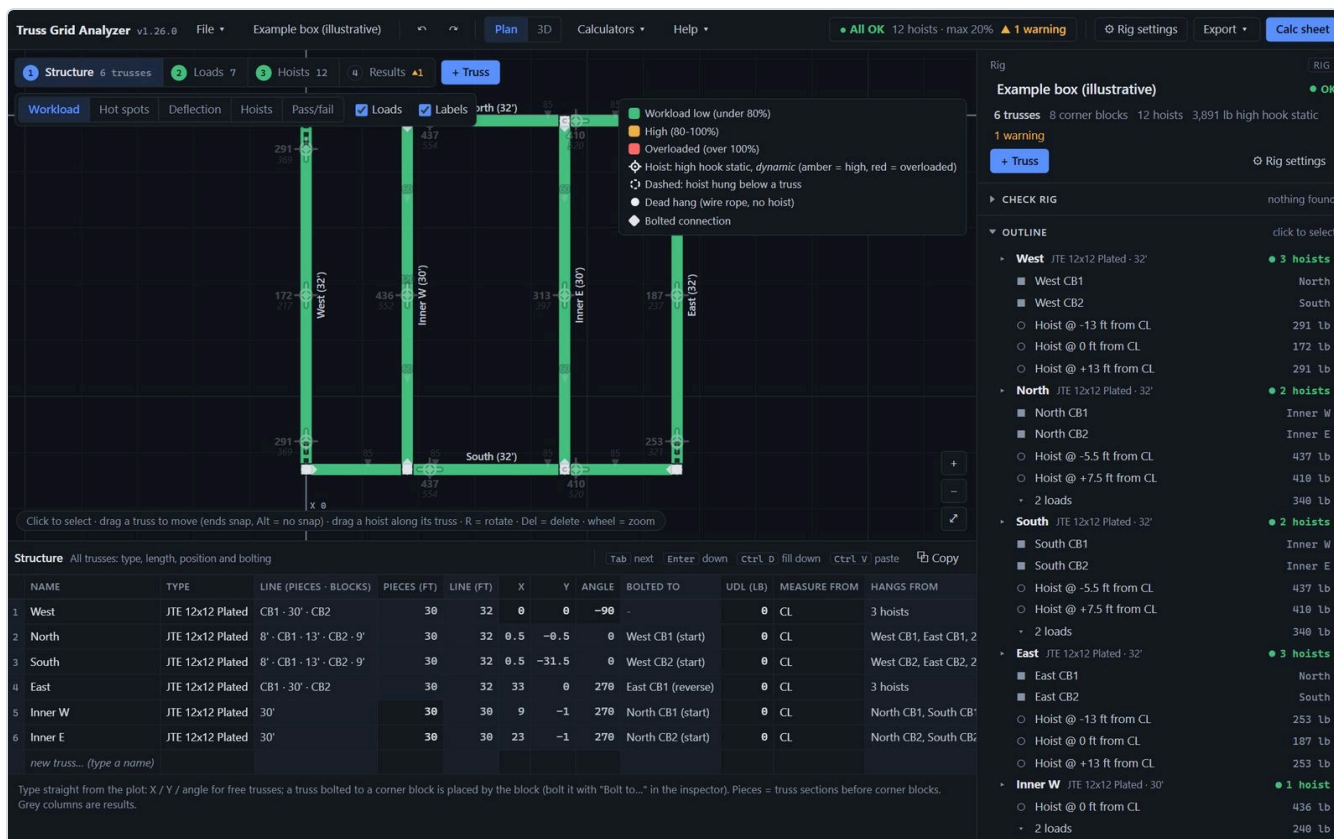

The app as it first opens: the example box, in the dark theme.

3.3 Where Your Work Is Kept

The app saves **every change automatically** inside the web browser on your computer. Close the browser, come back tomorrow, and your rig (and your custom trusses, hoists and fixtures) will be there.

Automatic saving is not a backup

- It is kept by **this browser on this computer**. Another browser, another computer or a private/incognito window starts empty (with the example box).
- Clearing the browser's history or "site data" can erase it.
- It holds **one rig at a time** - the one on screen. Starting a new rig or opening another replaces it (Undo brings it back only until you close or reload the page).

So keep every rig you care about as a file with **File > Save** (see Files, Export and Sharing).

3.4 Starting a New Rig

Choose **File > New rig** and click **OK**. The plan is cleared and you start at step 1.

Save first

File > New rig, **File > Open...** and **File > Load example box** each replace the rig on screen. Each is one Undo step, so **Ctrl + Z** brings the old rig back - but only until you close or reload the page. Use **File > Save** before any of them to keep a copy.

3.5 Naming the Rig

Click the rig's name in the top bar (a new rig is called *Untitled rig*), type a new name and click **OK**. You can also edit it at the top of the rig panel (click an empty part of the plan to show it). The name is used for the saved file, the calculation sheet and exported pictures.

3.6 Dark or Light


The app starts in a dark theme, which is easy on the eyes in a dark venue. Choose **File > Theme > Light** for daylight or an office, or **Follow system** to match your computer's setting. The same choice is in Rig Settings. The theme is remembered on this computer; it is not saved in rig files and does not change any result.

3.7 Undo and Redo

Almost every change can be undone: click  /  in the top bar, or press **Ctrl + Z** to undo and **Ctrl + Y** (or **Ctrl + Shift + Z**) to redo. The app keeps the last 100 changes. A paste, a multi-hoist edit, New rig, Open and Load example box each count as one change. The history is lost when you close or reload the page. (Undo does not work while you are typing in a box - finish the entry first.)

4 The Screen


The app has one main screen. The picture below shows it with the example box loaded and nothing selected.

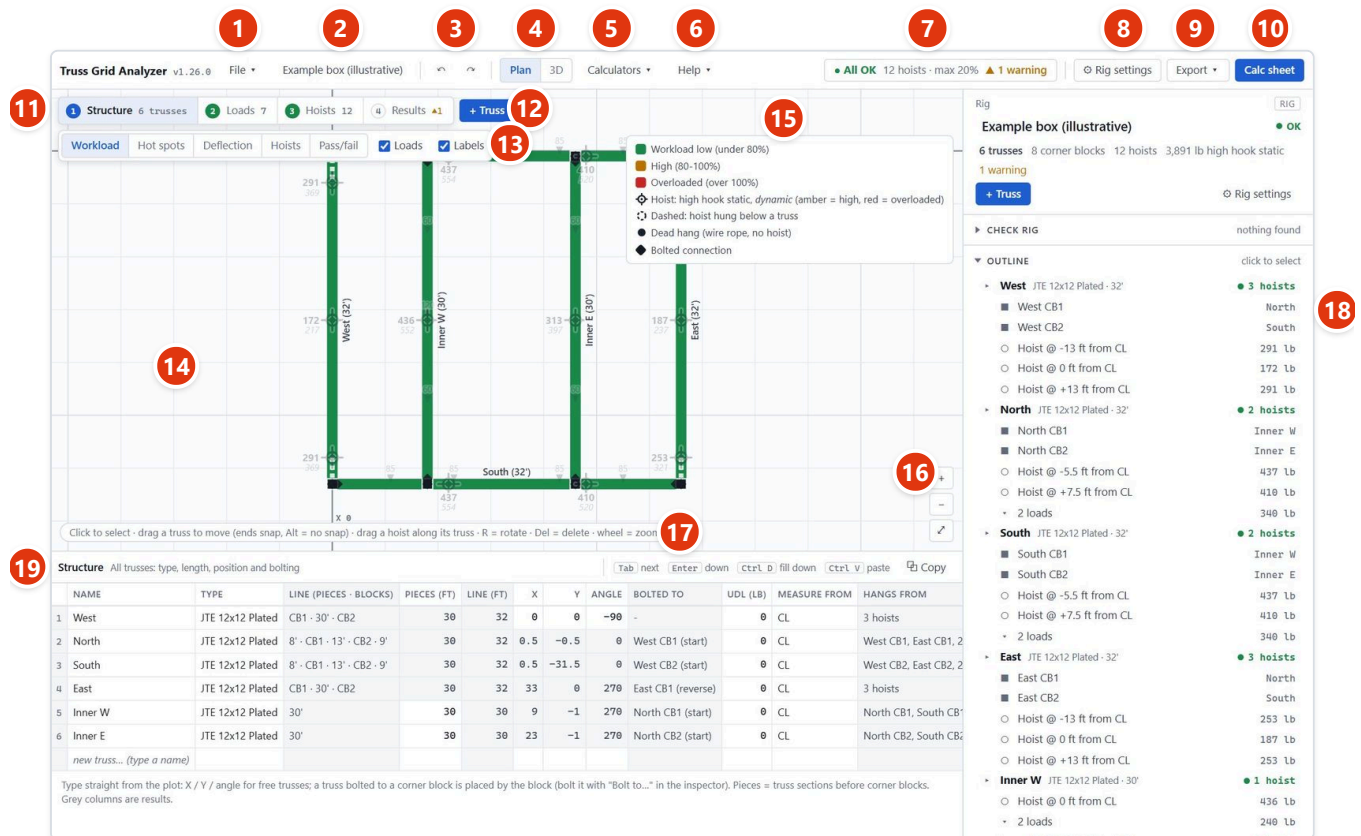

The main screen.


- 1 **File menu** - new, open, save, example box, theme, About.
- 2 **Rig name** - click to rename.
- 3 **Undo / redo.**
- 4 **Plan / 3D** - which view is shown.
- 5 **Calculators menu** - standalone tools and the databases.
- 6 **Help menu** - the Quick Start and this User Guide.
- 7 **Rig status** - click it for the results.
- 8 **Rig settings** - rig-wide options.
- 9 **Export menu** - hoist table, picture, model, print.
- 10 **Calc sheet** - the printable calculation.
- 11 **Steps bar** - 1 Structure, 2 Loads, 3 Hoists, 4 Results.
- 12 **Add button** - changes with the step: + Truss, + Load, + Hoist, Calc sheet.
- 13 **View toolbar** - colour mode, show loads, show labels.
- 14 **Plan** - the rig to scale; click, drag, zoom.
- 15 **Key (legend)** - what the colours and symbols mean.
- 16 **Zoom** - zoom in, zoom out, fit.
- 17 **Hint bar** - what the mouse and keys do on the plan.
- 18 **Side panel** - details of whatever is selected.
- 19 **Grid** - a spreadsheet for the current step.

4.1 The Top Bar




The top bar.


Item	What it does
Truss Grid Analyzer v1.26.0	The app's name and version.
File ▾	New rig, Open... a <code>.rig.json</code> file, Save the rig as a file, Load example box , Theme (Dark / Light / Follow system), and About, method & version history .
Rig name	Click to rename the rig.
↶ ↷	Undo and redo.
Plan 3D	Show the rig as a plan (from above, to scale, editable) or in 3D (for looking).
Calculators ▾	Circular truss, Simple UDL, Fixture weights and Databases (trusses, blocks, hoists). See Calculators and Databases.
Help ▾	Quick Start (PDF) and the User Guide (searchable HTML or PDF), opened in a new tab from the <code>docs/manual</code> folder next to the app, and All manuals online (the same folder on GitHub - use it if you have only the app file). See Help and Search in This Guide.
Status	A one-line summary: ● All OK or ● 2 to check , the number of hoists and the highest hoist workload, and ▲ n warnings . Click it to go to step 4 (the Warnings tab if there are warnings).
⚙ Rig settings	Opens the rig settings page (units, dynamic factor, allowances, deflection limit, paper...). See Rig Settings.
Export ▾	Copy hoist table (for Excel), Save view as PNG , Export whole-rig model , Print screen .
Calc sheet	Opens the printable calculation sheet. See The Calculation Sheet.

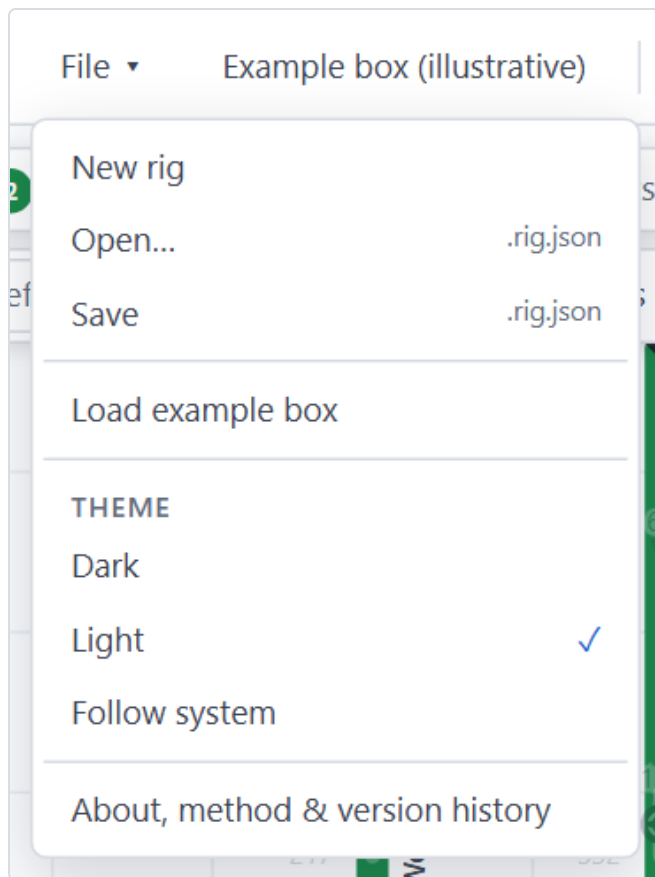


The File menu.

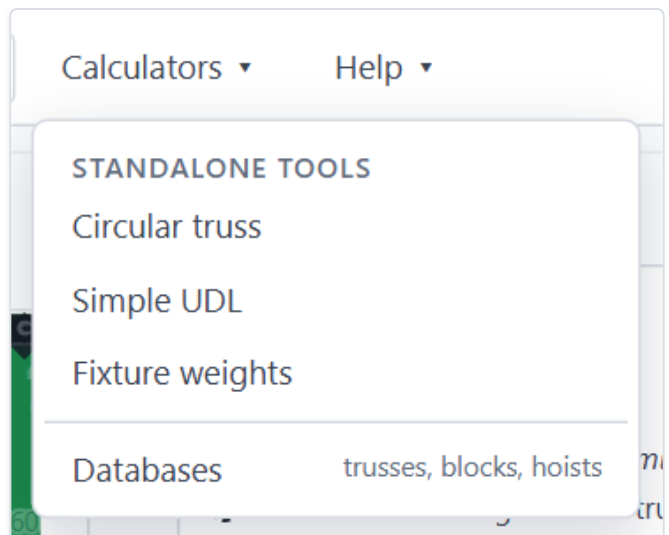

The Calculators menu.

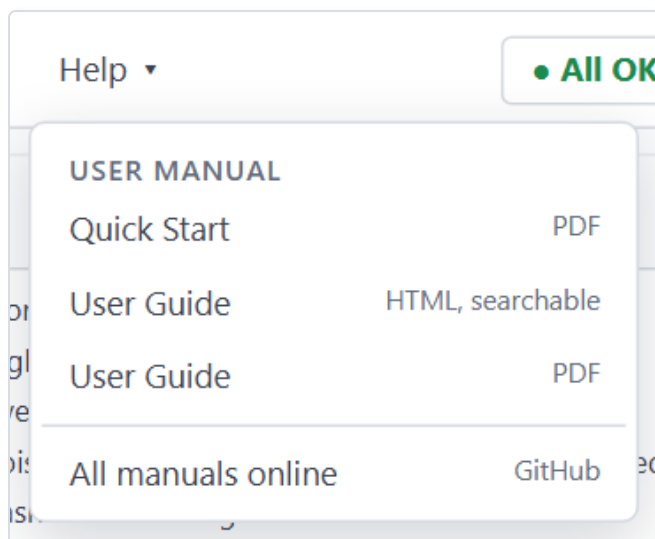


The Help menu.

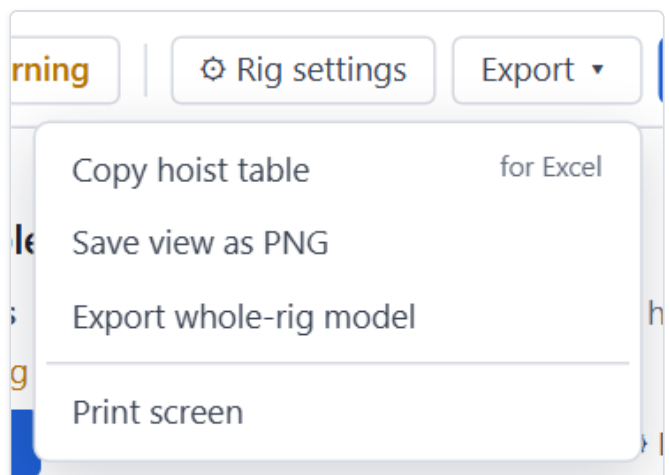

The Export menu.

4.2 The Steps Bar

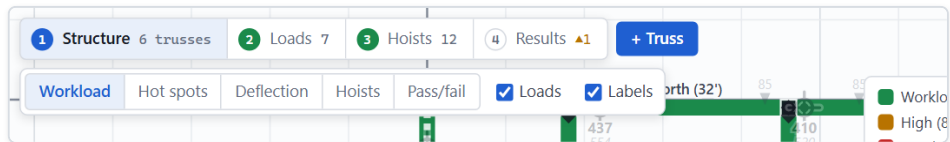

The steps bar, the add button and the view toolbar.

The four steps split the work into manageable parts. Click a step (or press **1**, **2**, **3** or **4**) to change the grid under the plan and the add button. You can go to any step at any time and in any order - the steps do not lock anything. Each step shows a count: the number of trusses, loads and hoists, and on **Results** a tick (✓, all OK), **▲n** (n warnings) or **✕n** (n things overloaded or unsolved). The step number turns green when that step has something in it (for Hoists: when there are hoists and nothing is left to check); the step you are on is highlighted.

The **add button** next to the steps does the obvious thing for the step: **+ Truss** (step 1), **+ Load** or **+ Hoist** (steps 2 and 3, on the selected truss - if no truss is selected it adds a new truss instead), and **Calc sheet** (step 4).

4.3 The Plan

The plan shows the rig from above, drawn to scale on a grid, with north at the top. The thin dark lines marked **X 0** and **Y 0** are the origin. Each truss is drawn as a coloured bar with its name and length; corner blocks are dark squares; hoists are rings with cross-hairs, labelled with their loads; loads are small triangles labelled with their weight. See Plan and 3D Views for everything you can do on it.

4.4 The Side Panel

The panel on the right shows whatever you last clicked:

You clicked	The panel shows
An empty part of the plan	The rig : name, status, totals, Check rig, an outline of every truss, corner block, hoist and load, and a summary of the rig settings.
A truss	The truss : type, length, corner blocks, placement and bolting, loads, hoists, checks, and advanced options.
A corner block	The corner block : its faces and what is bolted to each, its type and weight, what it carries.
A hoist	The hoist : its loads, where the load comes from, model, chain, dynamic factor, position.
A load (in a list or grid)	The load : item, weight, clamp, category, note, position, mirror.

At the top of every panel is a trail such as **Rig > North > Hoist @ -5.5 ft from CL**: click **Rig** or the truss name to go back up. Each panel is split into sections you can open and close by clicking their titles; **Collapse all** and **Expand all** do all of them at once, and the app remembers which ones you like open.

4.5 The Grid

Under the plan is a spreadsheet for the current step: every truss (step 1), every load grouped by truss (step 2), or every hoist grouped by truss (step 3), with results updating as you type. Step 4 shows the results tables instead. The grid works like Excel - see Working in the Grids.

4.6 Resizing the Panels

Drag the border between the plan and the side panel, or between the plan and the grid, to make either bigger. Double-click a border to put it back. The app remembers your layout on this computer.

5 Key Ideas

A few words have a specific meaning in the app. The Glossary has the full list.

5.1 Trusses and Truss Lines

In the app, a **truss** is one straight line of truss - which may be several sections (pieces) bolted end to end, and may include corner blocks along it. For example a 32 ft line might be a corner block, 30 ft of truss in 10 ft and 5 ft sticks, and another corner block. The app treats the whole line as one continuous beam.

Each truss has a **start** and an **end**. On the plan, the start is at the truss's X, Y position, and the truss runs from there in the direction of its angle: 0° runs east (to the right), 90° north (up), 180° west and 270° south.

5.2 Corner Blocks and Bolting

A **corner block** is a short block that trusses bolt to at right angles (a 6-way block has six faces: four sides, top and bottom). In the app a corner block always **belongs to one truss** - it is part of that truss line, at its start, its end or somewhere along it. Other trusses are then **bolted to** the block. A bolted truss is positioned by its block: it moves when the block's truss moves, and you cannot drag it on its own.

A truss can be **free** (you place it by typing its X, Y and angle, or dragging it) or **bolted** (placed by a corner block). A truss can also be **stacked** on top of another truss or **clamped** below it at the point where they cross.

5.3 Measuring Positions: Start, Centerline or End

Every load and hoist position is a distance along its truss, measured from one of three places:

- **start** - from the start of the whole line (0 = the start end);
- **centerline** (CL) - from the middle, negative toward the start and positive toward the end (-12 , +12);
- **end** - from the far end of the line.

Each truss has a **Measure from** setting (a new truss uses the centerline), and each load or hoist can use its own. Pick whichever matches the drawing you are working from. Lengths are measured along the whole line, including corner blocks.

5.4 Loads

A **load** is a point load at one position: a fixture from the library (with its clamp), or any weight you type. A **mirrored** load also puts the same weight at the mirror-image position on the other side of the centerline, and follows any change you make to the original. A **UDL** (uniformly distributed load) is a weight spread evenly over the whole length of a truss - a drape, an LED wall hung along it, or cable.

5.5 Hoists, Low Hook and High Hook

A **hoist** is a support point where a chain hoist holds the truss (or, as a **dead hang**, a wire rope with no hoist). The app uses these words throughout:

Term	Meaning
Low hook load	What the truss hangs on the hoist's hook (sometimes written R, the reaction).
High hook load	The low hook load + any Add % + the weight of the hoist, its chain and hardware: what the structure above carries.
Static / dynamic	Static is the load hanging still. Dynamic is static × the dynamic factor for the hoist's movement (for a hoist with a listed speed: speed in ft/min ÷ 60 + 1, so a 16 fpm hoist is 1.267).
Workload	A load as a percentage of what is allowed: for a hoist, high hook static ÷ rated capacity; for a truss, the highest of its span, cantilever, moment, shear and deflection checks.
Level sensitivity	How much a hoist's load changes if it runs 1/4" (6 mm) high or low compared with the others.

5.6 Spans and Cantilevers

A **span** is the part of a truss between two supports (hoists or bolted connections). A **cantilever** is the part past the last support at either end. Manufacturers publish how much load each span length can carry; the app reads those tables. A cantilever may be no longer than a quarter of the truss's maximum span.

5.7 The Whole-Rig Analysis

When trusses are bolted into a grid, they share load: a truss sags a little, and some of its load moves to neighbouring hoists. The app works this out with a **whole-rig analysis** (a stiffness or finite-element analysis of the grid). Because nobody publishes how stiff the joint through a corner block is, the app solves the rig several ways - with the joints **hinged**, **semi-rigid** and **rigid** - and every check uses the worst result. You do not need to do anything to make this happen; see How the App Calculates if you want to know more.

5.8 Statuses

Status	Used for	Meaning
OK	trusses, hoists	Within every limit. "OK - high" on a truss means 80% or more.
Overloaded	trusses, hoists	Over a limit.
Too long	trusses	A span or cantilever longer than the table allows.
Too long and overloaded	trusses	Both.
Slack	hoists	The load would push the hoist up; its chain goes slack and it carries nothing.
Unstable	trusses, hoists	Not held up properly - it would tip. Its numbers must not be used.
Check	trusses (panel)	A check has failed or a warning applies; open its Checks section.
Not solved	trusses	It has no supports yet, or depends on something missing or on a loop.

6 Entering Values

6.1 Lengths

Any box that takes a length accepts several ways of writing it. In imperial units:

You type	The app reads
12.5	12.5 ft (decimal feet)
12-6	12 ft 6 in
12'6" or 12' 6"	12 ft 6 in
12' 6 1/2" or 12-6-1/2	12 ft 6½ in
12 ft 6 in, 12 ft	12 ft 6 in, 12 ft
6" or 6 in	6 in (0.5 ft)
-3-6	minus 3 ft 6 in (a position before the centerline)

In metric units, type metres (3.8), or add a unit: 380 cm , 3800 mm . Feet-and-inches still work.

If the app cannot read what you typed, the box flashes red and keeps its old value. How lengths are *shown* (decimal feet such as 4.1667, or feet-inches such as 4'-2") is set in Rig Settings > **Show lengths as**.

6.2 Weights and Other Numbers

Weights are typed as plain numbers in the rig's units (pounds, or kilograms in metric). In the load grid's **Item** cell and the quick-add box you can include the unit: 45 lb or 20 kg . Other units the app uses: lb/ft (kg/m) for weight per length, inches (mm) for level offsets and truss widths, lb/in (kg/mm) for hoist stiffness, ft/min (m/min) for hoist speed, lb-ft (kg·m) for moments.

6.3 Metric or Imperial

Choose **Units** in Rig Settings. Switching changes only what is shown and typed: the rig is stored and calculated the same way, so no result and no truss or hoist choice changes. The setting is saved with the rig. Trusses whose manufacturer data is metric are always checked against their own metric table.

6.4 Committing a Value

A value takes effect when you press **Enter** or **Tab** , or click somewhere else. Results update straight away.

7 Working in the Grids

Steps 1, 2 and 3 each have a spreadsheet-style grid under the plan. You can build a whole rig from the grids alone - typing straight from a drawing or pasting from Excel - or use them alongside the plan and side panel. Every edit in a grid is exactly the same as making it in the side panel, and each edit (or paste) is one Undo step.

7.1 Moving Around and Typing

To	Do this
Select a cell	Click it. The cell gets a blue outline and its row's truss, load or hoist is selected on the plan and in the side panel.
Move	Arrow keys; Tab / Shift + Tab (right / left, skipping grey result columns); Enter / Shift + Enter (down / up). After tabbing along a row, Enter goes back to the column you started in, on the next row - like Excel.
Edit	Just start typing (replaces the value), or double-click, press F2 , or click an already-selected cell (edits the value).
Finish an edit	Enter (and move down), Tab (and move right), or click elsewhere. Esc cancels.
Tick a checkbox	Click it, or press Space on it.
Copy the cell above	Ctrl + D (fill down).
Copy a cell	Ctrl + C . The Copy button in the grid's header copies the whole grid as tab-separated text for Excel.
Paste	Ctrl + V - see below.
Delete a row	Delete (or Shift + Backspace). Deleting a truss asks first.
Stop editing the grid	Esc (with no edit open) - the plan's keys work again.

Grey columns are results or values set elsewhere (for example the position of a bolted truss); you cannot type in them. A column that is grey for one row may be editable in another.

7.2 Adding Rows

The last row of each group is a "new" row in italics: *new truss...* (type a name), + *load on North* (start typing), + *hoist on West* (type its position). Click one of its editable cells and type: a new truss, load or hoist is created with what you typed, and the cursor stays on the new row so you can keep going.

7.3 Picking from a List

Some cells search a list as you type - the truss **Type**, the load **Item / fixture** and the **Hoist** model. Type any part of the name (several words narrow it down: `jte 12 plated`, `mac aura`, `lode 1t`). Use the arrow keys to choose, then `Enter` to pick, or `Tab` to pick and move to the next cell. `Esc` closes the list.

7.4 Pasting from a Spreadsheet

Copy a block of cells in Excel (or any spreadsheet), click the cell where the top-left value should go, and press `Ctrl + V`. Each line fills a row, from that cell to the right and down. If you run past the last row of a group, new rows are added to it. Empty pasted cells leave the value alone; cells the app cannot read are skipped and it tells you how many. Paste one value (no tabs) to put it in the selected cell.

Column order for pasting

Loads: At, From, Item, Weight, Clamp, Mirror, Note, Category (Mirror: `yes`, `y`, `x` or `1`).

Hoists: At, From, Hoist, Chain / rope, DLF, Hardware, Hangs from, Level.

Start the paste in the **At** column. Put the column you start in first in your spreadsheet selection.

7.5 Choosing Several Hoists at Once

The Hoists grid (step 3) lets you change many hoists in one go - see Editing Many Hoists at Once.

8 Step 1 - Structure

In step 1 you create every truss, set its make, model and length, add its corner blocks, place it on the plan and bolt the trusses together. Build all the trusses first; loads and hoists come later.

Structure

All trusses: type, length, position and bolting

Tab

next

Enter

down

Ctrl D

fill down

Ctrl V

paste

Copy

	NAME	TYPE	LINE (PIECES · BLOCKS)	PIECES (FT)	LINE (FT)	X	Y	ANGLE	BOLTED TO	UDL (LB)	MEASURE FROM	HANGS FROM
1	West	JTE 12x12 Plated	CB1 · 30' · CB2	30	32	0	0	-90	-	0	CL	3 hoists
2	North	JTE 12x12 Plated	8' · CB1 · 13' · CB2 · 9'	30	32	0.5	-0.5	0	West CB1 (start)	0	CL	West CB1, East CB1, 2
3	South	JTE 12x12 Plated	8' · CB1 · 13' · CB2 · 9'	30	32	0.5	-31.5	0	West CB2 (start)	0	CL	West CB2, East CB2, 2
4	East	JTE 12x12 Plated	CB1 · 30' · CB2	30	32	33	0	270	East CB1 (reverse)	0	CL	3 hoists
5	Inner W	JTE 12x12 Plated	30'	30	30	9	-1	270	North CB1 (start)	0	CL	North CB1, South CB1
6	Inner E	JTE 12x12 Plated	30'	30	30	23	-1	270	North CB2 (start)	0	CL	North CB2, South CB2
	new truss... (type a name)											

Type straight from the plot: X / Y / angle for free trusses; a truss bolted to a corner block is placed by the block (bolt it with "Bolt to..." in the inspector). Pieces = truss sections before corner blocks.

Grey columns are results.

The Structure grid: one row per truss.

8.1 Adding a Truss

Click **+ Truss** (above the plan, or in the rig panel), or type a name in the grid's *new truss...* row. A new truss is a 20 ft JTE 12x12 Plated, named *Truss 1*, *Truss 2...*, measured from its centerline, with no loads and no hoists, placed at X 0, Y 0 running east. It is selected, so the side panel shows it.

Rig > North TRUSS

North ● OK

JTE 12x12 Plated 32 ft Hangs from: West CB1, East CB1, 2 hoists

+ Hoist + Load Bolt to... Connected

Duplicate Delete

▼ TRUSS Collapse all Expand all 5.5 lb/ft · span 40 ft

Manufacturer: JTE Model: 12x12 Plated

Max span 40 ft · max cantilever 10 ft · 0.85 repetitive-use derate · Source: Truss Load Analyzer workbook - TLA-EOT 2.1 (Hall & Sogioian)

Truss pieces (ft): 30 UDL (lb): 0 Measure from: centerline

Cable (lb/ft): none

30 ft truss + 2 ft corner blocks = **32 ft whole line**

The top of a truss's panel: name, status, type, length, what it hangs from, and actions.

The top of the truss panel shows:

- the **name** (click it to rename) and its **status**;
- its type and length, and **Hangs from**: the trusses or corner blocks it is bolted to and how many hoists it has;
- buttons: + Hoist (adds a hoist in the middle), + Load (jumps to the quick-add box), Bolt to..., Connected, rotate ↻ (free trusses only), **Duplicate** and **Delete**.

Connected dims everything on the plan that is not joined to this truss (bolted, stacked, or hung on a hoist below it) - a quick way to spot a truss you meant to bolt on but did not. Click it again to turn it off.

8.2 Choosing the Truss Type

Open the **Truss** section. Choose the **Manufacturer**, then the **Model**.

- Models marked **(MFG)** use the manufacturer's own current load table and are listed first. The others come from the original Truss Load Analyzer workbook. Where a workbook row allows more than the maker's current table for a span in your rig, the app warns and names the maker's row to use instead.
- (metric data)** means the maker publishes a metric table; it is checked in whole-metre steps.
- (custom)** is a truss you added yourself (see Databases).

Under the pickers the app shows the maximum span, the maximum cantilever (a quarter of the maximum span), the repetitive-use factor applied, and where the data comes from. For manufacturer data, **maker's load table** ↗ opens the maker's own document in a new tab (this needs an internet connection).

In the grid, click the **Type** cell and type part of the name (`tyler gt` , `christie a`) instead.

8.3 Setting the Length

A truss line is its **truss pieces** plus any **corner blocks** in the line:

- Truss pieces** - the total length of truss sections, not counting corner blocks. Type it (`30` , `28-6`).
- The line under the fields adds it up: *30 ft truss + 2 ft corner blocks = 32 ft whole line*. With **add block lengths** ticked (the default) each corner block's length is added to the pieces. Untick it if the length you typed already includes the blocks.

▼ TRUSS 5.5 lb/ft · span 40 ft

Manufacturer: JTE Model: 12x12 Plated

Max span 40 ft · max cantilever 10 ft · 0.85 repetitive-use derate · Source: Truss Load Analyzer workbook - TLA-EOT 2.1 (Hall & Segoian)

Truss pieces (ft): 30 UDL (lb): 0 Measure from: centerline

Cable (lb/ft): none

30 ft truss + 2 ft corner blocks = 32 ft whole line

The Truss section.

Building a Truss from Standard Pieces

Click **Build from pieces...** to assemble the line from stock lengths. Buttons such as **+10'** and **+5'** add a stick of that length (the lengths offered depend on the truss family); type another length in the small box and click **+ add** for an odd piece (the app remembers it for next time). Each piece is shown as a tag - click a tag to remove that piece. **+CB** between two tags puts a corner block between those pieces.

Type a length instead goes back to a single length.

The screenshot shows the 'TRUSS' configuration panel. At the top right, it displays '5.5 lb/ft · span 40 ft'. The 'Manufacturer' dropdown is set to 'JTE' and the 'Model' dropdown is set to '12x12 Plated'. Below these, a text string reads: 'Max span 40 ft · max cantilever 10 ft · 0.85 repetitive-use derate · Source: Truss Load Analyzer workbook - TLA-EOT 2.1 (Hall & Sogioian)'. The 'Truss pieces (ft)' input is 0, 'UDL (lb)' is 0, and 'Measure from' is 'centerline'. The 'Cable (lb/ft)' dropdown is set to 'none'. A summary line states '0 ft truss + 0 ft corner blocks = 0 ft whole line' with a checked 'add block lengths' checkbox. A section titled 'TRUSS BUILT FROM PIECES' contains the text 'no truss - add pieces', buttons for '+10'', '+5'', a 'ft' input field, and a '+ add' button. At the bottom of this section is a 'Type a length instead' button.

A truss built from pieces.

8.4 Corner Blocks in a Truss Line

Open the **Corner blocks** section. First choose the **Block to add** - maker, truss family and block (with its number of ways and weight). The app suggests a block that fits the truss.

Button	Puts a corner block...
+ Corner block at start / at end	at that end of the line (the line gets longer by the block, if add block lengths is ticked).
Corner block at ... from ... > Add there	with its centre at an exact distance from the start, centerline or end; the truss is split there.
Set segment lengths...	(once there is a block in the line) switches to typing each run of truss between blocks: <i>before first block</i> , <i>between blocks</i> , <i>after last block</i> . Each run can be typed as a length or built from pieces.
+ Corner block after these pieces	after a run of truss (in segment mode).
+CB	between two pieces (in the piece tags).

The line is summed up as, for example, **8' + CB + 13' + CB + 9' = 32 ft**. Each block gets a row with its name (editable), its length, type and position, and what is bolted to it; **select** opens the block's own panel and **remove** takes it out of the line. Blocks are named after the truss (*North CB1*, *North CB2*...); **Number blocks from** with **Renumber this truss** or **Renumber all trusses** renames them in order along each line.

8.5 Placing a Free Truss

A truss that is not bolted to anything is **free**. Place it in any of these ways:

- Type **Plan X**, **Plan Y** (the start point) and **Angle** in the **Placement** section, or in the grid's X, Y and Angle columns. Angles: 0 = east, 90 = north, 180 = west, 270 (or -90) = south.
- Drag it on the plan. It moves in half-foot steps, and its ends snap to the ends of other trusses within 1.5 ft; hold **Alt** while dragging to stop the snapping.
- Press **R** (or click ) to turn the selected truss 90° anticlockwise about its start.

To move a whole rig so it is centred on the origin, use **Center on 0,0** in Rig Settings.

8.6 Bolting a Truss to a Corner Block

Bolting joins two trusses: the truss you bolt is placed by the block, at right angles to the block's truss, and follows it from then on.

- 1 Make sure the corner block exists: it must be in another truss's line (see above).
- 2 Select the truss you want to bolt on. In **Placement > Bolt to a corner block**, check the two options (the defaults are usually right):
 - **end: automatic**, **its start meets the block**, **its end meets the block**, or **the block is along it** (the block sits partway along this truss, as where a truss passes through a block);
 - **direction: automatic** or **extends north / south / east / west** - which way the truss runs from the block.
- 3 Click **Bolt to...** (in the Placement section or at the top of the panel). A blue bar appears: *Bolt North: click a corner block*, and the corner blocks you can use are outlined.

- 4 Click the corner block on the plan. The truss jumps into place. (Press **Esc** or **Cancel** to stop without bolting.)



Choosing a corner block to bolt to. The blocks you can pick are outlined in blue.

You can also start from the block: select a corner block and click **Bolt a truss here...**, then click the truss; or click one of the block's free faces (**+ north**, **+ east**...) and then the truss, to bolt it to that face.

Once bolted, the **Placement** section says, for example, *Bolted to West CB1 at its start, extends east*, and offers:

- **Flip side** - swing the truss to the other side of the block's truss;
- **Bolt other end** - use the other end of this truss at the block;
- **Unbolt** - make it free again (it stays where it is).

Its X, Y and angle are now grey (set by the block). To move it, move the truss that owns the block.

The Placement section of a bolted truss.

Closing a Box: Bolting Both Ends

A truss can be bolted at both ends. After a truss is bolted at its start, bolt its **end** to a corner block on another truss: that other truss (if it is free) is **pulled onto** this truss so the block meets its end. Its panel then says *Pulled onto North (bolted through its own corner block)*, with **Flip side** and **Unbolt**. This is how the last side of a box closes onto the first - see Building a Box, Step by Step. If the lengths around a loop do not add up, the app warns that the truss does not meet the block and by how much.

Bolted Parts Must Match

Bolted truss and corner blocks only fit within one manufacturer's truss family (JTE 12x12 does not bolt to Christie A Type, even at the same size). The app warns, and draws the bolt in red on the plan, when bolted parts do not match - including a generic or universal truss bolted to branded parts. Parts it cannot check (generic, universal, custom) get a note. Trusses **stacked** or **clamped** at a crossing can be any family. Nothing is ever blocked; it is a warning.

8.7 Stacking or Clamping at a Crossing

Where two trusses cross on the plan, one can rest on top of the other or be clamped underneath it without a corner block. In **Placement > Stack or clamp at one point**, choose **sits above** or **clamped below**, choose the other truss, and click **Add**. The app adds a support where the two centerlines cross: this truss is then held up by the other truss at that point.

8.8 Bolted Connections Table

Every bolt and stacking point is a support of the truss, listed under **Hoists & connections > Bolted connections**. For each one you can see and change where it is on this truss (**At ... from**), which truss or block it is joined to and where on it, whether it is in the same plane, **above** or **below**, a hardware weight at

the connection (**+lb**), and the force passed through it. The **plan** tick keeps both distances tied to the plan drawing; typing a distance unticks it. **Delete** removes the connection.

8.9 UDL and Cable Allowance

- **UDL** - a total weight spread evenly along the whole truss, for example a drape, a projection screen or an LED wall hung along it. Type the total (not per foot).
- **Cable** - cable weight per foot (lb/ft) on this truss, added to its UDL. Blank uses the rig's cable allowance (Rig Settings); **0** means no cable on this truss. The panel shows the result, e.g. *Cable allowance 1.5 lb/ft × 32 ft = 48 lb, added to the UDL.*

8.10 Advanced

Field	What it does
Height	Raises the truss in the 3D view only (no effect on results).
Width (in)	How wide it is drawn on the plan and in 3D. Taken from the truss type; type to override.
Stiffness (×)	Scales the truss's bending, shear and torsion stiffness in the whole-rig analysis (1 = the app's estimate). Only change this if you have better data.
Weightless	Leaves this truss's self weight out of the calculation. Rarely correct - use with care.

Below the fields the app lists the stiffness it used (EI, GA, GJ) and whether it was estimated from the tables or taken from section data.

8.11 Duplicating and Deleting

Duplicate makes a free copy called ... *copy*, a little below and to the right of the original, with the same type, pieces, loads and hoists. The copy is not bolted to anything and has no corner blocks or bolted connections - add those again.

Delete (or **DeLete** with the truss selected) removes the truss after asking. Its corner blocks go with it; trusses that were bolted to it or to its blocks stay where they are but are no longer bolted (and show *Not solved* if that was their only support), and hoists hung below it hang from the structure again. Undo brings it all back.

8.12 The Structure Grid

Column	Contents
Name	The truss name.
Type	Maker and model; type to search.
Line (pieces · blocks)	The line in words, e.g. 8' · CB1 · 13' · CB2 · 9' (grey).
Pieces	Truss sections before corner blocks (grey when built from pieces or segments - change it in the panel).
Line	The whole line length (grey).
X, Y, Angle	Position of a free truss (grey when bolted).
Bolted to	The block it is bolted to and how (grey).
UDL	Spread load, total.
Measure from	start, CL or end.
Hangs from	What holds it up (grey).
Status	Its current status (grey).

8.13 Corner Block Panel

Click a corner block (on the plan, in the outline, or **select** in its truss's list) to open its panel.

- **Faces** - a diagram of the block with the truss on each face (north is up the plan) and how many of its ways are used. Click a free face, then a truss, to bolt that truss to that face. *Too many faces* means more trusses are bolted to it than it has ways.
- **Block** - the block type (maker > family > block); **Hardware fitted** for blocks sold with different plates; a **Weight override** (leave blank for the published weight - and enter one where the maker publishes none); its **Height** in 3D; and a link to the maker's product page.
- **Carrying** - the loads passed into it by the trusses bolted to it.
- **Supports** - a hoist can hang directly on a corner block: open Supports and click [+ Add hoist](#).

[Remove from ...](#) takes the block out of its truss line.

Rig > North > North CB1

CORNER BLOCK

North CB1

JTE General Purpose 12 x 12 - 6-Way Corner Block 26.5 lb

part of North

Bolt a truss here...

Remove from North

FACES

3 of 6 used

+ north

North

North CB1

North

Inner W (start)

Plan directions (north = up the plan). Click a free face, then the truss to bolt there. The block has 6 ways (3D faces included).

BLOCK

Block type

James Thomas Engineering

General Purpose 12 x 12

6-Way Corner Block - 6-way, 26.5 lb

Weight override (lb)

26.5

Height (ft)

0

James Thomas Engineering General Purpose 12 x 12 - B4707. [Source](#)

CARRYING

52 lb from Inner W

SUPPORTS

1 (hoists and bolts)

A corner block's panel.

9 Building a Box, Step by Step

This example builds a simple box: two 22 ft sides (**West** and **East**, each 20 ft of truss with a corner block at each end) and two 30 ft sides (**North** and **South**) bolted between them, hung from four hoists, one at each corner. It uses the default truss (JTE 12x12 Plated) and the default 6-way corner block. (For a larger example, open **File > Load example box** and click each truss to see how it is built.)

9.1 The Two Short Sides


- 1 **File > New rig**. Click **+ Truss**. Rename it **West**. Set **Truss pieces** to **20** and **Angle** to **270** (it now runs south from X 0, Y 0).
- 2 Open **Corner blocks** and click **+ Corner block at start**, then **+ Corner block at end**. The line reads *20 ft truss + 2 ft corner blocks = 22 ft whole line*, and the blocks are *West CB1* (north end) and *West CB2* (south end).
- 3 Click **+ Truss** again. Rename it **East**, **Truss pieces** **20**, **Angle** **270**, **Plan X** **40** (anywhere to the east will do - it is pulled into place later). Add a corner block at its start and its end (*East CB1*, *East CB2*).

9.2 The Long Sides

- 1 Click **+ Truss**. Rename it **North**, **Truss pieces** **30**.
- 2 In **Placement**, set the options to **its start meets the block** and **extends east**. Click **Bolt to...** and click **West CB1** on the plan. North jumps to the north-west corner and runs east.
- 3 Set the option to **its end meets the block**, click **Bolt to...** again and click **East CB1**. East is pulled across so its north block meets North's end: the box has three sides.
- 4 Add **South** the same way: **+ Truss**, 30 ft; **its start meets the block**, **extends east**, **Bolt to...** **West CB2**; then **its end meets the block**, **Bolt to...** **East CB2**.

9.3 Loads and Hoists

- 1 Press **2**. Add some loads - for example select North, type **80 lb @ -5** in the quick-add box of its **Loads** section, press **Enter** and click **Mirror all**; do the same on South.
- 2 Press **3**. Put a hoist at each corner: on West and on East, add hoists at **0.5** from the **start** and **0.5** from the **end** (the centres of the corner blocks). In the grid, type the position in **At** and set **From** to **start or end**.
- 3 Press **4** and check the results. With 80 lb moving lights (two per side, mirrored) each corner hoist carries about 382 lb.

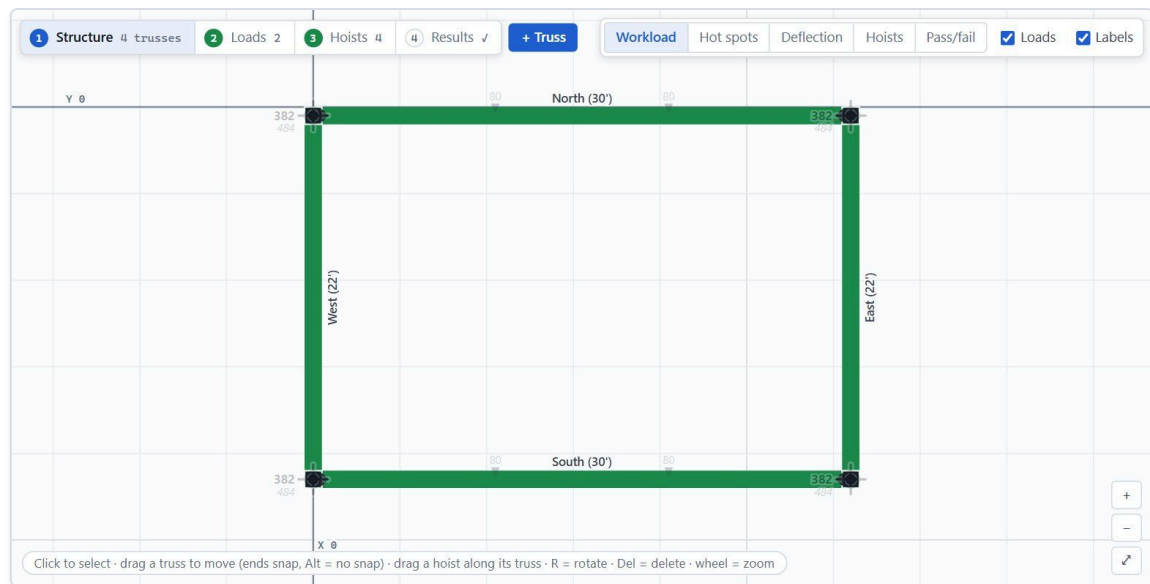

The finished box: four sides joined at four corner blocks, a hoist at each corner.

Why a hoist at every corner?

Some manufacturers (for example Christie Lites for its A Type) require a box built with 90° corner blocks to be supported at every corner, and allow only part of the truss capacity where an unsupported block joins four or more sections. The app warns about both. Always follow the maker's rules for its corner blocks.

10 Step 2 - Loads

In step 2 you put the loads on the trusses: fixtures from the library, weights you type, and spread loads. Every load is a point load at one position; for eight lights, add eight loads (or four, mirrored).

Loads Every load on the rig, grouped by truss									
☒ Collapse plan while typing									
Tab next Enter down Ctrl D fill down Ctrl V paste Copy									
TRUSS	AT (FT)	FROM	ITEM / FIXTURE	WEIGHT (LB)	CLAMP (LB)	TOTAL (LB)	MIRROR ABOUT CL	NOTE	CATEGORY
West 0 loads · 0 lb									
+ load on West (start typing)									
North Mirror all Copy to truss... Sort Clear 2 loads · 340 lb									
1 North	-11	CL	Moving light custom	85		85 x2	☒ at +11 ft from CL		Other / not set
2 North	-5	CL	Moving light custom	85		85 x2	☒ at +5 ft from CL		Other / not set
+ load on North (start typing)									
South Mirror all Copy to truss... Sort Clear 2 loads · 340 lb									
3 South	-11	CL	Moving light custom	85		85 x2	☒ at +11 ft from CL		Other / not set
4 South	-5	CL	Moving light custom	85		85 x2	☒ at +5 ft from CL		Other / not set
+ load on South (start typing)									

The Loads grid: loads grouped by truss, each group ending with a "+ load on ..." row.

10.1 Three Ways to Add a Load

1. Quick Add, in the Truss Panel

Select a truss and find the box *Add: fixture or weight* in its **Loads** section (or click **+ Load** at the top of the panel to jump there). Type what and where, and press **Enter**:

You type	You get
MAC Aura @ 4	A Martin MAC Aura (library weight and clamp) at 4 ft, measured the truss's way (from its centerline, start or end).
120 lb @ -6	A 120 lb load 6 ft before the centerline.
20 kg @ 2.5	A 20 kg load at 2.5 (metres in metric, feet in imperial).
MAC Aura	The fixture in the middle of the truss.

As you type a fixture name a list of matching fixtures appears; pick one, then type @ and the position.

2. The Loads Grid

Click a cell in the + load on ... row of the truss's group and type. In the **Item / fixture** cell, type part of a fixture name to search the library - fixtures already used in this rig are listed first - or type a weight (45 lb) for a custom load.

The screenshot shows the Truss Grid Analyzer v1.26.0 interface. The main window displays a truss plan with a grid of loads. A dropdown menu is open for the 'Item' column of a new load, showing a list of fixtures including 'Martin MAC Aura' and 'Martin MAC Aura XB'. The right panel shows the 'Inner E' truss details, including manufacturer, model, and various settings.

TRUSS	AT (FT)	FROM	ITEM / FIXTURE	WEIGHT (LB)	CLAMP (LB)	TOTAL (LB)	MIRROR ABOUT CL	NOTE	CATEGORY
West									
+ load on West (start typing)									
North									
1 North	-11	CL	Moving light custom	85		85 x2	☒ at +11 ft from CL	Other / not set	
2 North	-5	CL	Moving light custom	85		85 x2	☒ at +5 ft from CL	Other / not set	
+ load on North (start typing)									
South									
3 South	-11	CL	Moving light custom	85		85 x2	☒ at +11 ft from CL	Other / not set	
4 South	-5	CL	Moving light custom	85		85 x2	☒ at +5 ft from CL	Other / not set	
+ load on South (start typing)									
East									
+ load on East (start typing)									
Inner W									
5 Inner W	-8	CL	Wash custom	60		60 x2	☒ at +8 ft from CL	Other / not set	
6 Inner W	0	CL					☐	Other / not set	
+ load on Inner W (start typing)									
Inner E									
7 Inner E	-8	CL					☒ at +8 ft from CL	Other / not set	
+ load on Inner E (start typing)									

Typing "mac aura" in a new load's Item cell. While you work in the grid the plan shrinks to a strip of the truss you are on.

3. The Add Button

With a truss selected in step 2, **+ Load** above the plan adds an empty load in the middle of it and opens it in the side panel. Fill in the item and weight there.

10.2 The Loads Grid Columns

Column	Contents
Truss	The truss it is on (grey).
At, From	Its position, and whether measured from the start, the centerline (CL) or the end.
Item / fixture	The fixture name, or your own description. custom means it is not a library fixture.
Weight	The fixture or item weight (each).
Clamp	The clamp weight, filled in from the library where it has one. Add your own.
Total	Weight + clamp (grey). x2 means it is mirrored, so the truss carries it twice.
Mirror about CL	Tick to add the same load at the mirror position; the grey text says where (<i>at + 11 ft from CL</i>).
Note	Anything you like (e.g. <i>SR 1/2, cable pick</i>). Printed on the calc sheet.
Category	Lighting, Audio, Video, Scenic, Rigging hardware or Other. Sets the load factor (see Allowances); the cell shows e.g. <i>Lighting x 1.1</i> when a factor applies. Library fixtures are Lighting.

Each truss group's header has **Mirror all** (mirrors every load on that truss), **Copy to truss...**, **Sort** (by position) and **Clear** (removes all its loads, after asking), plus the number of loads and their total weight.

10.3 Mirrored Loads

Rigs are often symmetrical. Tick **Mirror** on a load and the truss carries the same load at the same distance on the other side of its centerline. The twin is not a separate load: change the original's weight or position and the twin follows. A load exactly on the centerline has no twin. On the plan the twin's triangle is drawn lighter.

10.4 Copying Loads to Another Truss

Copy to truss... (in the grid group header or the truss panel) asks for the name of the truss to copy to, then copies every load keeping its distance from the **centre** - so the pattern stays centred on a truss of a different length. Loads that would fall past the end of the other truss are placed at its end, and the app tells you how many.

10.5 Working with the Plan Strip

While a cell in the Loads grid is active, the plan shrinks to a strip showing just that truss: its centerline (CL), corner blocks, hoists and loads, with the load you are editing highlighted. Click **Show plan (Esc)** in the strip to bring the full plan back, or untick **Collapse plan while typing** in the grid header to keep the plan full size.

10.6 The Load Panel

Click a load in a truss panel's list or in the grid to open it in the side panel:

- **Item / fixture** - type to search the library; picking a fixture fills in its weight and clamp.
- **Weight** and **Clamp** - the total is shown underneath (and *plus the same again mirrored at ...* when mirrored).
- **Category** - with a note of the load factor when one applies (e.g. *the trusses and hoists carry 93.5 lb*).
- **Note**.
- **Position** - **At ... from** start / centerline / end, and **Mirror about the centerline**.

Use < > to step through the loads on the truss, **Duplicate** to copy the load, and **Delete** (or **Delete**) to remove it.

Rig > North > Load @ -11 ft from CL

LOAD

Moving light

85 lb x2 (mirrored) on North

< > Duplicate Delete

LOAD

Item / fixture

Moving light

Weight (lb) Clamp (lb)

85 0

Total 85 lb - plus the same again mirrored at +11 ft from CL

Category

Other / not set

Note

e.g. SR 1/2, cable pick

POSITION

on North

At (ft) from

-11 centerli

☒ Mirror about the centerline - adds the same load at +11 ft from CL

A load's panel.

10.7 Loads in the Truss Panel

LOADS

2 · 340 lb

AT	ITEM	TOTAL (LB)	MIRROR
-11 ft from CL	Moving light	85	✓ +11 ft from CL
-5 ft from CL	Moving light	85	✓ +5 ft from CL

Add: fixture or weight, e.g. MAC Aura @ 4 · 120 lb @ -1 Add

Mirror all Copy to truss... Sort by position Edit all loads in the grid Clear all

Also carrying: 79 lb from North CB1 at 8.5'; 80 lb from North CB2 at 22.5'

The Loads section of a truss.


The truss panel's **Loads** section lists each load (click one to open it), with the quick-add box and the links **Mirror all**, **Copy to truss...**, **Sort by position**, **Edit all loads in the grid** and **Clear all**. The line *Also carrying* lists loads that come into this truss from trusses bolted to it or its corner blocks, with where they land.

Get the weights right

A load with no weight is listed in **Check rig**. Remember cable, clamps, safeties, motors on moving trusses and anything else that will hang there: use a category load factor or the cable allowance for what you cannot list.

11 Step 3 - Hoists

In step 3 you place the hoists (and dead hangs), choose their models and chains, and see their loads live. A new truss has no hoists.

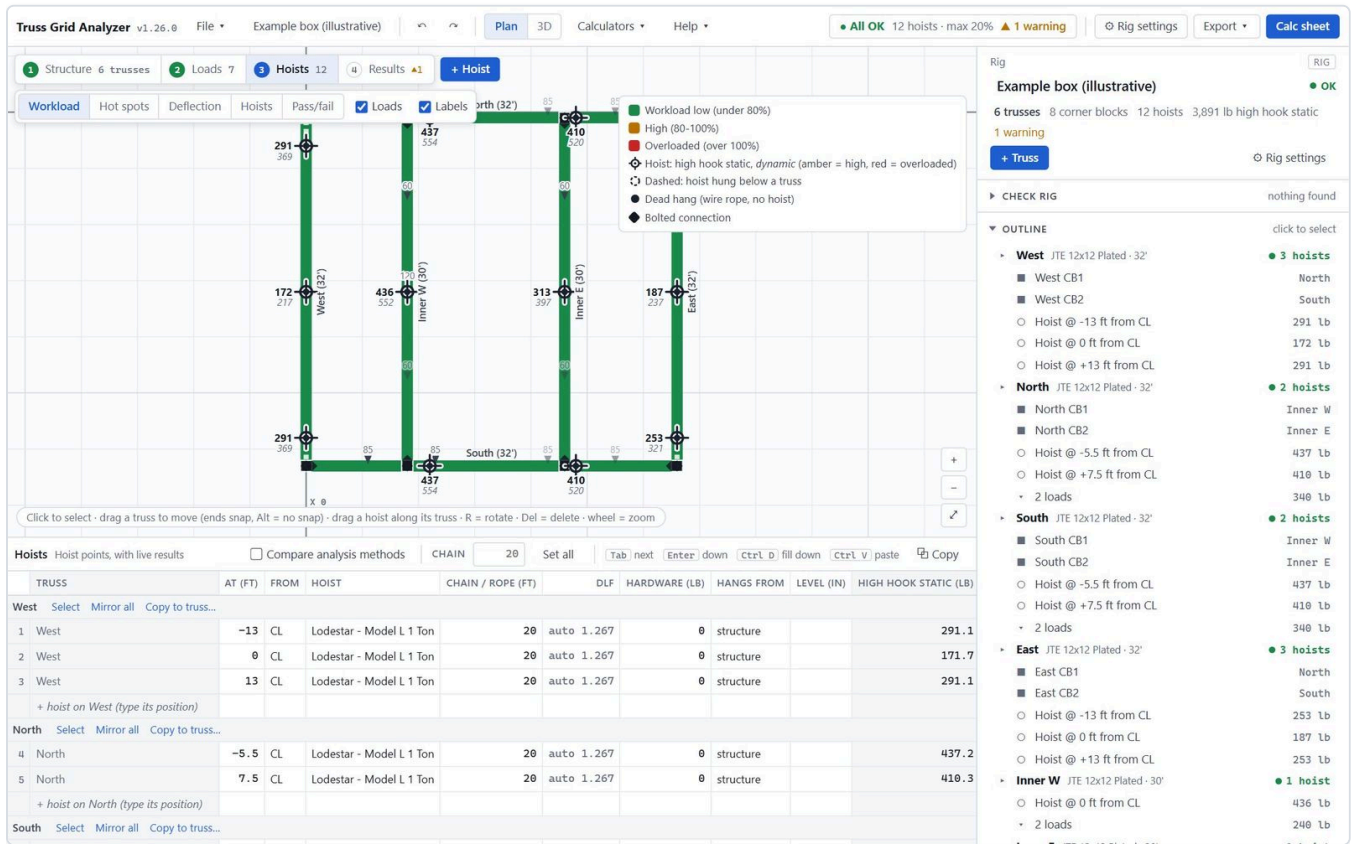

Step 3: each hoist on the plan shows its high hook static load and, in italics, its high hook dynamic load. The grid lists every hoist with its results.

11.1 Adding Hoists

- **In the grid:** click the **At** cell of the + hoist on ... row, type the position and press **Enter**. The cursor stays on the new row, so you can type the next position straight away.
- **With the button:** select the truss and click **+ Hoist** (above the plan, or at the top of the truss panel). The hoist is added in the middle of the truss; type its position in its panel or drag it.
- **On a corner block:** select the block, open **Supports** and click **+ Add hoist**.
- **By mirroring or copying** other hoists - see below.

A new hoist is set up like the **last hoist you placed** in the rig - same model, chain (or rope), hardware and dynamic factor - so a rig of identical hoists takes no extra typing. The very first hoist in a rig is a 1-ton CM Lodestar with 20 ft of chain.

11.2 Moving a Hoist

Type its position (**At** and **From** in the grid, or **Position** in its panel), or **drag it along its truss on the plan**. While you drag, the position is shown next to the hoist and the rig is re-solved as it moves. It moves in 1" steps (2 cm in metric), counted from the truss's measuring reference, so the distance stays a round number. Clicking a hoist without dragging just selects it.

11.3 The Hoists Grid Columns

Column	Contents
Truss, At, From	Where the hoist is.
Hoist	The model. Type to search: <code>lode 1t</code> , <code>prostar</code> , <code>2 ton</code> . Type <code>dead</code> for a dead hang.
Chain / rope	Chain length (or, for a dead hang, rope length). Its weight is added to the high hook load.
DLF	Dynamic load factor. Blank = automatic (shown grey, e.g. <i>auto 1.267</i> , from the hoist's speed); type a number to override.
Hardware	Weight of shackles, spansets, beam clamps and so on at this hoist.
Hangs from	<i>structure</i> (the usual), or <i>below</i> another truss - see Hoists Hung Below a Truss.
Level (in)	A designed level offset, + higher - see Hoist Levels.
High hook static / dyn.	Results (grey).
Workload, Status	High hook static ÷ capacity, and OK / Overloaded / Slack / Unstable.
Measured, vs calc.	A load-cell reading you type, and how far it is from the calculation - see Measured Loads.

The grid header also has:

- **Chain [] Set all** - type a length and click **Set all** to give every hoist that chain length (one Undo step).
- **Compare analysis methods** - adds three columns with each hoist's high hook static load from each joint model of the whole-rig analysis: **Hinged***, **Semi-rigid*** (a range) and **Rigid***. The high hook static is the largest of them.

Hoists Hoist points, with live results		☒ Compare analysis methods	CHAIN	20	Set all	Tab next	Enter down	Ctrl D fill down	Ctrl V paste	Copy
TRUSS	AT (FT)	FROM	HOIST	CHAIN / ROPE (FT)	DLF	HARDWARE (LB)	HANGS FROM	LEVEL (IN)	HINGED*	SEMI-RIGID*
West Select Mirror all Copy to truss...										
1 West	-13	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		291.1	289.6 - 292.6
2 West	0	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		167.9	170.2 - 165.6
3 West	13	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		291.1	289.6 - 292.6
+ hoist on West (type its position)										
North Select Mirror all Copy to truss...										
4 North	-5.5	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		435.8	436.6 - 435.0
5 North	7.5	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		409.2	409.9 - 408.5
+ hoist on North (type its position)										
South Select Mirror all Copy to truss...										

The Hoists grid with Compare analysis methods ticked.

Each truss's group header has **Select** (select all its hoists), **Mirror all** and **Copy to truss...**

11.4 Editing Many Hoists at Once

In the Hoists grid you can select several hoists and change them all with one edit:

To select	Do this
A range	Click one hoist, then Shift +click another (on any cell or the row number).
One at a time	Ctrl +click hoists to add or remove them.
With the keyboard	Shift + ↓ / Shift + ↑ grows or shrinks the selection.
All hoists	Ctrl + A (with a grid cell active).
All hoists on one truss	Click Select in the truss's group header.

Hoists Hoist points, with live results ☐ Compare analysis methods CHAIN 20 Set all Tab next Enter down Ctrl D fill down Ctrl V paste Copy									
3 hoists selected Type in any of their cells to change all 3 (not the position) - Ctrl+D copies the top one to the rest Delete 3 Clear selection (Esc)									
TRUSS	AT (FT)	FROM	HOIST	CHAIN / ROPE (FT)	DLF	HARDWARE (LB)	HANGS FROM	LEVEL (IN)	HIGH HOOK STATIC (LB)
West Select Mirror all Copy to truss...									
1 West	-13	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		291.1
2 West	0	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		171.7
3 West	13	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		291.1
+ hoist on West (type its position)									
North Select Mirror all Copy to truss...									
4 North	-5.5	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		437.2
5 North	7.5	CL	Lodestar - Model L 1 Ton	20	auto 1.267	0	structure		410.3
+ hoist on North (type its position)									

Three hoists selected. A bar above the grid says how many, with Delete and Clear selection.

Now type in any selected hoist's cell - model, chain, DLF, hardware, Hangs from, level, measured reading - and **every selected hoist** gets the same value. Positions (**At**) are never changed together. **Ctrl** + **D** copies the top selected hoist's value to the rest; **Delete** removes all of them (after asking). **Esc**, **Clear selection**, or moving with the arrows, **Tab** or **Enter** clears the selection.

11.5 Mirroring and Copying Hoists

- **Mirror** (in a hoist's panel) adds a hoist at the mirror position on the other side of the truss's centerline.
- **Mirror all** (truss panel, or the grid group header) does this for every hoist on the truss.
- **Copy to...** (hoist panel) and **Copy to truss...** (truss panel, grid) copy hoists to another truss - you type its name - keeping each one's distance from the centre. Hoists past the end are placed at the end.

Unlike mirrored loads, each copy is a **real, separate hoist** you can edit on its own. It gets the same model, chain or rope, dynamic factor, hardware, level offset and Hangs from, but not the name or a load-cell reading. No copy is placed on the centerline or where a hoist already is; the app tells you what it left out.

11.6 The Hoist Panel

Click a hoist on the plan (or its row) to open its panel. At the top: its name (type one if you like, e.g. *DS-L*), its status, model, capacity and speed, < > to step through the hoists on the truss, and **Mirror**, **Copy to...**, **Delete hoist**.

Result

- Three figures: **low hook** (what the truss hangs on the hook), **high hook static** and **high hook dynamic** (with its factor).
- A **Workload** bar.
- **Level sensitivity**: ± 603 lb if this hoist runs 1/4" (6 mm) high or low, and which other hoist changes most. Highlighted when it is more than 10% of the hoist's capacity - level that hoist carefully.
- With an out-of-level tolerance set: how much it adds and whether the hoist could go slack.
- **Load cell reading** - type a measured value (see Measured Loads).
- **Where the load comes from** - every truss, corner block and load that puts weight on this hoist (its own truss's self weight, neighbouring trusses through the grid - small negative figures mean a neighbour lifts a little off it), then Add %, hardware, hoist + chain, and the **high hook load (static)**. The note underneath says which joint model it came from.

Hoist

Support (Chain hoist or Dead hang), **Model**, **Chain** length, **Dyn. factor** (blank = automatic) and **Hardware**.

Position

At ... from, **Hangs from**, **Level offset**, and the distance from the start of the truss. Drag the hoist on the plan to move it.

Rig > North > Hoist @ -5.5 ft from CL HOIST

Hoist 1 on North OK

CM Lodestar - Model L 1 Ton 2,200 lb capacity 16 fpm

< > Mirror Copy to... Delete hoist

RESULT 20% workload

304.4 low hook, lb (the truss on the hook)	437.2 high hook static, lb	553.8 high hook dynamic, lb (x1.267)
--	--------------------------------------	--

Workload 20%

Level sensitivity: ± 603 lb if this hoist runs 1/4" (6 mm) high or low; North hoist at 23.5 ft changes by -499 lb - more than 10% of its capacity: level it carefully.

Load cell reading (lb)

WHERE THE LOAD COMES FROM	LB
North (self weight)	224.1
Inner W	50.5
North CB1	24.9
Inner E	3.5
West CB1	2.4
North CB2	1.9
East CB1	-1.7
West	-0.9
East	0.6
South	-0.5
West CB2	-0.2
South CB1	-0.1
East CB2	0.1
Hoist + chain	132.8
High hook load (static)	437.2

Whole-rig analysis, rigid joints (the joint model that loads this hoist most).

HOIST

Support:

Model:

Chain (ft) Dyn. factor Hardware (lb)

POSITION on North

At (ft) from centerli

Level offset (in)

= 10.5 ft from the start of North (32 ft). Drag the hoist on the plan to move it in 1" (2 cm) steps.

A hoist's panel.

11.7 Hoist Models and the Dynamic Factor

The hoist list has 76 built-in chain hoists from the original workbook (CM, Chainmaster, Stagemaker, Prolyte and others) and any you add under Databases. Each has a capacity, a speed, a body weight and a chain weight per foot.

The **dynamic factor** allows for the extra load while a hoist starts, stops and runs. For a hoist with a listed speed it is **speed in ft/min ÷ 60 + 1** (16 fpm = 1.267, 32 fpm = 1.533). A hoist with no listed speed (for example a custom hoist) uses the rig's **Default dynamic factor** (1.25 unless you change it in Rig settings). You can type any factor for one hoist in its **DLF / Dyn. factor** box. A hoist's **status** compares its *static* high hook load with its capacity; the dynamic load is flagged separately if it exceeds capacity.

11.8 Dead Hangs

A **dead hang** is a support made of wire rope and hardware from the truss to the hang point, with no hoist. To make one, set the hoist's **Support** to **Dead hang (wire rope, no hoist)**, or type **dead** in the grid's Hoist cell. Then set:

Field	What to enter
Rope	The rope: 7x19 galvanized aircraft cable (1/8" to 3/8") or 6x19 IWRC EIPS (1/4" to 1/2"), each shown with its WLL. Or <i>not in the list</i> - WLL typed below. A new dead hang starts as 3/8" GAC.
Rope length	For its weight (and its stretch, if the rig's hoists are given a stiffness).
Assembly WLL	The working load limit of the weakest part of the assembly (a shackle, a fitting). It caps the rope's WLL.
Hardware	Shackles, beam clamp, spanset...
Dyn. factor	1.0 (static) unless you type one - a dead hang does not move.

The WLL is the rope's minimum breaking strength ÷ the **design factor** (10:1 by default; 7:1 or 8:1 in Rig settings), capped by the assembly WLL. The panel writes out the sum. Breaking strengths are typical catalogue values - **check your rope's certificate**. A dead hang with no rope and no WLL is Overloaded. On the plan a dead hang is a filled dot; on the calc sheet it is DH1, DH2....

11.9 Hoists Hung Below a Truss

Sometimes a truss is flown from hoists that hang from another truss rather than from the building. Set such a hoist's **Hangs from** to **below** the upper truss (the *carrier*). Then:

- The hoist hooks onto the carrier where the plan puts it - so it must be directly under the carrier on the plan (the panel tells you where it hooks on, and warns if it is off to the side).
- Its chain joins the two trusses in the whole-rig analysis, so the carrier sags with the load and the truss below shares load with its other hoists. The chain can only pull.
- The carrier carries the hung hoist's high hook load, and the carrier (with everything bolted to it) is checked with the hung hoist's **high hook dynamic** load. So are the hoists holding the carrier up, unless you turn that off in Rig Settings.

- On the plan the hung hoist is a **dashed** ring. The rig's total high hook load counts only hoists to the structure.

11.10 Hoist Levels

Two different things:

- **Level offset** (per hoist) - a *designed* difference: a truss hung raked or trimmed on purpose, or a dead hang whose length is fixed. Type inches (mm), + higher. The whole-rig analysis solves the rig with that point moved, and the loads shift accordingly.
- **Out-of-level tolerance** (Rig settings) - *unintended* error: any hoist may end up that far off (say $\pm 1/4"$). Every hoist's check then carries the worst it could see, and a hoist that could unload completely is warned about.

Level sensitivity matters on stiff rigs


On short, stiff spans, and in grids with many hoists, a small level error moves a lot of load. The app warns when a 1/4" error would change a hoist's load by more than 10% of its capacity. Level such hoists carefully, use load cells, or set an out-of-level tolerance so the checks include it. Giving hoists a stiffness (Rig settings) makes the analysis more realistic and much less level-sensitive.

11.11 Measured Loads (Load Cells)

If you have load cells, type each reading in the **Measured** column (or the hoist panel's **Load cell reading**). The app compares it with the calculated high hook static load - or with the low hook load if your cells hang between the hoist and the truss (set **Load cells read** in Rig settings). The **vs calc.** column shows the difference in percent. The rig panel's **Measured vs calculated** section totals each assembly of joined trusses and flags a total more than 5% off. One hoist on a rig that shares load can differ much more than that (levels, stiffness) - compare the assembly totals. Readings never change a result.

12 Step 4 - Results

Step 4 replaces the grid with the results. You can come here at any time; the results are always up to date.

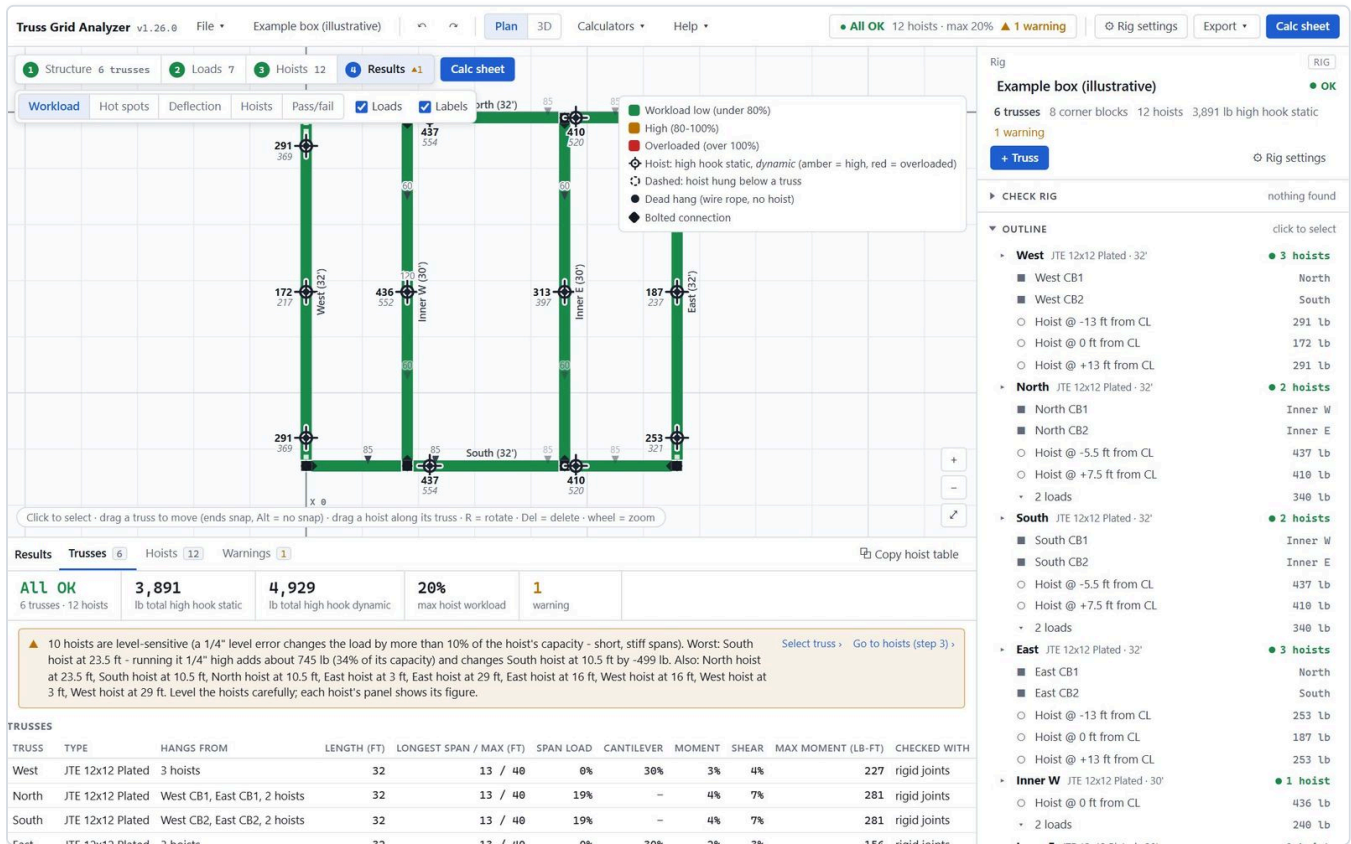

Step 4 with the example box.

12.1 The Summary

Across the top of the results:

- **All OK** or **n to check** - the number of hoists and trusses that are not OK (overloaded, too long, slack, unstable or not solved);
- the **total high hook static** and **total high hook dynamic** load - what the whole rig puts on the structure (hoists to the structure only);
- the **maximum hoist workload**;
- the number of **warnings**.

Below it, the first warning is repeated as a banner, with links: **All n warnings**, **Select truss** › and, for hoist problems, **Go to hoists (step 3)** ›.

12.2 Trusses Tab

Results

Trusses 6

Hoists 12

Warnings 1

Copy hoist table

All OK

6 trusses - 12 hoists

3,891

lb total high hook static

4,929

lb total high hook dynamic

20%

max hoist workload

1

warning

▲ 10 hoists are level-sensitive (a 1/4" level error changes the load by more than 10% of the hoist's capacity - short, stiff spans). Worst: South hoist at 23.5 ft - running it 1/4" high adds about 745 lb (34% of its capacity) and changes South hoist at 10.5 ft by -499 lb. Also: North hoist at 23.5 ft, South hoist at 10.5 ft, North hoist at 10.5 ft, East hoist at 3 ft, East hoist at 29 ft, East hoist at 16 ft, West hoist at 16 ft, West hoist at 3 ft, West hoist at 29 ft. Level the hoists carefully; each hoist's panel shows its figure.

Select truss >

Go to hoists (step 3) >

TRUSSES

TRUSS	TYPE	HANGS FROM	LENGTH (FT)	LONGEST SPAN / MAX (FT)	SPAN LOAD	CANTILEVER	MOMENT	SHEAR	MAX MOMENT (LB-FT)	CHECKED WITH
West	JTE 12x12 Plated	3 hoists	32	13 / 40	0%	30%	3%	4%	227	rigid joints
North	JTE 12x12 Plated	West CB1, East CB1, 2 hoists	32	13 / 40	19%	-	4%	7%	281	rigid joints
South	JTE 12x12 Plated	West CB2, East CB2, 2 hoists	32	13 / 40	19%	-	4%	7%	281	rigid joints
East	JTE 12x12 Plated	2 hoists	32	13 / 40	0%	30%	3%	3%	155	rigid joints

The Trusses tab.

Column	Meaning
Hangs from	What holds the truss up.
Longest span / max	Its longest span, and the longest the table allows (red if too long).
Span load	The worst span: its point loads as a share of the table capacity for that span (less any UDL).
Cantilever	The worst cantilever: its load against the table, or its length against a quarter of the maximum span, whichever is higher.
Moment, Shear	The largest bending moment and shear against the allowable estimated from the tables.
Max moment	The largest bending moment, lb-ft (kg·m).
Checked with	Which joint model of the whole-rig analysis loads this truss hardest (the one its checks use).
Status	OK, Too long, Overloaded, Too long and overloaded, Not solved.

Percentages of 80% or more are amber, over 100% red. The warnings list follows the table. Click a row to select the truss.

12.3 Hoists Tab

Results

Trusses 6

Hoists 12

Warnings 1

Copy hoist table

All OK

6 trusses - 12 hoists

3,891

lb total high hook static

4,929

lb total high hook dynamic

20%

max hoist workload

1

warning

▲ 10 hoists are level-sensitive (a 1/4" level error changes the load by more than 10% of the hoist's capacity - short, stiff spans). Worst: South hoist at 23.5 ft - running it 1/4" high adds about 745 lb (34% of its capacity) and changes South hoist at 10.5 ft by -499 lb. Also: North hoist at 23.5 ft, South hoist at 10.5 ft, North hoist at 10.5 ft, East hoist at 3 ft, East hoist at 29 ft, East hoist at 16 ft, West hoist at 16 ft, West hoist at 3 ft, West hoist at 29 ft. Level the hoists carefully; each hoist's panel shows its figure.

Select truss >

Go to hoists (step 3) >

TRUSS	AT (FT)	HOIST	CHAIN (FT)	HOIST & CHAIN (LB)	HINGED JOINTS* (LB)	SEMI-RIGID* (LB)	RIGID JOINTS* (LB)	HIGH HOOK STATIC (LB)	DYN. FACTOR	HIGH H
Inner W	15	Lodestar - Model L 1 Ton	20	132.8	435.9	432.7 - 434	432.5	435.9	1.267	
Inner E	15	Lodestar - Model L 1 Ton	20	132.8	313.1	310.3 - 311.3	310.2	313.1	1.267	
North	10.5	Lodestar - Model L 1 Ton	20	132.8	435.8	436.6 - 437.2	437.2	437.2	1.267	
North	23.5	Lodestar - Model L 1 Ton	20	132.8	409.2	409.9 - 410.2	410.3	410.3	1.267	
South	10.5	Lodestar - Model L 1 Ton	20	132.8	435.8	436.6 - 437.2	437.2	437.2	1.267	

The Hoists tab.


One row per hoist: truss, position (from the truss's start), model, chain, **Hoist & Chain** weight, the high hook static load from each joint model (**Hinged joints***, **Semi-rigid***, **Rigid joints***), the **High hook static** used (the largest, in bold), the dynamic factor, the **High hook dynamic** load, the capacity, the workload and the status. The note under the table explains the joint models. [Copy hoist table](#) copies the table for Excel (see Files, Export and Sharing).

12.4 Warnings Tab

Every warning, then the **notes** (smaller, grey: things to be aware of that are not problems, such as parts the app cannot check). Click a warning to select the truss it is about. See Warnings and Messages for what each one means and what to do.

12.5 A Rig with Problems

Here the example box has had a 1,400 lb video wall added to Inner W, 5 ft past its hoist, and a spot light entered with no weight:

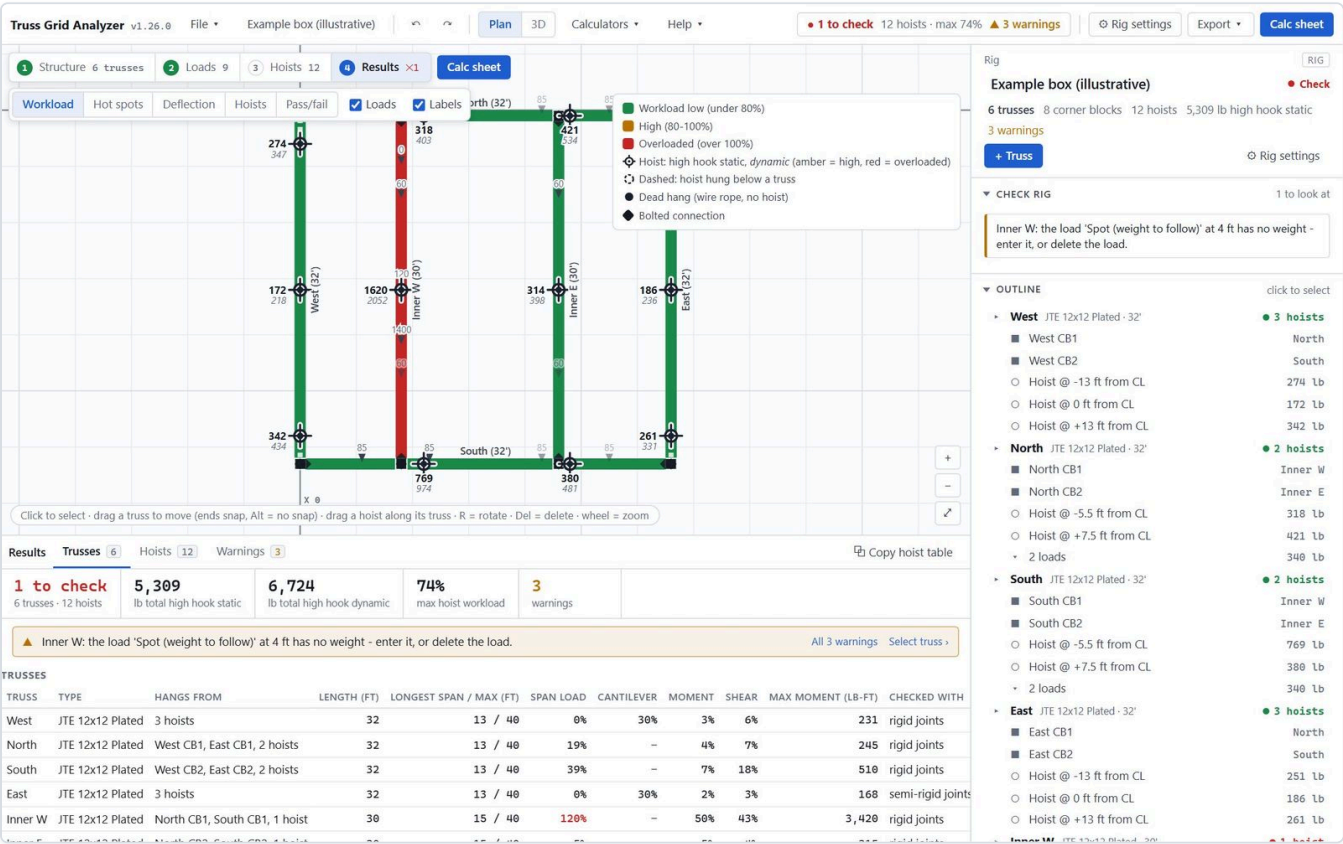

Inner W is red on the plan; the status reads "1 to check" and "3 warnings"; Check rig lists the load with no weight.

Results

Trusses6

Hoists12

Warnings3

Copy hoist table

1 to check

6 trusses · 12 hoists

5,309

lb total high hook static

6,724

lb total high hook dynamic

74%

max hoist workload

3

warnings

▲ Inner W: the load 'Spot (weight to follow)' at 4 ft has no weight - enter it, or delete the load.

[All 3 warnings](#)
[Select truss >](#)

TRUSSES

TRUSS	TYPE	HANGS FROM	LENGTH (FT)	LONGEST SPAN / MAX (FT)	SPAN LOAD	CANTILEVER	MOMENT	SHEAR	MAX MOMENT (LB-FT)	CHECKED WITH
West	JTE 12x12 Plated	3 hoists	32	13 / 40	0%	30%	3%	6%	231	rigid joints
North	JTE 12x12 Plated	West CB1, East CB1, 2 hoists	32	13 / 40	19%	–	4%	7%	245	rigid joints
South	JTE 12x12 Plated	West CB2, East CB2, 2 hoists	32	13 / 40	39%	–	7%	18%	510	rigid joints
East	JTE 12x12 Plated	3 hoists	32	13 / 40	0%	30%	2%	3%	168	semi-rigid joints
Inner W	JTE 12x12 Plated	North CB1, South CB1, 1 hoist	30	15 / 40	120%	–	50%	43%	3,420	rigid joints

The Trusses tab: Inner W's span load is 120% (red).

Results	Trusses 6	Hoists 12	Warnings 3	Copy hoist table		
1 to check	5,309	6,724	74%	3		
6 trusses · 12 hoists	lb total high hook static	lb total high hook dynamic	max hoist workload	warnings		
▲ Inner W: the load 'Spot (weight to follow)' at 4 ft has no weight - enter it, or delete the load.						
All 3 warnings Select truss >						
Inner W: the load 'Spot (weight to follow)' at 4 ft has no weight - enter it, or delete the load.						
Inner W: Span 2 - Overloaded (rigid joints)						
10 hoists are level-sensitive (a 1/4" level error changes the load by more than 10% of the hoist's capacity - short, stiff spans). Worst: North hoist at 23.5 ft - running it 1/4" high adds about 745 lb (34% of its capacity) and changes North hoist at 10.5 ft by -499 lb. Also: South hoist at 23.5 ft, North hoist at 10.5 ft, South hoist at 10.5 ft, East hoist at 3 ft, East hoist at 29 ft, East hoist at 16 ft, West hoist at 16 ft, West hoist at 3 ft, West hoist at 29 ft. Level the hoists carefully; each hoist's panel shows its figure.						

The Warnings tab explains each problem.

12.6 A Truss's Checks Section

Select a truss and open **Checks** in its panel to see exactly why it passes or fails. From the top:

1. **Elevation** - the truss from the side. Each span and cantilever is labelled with its length and coloured (green OK, red failing, with the failure named). Loads are triangles with their weights (lighter: a mirrored twin; a different colour: a load passed in from a bolted truss). Supports are triangles underneath with their reaction, what they are (*hoist* or *bolted to* ...) and their position.
2. **Where it works hardest** - a strip shaded by local workload (green through amber to red), with the peak marked and named.
3. **Reactions** - arrows to scale at each support. At hoists this is the low hook load; at bolts the force passed to the carrier. A red downward arrow means the truss is pushing up there.
4. **Shear and Moment** diagrams - with the estimated allowable as dashed lines and the maximum against it.
5. **Deflection** - the deflected shape, exaggerated, with each span's sag in inches and as span/ratio, and the limit used (the maker's, with a link to the data sheet, or the rig default).
6. **Bars** for Span load, Cantilever, Moment, Shear and Deflection.
7. **Chips**: the total load on the truss, the repetitive-use derate used, and *Checked with* ... joint model.



The Checks section of the overloaded truss.

12.7 Check Rig

Click an empty part of the plan to show the rig panel. Its **Check rig** section lists input mistakes the calculation would otherwise take at face value:

- a load with no weight;
- two hoists at the same point (closer than 2") - is one a duplicate?;
- a bolted assembly with fewer than 3 hoists, or with all its hoists in one line (it could tip about that line);
- bolted ends that do not meet on the plan;
- trusses that cross on the plan with no joint between them (a note: they may be at different heights);
- a hoist with no model.

Rig
RIG

Example box (illustrative)
● Check

6 trusses 8 corner blocks 12 hoists 5,309 lb high hook static
3 warnings

+ Truss
Rig settings

▼ CHECK RIG
1 to look at

Inner W: the load 'Spot (weight to follow)' at 4 ft has no weight - enter it, or delete the load.

▼ OUTLINE
click to select

West JTE 12x12 Plated · 32'
3 hoists

West CB1 North

West CB2 South

Hoist @ -13 ft from CL 274 lb

Hoist @ 0 ft from CL 172 lb

Hoist @ +13 ft from CL 342 lb

North JTE 12x12 Plated · 32'
2 hoists

North CB1 Inner W

North CB2 Inner E

Hoist @ -5.5 ft from CL 318 lb

Hoist @ +7.5 ft from CL 421 lb

2 loads 340 lb

South JTE 12x12 Plated · 32'
2 hoists

South CB1 Inner W

South CB2 Inner E

Hoist @ -5.5 ft from CL 769 lb

Hoist @ +7.5 ft from CL 380 lb

2 loads 340 lb

East JTE 12x12 Plated · 32'
3 hoists

East CB1 North

East CB2 South

Hoist @ -13 ft from CL 251 lb

Hoist @ 0 ft from CL 186 lb

Hoist @ +13 ft from CL 261 lb

Inner W JTE 12x12 Plated · 20'
1 hoist

The rig panel with one Check rig item.

Click an item to select what it is about. If nothing is found it says so. Nothing in Check rig changes a result.

User Guide - written for Truss Grid Analyzer v1.26.0

Page 51 of 81

12.8 What to Do When Something Fails

Problem	Things to try
A hoist is Overloaded	Add a hoist nearby, move hoists to share the load, move or lighten loads, use a bigger hoist. Check the hoist's <i>Where the load comes from</i> table.
A span is Overloaded	Add a hoist in the span (shorter span, more capacity), move point loads toward supports, use a stronger truss.
A span or cantilever is Too long	Add a support or shorten the overhang ($\text{cantilever} \leq \text{max span} \div 4$).
Moment or shear over	Usually a heavy load right next to a support, or bending over a support from a loaded neighbouring span: move the load or add a hoist.
Deflection over	Shorten the span or lighten it.
A hoist is Slack	It would be pushed up - usually next to a heavy cantilever or span. Move it, or move the load; the other hoists carry more meanwhile.
Unstable	The truss or assembly has too few supports or they are in a line. Add hoists.
Not solved	It has no supports, or is bolted to something missing, or is part of a loop. See the warning.


13 Plan and 3D Views

13.1 Moving Around the Plan

To	Do this
Zoom	Mouse wheel (zooms around the pointer), or the + / - buttons at the bottom right.
Pan	Drag an empty part of the plan.
See the whole rig	 (bottom right) or press F .
Select	Click a truss, corner block or hoist. Click empty space to select the rig. The selected item glows.
Move a free truss	Drag it (half-foot steps; ends snap to other ends within 1.5 ft; hold Alt for no snapping). Bolted trusses and blocks cannot be dragged.
Rotate a free truss	R - 90° anticlockwise about its start.
Move a hoist	Drag it along its truss (1" / 2 cm steps).
Delete	Delete removes the selected load, hoist or truss (a truss asks first).
Get details	Hover over a truss, corner block, hoist or bolt for a tooltip (name, length, what it hangs from; block type, weight and ways used; hoist load, capacity and status).

The hint bar at the bottom of the plan is a reminder of these.

13.2 What the Plan Shows

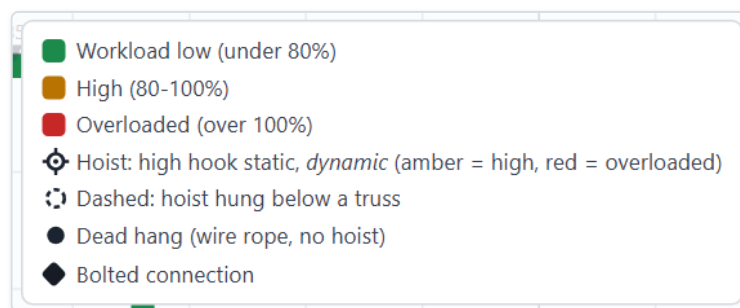

The key (legend) in Workload mode.

- **Trusses** - bars to scale, coloured by the current colour mode, each labelled with its name and length (turned so it never reads upside down).
- **Corner blocks** - dark squares (red if more trusses are bolted to one than it has ways).
- **Bolted connections** - small diamonds; red when the bolted parts do not match (different truss families).
- **Hoists** - a ring with cross-hairs, labelled with the **high hook static** load and, in italics under it, the **high hook dynamic** load. The ring is amber when the hoist is high (or its dynamic load is over capacity) and red when it is overloaded or slack. A **dashed** ring is a hoist hung below a truss; a **filled dot** is a dead hang.

- **Loads** - small triangles with their weight (lighter for a mirrored twin). Untick **Loads** in the view toolbar to hide them.
- **Labels** - untick **Labels** to hide names and numbers for a cleaner picture.
- **X 0 / Y 0** - the origin lines.

13.3 Colour Modes

The buttons in the view toolbar choose what the truss colours mean. The key (bottom right of the plan) changes with them.

Mode	Colours each truss by...
Workload	Its highest workload - of its span, cantilever, moment, shear and deflection checks and the hoists on it: green under 80%, amber 80-100%, red over 100%. The default.
Hot spots	Local workload <i>along its length</i> , from green through amber to red, peaking under the loads that work it hardest. A glow marks the peak of any truss at 80% or more. Use it to find where on a truss the problem is.
Deflection	Its worst span's sag against its limit (green under 80%; amber from 80% or past the rig default; red past the maker's published limit; grey if it has no span to check). The deflected shape is drawn exaggerated beside each truss - a sag is drawn to its right-hand side. Hover a shape for its largest sag.
Hoists	The workload of the busiest hoist on it (grey: no hoists).
Pass/fail	Green if everything passes, red if anything fails.



Hot spots.



Deflection: shapes drawn beside the trusses.




Hoists.



Pass/fail.

13.4 The 3D View

Click **3D** in the top bar to see the rig in 3D, with the hoists' chains rising to their hook points. It is for looking and presenting: you edit in the plan and the panels. Colour modes work the same (in Deflection mode the shapes are drawn above the trusses).

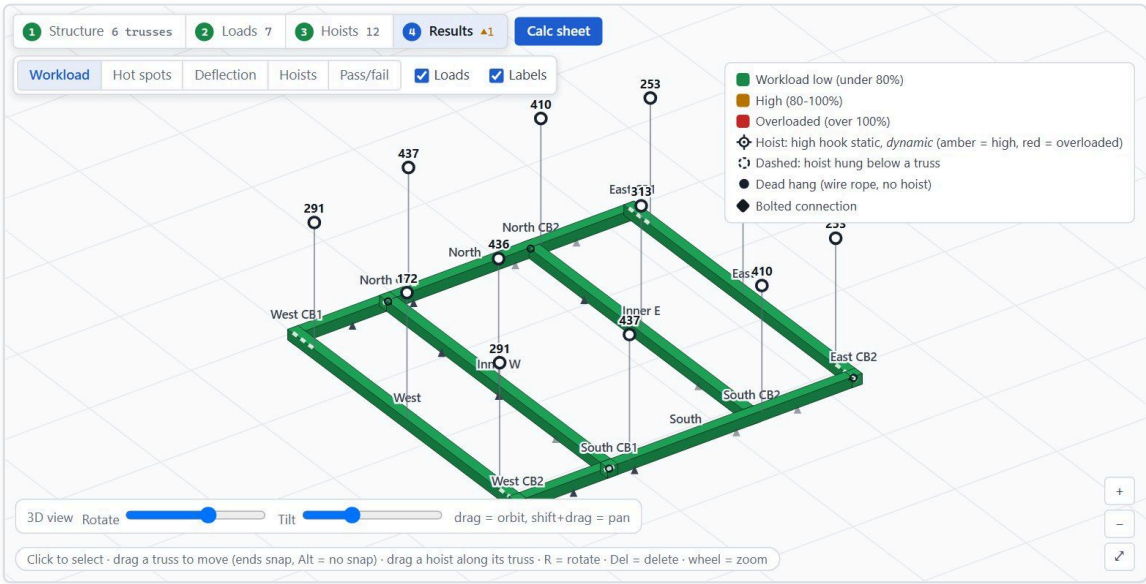

The 3D view.

To	Do this
Orbit	Drag an empty area, or use the Rotate and Tilt sliders.
Pan	Shift +drag, or right-drag.
Zoom	Mouse wheel.  or F fits the rig. (The + / – buttons zoom the plan only.)
Select	Click a truss or hoist; the side panel shows it as usual.

A truss's **Height** (Advanced section) raises it in 3D only, to separate trusses that are at different trims.

14 Rig Settings

Click  **Rig settings** (top right, or in the rig panel) to open the settings for the whole rig. They are saved with the rig and printed on the calc sheet. Click < **Back to the rig** or press  to return.

Back to the rig
Rig settings
for Example box (illustrative) - saved with the rig and printed on the calc sheet

HOIST LOADS

How the high hook loads on the hoists are worked out.

Default dynamic factor

1.25

Used when a hoist has no speed listed (a custom hoist). Hoists with a speed use speed in fpm / 60 + 1 (16 fpm = 4.9 m/min = 1.267). Any hoist can also be given its own factor.

Add % to hoist loads

0

An extra percentage on the load and truss weight at every hoist (unknown cable weight, a safety margin), as the original's 'Add Percentage'. Added before the hoist, chain and hardware weight; the truss checks are not changed.

Hoist stiffness (lb/in)

rigid

How much a hoist and its chain stretch under load (for example 1500 lb/in for a 1-ton chain hoist on a long drop - measure or ask the maker). Blank = rigid hoists, the usual assumption. Springy hoists share load more evenly and are much less level-sensitive.

Out-of-level tolerance ± (in)

off

How far any hoist may end up off its level, each on its own (e.g. 1/4" = 0.25). Each hoist's check then carries the worst it could see: the sum of what every hoist alone running that much high or low does to it (from the whole-rig analysis). Short, stiff spans are very level-sensitive. Blank = off (hoists exactly level). For a hoist trimmed on purpose, use its own Level offset.

Load cells read

high hook static (cell above the hoist)

Where the load cells hang, for the Measured column of the hoists: readings are compared with that calculated load, and each assembly's total is flagged when it is more than 5% off.

Hoists hung below a truss

☒ The carrier's hoists also take the hung hoist's dynamic load (on by default)

A hoist hung below a truss puts its high hook load on that truss (the carrier). The carrier truss is always checked with the hung hoist's high hook dynamic load. On the hoists holding the carrier up take it too. Off: they take the hung hoist's static load (their own dynamic factor still applies).

Dead hang rope design factor

10:1 (default)

A dead hang's WLL is its rope's minimum breaking strength divided by this, capped by the assembly WLL typed on the dead hang. Dead hangs are static (dynamic factor 1.0 unless typed).

ALLOWANCES

Weight the drawing doesn't show: cable along the trusses, and a factor on each kind of load (e.g. 1.1 on lighting for clamps, safeties and gel frames not listed). They load the trusses and hoists like any other weight.

Cable allowance (lb/ft)

none

Cable weight per length on every truss (added to its UDL). A truss can set its own in its panel (0 = none).

Load factors

Lighting

Audio

Video

Scenic

Rigging hardware

Other / not set

1

1

1

1

1

1

Each load's weight is multiplied by its category's factor (set the category on the load). 1 = as typed.

TRUSS CHECKS

The span, cantilever, moment and shear checks against the manufacturers' tables.

Repetitive-use factor

per truss data (0.85 unless the table includes it; L

ANSI repetitive-use rule: table capacities are multiplied by 0.85 unless the data already includes it.

Truss self weight

☒ Count truss self weight in cantilever and moment/shear checks (on by default)

On: the truss's self weight is added to the load on each cantilever (as the original Excel does), and the moment/shear check compares moments and shears that include self weight against table capacities with the self weight added back (CPL x L / 4 + w x L^2 / 8, CPL / 2 + w x L / 2). Off: self weight is left out of both.

DEFLECTION

Each span's sag from the whole-rig analysis, measured from the line between its two supports. Past a maker's published limit the truss is Overloaded (their allowable loads are set by that limit); past this default it is a warning.

Limit where the maker publishes none

span / 160

Default L/160. The makers' own published limits always win (each name opens the maker's data sheet):

L/100: Tomcat Light Duty 12x12 Plated, Tomcat Light Duty 12x12 Spigoted, Tomcat Light Duty 12x12 Guardian, Tomcat Light Duty 12x12 Guardian+, Tomcat Medium Duty 20.5x20.5 Plated, Tomcat Medium Duty 20.5 Triangle Plated, Tomcat Medium Duty 20.5 Triangle Spigoted

L/160: JTE General Purpose 15x15, JTE General Purpose 12 Triangle, JTE General Purpose 20.5 Triangle, JTE Galaxy 240, JTE Galaxy 300

PLAN

Where the rig sits on the plan. Moving it changes no result.

Center the rig on 0,0

Center on 0,0

Moves the whole rig so the middle of its footprint is at X 0, Y 0. Bolted trusses and corner blocks move with the trusses they hang from, so the rig keeps its shape.

DISPLAY AND PAPER

Only what is shown and typed changes: the rig and every result stay the same.

Theme

Light

Dark suits a dark venue; light is easier in daylight and closer to the printed calc sheet. Kept on this computer, not in the rig file.

Units

imperial (ft, lb)

Feet and pounds, or metres and kilograms (moments in kg-m, hoist speed in m/min, sizes in mm).

Show lengths as

decimal feet (4.1667)

You can type either way in any length box.

Calc sheet paper

Letter (8.5 x 11 in)

Paper size the calculation sheet is laid out and printed on.

The Rig settings page.

User Guide - written for Truss Grid Analyzer v1.26.0

Page 57 of 81

14.1 Hoist Loads

Setting	What it does	Default
Default dynamic factor	The dynamic factor for hoists with no listed speed (custom hoists). Hoists with a speed use speed in fpm $\div$ 60 + 1; any hoist can have its own.	1.25
Add % to hoist loads	An extra percentage on the load and truss weight at every hoist - for unknown cable weight or a margin (the original workbook's "Add Percentage"). Added before the hoist, chain and hardware weight. It does not change the truss checks.	0 (off)
Hoist stiffness	How much a hoist and its chain stretch under load, lb/in (kg/mm) - e.g. 1500 lb/in for a 1-ton hoist on a long drop; measure it or ask the maker. Blank = rigid hoists, the usual assumption. Springy hoists share load more evenly and are much less level-sensitive.	rigid
Out-of-level tolerance $\pm$	How far any hoist may end up off level, in inches (mm). Each hoist's check then includes the worst it could see. See Hoist Levels.	off
Load cells read	<i>high hook static</i> (cells above the hoists) or <i>low hook</i> (cells between hoist and truss) - what measured readings are compared with.	high hook
Hoists hung below a truss	On: the hoists holding a carrier truss also take a hung hoist's <i>dynamic</i> load. Off: they take its static load (with their own dynamic factor). The carrier truss itself is always checked with the dynamic load.	on
Dead hang rope design factor	7:1, 8:1 or 10:1. A dead hang's WLL = rope breaking strength $\div$ this.	10:1

14.2 Allowances

Weight the drawing does not show. Allowances load the trusses and hoists like any other weight.

Setting	What it does
Cable allowance	Cable weight per foot (lb/ft, kg/m) on every truss, added to its UDL. A truss can have its own in its panel (0 = none).
Load factors	A multiplier for each load category - Lighting, Audio, Video, Scenic, Rigging hardware, Other / not set. For example 1.1 on Lighting to allow for clamps, safeties and colour frames not listed. Set each load's category in its panel or the Loads grid. The loads keep the weights you typed; the calculation uses the factored weights.

14.3 Truss Checks

Setting	What it does	Default
Repetitive-use factor	The ANSI repetitive-use rule multiplies table capacities by 0.85 unless the maker's data already includes it. <i>per truss data</i> follows each truss's data (the generic Universal trusses use 0.75); or force <i>always 0.85</i> or <i>none (1.0)</i> .	per truss data
Truss self weight	On: each truss's own weight is added to the load on each cantilever, and included in the moment/shear check (and added back into the allowables, as the tables are loads on top of the truss's weight). Off: left out of both.	on

14.4 Deflection

Limit where the maker publishes none - $\text{span} \div \text{this number}$ (default 160, i.e. L/160). Past this default a span gets a warning. Where a maker publishes a limit (Tomcat L/100; some JTE sheets L/160) that limit always applies, and past it the truss is Overloaded (the maker's allowable loads are set by it). The list under the setting names every truss with a published limit; each name opens the maker's data sheet.

14.5 Plan

Center on 0,0 moves the whole rig so the middle of its footprint is at X 0, Y 0. Bolted trusses and corner blocks move with the trusses they hang from. No result changes, and Undo moves it back.

14.6 Display and Paper

Setting	What it does
Theme	Dark, Light, or Follow the computer's setting. Kept on this computer, not in the rig file.
Units	imperial (ft, lb) or metric (m, kg; moments in kg-m, hoist speed in m/min, sizes in mm). Changes only what is shown and typed.
Show lengths as	(imperial) decimal feet (4.1667) or feet-inches (4'-2"). You can type either way in any box.
Calc sheet paper	Letter (8.5 × 11 in) or A4 (210 × 297 mm). Until you choose, Letter for imperial and A4 for metric.

15 The Calculation Sheet

The **calc sheet** is a printable record of the rig's calculation, written for independent review of the software's work: every input, formula, table look-up and result is set out so it can be checked by hand or in another program. It shows only what the app has calculated; opening it changes nothing.

15.1 Opening, Filling In and Printing

- 1 Click **Calc sheet** (top right, or the add button in step 4).
- 2 Fill in the boxes along the top: **Project / event**, **Venue / location**, **Prepared by**, **Prepared for** and **Notes**. They are printed on the sheet and saved with the rig.
- 3 Click **Print / save PDF**. In your browser's print dialog, choose a printer, or *Save as PDF / Microsoft Print to PDF* to make a PDF file. Choose the same paper size as the sheet (Rig settings > **Calc sheet paper**), and turn off the browser's own *Headers and footers* - the sheet prints its own.
- 4 Click **Close** or press **Esc** to go back to the rig. (While the sheet is open, the rig cannot be edited.)

Calculation sheet

Example show

Example venue

A. Rigger

Prepared for

Notes

Print / save PDF

Close

In the print dialog, turn off "Headers and footers" - the sheet prints its own.

TRUSS RIG CALCULATION SHEET

Example box (illustrative)

1 warning

see section 9

Project / event	Example show	Venue / location	Example venue
Calculated	2026-09-24 21:27	Software	Truss Grid Analyzer v1.26.0
Input fingerprint	9B8BAED5	Units	imperial (ft, lb, lb-ft)
Prepared by	A. Rigger	Prepared for	
Notes			

Estimate only - not an engineering certification. This rig hangs from 12 hoists, so it is an indeterminate structure as defined in ANSI E1.6-3-2019 (Selection and Use of Serially Manufactured Chain Hoists in the Entertainment Industry), section 2.11: the load on each hoist depends on the stiffness of the trusses, the rigging and the structure above as well as on where the loads and hoists are, and the standard says it is not practical to calculate with accuracy the dynamic load on any one hoist due to load shifting. The figures on this sheet are estimates from a simplified model and the manufacturers' published load tables; real hoist loads will differ with hoist level, chain length, connection stiffness and load shifting. E1.6-3 accepts a load calculation as a way to reduce the risk of overload only when every weight is known and accounted for, the calculation method is accurate, and any load shifting will not cause an overload (7.1), and warns that stiff indeterminate structures can shift load very quickly (6.2.12). A competent person must assess the risks before any lifting operation, and a qualified person where the hazards call for one (E1.6-3, 5.1 and 5.2). This sheet does not certify compliance with ANSI E1.6-3, ANSI E1.2 or any other standard.

1 Summary of results

Method (primary result)	Whole-rig analysis; every check uses the worst of the joint models hinged joints, semi-rigid joints (1 E/L), semi-rigid joints (4 E/L), semi-rigid joints (16 E/L), rigid joints
Trusses / corner blocks / hoists	6 / 8 / 12
Total weight carried by the rig	2,286 lb (loads, truss and block self weight, UDL, hardware at bolted connections)
Total high hook load, static	3,891.5 lb (incl. hoists, chain and hoist hardware)
Total high hook load, dynamic	4,929.2 lb
Highest hoist workload	19.9% - H5 on South
Highest truss workload	19% - South, Span 2
Warnings	1 (section 9)

2 Basis of calculation

- Trusses are beams along their centerline, carrying point loads, their self weight and any UDL spread over the whole length. Lengths and positions are measured from the start of each truss line (corner blocks included).
- Hoist loads, the forces in bolted connections and the loads every check sees come from a whole-rig analysis: trusses are Timoshenko beams (bending EI, shear GA, torsion GJ) meeting at the corner blocks; hoists are rigid supports at one level. The corner-block joints are solved hinged (vertical force only), semi-rigid (rotational springs of 1, 4 and 16 x EI/L of the lighter truss) and rigid, and each hoist and each truss is checked with the joint model that loads it hardest.
- A chain can only pull: a hoist whose reaction comes out negative is taken out (Slack) and the rig solved again. A truss left with one support point is unstable.
- Capacities come from the manufacturer's (or the Truss Load Analyzer workbook's) span tables, reading the row at the span rounded UP to the next whole foot (whole metre for native metric tables), multiplied by the repetitive-use factor k.

Check	Formula
E1 Span	$C = CPl \times k \times f$

The top of the calc sheet: the title block and the first sections.

15.2 What Is on It

Part	Contents
Title block	Rig name, project, venue, the date and time calculated, the software version, units, notes, and an input fingerprint - a short code that changes whenever any input changes. Two sheets with the same fingerprint describe the same rig. A box at the top right shows the number of warnings or failures.
Estimate notice	Under the title block: the sheet is an estimate, not an engineering certification. On an indeterminate rig (one whose hoist loads depend on the stiffness of the trusses and rigging, such as most grids and boxes) it cites ANSI E1.6-3-2019 section 2.11, with 7.1, 6.2.12, 5.1 and 5.2, and says the sheet certifies no standard.
1 Summary of results	The method, counts, total weight carried, total high hook static and dynamic loads, the highest hoist and truss workloads, and the number of warnings.
2 Basis of calculation	The assumptions, and every formula used (F1 span, F2 cantilever, F3 moment and shear, ...) written with real fractions and symbols.
3 Plan	A plan drawn to scale with the hoists numbered H1, H2... (dead hangs DH1...).
4 Hoists	Each hoist's reaction from every joint model and its static and dynamic load worked out part by part.
5 Equilibrium	Self-checks: the loads going in balance the reactions coming out.
6 Trusses	For each truss: its data, the loads it carries (including from bolted trusses), reactions and balance, the diagrams, each span and cantilever check with the table row read and the arithmetic written out, the moment and shear check, and the deflection drawing (the exaggerated deflected shape) with the deflection check, formula F7: each span's sag against its limit L/n , where it is, L/d , workload and status, plus the cantilever tips (reported only).
7 Bolted connections and corner blocks	The forces through the bolts, and each corner block.
8 How to check this independently	Guidance for reviewing the results independently.
9 Warnings and notes	Everything from the Warnings tab.
Sign-off	Prepared by and Prepared for (also shown in the title block).
A Hoist schedule	The last page, for the crew: the plan and one row per hoist - truss, position, hoist, chain, high hook static and dynamic, capacity, workload and a <i>Checked</i> column to tick off as each hoist is hung.

Every printed page has a footer with the rig name, the app version, the fingerprint, and *Page n of m*.

Calculation sheet

Example show

Example venue

A. Rigger

Prepared for

Notes

In the print dialog, turn off "Headers and footers" - the sheet prints its own.

Print / save PDF

Close

33'

29'

10 ft

Plan, to scale: dimensions between truss centerlines. Positions in the tables are measured from each truss's start (0).

4 Hoists

4a. Low hook load R at each hoist (the reaction: what the rig hangs on the hook) from each joint model; the governing value (largest) is used below.

Hoist	Truss	At (ft)	Hoist model	Hinged	Semi 1 E/L	Semi 4 E/L	Semi 16 E/L	Rigid	Low hook R used	From
H1	Inner W	15	Lodestar - Model L 1 Ton	303.1	301.2	300.3	299.9	299.7	303.1	Hinged
H2	Inner E	15	Lodestar - Model L 1 Ton	180.3	178.5	177.8	177.5	177.4	180.3	Hinged
H3	North	10.5	Lodestar - Model L 1 Ton	303	303.8	304.2	304.4	304.4	304.4	Rigid
H4	North	23.5	Lodestar - Model L 1 Ton	276.4	277.1	277.3	277.4	277.5	277.5	Rigid
H5	South	10.5	Lodestar - Model L 1 Ton	303	303.8	304.2	304.4	304.4	304.4	Rigid
H6	South	23.5	Lodestar - Model L 1 Ton	276.4	277.1	277.3	277.4	277.5	277.5	Rigid
H7	West	3	Lodestar - Model L 1 Ton	158.3	157.3	157	156.8	156.7	158.3	Hinged
H8	West	16	Lodestar - Model L 1 Ton	35.1	37.4	38.4	38.8	38.9	38.9	Rigid
H9	West	29	Lodestar - Model L 1 Ton	158.3	157.3	157	156.8	156.7	158.3	Hinged
H10	East	3	Lodestar - Model L 1 Ton	120.5	119.7	119.4	119.2	119.2	120.5	Hinged
H11	East	16	Lodestar - Model L 1 Ton	51.3	53.1	53.9	54.2	54.3	54.3	Rigid

Further into the sheet: checks written out as formula, numbers and result.

Calculation sheet

Example show

Example venue

A. Rigger

Prepared for

Notes

In the print dialog, turn off "Headers and footers" - the sheet prints its own.

Print / save PDF

Close

A Hoist schedule

Example box (illustrative) - Example show - Example venue. Calculated 2026-09-24 21:27, Truss Grid Analyzer v1.26.0, input fingerprint 9888AED5. Estimates - see the notice on page 1 and the warnings in section 9.

33'

29'

10 ft

Plan, to scale: dimensions between truss centerlines. Positions in the tables are measured from each truss's start (0).

Hoist	Truss	At (ft)	Hoist model	Chain (ft)	High hook (lb)	Dynamic (lb)	Capacity	Workload	Status	Checked
H1	Inner W	15	Lodestar - Model L 1 Ton	20	436	552	2,200	19.8%	OK	
H2	Inner E	15	Lodestar - Model L 1 Ton	20	313	397	2,200	14.2%	OK	
H3	North	10.5	Lodestar - Model L 1 Ton	20	437	554	2,200	19.9%	OK	
H4	North	23.5	Lodestar - Model L 1 Ton	20	410	520	2,200	18.6%	OK	
H5	South	10.5	Lodestar - Model L 1 Ton	20	437	554	2,200	19.9%	OK	
H6	South	23.5	Lodestar - Model L 1 Ton	20	410	520	2,200	18.6%	OK	
H7	West	3	Lodestar - Model L 1 Ton	20	291	369	2,200	13.2%	OK	
H8	West	16	Lodestar - Model L 1 Ton	20	172	217	2,200	7.8%	OK	
H9	West	29	Lodestar - Model L 1 Ton	20	291	369	2,200	13.2%	OK	
H10	East	3	Lodestar - Model L 1 Ton	20	253	321	2,200	11.5%	OK	
H11	East	16	Lodestar - Model L 1 Ton	20	187	237	2,200	8.5%	OK	
H12	East	29	Lodestar - Model L 1 Ton	20	253	321	2,200	11.5%	OK	

At: from the start (0) of the truss, as on the plan. High hook = low hook load + hoist, chain and hardware (section 4b).

The hoist schedule on the last page.

16 Files, Export and Sharing

16.1 Saving a Rig as a File

File > Save downloads the rig as `rig name.rig.json` to your browser's download folder (your browser may ask where to save it). The file contains the whole rig - trusses, blocks, loads, hoists, rig settings, calc sheet fields - plus the custom trusses, corner blocks, hoists and fixtures you have added, and the version of the app that saved it. It is a small text file: back it up, email it, keep it with the show paperwork.

16.2 Opening a Rig File

File > Open... and choose a `.rig.json` file. It replaces the rig on screen (Undo brings that back until you close or reload the page; save it first to keep a copy). If the file cannot be read, the app says why and leaves the current rig alone.

Custom Trusses, Hoists and Fixtures in the File

Opening a file *adds* the custom trusses, corner blocks, hoists and fixtures saved in it to the ones already in this browser; nothing of yours is removed. An entry that is already here is reused. If the file's entry has the same id as a different entry here, it is given a new id and the opened rig is updated to match.

Files from other versions

Rig files record the version that made them. A newer version of the app opens older files. Results may differ between versions where the calculation has changed - the version history (**File > About**) says which versions changed results. Opening a file made by a *newer* version in an older one may not work.

16.3 Sharing a Rig

Send the `.rig.json` file. The other person opens it with **File > Open...** in their copy of the app. For people who do not have the app, send the calc sheet as a PDF, a picture of the plan, or the hoist table.

16.4 The Export Menu

Item	What it does
Copy hoist table	Copies every hoist's loads to the clipboard as CSV text. Paste into Excel or Google Sheets. Columns: Truss, At, Low hook, Hoist & Chain, Added %, the high hook load from each joint model (hinged, semi-rigid min and max, rigid), High hook static, Governing (joint model), Dynamic factor, High hook dynamic, Capacity, Status. The same button is at the top of step 4.
Save view as PNG	Downloads a picture of the plan (or the 3D view, if showing) at twice screen resolution, named after the rig. Set up the colour mode, labels and zoom first.
Export whole-rig model	Downloads the rig's whole-rig analysis model with the app's results (<code>.grillage.json</code>), for an engineer to cross-check in PyNite (the 3D frame engine behind CalcForge) using the project's <code>tools/pynite_check.py</code> . Most users will not need this.
Print screen	Prints the current screen through the browser. For a proper record, use the calc sheet.

Each grid also has a  **Copy** button that copies the whole grid (tab-separated) for a spreadsheet.

16.5 Using the App on Another Computer

Copy the app file and your `.rig.json` files. Custom trusses, corner blocks, hoists and fixtures travel inside every rig file you save, so opening your most recent rig file on the new computer brings them along.

17 Calculators and Databases

The **Calculators** menu opens standalone tools in place of the rig. Click < **Back to the rig** to return. They do not change the rig.

17.1 Circular Truss

For a ring of truss hung from evenly spaced pick points. Choose the truss (manufacturer, model), the number of **pick points** and the **diameter**. It shows the **maximum allowable load on a span** (between two picks), the span (chord) against the maximum span, the angle of arc, the cantilever distance (how far the arc bows out from the straight chord) and its ratio to the span, the base load and the 20%, 35%, 70% and 100% load bands, with a drawing. **Match original spreadsheet** reproduces the original workbook's method (its 5-ft column look-up, no derate; imperial trusses only). Not every truss is made in circular form - check with the manufacturer - and loads must be balanced so the ring does not tip.

The Circular truss calculator.

17.2 Simple UDL

A quick table for a uniformly distributed load across a truss on 2 to 10 equally spaced points with no cantilevers: type the total load and read the load on each point. By default it uses the published rounded coefficients; tick **Use exact beam-engine coefficients** for the exact values.

Truss Grid Analyzer v1.26.0 File Example box (illustrative) Plan 3D Calculators Help All OK 12 hoists · max 20% 1 warning Rig settings Export Calc sheet

Back to the rig Simple UDL

Simple UDL

Uniformly distributed load across the whole truss, all spans equal, no cantilevers. Shows the load on each point for 2-10 points.

Total load (lb) ☐ Use exact beam-engine coefficients instead of the published rounded table

POINTS	P1	P2	P3	P4	P5	P6	P7	P8	P9	P10	SUM
2 points	500	500	-	-	-	-	-	-	-	-	1,000
3 points	187.5	625	187.5	-	-	-	-	-	-	-	1,000
4 points	133	367	367	133	-	-	-	-	-	-	1,000
5 points	98	286	232	286	98	-	-	-	-	-	1,000
6 points	79	226	195	195	226	79	-	-	-	-	1,000
7 points	66	189	160	170	160	189	66	-	-	-	1,000
8 points	56	162	138	144	144	138	162	56	-	-	1,000
9 points	49.3	141.8	120.5	126.3	124.4	126.3	120.5	141.8	49.3	-	1,000.2
10 points	43.9	125.9	107	112	110.8	110.8	112	107	125.9	43.9	999.1

The Simple UDL table.

17.3 Fixture Weights

The fixture library: 269 fixtures from the original workbook, with weights and (where known) clamp weights. Search by name, or filter by manufacturer. To add your own fixture, fill in **Manufacturer**, **Fixture**, weight and (optionally) clamp weight at the bottom and click **Add fixture**. Your fixtures appear in every fixture search, are kept in this browser, and are saved inside your rig files.

Truss Grid Analyzer v1.26.0 File Example box (illustrative) Plan 3D Calculators Help All OK 12 hoists · max 20% 1 warning Rig settings Export Calc sheet

Back to the rig Fixture weights

Fixture weights

269 entries. Add your own below - they are saved with your browser data and in saved rig files.

Search fixtures All manufacturers ▼

MANUFACTURER	FIXTURE	WEIGHT (LB)	CLAMP (LB)
PRG	BadBoyCMY	167	
PRG	BestBoy4000	186	
Vari-Lite	VL1000	72	
Vari-Lite	VL2500	59	
Vari-Lite	VL2C Spot	58	
Vari-Lite	VL3000	94	
Vari-Lite	VL3500 Spot	91	
Vari-Lite	VL3500 Wash	96	
Vari-Lite	VL3500Q Spot	94	
Vari-Lite	VL4	38	
Vari-Lite	VL5	25	
Vari-Lite	VL5 Arc	29	
Vari-Lite	VL5B	25	
Vari-Lite	VL6	22	
Vari-Lite	VL6B	29	

Manufacturer Fixture lb cLamp

The fixture library.

17.4 Databases

Calculators > Databases lists every truss and corner block the app knows - 277 trusses from 17 makers (60 from the manufacturers' own current tables, the rest from the Truss Load Analyzer workbooks; 101 with native metric tables) and 51 corner blocks from Christie Lites and James Thomas Engineering - plus anything you have added.

The screenshot shows the 'Databases' page in the Truss Grid Analyzer. The page has a top navigation bar with 'Truss Grid Analyzer v1.26.0', 'File', 'Example box (illustrative)', 'Plan', '3D', 'Calculators', and 'Help'. A status bar indicates 'All OK', '12 hoists', 'max 20%', and '1 warning'. There are buttons for 'Rig settings', 'Export', and 'Calc sheet'. The main content area is titled 'Databases' and includes a 'Back to the rig' button. Below this is a section titled 'Trusses and corner blocks' with a description: 'Every truss and corner block the app knows, including your own. Manufacturer trusses link to the maker's load table, corner blocks to the product page. Click a family to see a truss with the corner blocks that fit it. Trusses marked "workbook" come from Hall & Sogoian's Truss Load Analyzer - hover a row for where its numbers come from. Corner block weights marked n/a are not published - enter your own on the block in the rig; blocks with end/face plates add weight per connection.' Below the description is a search bar and a filter dropdown set to 'Trusses and corner blocks'. A table follows with columns: TYPE, MAKER, FAMILY, ITEM, CODE, SPEC, WEIGHT, and SOURCE. The table lists 12 trusses. The last two rows have a 'Truss' type and 'Applied' maker. The first row is '12x12 AP Plated Box' with a weight of '6 lb/ft' and source 'workbook'. The second row is '12x12 HD Plated Box' with a weight of '6.3 lb/ft' and source 'workbook'. The third row is '12x12 HD Spigoted Box' with a weight of '8.1 lb/ft' and source 'workbook'. The fourth row is '12x18 HD Plated Box' with a weight of '6.7 lb/ft' and source 'workbook'. The fifth row is '12x18 HD Spigoted Box' with a weight of '7.5 lb/ft' and source 'workbook'. The sixth row is '15x30 Plated Pre-rigged truss' with a weight of '11.3 lb/ft' and source 'workbook'. The seventh row is '16x16 HD Plated Box' with a weight of '7 lb/ft' and source 'workbook'. The eighth row is '16x16 HD Spigoted Box' with a weight of '8 lb/ft' and source 'workbook'. The ninth row is '18x12 Plated Ballroom' with a weight of '7 lb/ft' and source 'workbook'. The tenth row is '20.5x20.5 HD Plated box' with a weight of '8.5 lb/ft' and source 'workbook'. The eleventh row is '20.5x20.5 HD SCHD #80 Touring truss' with a weight of '9.5 lb/ft' and source 'workbook'. The twelfth row is '20.5x20.5 HD Spigoted hrv' with a weight of '8.5 lb/ft' and source 'workbook'. Below the table are two buttons: 'ADD YOUR OWN TRUSS' and 'ADD YOUR OWN CORNER BLOCK'. At the bottom of the page is a section titled 'Custom chain hoists'.

The Databases page.

- **Search** by any part of a name, code or spec; filter to **Trusses** or **Corner blocks**, and by **maker**.
- Click a **Family** to see a truss together with the corner blocks that fit it (click the family chip to clear it).
- The **Source** column links to the maker's load table (trusses) or product page (corner blocks), or says *workbook* for data from Hall & Sogoian's workbook. Hover a row for where its numbers come from.
- Corner block weights marked *n/a* are not published - enter your own on the block in the rig.

Adding Your Own Truss

Open **Add your own truss**. Enter the manufacturer, model, weight per foot, maximum span, and the maximum UDL (total) and centre point load (CPL) - these are used for every span up to the maximum. For values that change with span, paste one number per foot (1 ft to 100 ft; in metric, one per metre) into the optional UDL and CPL boxes, separated by commas. Tick **Data already includes the repetitive-use factor** if the maker's table already includes it. Click **Add truss**. It is saved in the units you entered it in and is marked *custom* in the pickers.

Adding Your Own Corner Block

Open **Add your own corner block**: maker, truss family, name, what it fits (e.g. 12x12), number of ways, weight and size. Click **Add block**.

Custom Chain Hoists

At the bottom of the page: brand, model, capacity label (e.g. 1 Ton), capacity, speed, body weight and chain weight per foot. Click **Add hoist**. A hoist with no speed uses the rig's default dynamic factor.

Custom entries can be deleted with the **x** on their row. They are kept in this browser and saved inside your rig files.

Custom data is your responsibility

Enter manufacturer figures exactly as published, and note whether the table already includes the repetitive-use factor. The app cannot check custom data.

18 How the App Calculates

You do not need this chapter to use the app, but it helps to know what the numbers mean and where they come from. The full technical description is in **File > About, method & version history** and on the calc sheet (section 2, *Basis of calculation*).

18.1 From Loads to Hoist Loads

1. Every truss is a beam carrying its point loads, its self weight (spread along it), its UDL and cable allowance, and anything passed in from trusses bolted to it or its corner blocks. Load factors (by category) and the *Add %* are applied as set in Rig settings.
2. The **whole-rig analysis** solves all the trusses together as beams meeting at the corner blocks - a direct-stiffness (finite element) analysis of the grid, often called a grillage. Trusses bend (through their chords), shear (through their diagonals) and twist; their stiffness is **estimated from the manufacturer's tables** unless the truss data gives real chord and diagonal sizes. Hoists are rigid supports at one level unless you give them a stiffness.
3. Because nobody publishes the stiffness of the joint through a corner block, the rig is solved with the joints **hinged** (the bolt passes vertical force only), **semi-rigid** (springs of 1, 4 and $16 \times EI/L$) and **rigid** (bending and twisting pass through). Each hoist's result is the **largest** of them, and each truss is checked with the joint model that loads it hardest (named in its *Checked with*).
4. A chain can only pull. If a hoist's reaction comes out negative, it is marked **Slack**, taken out, and the rig solved again. If that leaves a truss or assembly without enough support, it is **Unstable**.
5. Each hoist's **high hook static** load = its low hook load (the reaction) + Add % + the hoist body + chain (length $\times$ weight per foot) + hardware. The **high hook dynamic** load = static $\times$ the dynamic factor.

If the whole-rig analysis cannot run (a very large rig, or a load-path loop) the app falls back to the original workbook's **load-path method** - each truss solved on its own as a continuous beam (Clapeyron's three-moment equation), passing its reactions down the chain of bolted trusses to the hoists - and warns that it may under-estimate hoists in a grid.

18.2 Truss Checks

Check	Rule
Span	The span length is rounded up to the next whole foot (metre, for metric tables) and that row of the maker's table is read. Capacity = the table's centre point load (CPL) × the repetitive-use factor k, reduced by the share of the uniform-load capacity already used by any UDL. The point loads on the span must not exceed it, and the span must not be longer than the table's maximum.
Cantilever	No longer than a quarter of the maximum span, and its load (point loads + UDL share + self weight, by default) no more than the CPL for a span four times the cantilever's length, × k.
Moment and shear	The bending moment and shear all along the truss (from the whole-rig analysis) against an allowable estimated from the tables : every table entry is a load the maker says the truss carries, so it shows a moment and a shear the truss can take. These are estimates - use the maker's published moment and shear where you have them.
Deflection	Each span's sag, measured from the straight line between its two supports, against the maker's published limit (past it: Overloaded) or the rig default L/160 (past it: a warning). Cantilever tips are shown, not checked.
Repetitive use	Capacities × 0.85 (ANSI) unless the data already includes it; the generic Universal trusses use 0.75.

18.3 Hoist Checks

A hoist's **status** compares its **static** high hook load with its rated capacity (as the original workbook does). Its dynamic load is flagged separately when it exceeds capacity. A dead hang is checked against its WLL.

18.4 Checked Against

The app's methods are checked in its test suite against the original workbook's results, the worked examples in Delbert L. Hall's *Rigging Math Made Simple*, and an independent 3D frame analysis of the same rigs in PyNite, the engine behind CalcForge.

19 Warnings and Messages

Warnings appear in step 4's Warnings tab, in the Trusses tab, in the banner, on the calc sheet and (for input mistakes) in Check rig. Most name the truss (and hoist) they are about - click the warning to select it. *Notes* are shown in grey and are not counted as warnings. In the messages below, *<Truss>* stands for the truss's name.

19.1 Truss Checks

Message (example)	Meaning	What to do
<i><Truss>: Span 2 - Overloaded (rigid joints)</i>	The point loads on that span are more than the table allows. The joint model in brackets is the one that loads it hardest.	Shorten the span (add a hoist), move loads toward supports, or use a stronger truss.
<i>... Span 1 - Too long</i>	The span is longer than the table's maximum span.	Add a support.
<i>... Left cantilever - Too long and overloaded</i>	The overhang is longer than max span ÷ 4 and carries too much.	Move the end hoist out, or shorten/lighten the overhang.
<i><Truss>: Overloaded - bending moment 7,200 lb-ft is 106% of about 6,821 lb-ft allowed ...</i>	The moment (or shear) is over the allowable estimated from the tables.	Usually a heavy load next to a support or a loaded neighbouring span: move the load or add a hoist.
<i><Truss>: span 1 (24 ft) deflects about 2.1 in, more than span/160 ...</i>	The span sags more than the rig default limit (a warning), or - starting "Overloaded -" - more than the maker's published limit.	Shorten or lighten the span.
<i><Truss>: its truss data is from the Truss Load Analyzer workbook, and the manufacturer's own table (...) allows less on its span 1 ...</i>	The truss uses an older workbook row that allows more than the maker's current table at a span in your rig.	Switch the truss's Model to the maker's (MFG) row.
<i><Truss>: has no supports</i>	No hoists and not bolted to anything.	Add hoists or bolt it.
<i><Truss>: unstable - only one support point is left, so the truss would tip ...</i>	After slack hoists are taken out (or from the start) the truss has one support.	Add a hoist or bolted support, or move the load. Do not use its numbers.
<i>Whole-rig analysis: ... (unstable)</i>	An assembly of trusses is not held up (e.g. can tip about a line of hoists).	Add hoists out of line.

Message (example)	Meaning	What to do
<i>Load-path loop or dependency on a loop: ...</i>	Trusses are bolted to each other in a circle with nothing to take the load to a hoist first.	Give each truss in the loop a hoist, or break the loop.

19.2 Hoists

Message (example)	Meaning	What to do
<i><Truss> hoist: Overloaded (2,450 lb static, rigid joints)</i>	High hook static load over the hoist's capacity (or a dead hang's WLL).	Share the load with another hoist, move loads, or use a bigger hoist.
<i>... dynamic load exceeds capacity</i>	Static is within capacity but static × dynamic factor is not.	Consider a bigger hoist or a slower one; follow the hoist maker's guidance.
<i>... slack - the load would push this hoist up ...</i>	The chain would go slack; the hoist carries only its own weight and the rest of the rig takes its share.	Move the hoist or the load (often a hoist beside a heavily loaded cantilever).
<i>... goes slack with hinged joints only; the rigid joints result is used</i>	Slack in some joint models only.	Be aware; the worst case is used.
<i>10 hoists are level-sensitive (a 1/4" level error changes the load by more than 10% of the hoist's capacity ...)</i>	Short, stiff spans: small level errors move a lot of load. The worst hoist and the others are listed.	Level carefully; consider load cells, a hoist stiffness, or an out-of-level tolerance.
<i>Out of level by up to ±0.25 in ...: ... over capacity only because of the level allowance</i>	With the tolerance set in Rig settings, these hoists would be overloaded if others ran off level.	Level more tightly, or add capacity.
<i>... could unload completely and go slack on the low side</i>	With the tolerance, these hoists could lose all their load.	Level carefully.
<i><Truss> hoist: hangs from X but is not under it on the plan ...</i>	A hoist set to hang below a truss is not under that truss on the plan.	Move the hoist or the truss.
<i>... no hoist model - its load is not checked against a capacity (note)</i>	The hoist's model is "None".	Pick a model.

19.3 Bolting, Corner Blocks and Geometry

Message (example)	Meaning	What to do
<i>North (JTE ...) is bolted to West CB1 (Christie ...): different manufacturers' truss parts don't bolt together ...</i>	Bolted parts from different makers or truss families (the bolt is drawn red).	Use matching parts, or stack / clamp instead of bolting.

Message (example)	Meaning	What to do
<i>... generic, universal or custom parts - the app can't check that they bolt together (note)</i>	The app cannot tell whether they match.	Check they are the same truss family.
<i>Box truss: outside the manufacturer's corner-block rules - a box built with 90-degree corner blocks must be supported at every corner ...</i>	The maker (e.g. Christie A Type) requires a hoist at every corner block of a box.	Hang a hoist at each corner block, or have the rig reviewed.
<i><Block>: ... joining 4 truss sections with no hoist at it. The maker's corner-block data allows only half of the truss table capacity ...</i>	An unsupported block joining 4 or more sections (6 for a hub) - the checks shown still use full capacity.	Put a hoist at the block, or have it reviewed.
<i><Block>: 5 truss ends bolted to a 4-way block</i>	More trusses on the block than it has ways.	Use a block with more ways, or change the layout.
<i><Block>: ... weight is not published - enter your own</i>	The maker publishes no weight for the block.	Type a Weight override on the block.
<i><Truss> does not meet <Block>: it is 0.5 ft off, so the lengths around this loop do not close</i>	In a box or grid, the lengths do not add up.	Check the pieces and corner blocks of the trusses in the loop.
<i>X and Y are bolted to the same corner block on the same side, so they sit on top of each other</i>	Two trusses on one face.	Bolt one to another block or flip it to the other side.
<i><Truss>: truss type not found in database / corner block type not found</i>	The rig uses a custom entry this browser does not have.	Open a rig file that contains it, or add it again in Databases, then pick it.

19.4 Check Rig (Input Mistakes)

Message (example)	What to do
<i><Truss>: the load 'Spot' at 4 ft has no weight - enter it, or delete the load.</i>	Type the weight, or delete the load.
<i>... hoist at 10 ft and ... hoist at 10 ft are at the same point on the plan - they split its load between them. Is one of them a duplicate?</i>	Delete the duplicate (or move one if there really are two).
<i>Bolted assembly ...: only 2 hoists / all its hoists are in one line - a frame needs at least 3 hoists that are not in a line ...</i>	Add hoists so the assembly cannot tip.
<i><Truss>: bolted to X at a point 6 in away from it on the plan ...</i>	Check the positions of the bolted connection.
<i>X and Y cross on the plan with no joint between them ... (note)</i>	Bolt or stack them if they are joined; ignore if one runs above the other.

19.5 Other Messages

Message (example)	Meaning
<i>Whole-rig analysis not available (...): hoist loads and truss checks are from the load-path method alone ...</i>	The fallback method is in use; hoist loads in a grid may be under-estimated. Simplify the rig or remove the loop mentioned.
<i>Hoist level offsets and the out-of-level tolerance need the whole-rig analysis ...</i>	They are ignored while the fallback method is in use.
<i>Measured loads: ... read 1,020 lb against 1,180 lb calculated (-14%) ...</i>	An assembly's load cells differ from the calculation by more than 5%. Check the readings, the weights entered, and levels.
<i>Whole-rig analysis does not balance ... - please report this rig</i>	An internal self-check failed. Do not rely on the results; save the rig file and report it (see Credits).

20 Troubleshooting and Questions

My Rig Has Disappeared.

The app keeps the rig in this browser on this computer (see [Where Your Work Is Kept](#)). It is not there if you are in another browser, a private window, on another computer, or if the browser's data was cleared - or if you started a new rig or opened another file. Open your last saved `.rig.json` with **File > Open....**

I Pressed New Rig by Mistake. Can I Undo It?

Yes - press `Ctrl + Z` (or click ). New rig, Open and Load example box are each one Undo step. This works only until you close or reload the page; after that, open your last saved file.

A Truss Says "Not Solved".

It has no support yet (add hoists or bolt it to a corner block), or it depends on something that is missing or on a loop of bolted trusses. The warning says which.

I Can't Drag a Truss.

Bolted trusses (and corner blocks) are placed by their block: move the truss that owns the block, or **Unbolt** it first.

"Bolt to..." Is Greyed Out.

There are no corner blocks on other trusses yet. Add a corner block to the truss you want to bolt to (its **Corner blocks** section).

The Truss Bolted to the Wrong Side or the Wrong End.

Use **Flip side** or **Bolt other end** in its Placement section, or **Unbolt** and bolt again with the options set (**its start / its end meets the block, extends north/south/east/west**).

A Load or Hoist Is at the Wrong Position.

Check its **From**: the same number means a different place from the start, the centerline or the end. On a centerline-measured truss, positions before the middle are negative.

Clicking + Hoist Added a Truss.

The add button adds to the *selected* truss; with nothing selected it adds a truss. Undo, select the truss, and click again.

The Hoist Loads Don't Add Up to What I Expect.

Open the hoist and look at **Where the load comes from**. In a grid, hoists share load through the trusses, so a hoist carries some weight from neighbouring trusses (or has a little lifted off it). The joint model used is named underneath. **Compare analysis methods** in step 3 shows how much the joint assumption matters.

Why Are Hoist Loads So Different When I Move a Hoist a Little?

Short, stiff spans are level-sensitive. See Hoist Levels. Giving hoists a stiffness in Rig settings makes the analysis more realistic.

My Load Cells Don't Match the App.

Check you are comparing like with like (**Load cells read** in Rig settings: high hook or low hook), that every weight is entered (cable, clamps), and compare assembly totals rather than single hoists - levels and stiffness move load between hoists.

A Manufacturer Link Doesn't Open.

Links go to the maker's website and need an internet connection. Makers sometimes move their documents.

The App Looks Different from This Guide.

You are probably running a later version. This guide is for version 1.26.0. See **File > About** for what has changed.

Where Do I Report a Problem?

Save the rig as a file and send it, with a description, to the app's author (see Credits).

21 Keyboard and Mouse Reference

21.1 Anywhere (Not While Typing in a Box)

Key	Does
1 2 3 4	Go to step 1 Structure, 2 Loads, 3 Hoists, 4 Results.
Ctrl + Z	Undo.
Ctrl + Y or Ctrl + Shift + Z	Redo.
Delete / Backspace	Delete the selected load, hoist or truss (a truss asks first).
R	Rotate the selected free truss 90° anticlockwise.
F	Fit the rig in the view.
Esc	Cancel "Bolt to..."; close Rig settings, a menu or the calc sheet.

21.2 In a Grid

Key	Does
Arrow keys	Move.
Tab / Shift + Tab	Next / previous editable cell (and finish an edit).
Enter / Shift + Enter	Down / up (and finish an edit).
Typing	Starts editing, replacing the value.
F2 , double-click	Edit the value.
Space	Toggle a checkbox cell.
Esc	Cancel the edit; again to leave the grid; clears a multi-selection.
Ctrl + D	Fill down from the row above (or from the top selected hoist).
Ctrl + C / Ctrl + V	Copy the cell / paste a cell or rows from a spreadsheet.
Delete , Shift + Backspace	Delete the row (or all selected hoists).
Shift + click, Ctrl + click, Shift + ↑ ↓ , Ctrl + A	Hoists grid: select several hoists.

21.3 In a Search List

↑ ↓ choose, Enter pick, Tab pick and move on, Esc close.

21.4 Mouse on the Plan

Action	Does
Click	Select a truss, corner block or hoist; empty space selects the rig.
Drag a free truss	Move it (ends snap; Alt = no snap).
Drag a hoist	Slide it along its truss in 1" steps.
Drag empty space	Pan.
Wheel	Zoom around the pointer.
Hover	Tooltip with details.

21.5 Mouse in 3D

Drag = orbit, **Shift** + drag or right-drag = pan, wheel = zoom, click = select.

21.6 Help and Search in This Guide

The app's **Help** menu opens the Quick Start and this guide (HTML or PDF) in a new browser tab. It looks for them in the `docs/manual` folder next to the app; if you have only the app file, use **Help > All manuals online**.

In the HTML copy of this guide, **/** or **Ctrl** + **K** jumps to the search box; **Enter** opens the first match; **Esc** clears the search.

22 Glossary

Term	Meaning
Add %	An optional extra percentage on the load at every hoist (Rig settings).
Allowable (moment, shear)	The bending moment or shear a truss may carry, estimated in this app from the maker's load tables.
Assembly	A group of trusses joined together by bolts, stacking or corner blocks.
Bolted	Joined to another truss through a corner block (or bolted end to a truss). A bolted truss is positioned by its block.
Calc sheet	The printable calculation, for independent review of the software's work.
Cantilever	The part of a truss past its outermost support. Max length = max span ÷ 4.
Carrier	A truss that other hoists hang below.
Centerline (CL)	The middle of a truss line; positions measured from it are negative toward the start.
Check rig	The list of likely input mistakes, in the rig panel.
Clamp	The weight of the fixture's clamp, added to the load.
Corner block	A block trusses bolt to at right angles; part of one truss line in the app.
CPL	Centre point load: the maker's allowable single load in the middle of a span.
Dead hang	A support of wire rope and hardware with no hoist.
Deflection	How far a span sags, measured from the line between its supports; limit given as span/ratio (e.g. L/160).
Derate / repetitive-use factor	The multiplier on table capacities for repeated use (0.85 per ANSI unless included).
Dynamic factor (DLF)	Multiplier for loads while a hoist moves: speed (fpm) ÷ 60 + 1.
Fingerprint	A short code on the calc sheet that changes whenever any input changes.
Grillage	The engineering name for the whole-rig analysis of a grid of beams.
Hangs from	What holds a truss up (its hoists, blocks and trusses), or where a hoist hangs from (the structure, or below a truss).
High hook load	Low hook load + Add % + hoist, chain and hardware: what the structure above carries. Static and dynamic.
Hinged / semi-rigid / rigid joints	The three ways the whole-rig analysis models the joints through corner blocks; the worst is used.
Hot spots	A colour mode showing where along each truss it works hardest.
Level offset	A designed height difference for one hoist (+ higher).

Term	Meaning
Level sensitivity	The change in a hoist's load if it runs 1/4" high or low.
Line	A truss line: truss pieces plus corner blocks, end to end.
Load factor	A multiplier on loads of one category (Rig settings).
Load-path method	The original workbook's method, used as a fallback when the whole-rig analysis cannot run.
Low hook load	What the truss hangs on a hoist's hook (the reaction, R).
MFG	Truss data from the manufacturer's own current load table.
Mirror	A load's twin at the mirror position about the centerline (loads); a mirrored copy (hoists).
Pieces	The truss sections in a line, not counting corner blocks.
Slack	A hoist whose chain would go slack because the load pushes it up.
Span	The part of a truss between two supports.
Stack / clamp	A truss resting on top of (or clamped under) another where they cross.
Truss	In the app: one straight truss line.
UDL	Uniformly distributed load: a weight spread evenly along a truss (typed as a total).
Unstable	Not held up by enough supports; would tip.
Whole-rig analysis	The stiffness analysis of the whole rig that gives the hoist loads and the forces the checks use.
Workbook	Hall & Sogoian's <i>Truss Load Analyzer</i> - EOT Excel workbook, the original program.
Workload	Load as a percentage of what is allowed.
WLL	Working load limit.

23 Credits, Licence and Disclaimer

23.1 Credits

Truss Grid Analyzer, copyright © 2026 **G.E. Simmons Falk**.

Based on **Truss Load Analyzer - EOT** by **Delbert L. Hall and Jon Sogoian**, who are the originators of the program, and developed with the knowledge and permission of Delbert L. Hall. Truss Grid Analyzer expands their program to indeterminate grids. Its method and its truss, chain hoist and fixture data come from their workbook. Manufacturer data is from Christie Lites, James Thomas Engineering, Tomcat, Tyler Truss and the other makers named in the Databases page. Thanks to **Issy Stadler** for testing help.

23.2 Licence

Truss Grid Analyzer is free. Anyone may use, copy, modify and distribute it free of charge, provided they keep the licence file with every copy, credit Delbert L. Hall and Jon Sogoian as the originators of the program and G.E. Simmons Falk as the author of Truss Grid Analyzer, update the version history to show who changed what and when, and **never charge** for it. The full terms are in the `LICENSE.md` file that comes with the app, and are summarised in **File > About, method & version history**.

23.3 Disclaimer

This tool is intended for use by entertainment rigging professionals to assist them in making rigging decisions. Every attempt has been made to be accurate. However, the authors of the original program and of this expansion are not responsible for errors in the program or the results of its use. **Users are responsible for verifying the results before using them to make rigging decisions.**

23.4 About This Guide

User Guide for Truss Grid Analyzer version 1.26.0, 24 September 2026. The guide is revised on request, not with every release of the app.