

Truss Grid Analyzer

# Quick Start

Your first rig in ten minutes

**Written for version 1.24.0**

24 September 2026

By **G.E. Simmons Falk**. Truss Grid Analyzer is an expansion, for indeterminate grids, of *Truss Load Analyzer - EOT* by **Delbert L. Hall and Jon Sogioian**, the originators of the program.

For everything else, see the full User Guide (PDF, or the searchable HTML copy). The guides are written for version 1.24.0 and are not updated for every release.

# 1 Before You Start

---

**Truss Grid Analyzer** works out the load on every chain hoist and checks every truss in an entertainment truss rig, from a single truss on two hoists up to a grid of trusses bolted together at corner blocks. You draw the trusses, put the loads on them, place the hoists, and it shows you, as you type, whether each hoist and each truss is within the manufacturer's limits.

## A calculation aid, not an engineering approval

Check the results against the manufacturer's current data, and have a qualified person review every rig before it flies. You are responsible for checking the results before you use them to make rigging decisions.

## Indeterminate rigs (ANSI E1.6-3)

ANSI E1.6-3 (*Selection and Use of Serially Manufactured Chain Hoists in the Entertainment Industry*) calls a rig **indeterminate** when it hangs from more than two hoists in a straight line, or more than three hoists not in a line - a truss on three hoists, or almost any grid or box. On an indeterminate rig the load on each hoist depends on how stiff the trusses, the rigging and the structure above are, and load can shift between hoists as they run. The standard (section 7.1) accepts a load calculation as a way to reduce the risk of overload only when every weight is known and accounted for, the calculation method is accurate, and any load shifting will not be enough to cause an overload. This app's whole-rig analysis is built for these rigs, but it is an estimate: allow for load shifting, level the hoists carefully, and verify loads (for example with load cells) where the margin is small.

## 1.1 Open the App

- 1 The whole app is one file, `index.html` (on GitHub it is `dist/index.html`). Save it anywhere on your computer.
- 2 Double-click it. It opens in your web browser (Chrome, Edge, Firefox or Safari). No install, no account, no internet connection needed, and nothing is sent anywhere.
- 3 The first time, it shows an **example box** so you can look around. The version number is next to the name, top left (this guide: **v1.24.0**).

## Your work is kept in this browser only

Every change is saved automatically inside the browser on this computer. Clearing the browser's data, or opening the file in a different browser, gives you a different (or empty) workspace. Use **File > Save** to keep a rig as a `.rig.json` file you can back up, email and open again.

## 1.2 The Screen

The screenshot displays the Truss Grid Analyzer v1.24.0 interface. The main workspace shows a truss diagram with various components labeled. The right-hand panel displays a list of trusses and hoists, with a legend for hoist types. The bottom grid section contains a table with columns for NAME, TYPE, LINE, PIECES, LINE (FT), X, Y, ANGLE, BOLTED TO, UDL (LB), MEASURE FROM, and HANGS FROM. The status bar at the bottom indicates 'All OK' and '12 hoists - max 20%'. The right-hand panel also shows a 'CHECK RIG' section with a list of trusses and hoists.

| NAME      | TYPE             | LINE (PIECES - BLOCKS)    | PIECES (FT) | LINE (FT) | X   | Y     | ANGLE | BOLTED TO          | UDL (LB) | MEASURE FROM | HANGS FROM            |
|-----------|------------------|---------------------------|-------------|-----------|-----|-------|-------|--------------------|----------|--------------|-----------------------|
| 1 West    | JTE 12x12 Plated | CB1 - 30' - CB2           | 30          | 32        | 0   | 0     | -90   | -                  | 0        | CL           | 3 hoists              |
| 2 North   | JTE 12x12 Plated | 8' - CB1 - 13' - CB2 - 9' | 30          | 32        | 0.5 | -0.5  | 0     | West CB1 (start)   | 0        | CL           | West CB1, East CB1, 2 |
| 3 South   | JTE 12x12 Plated | 8' - CB1 - 13' - CB2 - 9' | 30          | 32        | 0.5 | -31.5 | 0     | West CB2 (start)   | 0        | CL           | West CB2, East CB2, 2 |
| 4 East    | JTE 12x12 Plated | CB1 - 30' - CB2           | 30          | 32        | 33  | 0     | 270   | East CB1 (reverse) | 0        | CL           | 3 hoists              |
| 5 Inner W | JTE 12x12 Plated | 30'                       | 30          | 30        | 9   | -1    | 270   | North CB1 (start)  | 0        | CL           | North CB1, South CB1  |
| 6 Inner E | JTE 12x12 Plated | 30'                       | 30          | 30        | 23  | -1    | 270   | North CB2 (start)  | 0        | CL           | North CB2, South CB2  |

The app with the example box loaded (light theme; the app starts in the dark theme - change it under File > Theme).

- 1 **File** - new rig, open, save, the example box, theme, About.
- 2 **Undo / Redo** - **Ctrl** + **Z**, **Ctrl** + **Y**.
- 3 **Plan / 3D** - switch between the plan and a 3D view.
- 4 **Status** - "All OK" or how many things to check, the busiest hoist, warnings. Click it for the results.
- 5 **Rig settings** - dynamic factor, units (feet or metres), allowances and more.
- 6 **Calc sheet** - a printable calculation, for independent review of the software's work.
- 7 **The four steps** - 1 Structure, 2 Loads, 3 Hoists, 4 Results. Use them in any order, any time.
- 8 **The plan** - the rig to scale. Click anything to select it; drag trusses and hoists.
- 9 **Side panel** - everything about what you clicked: the rig, a truss, a hoist, a load or a corner block.
- 10 **The grid** - a spreadsheet of the current step: every truss, every load or every hoist.

## 2 Your First Rig

This walk-through builds a **30 ft truss hung on two 1-ton hoists, with six moving lights**. It takes about ten minutes. Every number below is what the app shows for version 1.24.0.

### 2.1 Step 1 - Structure: Add the Truss

- 1 Choose **File > New rig** and click **OK**. (Save anything you want to keep first - a new rig replaces the one on screen.)
- 2 Click the rig name at the top (*Untitled rig*) and type **My first rig**.
- 3 Click **+ Truss**. A 20 ft truss called *Truss 1* appears on the plan and in the side panel.
- 4 In the side panel, under **Truss**, pick the **Manufacturer** and **Model** you use. This example keeps the default, **JTE 12x12 Plated**.
- 5 In **Truss pieces (ft)**, type **30** and press **Enter**. The truss is now 30 ft long.

The screenshot shows the Truss Grid Analyzer v1.24.0 interface. The main window displays a plan view of a 30 ft truss (Truss 1) on a grid. A legend indicates workload levels: green for low (under 80%), yellow for high (80-100%), and red for overloaded (over 100%). It also shows hoist types (static, dynamic, high hook) and connection types (dead hang, bolted). The right sidebar shows the truss configuration: Manufacturer: JTE, Model: 12x12 Plated, Truss pieces (ft): 30, UDL (lb): 0, Measure from: centerline. The status is 'Not solved' with '1 to check' and '1 warning'. The bottom table lists the truss details.

| NAME                       | TYPE             | LINE (PIECES - BLOCKS) | PIECES (FT) | LINE (FT) | X | Y | ANGLE | BOLTED TO | UDL (LB) | MEASURE FROM | HANGS FROM | STATUS     |
|----------------------------|------------------|------------------------|-------------|-----------|---|---|-------|-----------|----------|--------------|------------|------------|
| 1 Truss 1                  | JTE 12x12 Plated | 30'                    | 30          | 30        | 0 | 0 | 0     | -         | 0        | CL           | nothing    | Not solved |
| new truss... (type a name) |                  |                        |             |           |   |   |       |           |          |              |            |            |

**Step 1.** One 30 ft truss. It shows *Not solved* and the status says *1 to check* because it has no hoists yet - that is expected.

#### Typing lengths

Type decimal feet ( 12.5 ) or feet and inches ( 12-6 , 12'6" , 12' 6 1/2" , 12 ft 6 in ). In metric (Rig settings > Units) type metres ( 3.8 ), 380 cm or 3800 mm .

## 2.2 Step 2 - Loads: Hang Six Lights

A new truss measures positions from its **centerline** (CL): **-12** is 12 ft before the middle, **+12** is 12 ft after it.

- 1 Click step **2 Loads** (or press **2**).
- 2 Click the truss on the plan. In the side panel, open **Loads**. In the box that says *Add: fixture or weight*, type **MAC Viper Wash @ -12** and press **Enter**. The app finds the fixture in its library (72.8 lb) and places it 12 ft left of the centerline.
- 3 Do the same with **MAC Viper Wash @ -7** and **MAC Viper Wash @ -2**.
- 4 Click **Mirror all**. Each light gets a twin on the other side of the centerline (at +12, +7 and +2), so there are now six.

Truss Grid Analyzer v1.24.0

1 to check 1 warning

Truss 1

Truss 1

JTE 12x12 Plated 30 ft Hangs from: nothing

5.5 lb/ft - span 40 ft

Manufacturer: JTE Model: 12x12 Plated

Max span 40 ft - max cantilever 10 ft - 0.85 repetitive-use derate - Source: Truss Load Analyzer workbook - TLA-EOT 2.1 (Hall & Sogolan)

Truss pieces (ft): 30 UDL (lb): 0 Measure from: centerline

Cable (lb/ft): none

30 ft truss + 0 ft corner blocks = 30 ft whole line

add block lengths

Build from pieces...

CORNER BLOCKS: none - add one here

PLACEMENT: free

Free: type its plan position, drag it on the plan, or bolt it to a corner block.

Plan X (ft): 0 Plan Y (ft): 0 Angle (deg): 0

BOLT TO A CORNER BLOCK

Bolt to... end: automatic

direction: automatic

LOADS: 3 - 436.8 lb

| TRUSS                            | AT (FT)    | FROM             | ITEM / FIXTURE | WEIGHT (LB)           | CLAMP (LB) | TOTAL (LB) | MIRROR ABOUT CL | NOTE              | CATEGORY |
|----------------------------------|------------|------------------|----------------|-----------------------|------------|------------|-----------------|-------------------|----------|
| Truss 1                          | Mirror all | Copy to truss... | Sort           | Clear                 |            |            |                 |                   |          |
| 1                                | Truss 1    | -12              | CL             | Martin MAC Viper Wash | 72.8       | 72.8       | x2              | at +12 ft from CL | Lighting |
| 2                                | Truss 1    | -7               | CL             | Martin MAC Viper Wash | 72.8       | 72.8       | x2              | at +7 ft from CL  | Lighting |
| 3                                | Truss 1    | -2               | CL             | Martin MAC Viper Wash | 72.8       | 72.8       | x2              | at +2 ft from CL  | Lighting |
| + load on Truss 1 (start typing) |            |                  |                |                       |            |            |                 |                   |          |

Item: type to search the fixture library (or a weight, e.g. 45 lb, for a custom load). Total = weight + clamp. One row per load position. Mirror adds the same load on the other side of the centerline. Category sets the load factor (Rig settings). Paste rows from a spreadsheet: at, from, item, weight, clamp, mirror, note, category.

**Step 2.** Three loads, each mirrored (x2 in the grid). The grid under the plan lists every load; you can type there too.

For a load that is not in the library, type its weight instead: **120 lb @ 6**. You can also type straight into the **Loads** grid: the *Item / fixture* cell searches the library as you type.

## 2.3 Step 3 - Hoists: Hang It Up

- 1 Click step **3 Hoists** (or press **3**).
- 2 In the grid under the plan, find the row **+ hoist on Truss 1 (type its position)** and click its **At (ft)** cell. Type **-13** and press **Enter**. A hoist appears 13 ft left of the centerline (2 ft in from the end).
- 3 The cursor is now back on the **+ hoist** row, so just type **13** and press **Enter** for the second hoist.

- 4 The **Hoist** column shows the model (the first one is a 1-ton CM Lodestar with 20 ft of chain). To change it, click the cell and type part of a name - **lode 1t**, **prostar**, **2 ton** - then pick from the list. Set the chain length in the **Chain** column.

**Truss 1**

JTE 12x12 Plated 30 ft Hangs from: 2 hoists

+ Hoist + Load Bolt to... Connected

Duplicate Delete

Truss 1 (30') 72.8 72.8 72.8 72.8 72.8 72.8

434 549

Click to select - drag a truss to move (ends snap, Alt = no snap) - drag a hoist along its truss - R = rotate - Del = delete - wheel = zoom

**Hoists** Hoist points, with live results ☐ Compare analysis methods CHAIN 20 Set all Tab next Enter down Ctrl D fill down Ctrl V paste Copy

| TRUSS     | AT (FT) | FROM | HOIST                    | CHAIN / ROPE (FT) | DLF  | HARDWARE (LB) | HANGS FROM | LEVEL (IN) | HIGH HOOK STATIC (LB) |
|-----------|---------|------|--------------------------|-------------------|------|---------------|------------|------------|-----------------------|
| 1 Truss 1 | -13     | CL   | Lodestar - Model L 1 Ton | 20                | auto | 1.267         | 0          | structure  | 433.7                 |
| 2 Truss 1 | 13      | CL   | Lodestar - Model L 1 Ton | 20                | auto | 1.267         | 0          | structure  | 433.7                 |

+ hoist on Truss 1 (type its position)

Select several hoists with Shift+click (a range), Ctrl+click (one at a time), Shift+arrows, Ctrl+A or Select on a truss row; then any edit changes all of them (not the position). New hoists copy the last hoist placed. Results (grey) update as you type. Hoist: type to filter ("lode 1t", "prostar", "2 ton"). DLF blank = from the hoist speed. Mirror all adds a hoist at each hoist's mirrored spot; Copy to truss keeps each hoist's distance from the centre. Tick Compare analysis methods to see the joint-model columns.

**TRUSS** Manufacturer: JTE Model: 12x12 Plated

Max span 40 ft - max cantilever 10 ft - 0.85 repetitive-use derate - Source: Truss Load Analyzer workbook - TLA-EOT 2.1 (Hall & Sogolan)

Truss pieces (ft) 30 UDL (lb) 0 Measure from centerline

Cable (lb/ft) none

30 ft truss + 0 ft corner blocks = 30 ft whole line

☒ add block lengths

Build from pieces...

**CORNER BLOCKS** none - add one here

**PLACEMENT** free

Free: type its plan position, drag it on the plan, or bolt it to a corner block.

Plan X (ft) 0 Plan Y (ft) 0 Angle (deg) 0

**BOLT TO A CORNER BLOCK**

Bolt to... end: automatic

direction: automatic

**LOADS** 3 - 436.8 lb

| AT          | ITEM             | TOTAL (LB) | MIRROR        |
|-------------|------------------|------------|---------------|
| -12 ft from | Martin MAC Viper | 72.8       | ✓ +12 ft from |

**Step 3.** Two hoists. On the plan each one shows its high hook static load (434) and, in italics, its dynamic load (549).


### Other ways to add hoists

Select the truss, click **+ Hoist** above the plan (it adds one in the middle of the selected truss - with no truss selected it adds a new truss instead), then drag it along the truss on the plan - it moves in 1-inch steps and shows its position as you drag.

## 2.4 Step 4 - Results: Read Them

Click step **4 Results** (or press **4**, or click the status at the top).



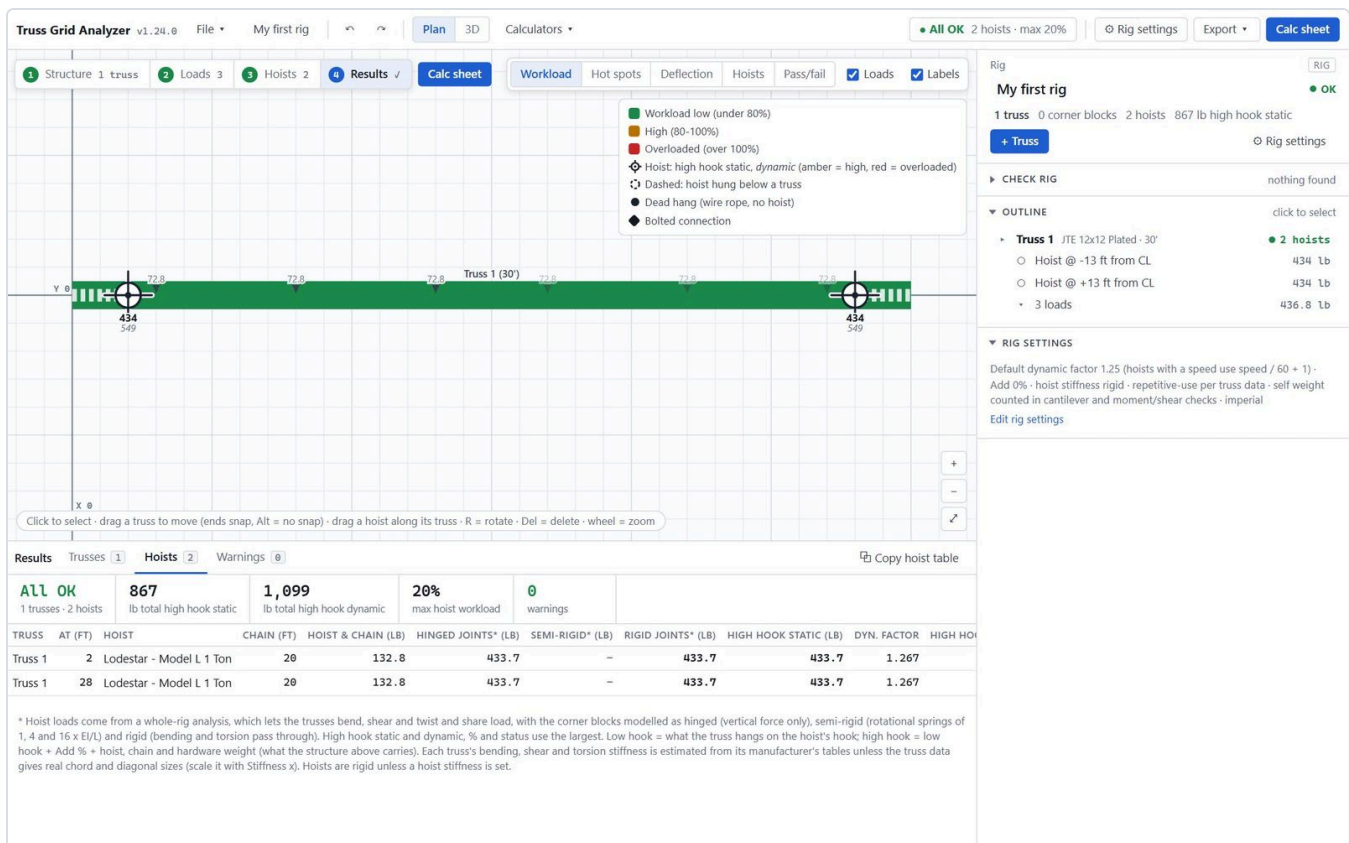

**Step 4.** All OK. Each hoist carries 433.7 lb static and 549.4 lb dynamic, 20% of its 2,200 lb capacity.

What the numbers mean for this rig:

| Figure            | Value    | What it is                                                                                                        |
|-------------------|----------|-------------------------------------------------------------------------------------------------------------------|
| Low hook load     | 300.9 lb | What the truss hangs on each hook: half of $6 \times 72.8$ lb lights + $30 \text{ ft} \times 5.5$ lb/ft of truss. |
| Hoist & chain     | 132.8 lb | The hoist body plus 20 ft of chain.                                                                               |
| High hook static  | 433.7 lb | Low hook + hoist and chain: what the structure above carries. This is checked against the hoist's capacity.       |
| High hook dynamic | 549.4 lb | Static $\times$ the dynamic factor (16 fpm hoist: $16 / 60 + 1 = 1.267$ ).                                        |
| Workload          | 20%      | High hook static $\div$ capacity (2,200 lb).                                                                      |

## 2.5 Save It and Print the Calculation

- 1 **File** > **Save downloads** `My first rig.rig.json`. Keep it - **File** > **Open...** brings it back on any computer.
- 2 Click **Calc sheet** (top right). Fill in the project, venue, prepared by and checked by boxes at the top, then click **Print / save PDF** and choose *Save as PDF* (or a printer). Press **Esc** or **Close** to return.

Calculation sheet

Project / event

Venue / location

Prepared by

Checked by

Notes

Print / save PDF

Close

TRUSS RIG CALCULATION SHEET

My first rig

All checks pass

no warnings

Project / event:

Calculated

2026-09-24 19:26

Venue / location

Software

Truss Grid Analyzer v1.24.0

Input fingerprint

6292184C

Units

imperial (ft, lb, lb-ft)

Notes

1 Summary of results

|                                  |                                                                                                |
|----------------------------------|------------------------------------------------------------------------------------------------|
| Method (primary result)          | Whole-rig analysis: every check uses the worst of the joint models hinged joints, rigid joints |
| Trusses / corner blocks / hoists | 1 / 0 / 2                                                                                      |
| Total weight carried by the rig  | 601.8 lb (loads, truss and block self weight, UDL, hardware at bolted connections)             |
| Total high hook load, static     | 867.4 lb (incl. hoists, chain and hoist hardware)                                              |
| Total high hook load, dynamic    | 1,098.7 lb                                                                                     |
| Highest hoist workload           | 19.7% - H2 on Truss 1                                                                          |
| Highest truss workload           | 59.5% - Truss 1, Span 1                                                                        |
| Warnings                         | none                                                                                           |

2 Basis of calculation

- Trusses are beams along their centerline, carrying point loads, their self weight and any UDL spread over the whole length. Lengths and positions are measured from the start of each truss line (corner blocks included).
- Hoist loads, the forces in bolted connections and the loads every check sees come from a whole-rig analysis: trusses are Timoshenko beams (bending EI, shear GA, torsion GJ) meeting at the corner blocks; hoists are rigid supports at one level. The corner-block joints are solved hinged (vertical force only), semi-rigid (rotational springs of 1, 4 and 16 x EI/L of the lighter truss) and rigid, and each hoist and each truss is checked with the joint model that loads it hardest.
- A chain can only pull: a hoist whose reaction comes out negative is taken out (Slack) and the rig solved again. A truss left with one support point is unstable.
- Capacities come from the manufacturer's (or the Truss Load Analyzer workbook's) span tables, reading the row at the span rounded UP to the next whole foot (whole metre for native metric tables), multiplied by the repetitive-use factor k.

| Check             | Formula                                                                                                                                                                                                                                                                                                               |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| F1 Span           | $C = CPL \times k \times f$<br>$f = \frac{UDL \times k - w_{self} \times L}{UDL \times k}$<br>pass if $\sum P \leq C$ and $L \leq L_{max}$<br>Capacity = CPL(row) x k x f, f = (UDL(row) x k - w_udi x L) / (UDL(row) x k). Pass if the sum of point loads on the span <= capacity and L <= the table's maximum span. |
| F2 Cantilever     | $C = CPL(L_c) \times k$<br>pass if $\sum P + w_{self} \times L_c + w_{self} \times L_c \leq C$ and $L_c \leq \frac{L_{max}}{4}$<br>L_c <= maximum span / 4, Capacity = CPL(row for 4 x L_c) x k, Load = point loads on it + w_udi x L_c + w_self x L_c. Pass if load <= capacity.                                     |
| F3 Moment / shear | $M_{max} = k \times \min(\max(\frac{CPL \times L}{4}, w_{self} \times L^2), \max(\frac{UDL \times L}{4}, w_{self} \times L^2))$                                                                                                                                                                                       |

The calculation sheet: every input, formula, table look-up and check, set out so the software's work can be reviewed independently.

Quick Start - written for Truss Grid Analyzer v1.24.0

Page 8 of 10



## 3 Reading the Results

### 3.1 Colours and Statuses

| Colour / status                                                                                     | Meaning                                                                                                                        | What to do                                                                                  |
|-----------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|  <b>OK</b>         | Under 80% of what the manufacturer allows.                                                                                     | Nothing.                                                                                    |
|  <b>High</b>       | 80-100%. Within limits but little margin.                                                                                      | Consider it; check your weights are right.                                                  |
|  <b>Overloaded</b> | Over 100% of a limit (a hoist's capacity, a span or cantilever table, bending moment, shear, or the maker's deflection limit). | Must be fixed: move or lighten loads, add or move hoists, or use a stronger truss or hoist. |
| <b>Too long</b>                                                                                     | A span is longer than the truss table allows, or a cantilever is longer than a quarter of the maximum span.                    | Add a support or shorten the overhang.                                                      |
| <b>Slack</b>                                                                                        | The load would push a hoist <i>up</i> . A chain can only pull, so it carries nothing and the rig is solved without it.         | Move the hoist or the loads; the other hoists now carry more.                               |
| <b>Unstable</b>                                                                                     | A truss or assembly is not held up properly (for example one hoist only, or all hoists in a line) and would tip.               | Add hoists. Do not use its numbers.                                                         |
| <b>Not solved</b>                                                                                   | The truss has no supports yet, or depends on something missing.                                                                | Add hoists or bolt it to another truss.                                                     |

### 3.2 Where to Look

- **The status at the top** sums up the whole rig. Click it to jump to the results.
- **Step 4 Results** has three tabs: **Trusses** (every check for every truss), **Hoists** (every hoist's loads), and **Warnings** (everything the app wants you to look at). Click a row to select that truss or hoist.
- **Click a truss** and open **Checks** in the side panel: a drawing of the truss with its supports and loads, where it works hardest, its reactions, shear and moment diagrams, deflection, and a bar for each check.
- **Click a hoist** to see its low hook, high hook static and high hook dynamic loads, and a table of where its load comes from.
- **Check rig** (click an empty part of the plan to show the rig panel) lists likely input mistakes: a load with no weight, two hoists at one point, bolted ends that don't meet, too few hoists.

#### Level sensitivity

On short, stiff spans a hoist running just 1/4" high or low can change its load by hundreds of pounds. The app warns when that is more than 10% of a hoist's capacity - the example box shows this warning. Level those hoists carefully.

## 4 Handy to Know

### 4.1 Keyboard

| Key                 | Does                                     | Key         | Does                                   |
|---------------------|------------------------------------------|-------------|----------------------------------------|
| 1 2 3 4             | Go to a step                             | F           | Fit the rig in view                    |
| Ctrl + Z / Ctrl + Y | Undo / redo                              | R           | Rotate the selected truss 90°          |
| Delete              | Delete the selected load, hoist or truss | Esc         | Cancel / close                         |
| Tab / Enter         | In a grid: next cell / next row          | Ctrl + D    | In a grid: copy the cell above         |
| Ctrl + V            | In a grid: paste rows from Excel         | Mouse wheel | Zoom the plan; drag empty space to pan |

### 4.2 Building a Grid or a Box

Trusses join at **corner blocks**. A corner block belongs to one truss (add it in that truss's **Corner blocks** section: **+ Corner block at start**, **+ Corner block at end**, or at a distance). Then select another truss, click **Bolt to...** and click the corner block on the plan. The bolted truss moves to the block and follows it from then on. **File > Load example box** shows a complete box built this way. See the User Guide, chapter *Step 1 - Structure*, for the details.

### 4.3 Menus You Will Use

- **Calculators** - circular truss, simple UDL, fixture weights, and the databases of trusses, corner blocks and hoists (where you can add your own).
- **Export** - copy the hoist table for Excel, save the view as a picture, print the screen.
- **⚙️ Rig settings** - units, dynamic factor, *Add %*, cable allowance, load factors, deflection limit, calc sheet paper size.
- **File > About, method & version history** - how the app calculates, the licence, and what changed in each version.

### 4.4 Credits

Truss Grid Analyzer is by G.E. Simmons Falk. It is an expansion of *Truss Load Analyzer - EOT* by Delbert L. Hall and Jon Sogioan, who are the originators of the program, for indeterminate grids. It is free and must never be sold.