Manual

Car Licence Plate Identification System

Author:	Gautam Ramesh
Matriculation No.:	7026787
Author:	Siddanth sharma
Matriculation No.:	7027189
Author:	Shubhankar Dumka
Matriculation No.:	7027187
Course of Studies:	Mechanical Engineering

First examiner:	Prof. Dr. Elmar Wings
Submission date:	November 10, 2025

University of Applied Sciences Emden/Leer · Faculty of Technology · Mechanical Engineering Department
Constantiaplatz 4 · 26723 Emden · http://www.hs-emden-leer.de

Contents

List of figures ii

List of tables iii

Acronyms iv

1 Getting Started 2
- 1.1 List of Parts . . . 2

2 Setting Up The Product 4
- 2.1 Product Setup . . . 4
- 2.2 Camera Placement and Setup: . . . 5

3 Main Function 7
- 3.1 Main Function . . . 7

4 Maintenance 9
- 4.1 Maintenance . . . 9
  - 4.1.1 Hardware Maintenance . . . 9
  - 4.1.2 Software Maintenance . . . 9
  - 4.1.3 Backup and Safety . . . 10

5 Safety Guidelines 11
- 5.1 Safety Guidelines . . . 11
  - 5.1.1 Electrical Safety . . . 11
  - 5.1.2 Thermal and Mechanical Safety . . . 11
  - 5.1.3 Operational Safety . . . 12
  - 5.1.4 Power and Inference Safety . . . 12

6 Troubleshooting 13
- 6.1 Troubleshooting . . . 13
  - 6.1.1 Hardware and Power Issues . . . 13
  - 6.1.2 Software and Model Issues . . . 13
  - 6.1.3 Database and Storage Issues . . . 14
  - 6.1.4 Network or Communication Issues . . . 14

7 Add Ons 16
- 7.1 Proposed Add-Ons . . . 16

List of Figures

4.1 Routine hardware maintenance flow. 10

6.1 (To be added) Sample troubleshooting interface for real-time error monitoring. 14

List of Tables

1.1 Main Components of the System 3

6.1 Common Problems, Causes, and Solutions 15

Acronyms

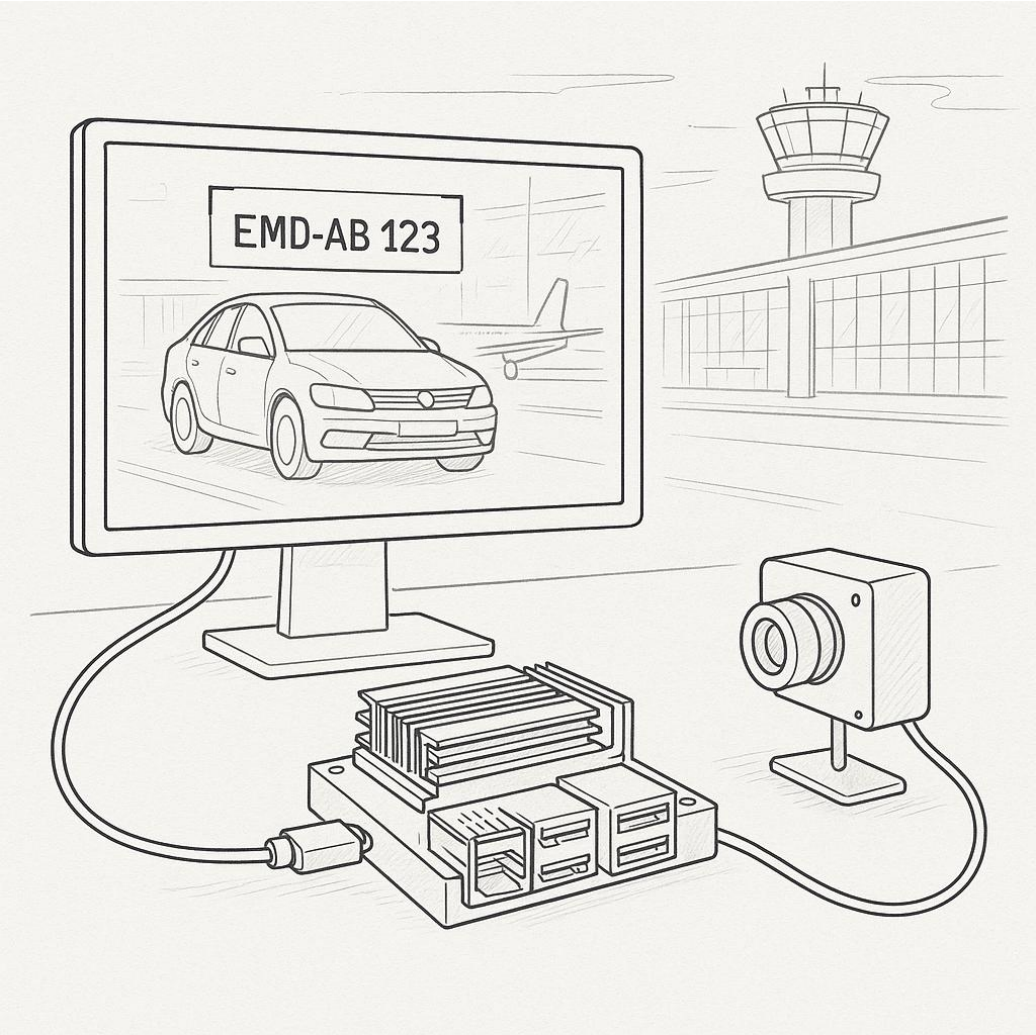
EMD-AB 123

1 Getting Started

Welcome to the Smart License Plate Detection System

Dear User,

Welcome to your **Smart License Plate Detection System** developed at **Hochschule Emden–Leer**. This device recognises and logs vehicle license plates in real time.

The system starts automatically when powered on — no setup or configuration is required. Within seconds, it begins detecting and displaying vehicles on screen with accurate entry, exit, and duration details.

Key Highlights:

- Works entirely offline — no internet required.
- Designed for 24/7 airport gate operation.
- Automatically handles billing for stays beyond 15 minutes.
- Recognises exempt vehicles (police, ambulance, government).
- Compact, efficient, and easy to maintain.

"Technology that simplifies — accuracy that empowers."

Developed by **Gautam Ramesh**, **Siddhanth Sharma**, and **Shubhankar Dumka**

`gautam.ramesh.1@stud-hs-emden-leer.de`
`siddhanth.sharma@stud.hs-emden-leer.de`
`shubhankar.dumka@stud.hs-emden-leer.de`

1.1 List of Parts

Each component is plug-and-play, making the main unit simple to assemble, transport, and maintain. The setup is compact, energy-efficient (under 10 W), and fully operational without internet access — ideal for continuous airport use.

Table 1.1: Main Components of the System

Part Name	**Description / Function**	**Qty.**
Main Unit	Main central processing unit to enable detection, timing, and billing functions	1
Camera	Captures live vehicle images at the airport gate.	1
Camera Stand	Adjustable metallic stand for stable positioning.	1
Display	LCD monitor showing real-time license plate detections.	1
Power Cord 230V, 0.1A, 20W	Cable to connect display with power supply.	1
microSD Card	64 GB microSD card with OS preinstalled	1
Power Adapter USB Type-C	5V/4A USB-C power supply adapter with USB-C Type outlet to power main unit.	1
HDMI Cable	Connects the display with main unit.	1
USB Type A Cable	Connects the camera with the main unit. Comes pre-built with the camera.	1

2 Setting Up The Product

2.1 Product Setup

This section explains, in simple steps, how to prepare and start the **License Plate Detection System**. Follow the setup steps below to get the product ready for usage:

Step 1: Place and Connect the Hardware

- Place the **main unit** on a stable, well-ventilated surface.
- Mount the **camera** on the camera stand and point it toward the vehicle lane or entry gate.
- Connect the camera to the main unit using the USB Type A cable pre-built with the camera.
- Connect the **HDMI cable** from the main unit to the monitor.
- Insert the **microSD card** into the main unit.

Step 2: Start the Main Unit

- Plug in the **power cord** for the display and turn the display on using its power on button.
- Plug in the **power adapter** and connect it with the main unit using it's C-type DC-IN outlet.**Important:** Connect this power supply strictly with the DC-IN port at the left position on the back side, not the USB-C port at the right position on the back side.
- Wait for a few seconds for the main unit to start.
- A green LED indicating the main power indicator for the main unit will turn on, indicating successful boot.
- The display will show the live camera view once it is ready.

Step 3: Verify Operation

- The system will now be able to detect number plates.Any detected car license plates are logged with timestamps and saved.

- Adjust the camera height or tilt if the plates are not clearly visible.
- Ensure good lighting at the vehicle gate area. For accurate plate reading, maintain an illumination level between **250 lux (minimum)** and **900 lux (maximum)** — with an optimal range of **400–700 lux**. Avoid shining lights directly into the camera to prevent glare or overexposure.

Step 4: During and After Use

- The system runs continuously and does not need supervision.
- After use, simply turn off the power supply.
- All data is stored safely for later review or reporting.

2.2 Camera Placement and Setup:

- Mount the camera about **2.0–2.5 metres above ground level**, facing the vehicle lane at a **30–40° angle**.
- Keep a distance of about **3–5 metres** between the camera and the point where vehicles stop or slow down.
- Avoid placing the camera directly opposite bright lights or reflective surfaces.
- Ensure there is enough ambient light. During night hours, add a small **LED lamp or floodlight** near the gate for better clarity.
- Keep the camera lens clean and free of dust, water spots, or scratches.
- Do not position the camera behind glass or near strong sunlight to prevent reflections.

Important Tips

- Place the device on a stable, flat surface with good ventilation.
- Make sure the **power supply (5 V / 4 A)** is connected firmly and the cable is not loose.
- Keep the **camera lens clean** for accurate plate reading.
- Do not block the openings on the aluminum case; it keeps the system cool.

- Avoid exposing the device to rain, moisture, or direct sunlight.
- Connect the HDMI cable to your monitor before switching on the power.
- Wait until the indicator light turns on — this means the system is ready.
- If the display stays blank, check power and camera connections first.

These simple steps help ensure your system starts safely and performs reliably every time.

Important to Know Before Use

- This system records number plates for time tracking and billing at the airport gate.
- Do not move or touch the camera once it is aligned. Misalignment can cause unreadable plates.
- If a plate is too dirty or not readable, you may need to type it in manually later.
- Emergency and official vehicles (police, ambulance, etc.) are recognised as **no charge**.
- Turn off the system only after normal shutdown. Unplugging power while it is running can cause data loss.

3 Main Function

3.1 Main Function

The **Airport License Plate Detection System** is a smart camera-based solution that automatically recognises and records the license plates of vehicles entering and leaving the airport area. It is specially designed for **German license plates** and helps manage short-term parking at the airport gate efficiently and fairly.

When a vehicle enters, the camera captures the license plate and stores it together with the date and time. When the same vehicle exits, the system detects it again and automatically calculates how long it stayed inside the airport area. If the duration is more than **15 minutes**, the system marks it for billing. If the stay is **15 minutes or less**, the parking is free of charge

Certain vehicles such as **emergency services (ambulance, police, fire brigade)** and **official government vehicles** are automatically identified and exempted from all charges. These special plates are pre-registered in the system's database, ensuring that authorised vehicles always pass freely without manual intervention.

All vehicle data, including plate number, entry time, exit time, duration, and payment status, are securely stored inside the device. This ensures transparency, traceability, and smooth traffic flow at both the entry and exit points of the airport

Key Highlights:

- Recognises and records German license plates automatically.
- Calculates parking duration and applies the 15-minute free rule.
- Automatically exempts emergency and government vehicles from charges.
- Works fully offline — no internet or network setup required.
- Stores all records locally for reporting, auditing, or payment.

Plausibility and Manual Verification:

- If the system cannot read a plate clearly (for example, due to dirt, glare, or motion blur), it will display a **"Detection Unclear"** message on the screen.
- In such cases, the operator can manually enter the license plate number using a simple on-screen input field or log sheet.
- The system checks for **duplicate or incomplete entries** to avoid double billing.
- If an entry or exit is missing, the software automatically flags the record for review.
- For fairness, vehicles with unreadable plates are temporarily marked as **"Pending Verification"** until corrected by staff.
- Regular cleaning of the lens and maintaining good lighting reduces the chance of detection errors.

4 Maintenance

4.1 Maintenance

Regular maintenance keeps the **License Plate Detection System** running smoothly and extends its lifetime. This section describes how users can care for the hardware and software to ensure reliable daily operation at the airport gate.

Important

- Turn off power before cleaning or adjusting cables.
- Avoid using sharp objects or sprays near the camera lens.
- Do not block the ventilation openings of the system's case.
- If the device overheats or smells unusual, disconnect power immediately and contact support.

4.1.1 Hardware Maintenance

- **Keep it clean:** Gently wipe the System unit and camera with a dry microfiber cloth. Avoid liquids, direct sunlight, or dust build-up around the device.
- **Check connections:** Ensure all USB, HDMI, and power cables are firmly attached. Loose connections can cause flickering displays or camera interruptions.
- **Maintain good cooling:** Place the system in a ventilated area. If the device feels unusually hot, turn it off for a few minutes or use a small desk fan.
- **Power stability:** Always use the original 5V/4A USB-C power adapter. Unstable power may lead to sudden restarts or data loss.
- **Camera alignment:** Check every few weeks that the camera faces the correct lane and captures clear plates without obstruction.

4.1.2 Software Maintenance

- **Regular check-ups:** Restart the system once every few days to clear memory and refresh processes.

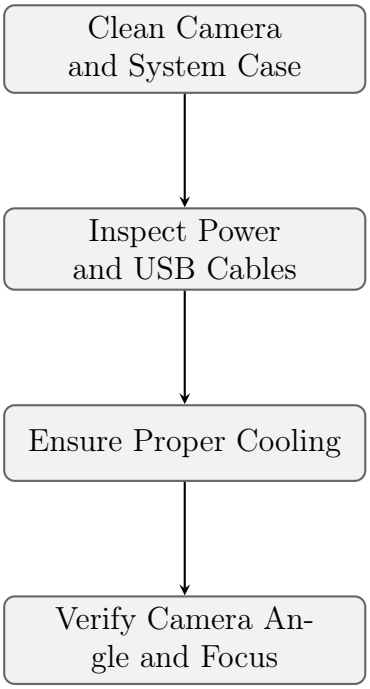

Figure 4.1: Routine hardware maintenance flow.

- **Keep the system updated:** If an update notification appears, allow the System to install recommended system updates.
- **Database management:** Every few weeks, check that the detection log is not full. If storage is low, export or delete older records safely.
- **Model refresh (for developers):** Advanced users can retrain or update the detection model to improve recognition accuracy over time.

4.1.3 Backup and Safety

- **Weekly backup:** Copy the database file (`plates.db`) to a USB drive or computer for safekeeping.
- **Power off correctly:** Always shut down the device through the desktop before unplugging power.
- **Avoid sudden shutdowns:** Interrupting the system during detection can damage stored data.
- **Emergency reset:** If the screen freezes, disconnect power, wait 10 seconds, and reconnect.
- **Check storage space:** Ensure there is enough free space on the System's microSD card. Low storage can slow down performance or prevent new data from being saved.

5 Safety Guidelines

5.1 Safety Guidelines

The following safety guidelines are essential to ensure the reliable, secure, and fault-free operation of the **License Plate Detection System**. They cover electrical, thermal, mechanical, and operational aspects relevant to the embedded AI hardware setupx.

5.1.1 Electrical Safety

- Always use a certified **5V / 4A USB-C power supply** with built-in safety protection against overcurrent and short-circuits.
- Avoid connecting or disconnecting peripherals (camera, HDMI, USB) while the system is powered on.
- Check all cables for damage or wear before use, and make sure they are properly insulated.
- Use grounded power outlets or a surge protector to prevent voltage spikes or static discharge.
- Connecting cables incorrectly may cause permanent damage to the board or its peripherals.
- Avoid operating the system outdoors during rain, lightning, or unstable weather conditions.

5.1.2 Thermal and Mechanical Safety

- Ensure good ventilation around the aluminum case — do not block any openings, as the system relies on passive cooling.
- Keep the device within a safe temperature range (**0 °C to 40 °C**). In hotter environments, use a small fan to maintain airflow.
- Keep liquids, food, or heavy objects away from the unit. Avoid high humidity environments.

- Mount the camera securely and ensure it cannot fall or shift during operation.
- When handling the System board directly, use anti-static precautions (e.g., an ESD wrist strap).

5.1.3 Operational Safety

- Always shut down the system properly using software commands (e.g., `sudo shutdown`) before unplugging power.
- Do not overload the USB ports with high-power accessories or unverified devices.
- Monitor for abnormal heating, flickering, or warning messages — if detected, power off immediately and inspect hardware.
- Avoid sudden reboots or forced shutdowns while detections or database operations are running.
- During cleaning or relocation, ensure the power supply is fully disconnected.

5.1.4 Power and Inference Safety

Continuous AI processing generates both heat and power load. To keep the system safe and stable:

- Periodically check the power draw using a USB power meter or multimeter — it should remain within the adapter's rated limit.
- Avoid keeping the system under heavy load for long hours without monitoring temperature.
- Allow short cooling breaks after extended operation or testing sessions.

6 Troubleshooting

6.1 Troubleshooting

This section lists the most common issues that may occur while operating the **License Plate Detection System**, along with their likely causes and solutions. These checks help maintain system stability, reduce downtime, and ensure uninterrupted license plate recognition.

6.1.1 Hardware and Power Issues

- **System does not power on:**
  - Confirm the **5V / 4A USB-C adapter** is properly connected and the LED on the System is lit.
  - Test a different cable or wall socket.
  - Avoid using unpowered USB hubs to supply power.
- **Device overheats or shuts down unexpectedly:**
  - Ensure proper airflow and use a small fan if necessary.
  - Run `sudo tegrastats` to monitor temperature.
  - Keep ambient temperature below **40 °C**.
- **Camera not detected:**
  - Run `ls /dev/video*` to verify detection.
  - Re-insert the camera or test it on another PC.
  - Use a main USB port, not a low-power one.

6.1.2 Software and Model Issues

- **Low frame rate (FPS):**
  - Use a lighter model (YOLOv8-Nano) or reduce camera resolution to 640×480.
  - Run `sudo nvpmodel -m 0` and `sudo jetson_clocks` for max performance.
  - Close any other GPU-intensive programs.
- **OCR returns wrong text:**

  - Clean the camera lens and ensure good lighting.
  - Adjust image brightness or threshold parameters.
  - Retrain the OCR model with regional plate samples if needed.

6.1.3 Database and Storage Issues

- **Database locked:**
  - Close any parallel process using `plates.db`.
  - Run `sqlite3 plates.db "PRAGMA journal_mode=WAL;"` for safer writes.
  - Restart the app to release file locks.

TODO: Insert image showing database corrupeiont issue.
(Example: screenshot of image showing database corruption issue.)

Figure 6.1: (To be added) Sample troubleshooting interface for real-time error monitoring.

- **Database missing or corrupted:**
  - Restore from backup using `sqlite3 plates.db < backup.sql`.
  - Check free space with `df -h`.
  - Avoid unplugging power during database writes.
- **Storage full:**
  - Delete old logs from `/logs/`.
  - Run `sudo apt clean` to clear unused packages.
  - Expand SD card storage if necessary.

6.1.4 Network or Communication Issues

- **SSH connection fails:**
  - Check IP with `ifconfig` or `hostname -I`.
  - Enable SSH using `sudo systemctl enable ssh`.
  - Inspect router or firewall restrictions.
- **Data not syncing across multiple units:**
  - Confirm all devices have the same network time (`ntpdate`).

- Test connection via `ping <IP>`.
- Use a central database or MQTT broker for multi-unit setups.

Troubleshooting Reference Table

Table 6.1: Common Problems, Causes, and Solutions

Problem	**Possible Cause**	**Suggested Solution**
No power or LED off	Faulty adapter or cable	Replace adapter and verify connections
Camera not detected	Loose USB or bad port	Reconnect or test on another PC
Model not loading	Missing weight file	Re-download or verify file path
Low FPS	High resolution / throttling	Reduce resolution / enable performance mode
Database locked	Concurrent access	Restart app / enable WAL mode
OCR errors	Poor lighting or angle	Improve illumination / refocus camera
System overheating	Blocked ventilation	Add small fan or reposition device

Contact for Technical Assistance

For any technical questions or troubleshooting support, please contact the development team:

- Gautam Ramesh – gautam.ramesh.1@stud-hs-emden-leer.com
- Siddhanth Sharma – siddhanth.sharma@stud.hs-emden-leer.de
- Shubhankar Dumka – shubhankar.dumka@stud.hs-emden-leer.de

Response time: typically within **2–3 working days**.

7 Add Ons

7.1 Proposed Add-Ons

The following add-ons can enhance functionality, usability, and scalability of the **License Plate Detection System**. These modules are optional extensions that allow the system to evolve from a standalone edge device into a smart, networked platform for advanced parking, surveillance, or tolling applications.

- **LoRa or Wi-Fi Module for Remote Access:** Enables wireless communication between multiple units or a central dashboard. Modules such as `ESP32` or `Seeed Wio-E5 LoRaWAN` can provide long-range connectivity without relying on wired Ethernet.
- **Edge AI Model Optimization:** Integrate **TensorRT** or **NVIDIA DeepStream SDK** to accelerate YOLOv8 inference and reduce latency under heavy load conditions.
- **Cloud Synchronization:** Enable secure backup and analytics by uploading detections and logs to cloud services such as **AWS S3**, **Firebase**, or **Azure IoT Hub**. This supports remote monitoring and historical trend analysis.
- **Automated Billing and Access Control:** Integrate the database with **RFID readers**, **QR code scanners**, or automatic **barrier gates**. This can automate entry/exit billing in parking or restricted zones.
- **Thermal Monitoring Sensor:** Attach a **DS18B20** or **MLX90614** sensor to track the System's internal temperature. This allows automatic activation of a cooling fan if temperature exceeds safe thresholds.
- **Solar-Powered Operation:** Deploy the entire setup on a **solar panel and battery pack**, making it suitable for outdoor or remote installations where power lines are unavailable.
- **Voice and LED Notification Module:** Add a small **speaker** or **buzzer** with pre-set voice alerts (e.g., "Vehicle detected", "Free parking period exceeded") and LED indicators for system status or errors.
- **AI-Based Anomaly Detection:** Integrate an additional lightweight model to detect abnormal events — such as missing license plates, vehicle tailgating, or unauthorized parking — using pattern recognition.

- **Dashboard Web Interface:** Create a simple **web-based dashboard** (Flask or Streamlit) accessible over LAN/Wi-Fi, showing live camera feed, current detections, and database insights in real time.
- **Multilingual Support:** Add a configuration module that allows operators to switch between **English**, **German**, or other languages in the interface, making it suitable for broader deployment.
- **NFC-Based Admin Login:** Include a small NFC card reader for secure access to configuration and maintenance menus, ensuring only authorized staff can modify system parameters.

These proposed enhancements can transform the system from a fixed gate-level application into a flexible, intelligent, and scalable AI platform — suitable for airports, campuses, or smart-city environments.