Manual

Sample title for a manual

Author:	Mansour Ahmady Phoulady
Matriculation No.:	7025671
Course of Studies:	Business Intelligence and Data Analytics
First examiner:	Prof. Dr. Elmar Wings
Submission date:	October 19, 2024

University of Applied Sciences Emden/Leer · Faculty of Technology · Mechanical Engineering Department
Constantiaplatz 4 · 26723 Emden · http://www.hs-emden-leer.de

Contents

List of figures i

List of tables ii

Acronyms 1

1 Introduction 2

2 Hardware Overview 3
- 2.1 Specifications . . . 3
- 2.2 Physical Dimensions . . . 3

3 Sketch of Hardware Ports and Connectors 4

4 List Of Parts 5

5 Set Up 6
- 5.1 Required Components . . . 6
- 5.2 Installing the Operating System . . . 6

6 Functions 7

7 Maintenance 8

8 Safety Guidelines 9

9 Troubleshooting 10
- 9.0.1 Device Not Booting . . . 10
- 9.0.2 Overheating . . . 10

10 Add Ons 11

Bibliography 11

List of Figures

3.1 Sketch of Jetson Nano Ports and Connectors 4

List of Tables

Acronyms

1 Introduction

The NVIDIA Jetson Nano J1010 is a small, powerful AI computing device. This manual provides comprehensive details on the hardware, setup, and usage to help developers and users leverage the power of Jetson Nano for AI and embedded systems.

2 Hardware Overview

2.1 Specifications

- CPU: Quad-core ARM Cortex-A57
- GPU: 128-core NVIDIA Maxwell
- Memory: 4 GB LPDDR4
- Storage: MicroSD (minimum 16 GB recommended)
- IO: 4 USB 3.0, HDMI, Gigabit Ethernet, 40-pin GPIO header
- Power: 5V/4A DC or Micro-USB

2.2 Physical Dimensions

The Jetson Nano J1010 has the following physical dimensions:

- Dimensions: 100mm x 80mm
- Weight: 100g

3 Sketch of Hardware Ports and Connectors

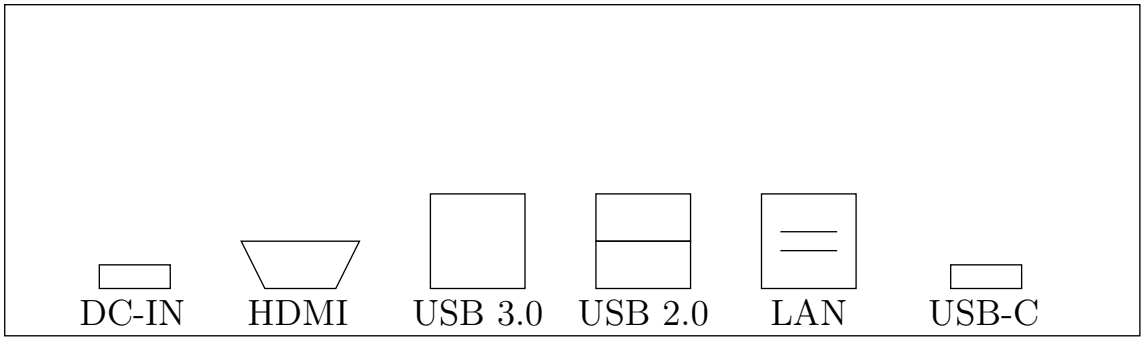

Figure 3.1: Sketch of Jetson Nano Ports and Connectors

4 List Of Parts

The following is a list of components included in the box with the Jetson Nano J1010, as well as accessories required but not included for initial setup:

Included in the Box

- reComputer J1020, including:
  - 4G Jetson Nano module x1
  - Jetson A206 carrier board x1
  - 12V/2A Power adapter (with 5 interchangeable adapter plugs) x1

Required Accessories (Not Included)

- USB Keyboard and mouse
- Display screen

Ensure that all parts are present before starting the setup process. You will need to source the required accessories separately to power on and configure your Jetson Nano system.

5 Set Up

5.1 Required Components

To set up your Jetson Nano J1010, you will need:

- NVIDIA Jetson Nano J1010 board
- MicroSD card (16GB or larger) with pre-installed JetPack SDK
- USB keyboard and mouse
- HDMI monitor
- 5V power supply (4A recommended for maximum performance)

5.2 Installing the Operating System

1. Download the JetPack SDK from NVIDIA JetPack SDK.
2. Flash the image to a MicroSD card using tools like Etcher.
3. Insert the MicroSD card into the slot on the Jetson Nano J1010.
4. Connect the HDMI monitor, keyboard, and mouse.
5. Power on the device by connecting the 5V power supply.

6 Functions

7 Maintenance

8 Safety Guidelines

Troubleshooting
Specifications

9 Troubleshooting

9.0.1 Device Not Booting

- Ensure the power supply is adequate (5V 4A recommended).
- Reflash the MicroSD card using the latest JetPack version.

9.0.2 Overheating

If the device overheats:

- Ensure proper ventilation.
- Add a fan or heatsink for additional cooling.

10 Add Ons