


Base Custom Commands in IGEL OS 12

The commands defined here are executed at the specific execution times during the boot process.

Menu path: **System > System Customization > Custom Commands > Base**

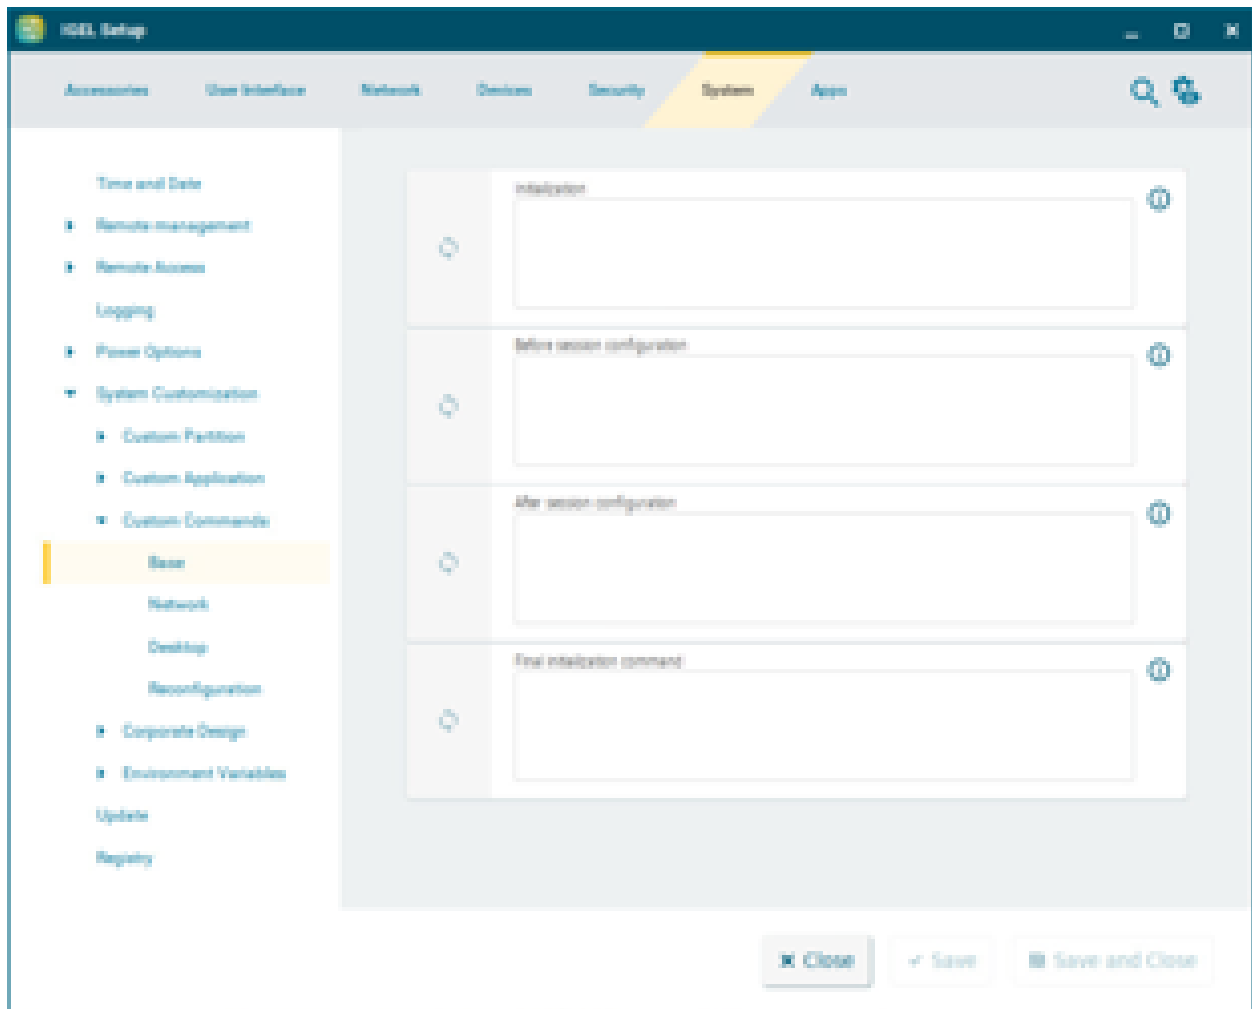

You can define commands for the following execution times:

Initialization

The command is executed during boot, at the beginning of initialization. At this point:

- Not all drivers are loaded, not all devices are available
- Network scripts are not launched, network is not available
- Partitions are available, except for *firefox profile*, *scim data*, *ncp data*, *custom partition*

Before session configuration

The command is executed during boot, before the session configuration. At this point:

- Not all drivers are loaded, not all devices are available
- Network scripts are not launched, network is not available
- Partitions are available, except for *firefox profile*, *scim data*, *ncp data*, *custom partition*
- Sessions are not configured

After session configuration

The command is executed during boot, after the session configuration. At this point:

- All drivers are loaded, all devices are available
- Network is available
- Partitions are available, except for *custom partition*
- System daemons are not launched (CUPS, ThinPrint etc.)
- Sessions are configured
- UMS settings are retrieved but not yet effective

Final initialization command

The command is executed during boot, after the initialization. At this point:

- All partitions are available
- All system daemons are launched
- UMS settings are effective