

What is New - Knowledge Base Updates for IGEL OS 12.8.0

Release notes for IGEL OS Base System and all apps can be found in the [IGEL App Portal](#).


Start Menu with Grid Layout

The start menu can now be displayed in a grid layout, as an alternative to the list layout.

Start Menu in IGEL OS 12

This article shows how to configure the desktop start menu in IGEL OS.

Menu path: **User Interface > Desktop > Start Menu**

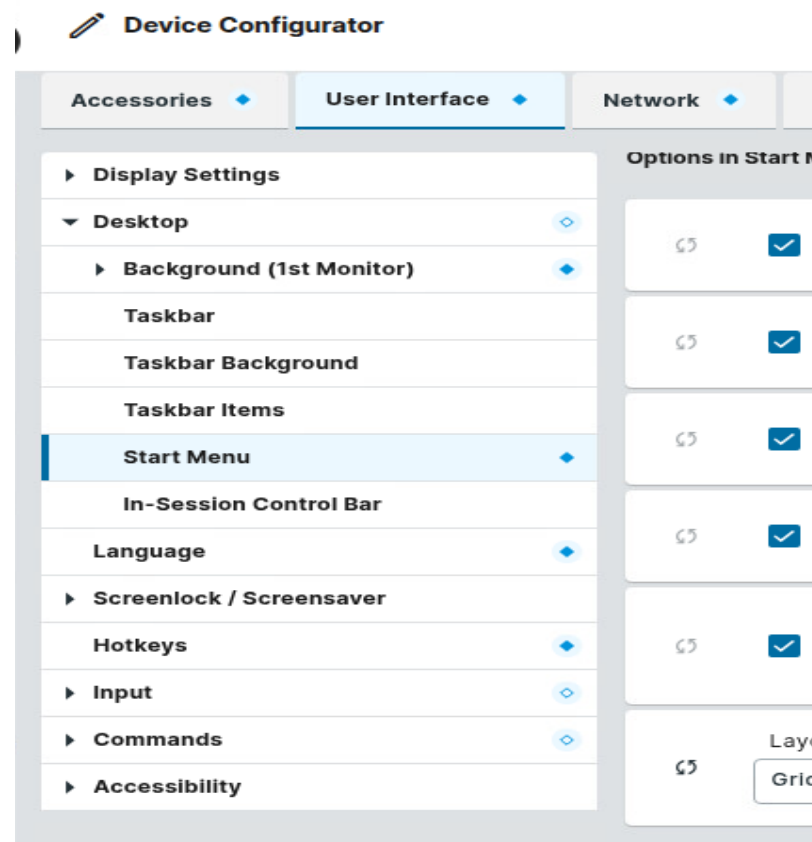

The following options, which are all enabled by default, can be configured to be shown in the start menu.

Screenlock

☒ The



icon is shown. (Default)

For the icon to be displayed, the following parameters need to be enabled:

- at least one login method under **Security > Logon**. For more information, see [Logon Settings in IGEL OS 12](#).
- the **Require password to unlock (screenlock)** option under **User Interface > Screenlock / Screensaver > Options**. For more information, see [Options](#).

Show Shutdown menu button

☒ The



icon is shown. (Default)

System tab

☒ The



icon is shown. (Default)

About

☒ The



icon is shown. (Default)

Show current user name in About, Application Launcher and start menu.

In order for user names to be recognized and passed on, you must configure two settings beforehand:

- Enable using Active Directory/Kerberos under **Security > Active Directory/Kerberos**. For details, see [Active Directory/Kerberos Configuration in IGEL OS 12](#)
- Enable local logon under **Security > Logon > Active Directory/Kerberos**. For details, see [Active Directory/Kerberos - Enable Login in IGEL OS 12](#)

Layout

Defines the initial layout of the start menu. The layout can be changed by the user.

Possible Options:


- **Grid View:** The start menu items are displayed in a grid layout. (Default)
- **List View:** The start menu items are displayed as a list.

igelrmserver Configuration Change

Starting from IGEL OS 12.8.0, the DNS entry `igelrmserver` is only used during the device registration process by default. It can be configured as a fallback if no other UMS addresses are available.

This article shows the configuration of remote management options in IGEL OS 12.

Menu path: **System > Remote Management > Options**

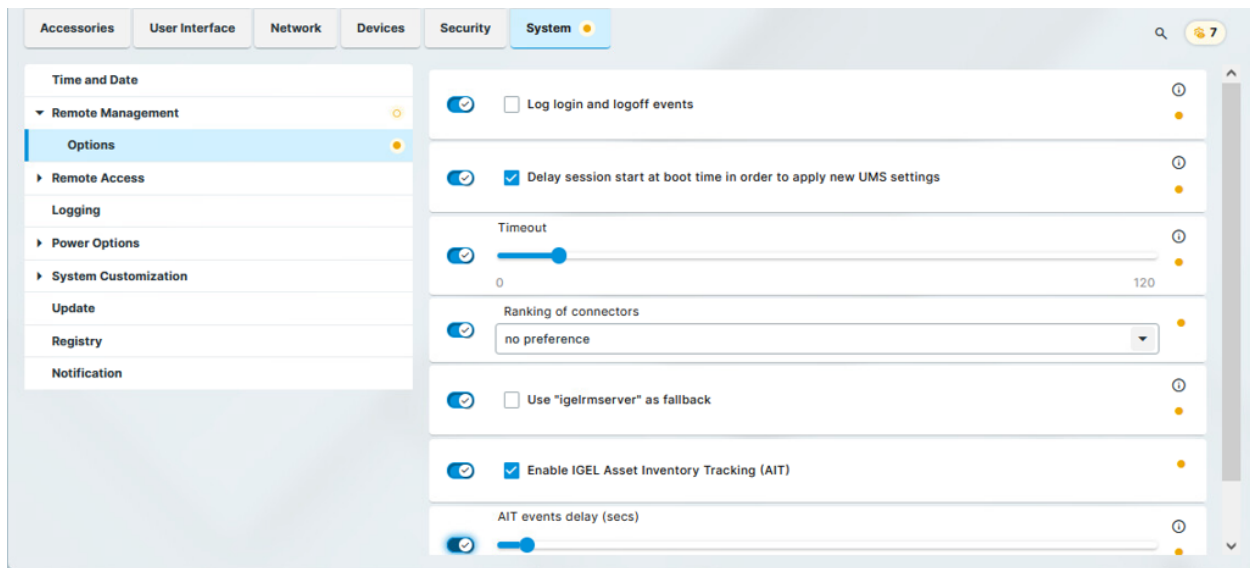

Log login and logoff events

Details of logon and logoff events of the following logon types are sent to the UMS:

- Active Directory/Kerberos
- Single Sign-On
- Local User
- Guest User
- UMS Identity Broker

Events are only logged if the **Enable user logon history** parameter is enabled in the UMS Console, under **UMS Administration > Global Configuration > Misc Settings**.

For more information, see <https://igel-jira.atlassian.net/wiki/spaces/ENLITEUMSP/pages/158218470> Request access.

Login and logoff events are not sent to the UMS. (Default)

The logged events can be found both in the UMS Console and the UMS Web App. For more information, see <https://igel-jira.atlassian.net/wiki/spaces/ENLITEUMSP/pages/158086311> Request access.

Delay session start at boot time in order to apply new UMS settings

If new settings were made in the UMS, the device may receive them during the boot procedure. After the device connects to the UMS at boot time, new settings might be transferred to the device.

The start of the sessions will be delayed until the settings have been transferred or the time limit defined under **Timeout** has been exceeded.

The start of the sessions is not delayed. (Default)

Timeout

Delay in seconds after which the sessions get started during the boot procedure. (Default: 10)

Ranking of connectors

Defines the order in which the device connects to the configured device connectors based on their connector types. Connector types are listed in **System > Remote Management > Universal Management Suite**.

Possible options:

- **no preference** (default)
The device connects randomly to any configured device connector, regardless of the connector type.
- **prefer UMS**
The device will try to connect to the UMS Servers first (that is, the connections listed with the **ums** connector type are contacted first).
The device will only try to connect to an ICG if UMS Servers are not reachable or configured.
- **prefer ICG**
The device will try to connect to an ICG (that is, the connections listed with the **icg** connector type are contacted first).

The device will only try to connect to a UMS server if no ICG is reachable or configured.

Use "igelrmserver" as fallback

Starting from IGEL OS 12.8.0, the DNS entry `igelrmserver` is only used during the device registration process by default. It can be configured as a fallback if no other UMS addresses are available.

To connect to the UMS, the device will first try to connect through all configured UMS and ICG addresses. If those connection do not work and the FQDN of the `igelrmserver` can be resolved to an IP address, the device will use that as a fallback.

To connect to the UMS, the device will try to connect through all configured UMS and ICG addresses. The device will not use the `igelrmserver` address as a fallback option. (Default)

Enable IGEL Asset Inventory Tracking (AIT)

IGEL Asset Inventory Tracking (AIT) has the following requirements:

- Universal Management Suite (UMS) 12.08.100 or later
- Valid Enterprise license

The endpoint device sends data about all connected USB and Bluetooth devices to the UMS. The data is sent if one of the following applies:

- The device boots
- A periphery device is plugged in/off
- The UMS triggers a refresh of the asset information

No data is sent to the UMS.

AIT events delay (secs)

The time delay in seconds after which an event, such as connecting a headset, is communicated to the UMS. This can be used to accumulate several events in one message to the UMS, which saves resources: All events that occur after an event has started the delay timer and before the delay timer has expired are sent as one message together with the first event. If the delay is set to 0, each event is sent immediately in a single message to the UMS:

Possible values: 0 ... 180

Language & Keyboard Layout Tray App

New tray application added to manage system language and keyboard language settings.

Tray Apps in This Article



The tray icons change dynamically to represent the current setup or status. If you hover over the icons, tooltips are displayed with further information.

--	--	--

		Configure monitor layout, resolution, and other display settings.

--	--	--

--	--	--

--	--	--

--	--	--

--	--	--

Information for Administrators


- The system tray and most of the tray apps are available to the users by default.
- You can enable and disable the system tray and the tray apps under **User Interface > Desktop > Taskbar Items**. For details, see [Taskbar Items in IGEL OS 12](#).

- The access to tray apps on lockscreen is configured separately under **User Interface > Desktop > Screenlock / Screensaver > Taskbar**. For details, see [Taskbar in Locked Screen in IGEL OS 12](#).
- Some configurations available in the tray apps are connected to configurations in the IGEL Setup. For example, printer configurations applied through profiles cannot be modified through the tray app.

UMS Tray App

Access the Tray App

→ Open the UMS tray app by clicking the UMS tray icon. The icon is dynamic and represents the state of the connection as described below.

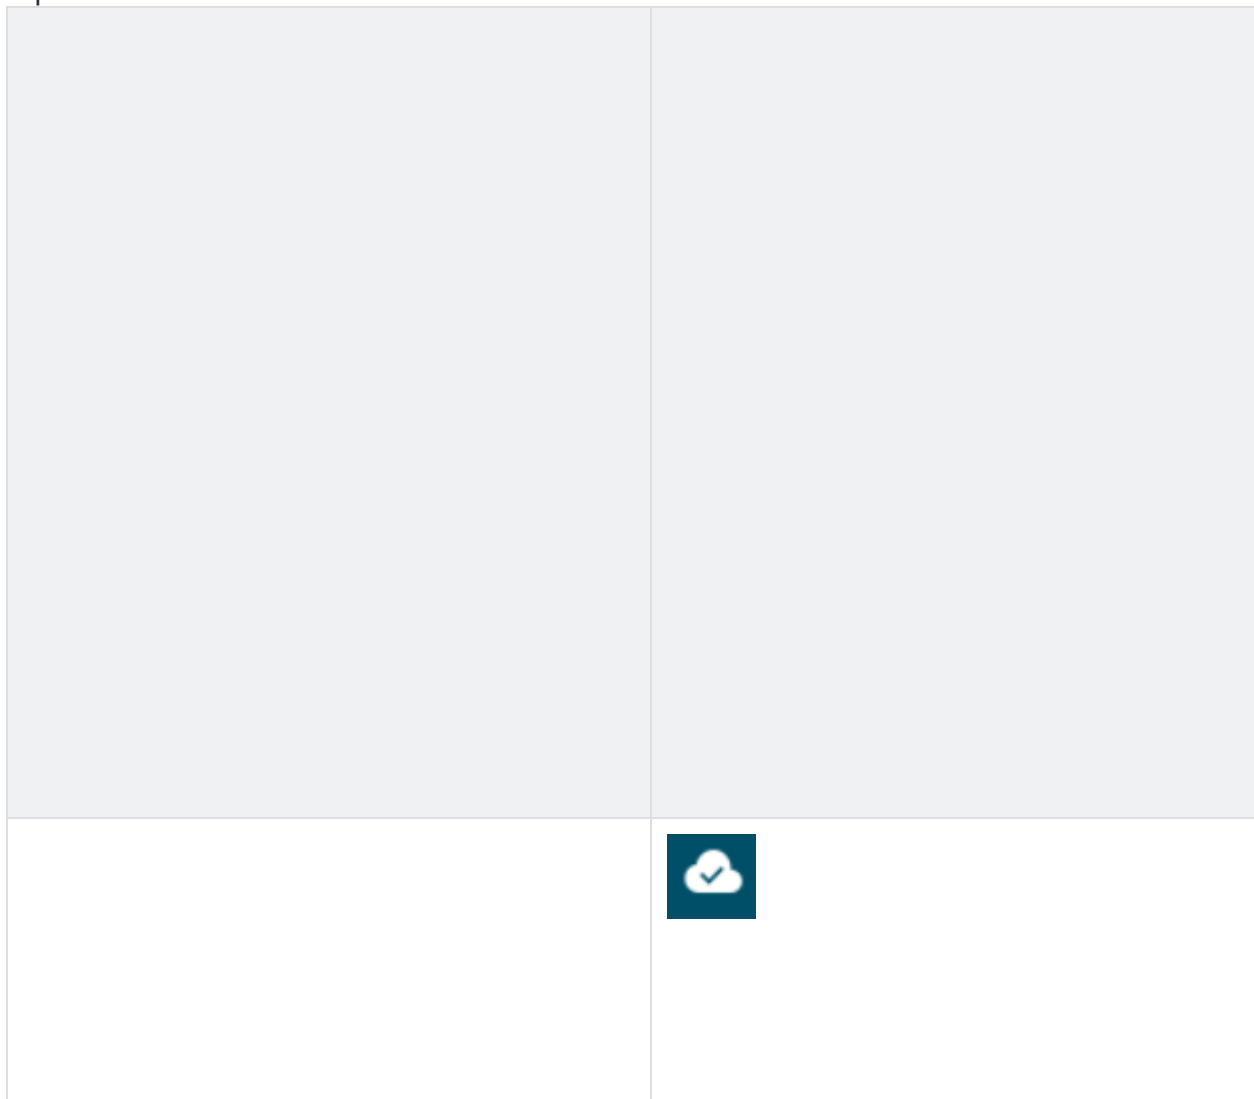

Get Information on the UMS Connection

→ Check basic information of the connected Universal Management Suite (UMS), like **IP** address and **Hostname** in the tray app.

Wi-Fi Tray App

Access the Tray App


→ Open the Wi-Fi tray app by clicking the Wi-Fi tray icon. The icon is dynamic and represents the state of the connection.



Automatic Network Scan

When you open the Wi-Fi tray app, a search for available networks starts automatically. During the search, you can see a visual feedback of the ongoing scan and the list of available networks updates continuously. The search stops automatically after a few seconds and the list then remains unchanged until a new scan is triggered or the tray app is reopened.

- The connected network is shown at the top of the list. All other networks are listed in order of signal strength.
- Previously configured networks are marked with a star icon.
- The currently connected network is marked with a tick icon.

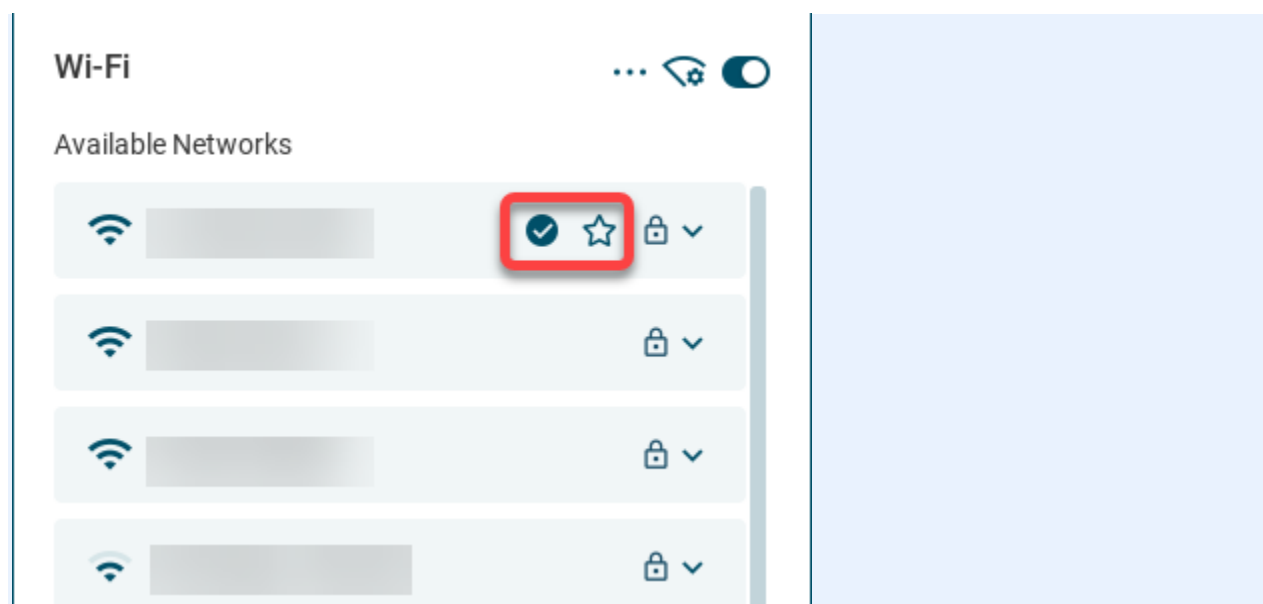

Action Icons

Using the icons at the top of the window, you can:

→ Use the toggle switch of the Wi-Fi tray app to turn Wi-Fi on and off.




→ Add a hidden network.

→ Scan for Wi-Fi networks to refresh the list of available networks.

→ Check the details of the connected network.

→ Switch between the **Known Networks** list and the **Available Networks** list.

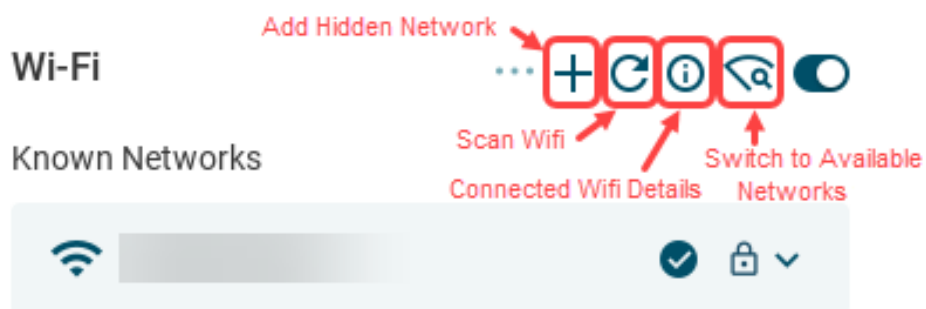

If the **Automatic switch of network connection** parameter is enabled under **Network > Common Settings**, the toggle can get disabled. For more information, see [Common Settings](#).

Connect to Available Wi-Fi Networks

To connect to a network:

Click for instructions...

2.

Edit and Delete Known Networks

To edit or delete a network:

Click for instructions...

1.

Connect to Hidden Networks

To connect to a hidden network:

Click for instructions...


2.

LAN Tray App

Access the Tray App

→ Open the LAN tray app by clicking the LAN tray icon.


The tray icon is dynamic and represents the state of the connection as described below. The state of the connection is determined by the network manager. The network manager periodically requests <http://connectivity-check.ubuntu.com/> to check the connectivity.



--	--

Manage LAN Connections

- Select a network connection to see information on the network.
- Use the buttons to connect to and disconnect from LAN networks.

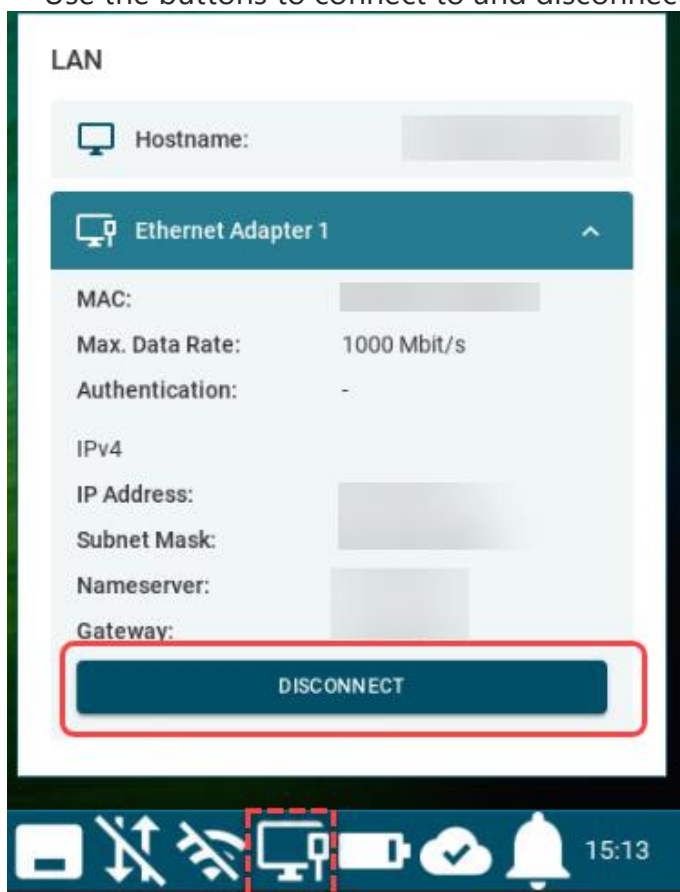

The saving network credentials for Ethernet IEEE 802.1X connections requires further administration, see [How to Configure the Permanent Storage of User-Provided Network Credentials \(Wi-Fi and Ethernet\)](#).

Mobile Broadband Tray App

Access the Tray App

→ Open the tray app by clicking the mobile broadband tray icon. The tray icon is dynamic and represents the state of the connection:



Starting from OS version 12.4.1, on devices supporting mobile broadband physical SIM and eSim as well, an automatic switch to the physical SIM slot is performed if eSim has no profile assigned.


Switch WWAN On and Off

→ Use the toggle to switch the WWAN connection off and on.

If the **Automatic switch of network connection** parameter is enabled under **Network > Common Settings**, the toggle can be disabled. For more information, see [Common Settings](#).

Get Information on Mobile Broadband Connection

The mobile broadband tray app displays details about the WWAN network connection, like the network **Provider** and the **Signal Strength**, and provides an option to easily connect / disconnect and configure networks.

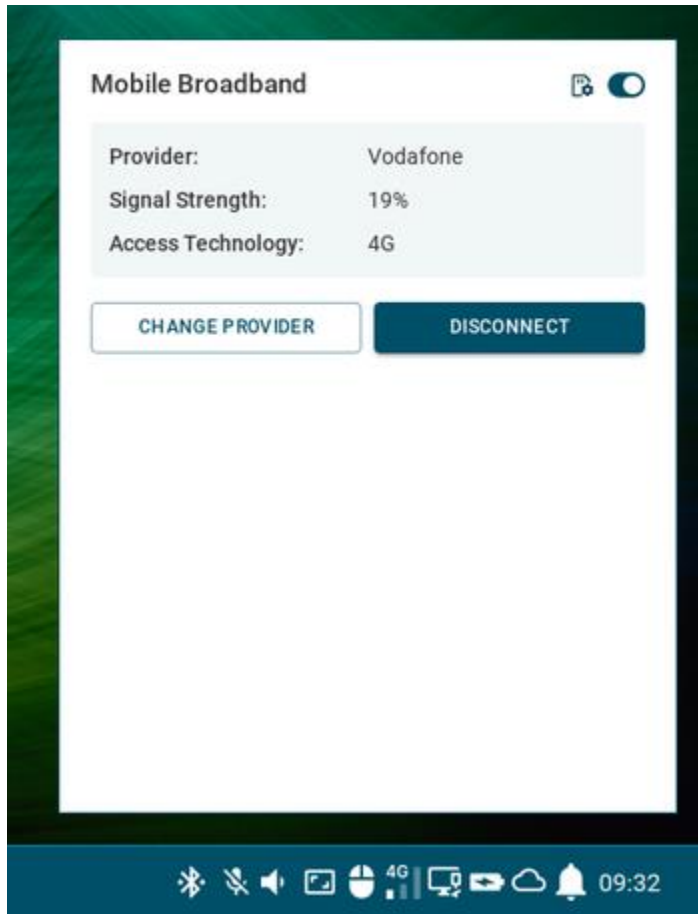

Configure the WWAN Network

→ Click **SIM Details** to display the details and to configure the settings that are enabled for the tray app.



Click for details on configuration..

Edit the Network Provider

→ Click **Change Provider** to edit the network provider information.

Click for details on configuration...

Display Tray App

Automatic Display Profile

When the endpoint device is connected to different environments, such as when the user switches between different workplaces, it will attempt to store each monitor setup.

Access the Tray App

→ Open the display tray app by clicking the tray icon: 

The icon is dynamic in multi-monitor environments and represents the configured **Multiple Display Mode**.


The basic window opens with different content for single display and multiple display setups.

Manage a Single Display

If you have a single display, you have the following configuration options:

Change the Multiple Display Mode

→ Change the **Multiple Display Mode** by clicking the icons. The currently selected mode is shown under the icons.

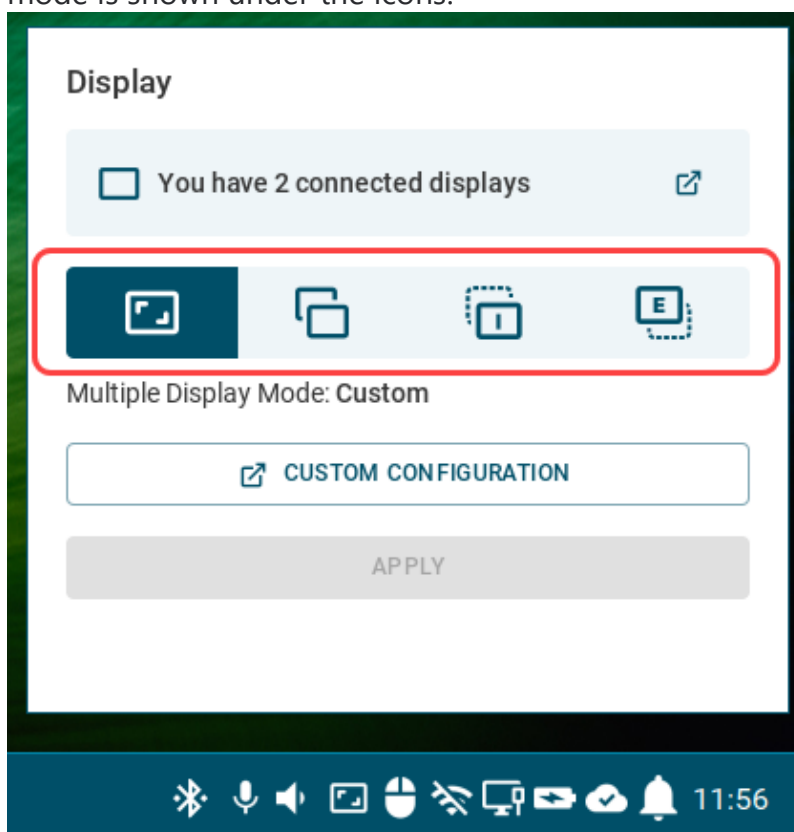


You have the following Multiple Display Mode options:

Temporary Effect

The **Multiple Display Mode** option in the basic window can be used to quickly change the display setting temporarily. After reboot or suspend, the **Multiple Display Mode** will reset to the default **Custom**.

If you want display configurations to be persistent, select **Custom** as **Multiple Display Mode** and click **Custom Configuration** to change the settings in the display configuration window.


To apply the changes you made, click **Apply** in the bottom right corner. After clicking **Apply**, you need to confirm keeping the changes in a dialog. After the timeout, settings revert to the previous configuration.

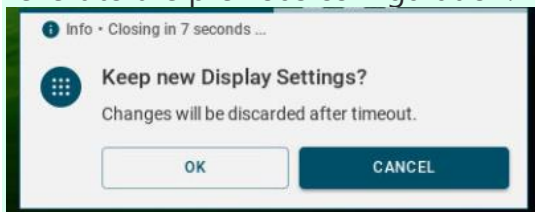

Access the Custom Configuration Window


→ Click the **You have X connected displays** or the **Custom Configuration** button to open the display configuration window.

Display

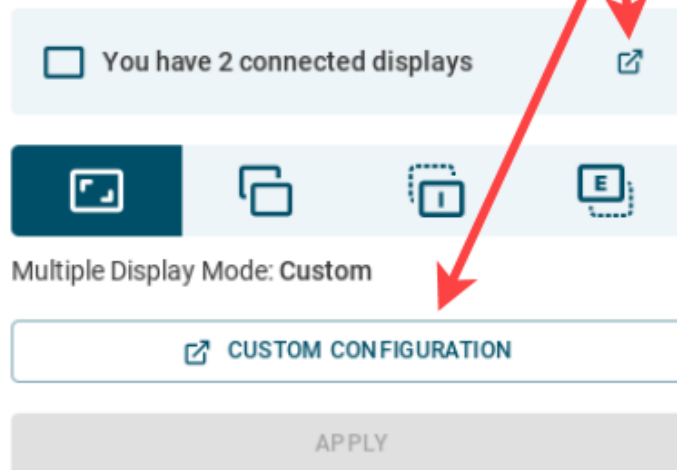


Display information is always available in the display configuration window, but configuration is only possible if you select **Custom** as **Multiple Display Mode**.

Configure the Displays in the Display Configuration Window

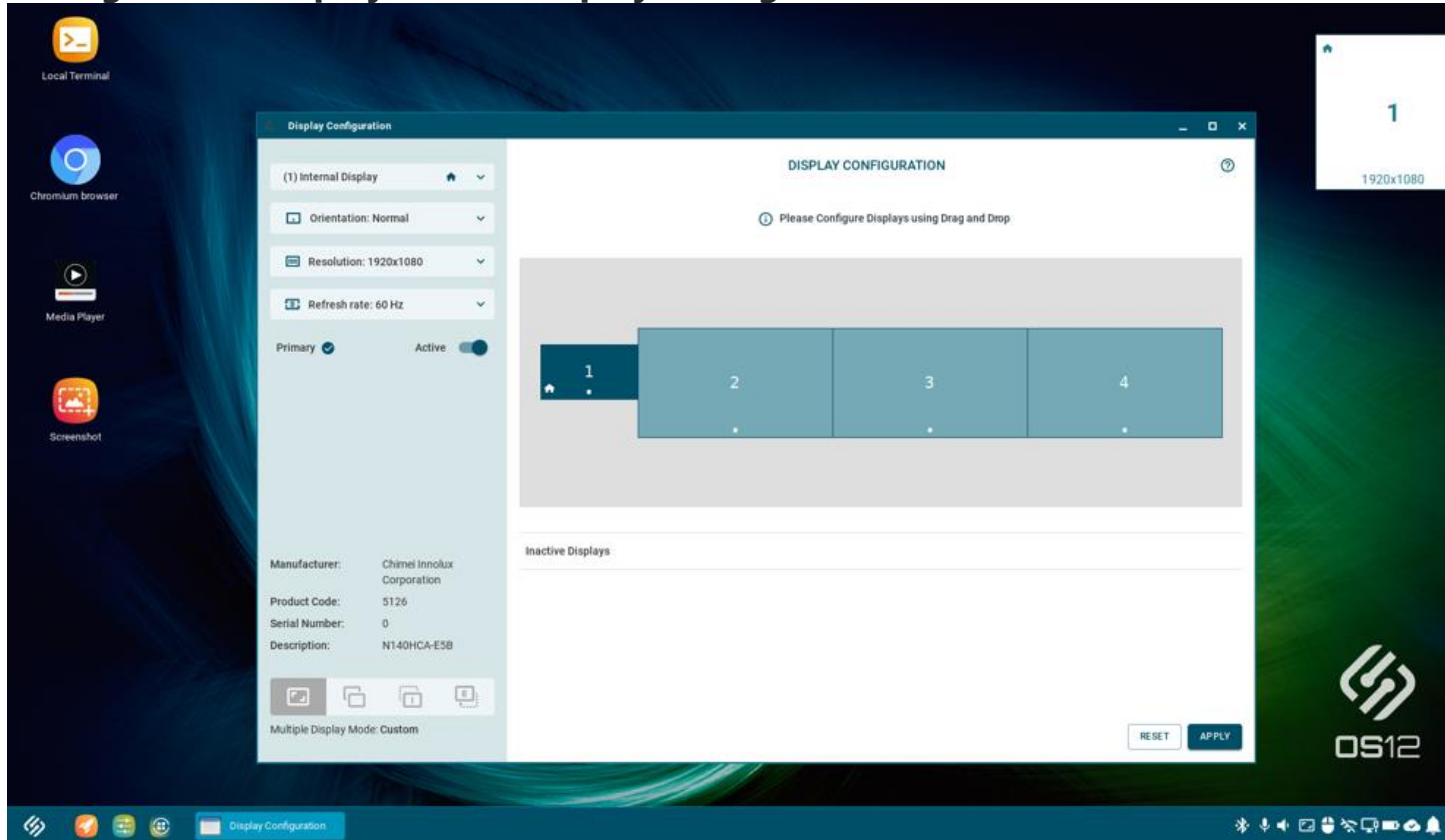

Display information is always available in the display configuration window, but configuration is only possible if **Custom** display mode is applied in the basic window. You can see the selected mode in the bottom left corner.

To apply the changes you made, click **Apply** in the bottom right corner. After clicking **Apply**, you need to confirm keeping the changes in a dialog. After the timeout, settings revert to the previous configuration.

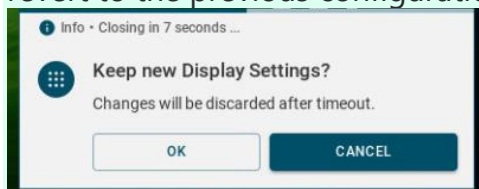

Click for a detailed description of the available actions...

-

Mouse & Touchpad Tray App

Access the Tray App

→ Open the tray app by clicking the tray icon.

The icon is dynamic and represents the detected device:

- If a mouse is detected, the following icon is shown: 
- If a touchpad is detected, or both a mouse and a touchpad are detected, the following icon is shown: 

Configure the Mouse in the Mouse & Touchpad Tray App

Mouse & Touchpad

☒ Primary Button ☒ Left ☐ Right

Pointer Speed

Slow Fast

MOUSE TOUCHPAD

Double-click Speed

Slow Fast

click to test

Scrolling Direction

☒ Traditional ☐ Natural




You can use the mouse & touchpad tray app to configure the following mouse settings for the detected device:

More...

Configure the Touchpad in the Mouse & Touchpad Tray App

Mouse & Touchpad

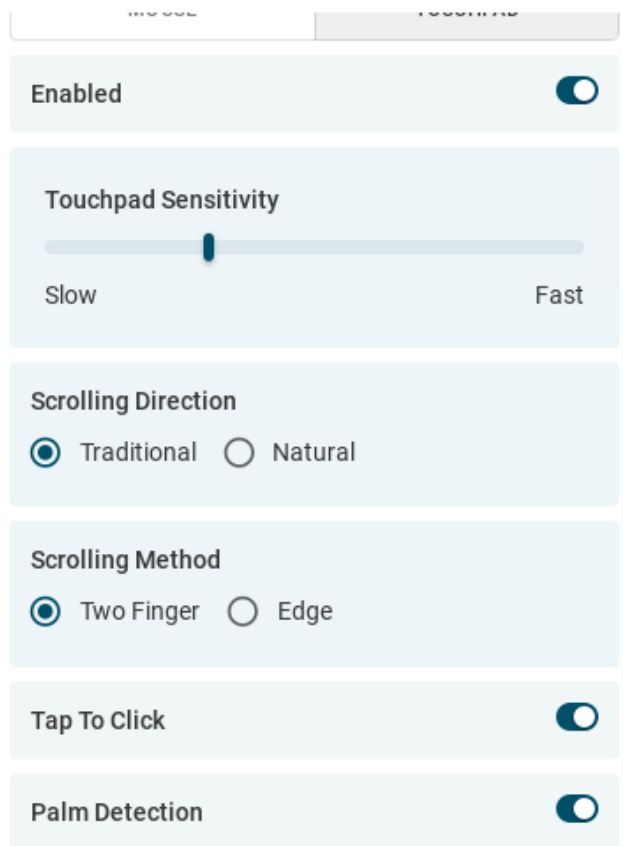

You can use the mouse & touchpad tray app to configure the following touchpad settings for the detected device:

More...

Battery Tray App

Accessing the Tray App

→ Open the tray app by clicking the battery tray icon.

The icon is dynamic and represents the state of the battery:

- When the battery is charging, the following icon is shown:
- When the battery is discharging, the following icon is shown:

Get Battery Information

The battery tray app shows information for all available batteries, including multiple internal batteries and batteries of connected bluetooth devices.

Change the Powerplan

You can set the CPU power plan regulation under **Powerplan**.

The CPU power plan is set for the current mode in use (AC or Battery). The CPU power plan can be set for all modes under **System > Power Options > System**. For the description of the power plans, see [System Power Options in IGEL OS 12](#).

Sound Tray App

Access the Tray App

→ Open the sound tray app by clicking the following icons:

When the devices are muted the icons change accordingly to:

Manage Audio Devices

→ Use the dropdown menu to select which output/input device is to be used.

→ Set the volume for the selected output/input device using the slider.

→ Enable/disable overamplification. If the overamplification parameters are set by your administrator under **Devices > Audio > Options**, you cannot change the setting from the tray app.

→ Use the **Mute All** button to mute all the output devices.

Bluetooth Tray App

Access the Tray App

→ Open the B

luetooth tray app by clicking the tray icon: 

Switch Bluetooth On and Off

→ Use the toggle button at the top to switch Bluetooth on and off.

Connect a Bluetooth Device

1. Go to the **Available Devices** view by clicking the button in the top right corner:
2. Select a device from the list of devices that are available to connect and click **Connect**. If the device needs a PIN for the pairing process, it will be displayed above the **Connect** button during the connect process.
3. Some bluetooth devices have no names assigned to them. If you enable **Show Unnamed Devices**, you can see these devices in the list with their MAC address displayed.

The tray app is constantly scanning for available devices as long as the dialog is open.

Manage Connected Bluetooth Devices

1. Go to the **Paired Devices** view by clicking the button in the top right corner:
2. Select a device from the list and click **Connect**, **Disconnect** or **Unpair**.

The status of the devices is marked next to the drop-down arrow. The connected devices are marked with a tick. The paired devices are marked with the link icon.

Printer Tray App

Access the Tray App

→ Open the printer tray app by clicking the tray icon: 

Connect a New Printer

1. Go to the **Available Printers** view by clicking the button in the top right corner:
2. Here, you have two options to connect a printer.
 - a. **Option 1:** You can add a printer by clicking **+**. Provide the configurations of the printer and click **Connect**.

The configuration options change according to the selected **Device Type**. You have the following options to set as connection type:

- i. USB
 - ii. TCP
 - iii. IPP
 - iv. Parallel
 - v. Serial
- b. **Option 2:** You can scan the network for printers, by clicking the scan button. Then, select a printer and click **Connect**.

Manage Connected Printers

1. Go to the **Connected Printers** view by clicking the button in the top right corner:
2. Select a printer under **Connected Printers**.
You can use the Search bar, to search in the list

3. Here you can:
 - a. print a test page from the selected printer
 - b. delete the selected printer
 - c. set the selected printer as default printer and save

Only one default printer can be set (i.e. setting a printer to default means that an existing one loses this property.) If there is a default printer set by the admin, the user cannot set another printer as default.

If a printer is set by your administrator, you cannot delete or modify it. But you can still print a test page.

Manage Printing Jobs

Under **Jobs**, you can see the list of printer jobs with status info (like **Processing**, **Pending**, **Aborted**). When an error occurs, the error messages are displayed under the job.

→ Use the trash icon to cancel a printer job.

OpenConnect VPN Tray App

Access the Tray App

→ Open the OpenConnect VPN tray app by clicking the icon.

Get Information of VPN Connection

You can find the status information of the VPN connection under **More Details**. The status is also shown in the displayed tray icon .

Disconnect from VPN

You can click **Disconnect** to disconnect from the OpenConnect VPN connection.

For more information on the OpenConnect VPN App, see [OpenConnect VPN](#).

Language & Keyboard Layout Tray App

Access the Tray App

→ Open the language & keyboard tray app by clicking the tray icon with the keyboard layout abbreviation. The abbreviation represents the in-use keyboard layout. For example:  (French keyboard layout with variation CH)

Change System Language

1. Select a language from the dropdown under **Display Language** and click **Change Language**.
2. Confirm to apply the changes.

The changing of the language restarts the desktop and the running sessions.

Change Keyboard Layout

→ To change the keyboard layout select one of the available **Keyboard Layouts**. The available layouts are defined centrally by the UMS through the applied profiles.

You can see the keyboard layout abbreviation change in the taskbar accordingly. After reboot, the keyboard layout reverts to the default keyboard layout. The default keyboard layout is the configured through a profile under [User Interface > Input > Keyboard](#).

The selectable keyboard layouts can be added through profiles as additional keyboard layouts under [User Interface > Input > Additional Keyboard Layouts](#).

Configure the Language & Keyboard Layout Tray App

The following configurations can be applied through profiles:

- enable/disable the tray app with the option **Show keyboard layout switcher in taskbar** under [Language Settings in IGEL OS 12](#).
- enable/disable the display language change with the option **Show language setting together with keyboard layout in tray-app** under [Language Settings in IGEL OS 12](#).


If the **Language** is configured under [User Interface > Input > Language](#), it cannot be changed using the tray app. If you want to enable users to set the system language, make sure to set this back to default. Otherwise, they will see the following message.

TPM PCR Support For New HP Devices

Trusted Platform Module (TPM) Platform Configuration Register (PCR) support added for HP t740 and t755.

If you want to strengthen the security of your endpoint device, you can deploy strong device encryption that is derived from a user password. The encryption is applied to all partitions that can contain user data, e.g. browser history or Custom Partitions.

Menu path: **Security > Device Encryption**

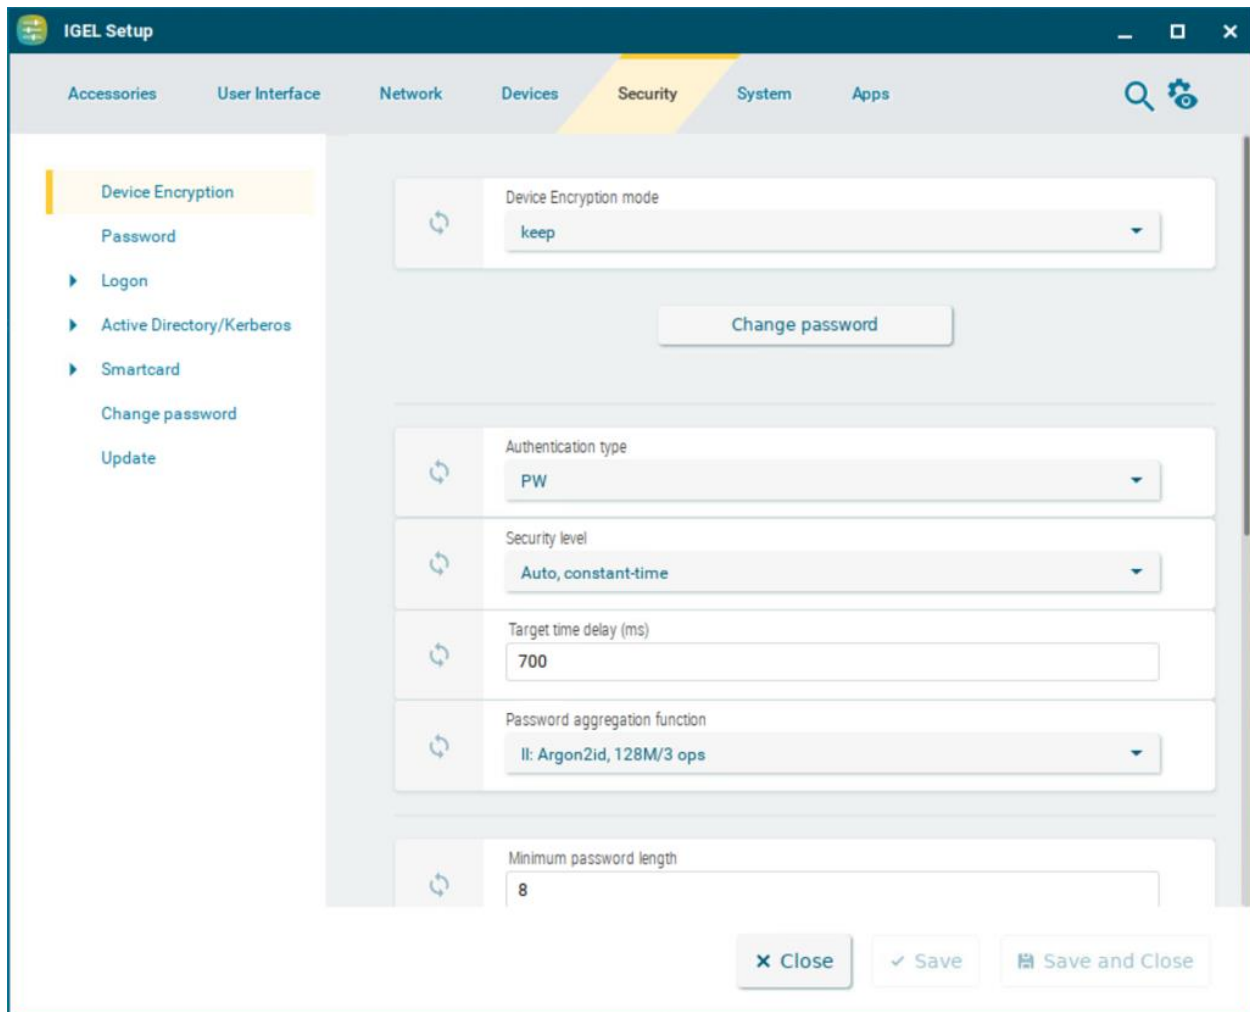

Device encryption mode

Possible options:

- **Keep:** The default encryption scheme is maintained. If a password has been set, it will remain unchanged. (Default)
- **Activate:** The device will be re-encrypted using strong encryption methods when the user enters the password for the first time. It is strongly recommended to enforce the use of a strong password; see [Minimum password length](#) and the subsequent password settings. The re-encryption may take about 10 to 60 seconds; the duration depends on the hardware performance and the size of the Custom Partition.
- **Deactivate:** The device will be re-encrypted back to the default device encryption scheme on the next boot. The re-encryption may take about 10 to 60 seconds.

If you want to switch back to the default device encryption, you must have the password. If the password gets lost, you must reinstall IGEL OS on the device, for example, using the OS Creator. For detailed instruction, see [Installing the Base System via IGEL OS Creator \(OSC\)](#).

Change password

Only applicable if device encryption is activated. Click the button to change the password for device encryption.

Authentication type

Possible options:

- **PW:** Password only authentication.
- **TPM+PIN:** TPM is a physical chip in the device, specifically designed to securely store cryptographic keys (and other data). IGEL supports the TPM 2.0 implementation, so the used hardware device is also required to support TPM 2.0. If TPM is used then you will need a further authentication method in order to finish booting and unencrypting the device. In order to access the key in the TPM, the user needs to insert a PIN first.
- **TPM PCR:** The TPM chip automatically validates the integrity of the hardware. Only supported by a few devices.
- **TPM PCR+PIN:** The above mentioned methods combined.

Devices That Support TPM PCR

Trusted Platform Module (TPM) Platform Configuration Register (PCR) is only supported by the following devices:

- HP t640
- HP t740 (Supported with IGEL OS version 12.7.6 or higher. Downgrades below 12.7.6 are not supported.)
- HP t755 (Supported with IGEL OS version 12.7.6 or higher. Downgrades below 12.7.6 are not supported.)
- IGEL UD 3 (M350C with Bios version V:3.D.13A-05232022 or higher)
- IGEL UD 7 (H860C with Bios version 3.6.13A-05202022 or higher)

If **TPM PCR** is selected on a device that does not support it, the authentication type falls back to **PW** (password authentication).

If **TPM PCR+PIN** is selected on a device that does not support it, the authentication type falls back to **TPM+PIN**.

Security level

Possible options:

- **Auto, constant-time:** The password aggregation function that fits best with the defined **Target time delay (ms)** is selected and the manual selection under **Password aggregation function** is ignored. (Default)
- **Auto, at least level:** The security level will be at least as high as the value selected by **Password aggregation function**; if the **Target time delay (ms)** allows for a higher security level, the higher security level will be used.
- **Manual:** The **Password aggregation function** can be set manually, irrespective of the delay time specified by **Target time delay (ms)**.

Target time delay (ms)

Maximum time that should be consumed by the password aggregation function. This delay is effective when the user enters the device encryption password on boot or changes the device encryption password. (Default: 700)

Password aggregation function

Security level of the encryption.

Possible options:

- **I: Argon2id, 8M/7 ops**
- **II: Argon2id, 128M/3 ops** (Default)
- **III: Argon2id, 256M/3 ops**
- **IV: Argon2id, 512M/3 ops**
- **V: Argon2id, 1024M/4 ops**
- **VI: Argon2id, 128M/4 ops**

Minimum password length

Minimum number of characters the password must be composed of. (Default: 8)

Unwanted strings in password (comma separated)

Comma-separated list of strings that must not be in the password

The password must contain

Defines how many of the subsequent minimum requirements (minimum amount of lower case letters, etc.) must be fulfilled.

Possible options:

- **All** (Default)
- **2 of**
- **3 of**

Minimum amount of lower case letters

Defines at least how many lower case letters must be in the password.

Minimum amount of upper case letters

Defines at least how many upper case letters must be in the password.

Minimum amount of numbers

Defines at least how many numbers must be in the password.

Minimum amount of special characters

Defines at least how many special characters must be in the password.

Special characters allowed

Lists all the non-alphanumerical characters without separators that are allowed in the password.

Further Accessibility Configurations and Tray App

Added further accessibility configurations in **IGEL Setup > User Interface**.

Accessibility Configuration in IGEL OS 12

The following accessibility settings can be configured in IGEL OS 12.

Themes

Color Filter

Screen Magnifier

Screen Reader

Mouse

Keyboard Mouse


[Keyboard Sensitivity](#)

Themes

This article describes how you can configure themes in IGEL OS.

The settings in this section are only related to accessibility. By clicking on **Related pages** in the top right corner, you will be redirected to the regular desktop settings as described in [Desktop Settings in IGEL OS 12](#).

Menu path: **User Interface > Accessibility > Themes**

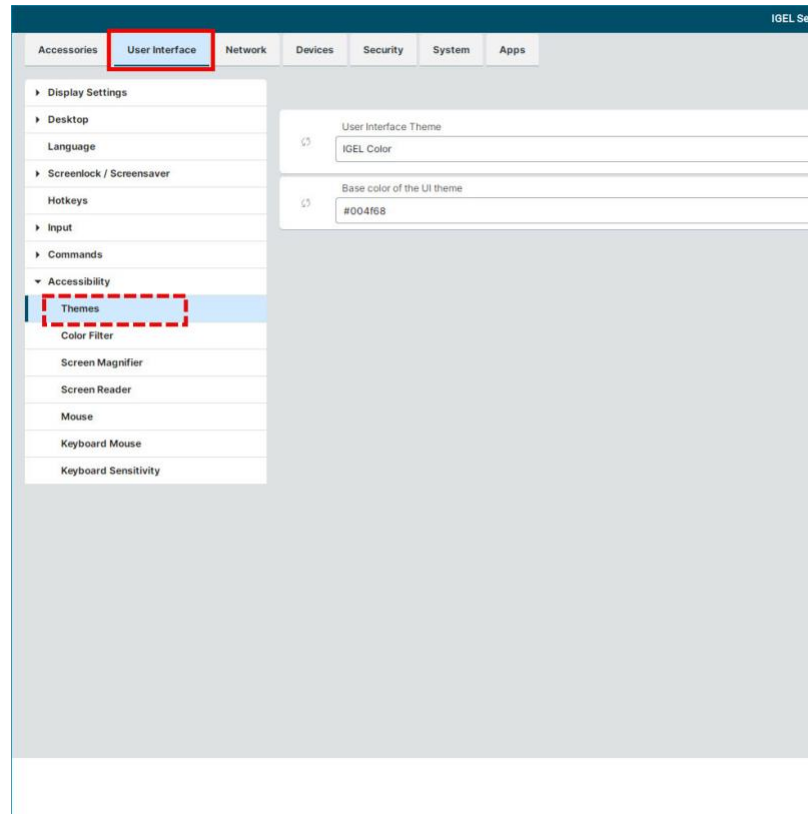

User Interface Theme

You can change the User Interface Theme to one of the following options:

- IGEL Dark
- IGEL Light
- IGEL Color
- IGEL High Contrast
- IGEL High Contrast Inverted
- Custom Colors

Base color of the UI Theme




When you change the User Interface Theme, the base color changes as well. You can also manually set the base color of the UI Theme either by manually entering the color code.

You can also click on the color icon to the right to open the **Select Color** window. Choose your desired color or create a custom color by clicking on




. Confirm your choice by clicking **Select**.

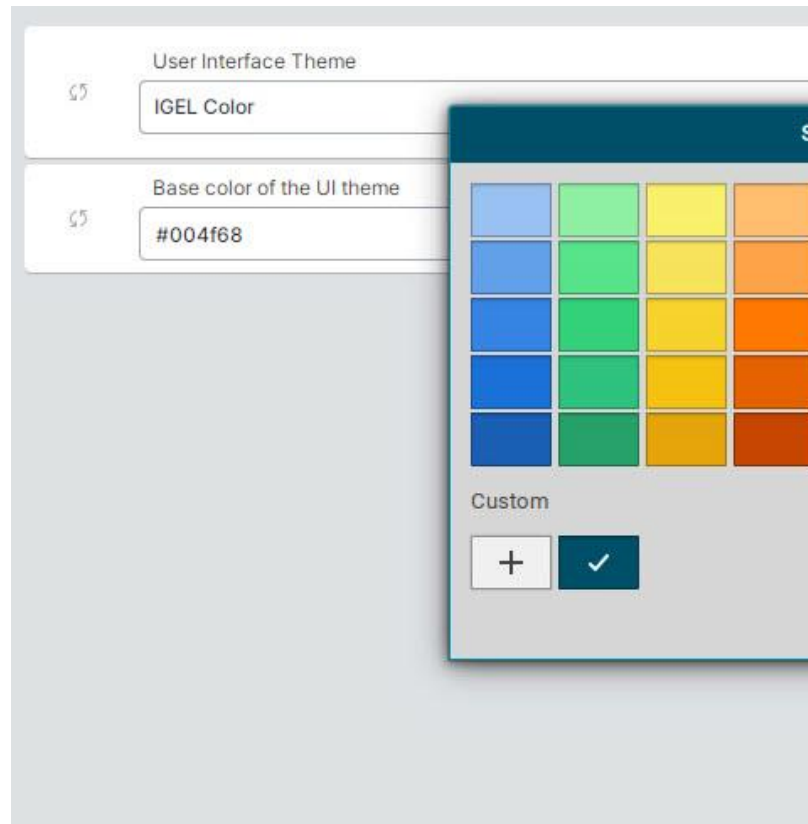

Screen Magnifier

This article describes how to use and modify the screen magnifier.

Menu path: **User Interface > Accessibility > Screen Magnifier**

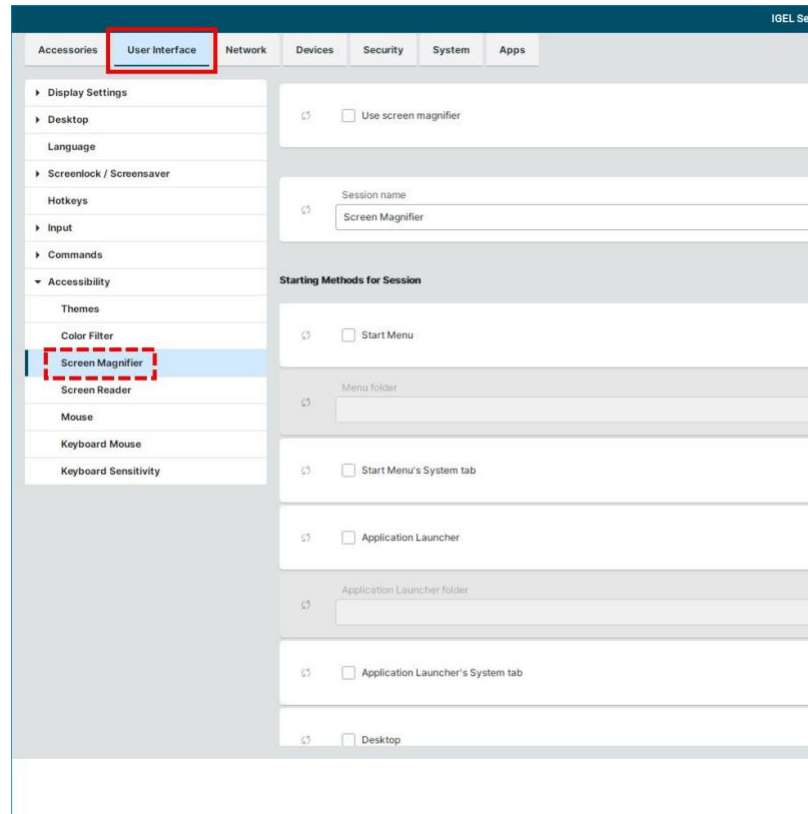

Use screen magnifier

☑ A window opens and shows an enlarged part of the screen depending on the mouse position. By default, the magnifier follows the mouse. A system tray app



appears after enabling the screen magnifier. Clicking on it will close and open the screen magnifier.

Configuration options within the screen magnifier window:



Follow Mouse (M)

This option is enabled by default. The magnified area follows the mouse.

Fixed Center (F)

The magnified area stays at a fixed position on the screen. Dragging the window to a different spot changes the magnified area to be displayed.

Zoom (+/-)

Set the zoom level from 1x to 16x. By default, this value is set to 2x.

Minimap

☒ Enables a minimap at the bottom of the window. It shows the magnified area on the screen.

☐ Minimap is disabled. (Default)

Stay on top

☒ The magnifier window always stays on top of other screens. (Default)

☐ The magnifier window behaves like a normal window. It can be covered by other applications.

Smoothing

☒ Reduces pixelation and jagged edges in the magnified area.


- ☐ Smoothing is disabled. (Default)
- ☐ Screen magnifier is disabled. (Default)

You can configure the screen magnifier to be activated via icons in the Quick Start Panel and on the desktop or via hotkey.

The starting methods parameters are described under [Starting Methods for Apps](#).

Screen Reader

This article describes how to use and modify the screen reader.

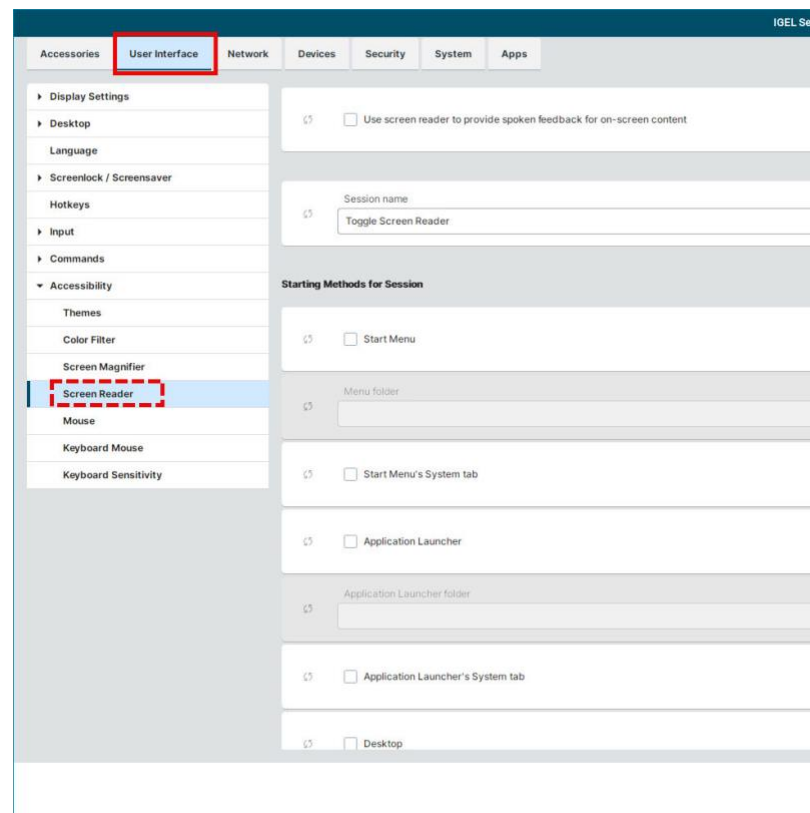

- ☒ Enable screen reader.
- ☐ Screen reader is disabled. (Default)

You can configure the screen reader to be activated via icons in the Quick Start Panel and on the desktop or via hotkey.


The starting methods parameters are described under [Starting Methods for Apps](#).

Mouse

This article describes how you can adjust mouse settings.

The setting in this section is only related to accessibility. By clicking on **Related pages** in the top right corner, you will be redirected to the regular mouse settings as described in [Mouse Settings in IGEL OS 12](#).

Menu path: **User Interface > Accessibility > Mouse**

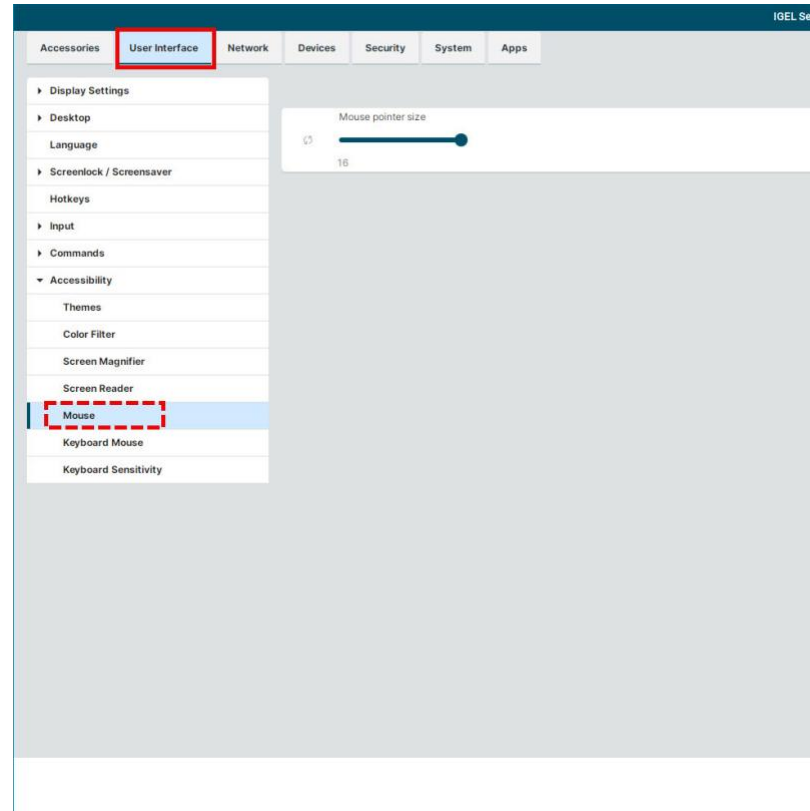


Mouse pointer size

Modify the mouse pointer from the bar by dragging or by clicking in the bar. The available mouse pointer sizes range from 16 to 94 (Default size: 24).

Keyboard Mouse

This article explains how to use the keyboard mouse.

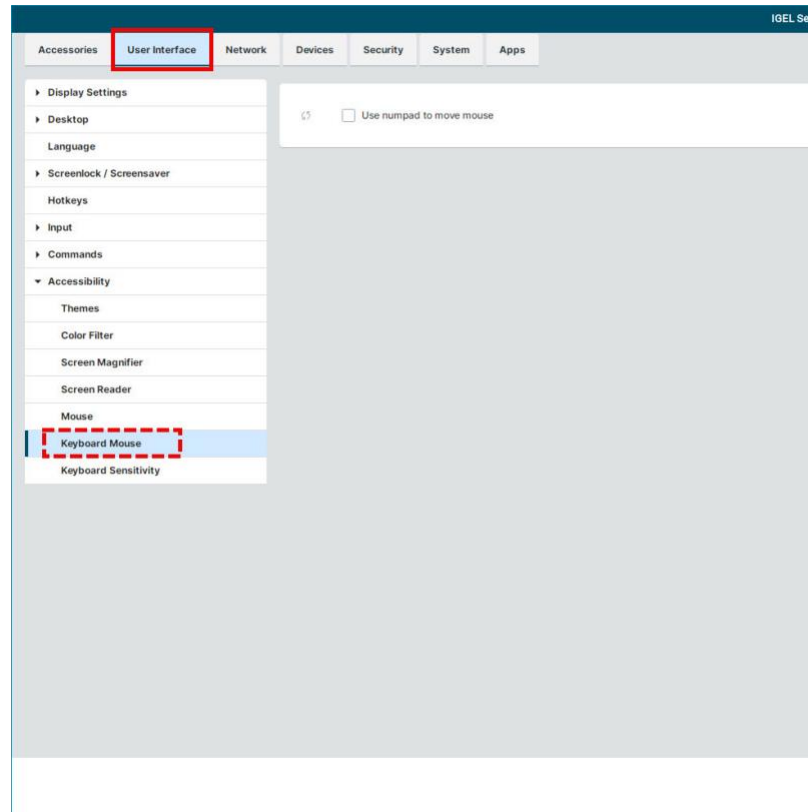

Use numpad to move mouse

☒ Use the keypad number keys to move the mouse.

Click here to see how to navigate the mouse when the keyboard mouse is enabled:

- Use **NumPad 5** for left-clicks.
- Use **Shift + NumPad 5** for right-clicks
- Use **NumPad 4** and **6** for horizontal movement.
- Use **NumPad 2** and **8** for vertical movement.
- Use **NumPad 1, 3, 7** and **9** for diagonal movement.


☐ Use your mouse or touchpad for moving the mouse and clicking. (Default)

Keyboard Sensitivity

This article describes how to configure the keyboard sensitivity.

The settings in this section are only related to accessibility. By clicking on **Related pages** in the top right corner, you will be redirected to the regular keyboard settings as described in [Keyboard Settings in IGEL OS 12](#).

Menu path: **User Interface > Accessibility > Keyboard Sensitivity**

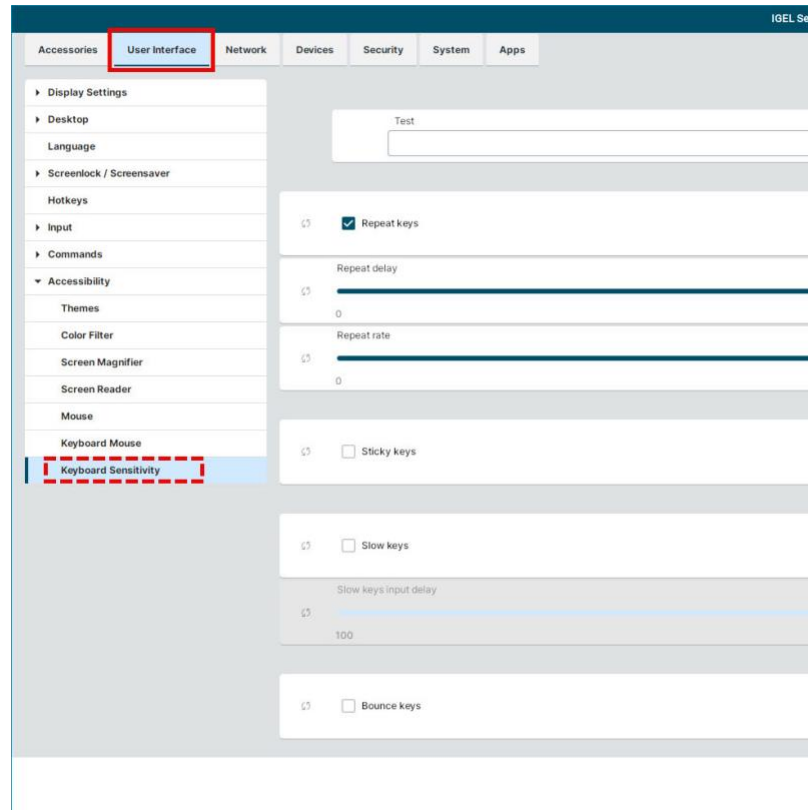

Test

Free-text area to test the repeat settings.

Repeat keys

- ☒ Pressing and holding down a key will register repeated events. (Default)
- ☐ Pressing and holding down a key will register only one event.

Repeat delay

Determines the delay (in milliseconds) before automatic repetition begins. (Default: 660)

Repeat rate

Determines the number of times a character repeats per second. (Default: 40)

Sticky keys

- ☒ Allows modifier keys and regular keys to be pressed one after another and still be recognized as a combined input.

☐ Modifier keys and regular keys need to be pressed at the same time in order to trigger the event. (Default)

Slow keys

☒ Adds a delay before a keypress is registered. The key must be held down for a set duration to be recognized.

☐ A keypress is registered immediately. (Default)

Slow keys input delay

You can set the delay in milliseconds before the key input is accepted.

This option can only be used when **Slow keys** is enabled.

Bounce keys

☒ Helps ignore unintentional repeated keypresses by filtering out rapid duplicates.

☐ Rapid, repeated keypresses are interpreted as separate inputs. (Default)

Also, a tray app to individually configure accessibility settings was added.

Accessibility Tray Apps in IGEL OS 12

IGEL OS 12 includes two accessibility tray apps. The general accessibility tray app  is enabled by default to individually manage and configure accessibility settings. The

screen magnifier tray app  appears only when the screen magnifier is activated and allows you to control the screen magnifier feature.


Information for Administrators

- The system tray and most of the tray apps are available to the users by default.
- You can enable and disable the system tray and the tray apps under **User Interface > Desktop > Taskbar Items**.

Taskbar Items in IGEL OS 12

This article shows how to configure taskbar items in IGEL OS.

Menu path: **User Interface > Desktop > Taskbar Items**

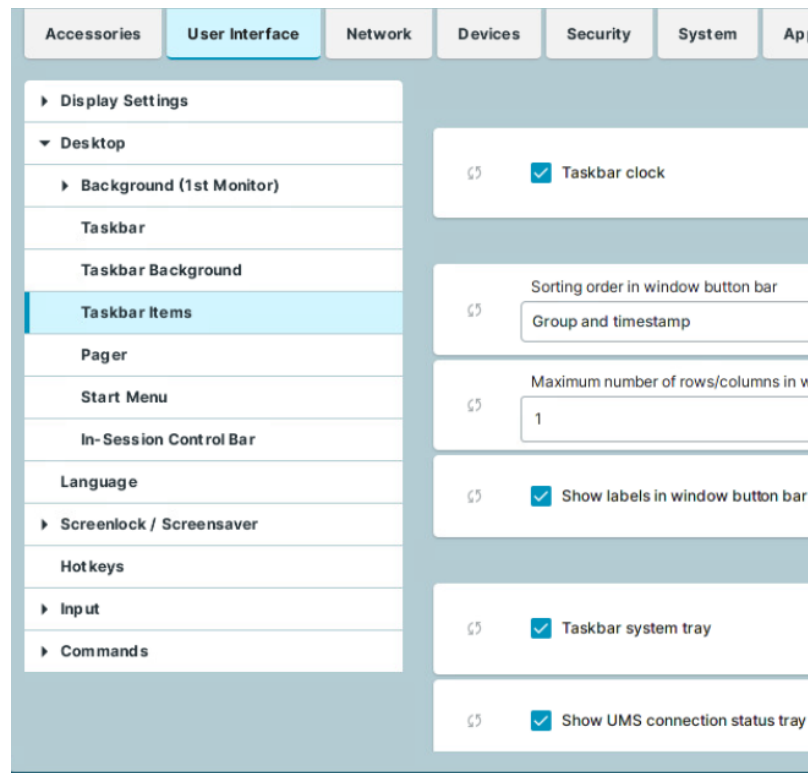

Taskbar clock


☒ A clock is shown in the taskbar.

Clicking the taskbar clock displays the calendar and the **Timezone** dropdown menu. You can use the dropdown to set the timezone the device is located in. The dropdown menu is only accessible if the **System > Time and Date > Timezone systray settings** parameter is enabled.

Time and Date in IGEL OS 12

This article shows the time and date settings options in IGEL OS.

Menu path: **System > Time and Date**

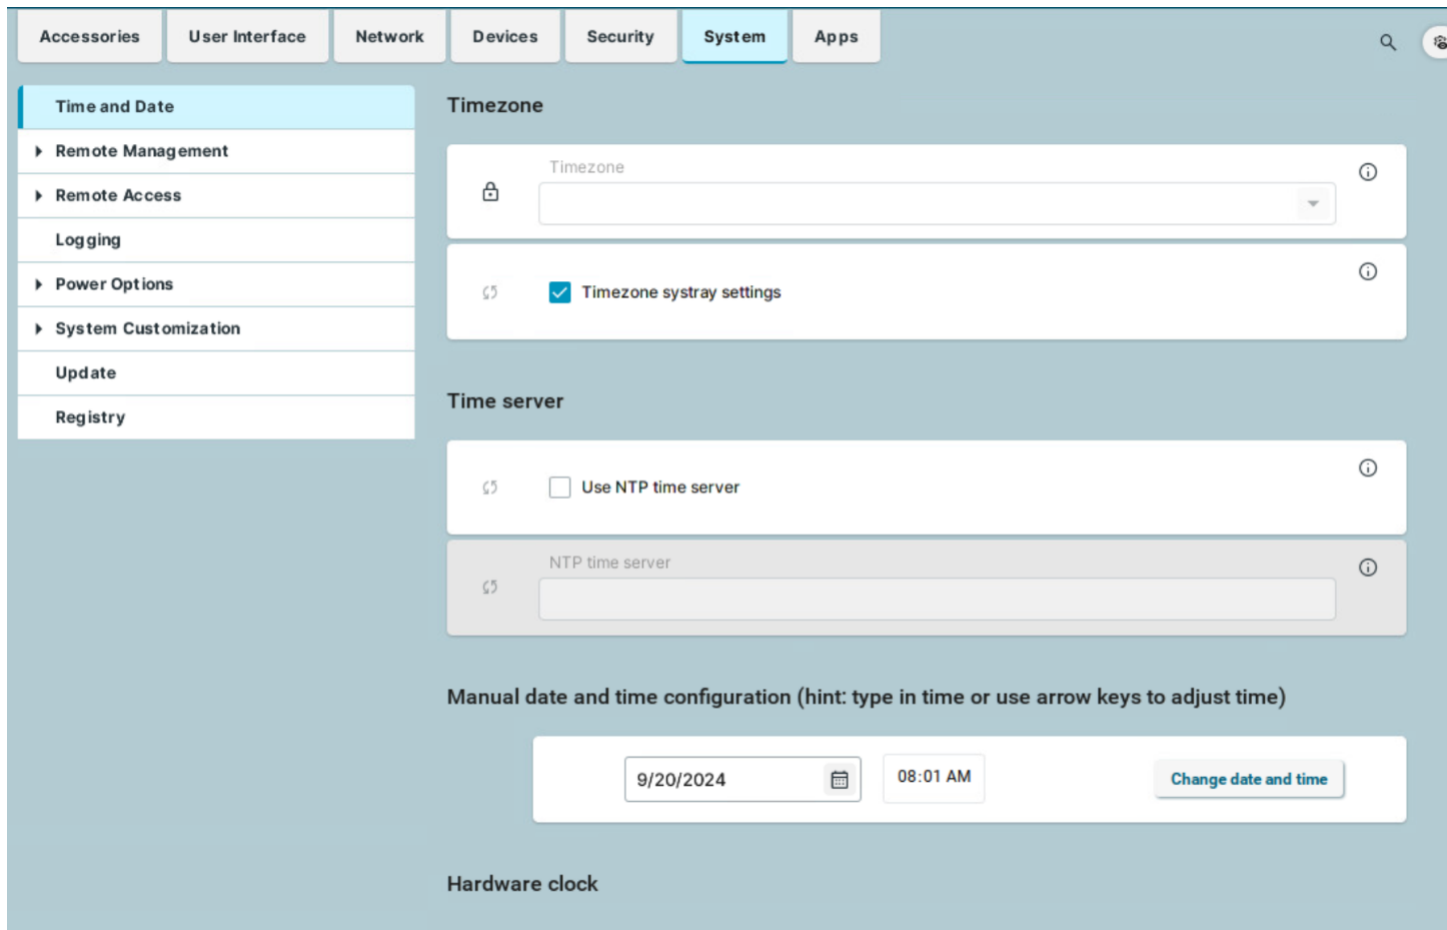


Timezone

Sets the timezone the device is located in.

Timezone systray settings

☒ You can set the timezone by clicking on the taskbar clock and selecting from the **Timezone** dropdown menu. The taskbar clock can be activated under **User Interface > Desktop > Taskbar Items**. (Default)

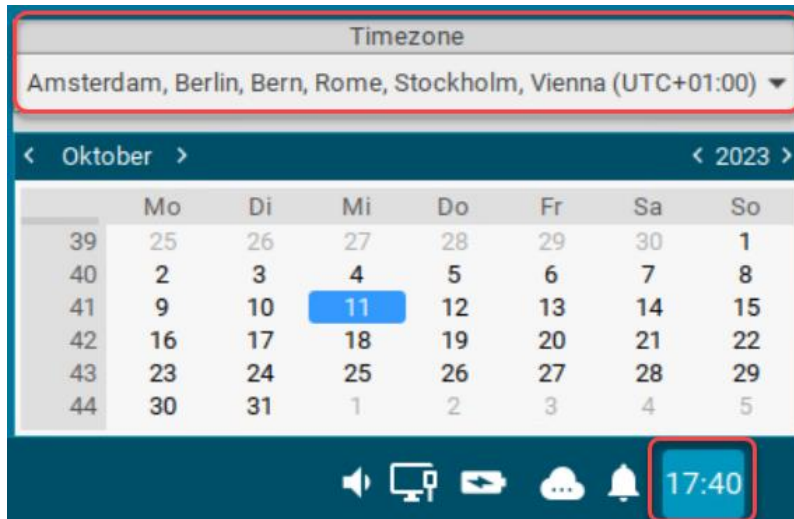

☐ The **Timezone** dropdown menu is not available through the taskbar clock.

Use NTP time server

- ☒ The system clock is set via Network Time Protocol (NTP) during boot.
- ☐ The system clock is not set via NTP. (Default)

NTP time server

IP address or name of the NTP time server. If you would like to enter a list of NTP time servers for redundancy purposes, separate the names / IP addresses by spaces.

Manual Date and Time Configuration

Carries over the time and date and sets the hardware clock. Once the date and time is set, click **Change date and time** to save the change.

You can set the date by selecting from the calendar, or using the arrow keys to adjust the date.

You can set the time by typing it in, or using the arrow keys to adjust the time.

HW clock timezone

Sets the hardware clock.


Possible options:

- **Auto** (default)

IGEL OS and Windows have different default time settings, IGEL OS using UTC and Windows using local time. When using IGEL UD Pocket with Windows, this would lead to Windows interpreting the real time clock as set to local time and show the wrong time.

To avoid this, the **Auto** setting looks for Windows partitions and, if present, assume that Windows is installed and the real time clock is automatically set to local time.

- **UTC**
- **Localtime**

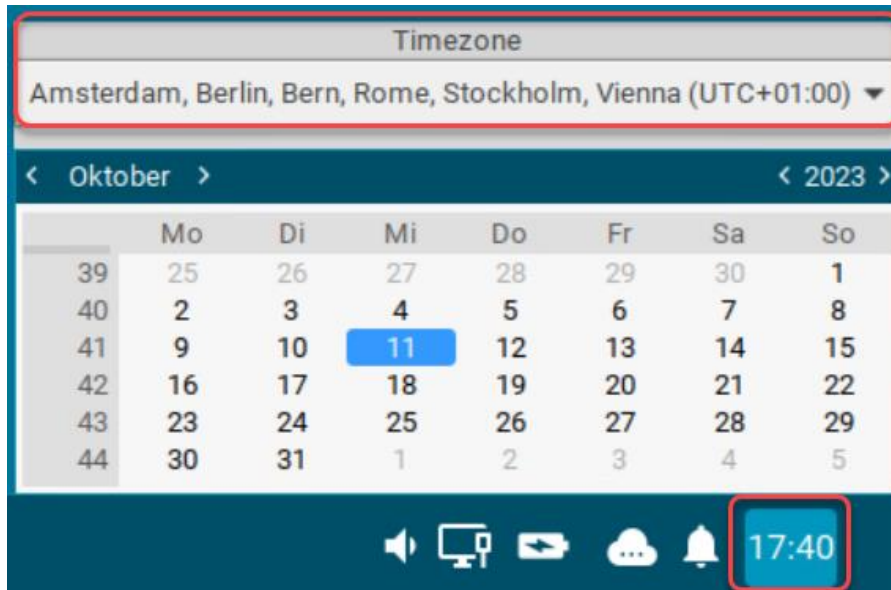

Sorting order in window button bar

Specifies the criteria according to which the window buttons are sorted.

Possible values:

- **Timestamp**: The window buttons are sorted in the chronological order in which the windows were opened.
- **Group and timestamp**: The window buttons are grouped according to the type of application. If, for example, a number of setup applications are open, all associated window buttons will be arranged next to each other. Within the group, the window buttons are sorted chronologically. (Default)
- **Window title**: The window buttons are sorted alphabetically.
- **Group and window title**: The window buttons are grouped according to type. If for example a number of setup applications are open, all associated window buttons will be arranged next to each other. Within the group, the window buttons are sorted alphabetically.
- **Drag'n'Drop**: You can order the buttons as you wish using drag and drop.

Maximum number of rows/columns in window button bar

Specifies the maximum number of rows available for window buttons.

Possible values:


- **Automatic:** The number of rows depends on the settings of the **Taskbar height/width** and **Number of rows/columns in taskbar** parameters under **User Interface > Desktop > Taskbar**. For details on the parameters.

Taskbar Configuration in IGEL OS 12

This article shows how to enable and configure the taskbar in IGEL OS.

Further settings can be found under **User Interface > Screenlock / Screensaver > Taskbar**. For detailed information on those settings, see [Taskbar](#).

Menu path: **User Interface > Desktop > Taskbar**

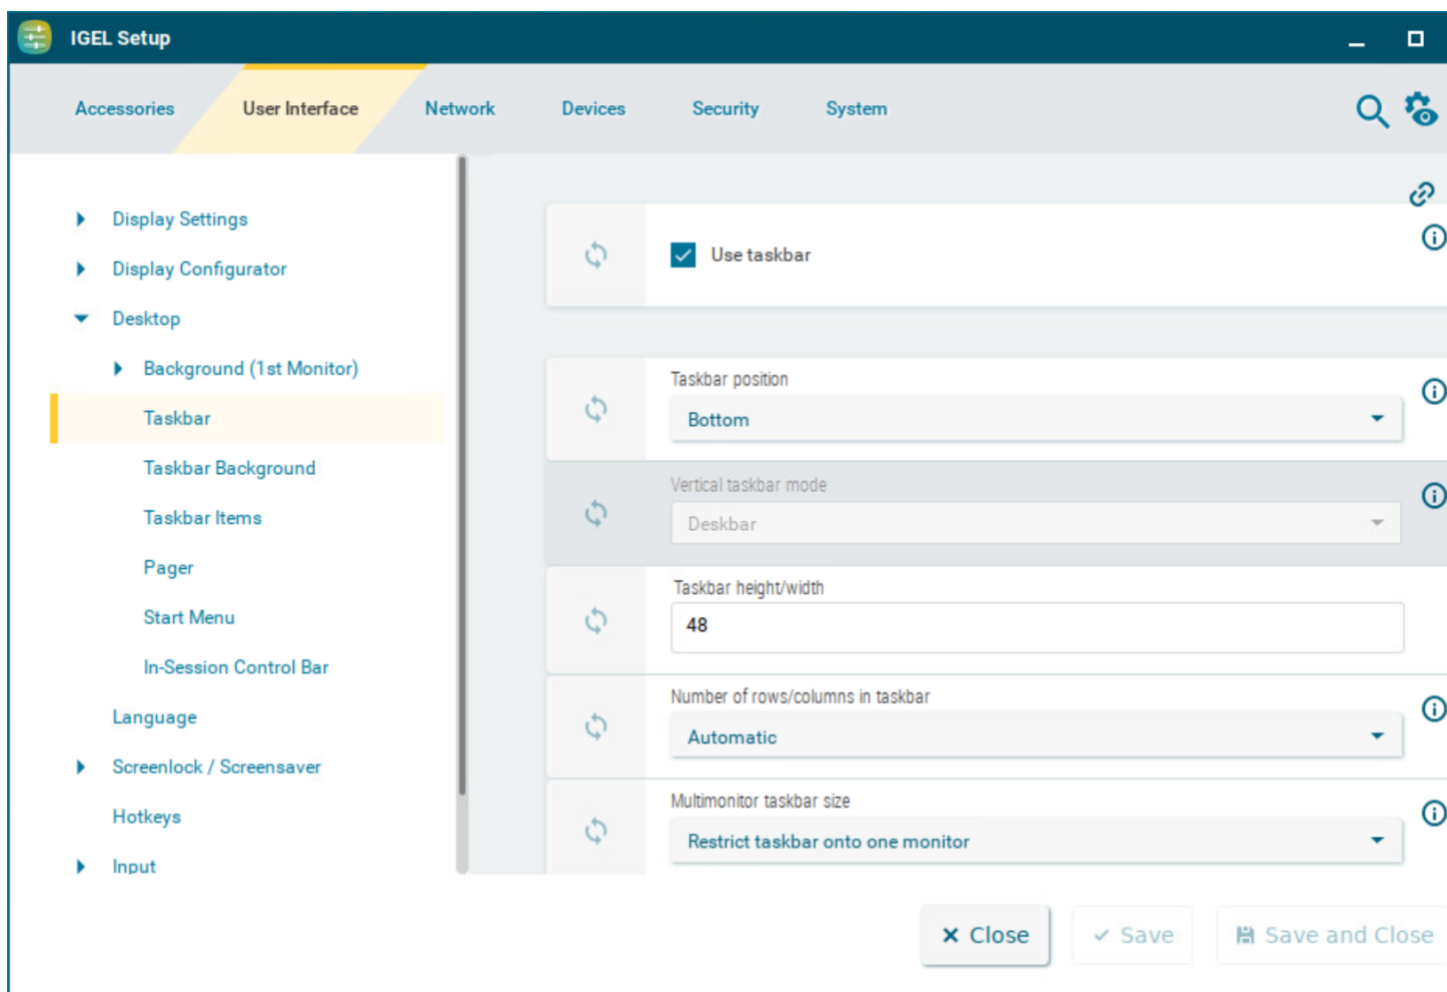

Use taskbar

- ☒ The taskbar is displayed and the setting options are available. (Default)

Taskbar position

Specifies the display position of the taskbar.

Possible values:

- **Bottom** (Default)
- **Top**
- **Left**
- **Right**

Vertical taskbar mode

Specifies how items are shown in the taskbar. This parameter is available if **Taskbar position** is set to **Left** or **Right**.

Possible values:

- **Vertical**: The session texts are rotated by 90°.
- **Deskbar**: The session texts are not shown. (Default)

Taskbar height/width

Specifies the size of the taskbar in pixels. This is the height of the taskbar if the position is top or bottom, and the width of the taskbar if the position is left or right. (Default: 48)

If **Maximum number of rows/columns in window button list** is set to **Automatic**, the window buttons as well as the icons in the Quick Start Panel will be shown in a number of rows depending on the height of the taskbar. The number of rows increases in increments of 55 pixels:

- 1 - 55 pixels: One row
- 56 - 110 pixels: Two rows
- 111 - 165 pixels: Three rows
- 166 - 220 pixels: Four rows
- 221 - 275 pixels: Five rows
- 276 or more pixels: Six rows

The **Maximum number of rows/columns in window button list** parameter is described under [Taskbar Items in IGEL OS 12](#).

Number of rows/columns in taskbar

Specifies the number of rows for the Quick Start Panel. The following taskbar items can be broken down into a number of rows and columns: Icons in the Quick Start Panel, window buttons.

Possible values:

- **Automatic**: The number of rows for the Quick Start Panel depends on the height and width of the taskbar.
- **Numeric value**: The chosen value specifies the number of rows for the Quick Start Panel.

Multimonitor taskbar size

Specifies whether the taskbar is expanded onto several monitors or restricted to one monitor.

Possible values:

- **Restrict taskbar to one monitor**
- **Extend taskbar to all monitors**

Monitor

Specifies the screen on which the taskbar is shown. This parameter is available if **Multimonitor taskbar size** is set to **Restrict taskbar to one monitor**. (Default: 1st monitor)

Taskbar on top of all windows

- ☒ The taskbar is displayed on all screens, even in sessions with a full-screen window.
- ☐ The taskbar is not displayed in sessions with a full-screen window. (Default)

Taskbar auto hide

- ☒ The taskbar is hidden automatically and will only be shown if the mouse pointer is moved to the position of the taskbar at the edge of the screen.
- ☐ The taskbar is always displayed. (Default)

Auto hide behavior

Specifies when the taskbar is automatically hidden.

Possible values:

- **Intelligently**: The taskbar is shown as standard. The taskbar will be hidden if the space is needed by a window, e. g. a window in full-screen mode.
- **Always**: The taskbar is hidden as standard. The taskbar will be shown if the mouse pointer is moved to the edge of the screen.

Taskbar show delay

Time interval in milliseconds before the taskbar is shown. The mouse pointer must be at the edge of the screen constantly during this time interval. This setting is only effective if **Taskbar auto hide** is enabled. (Default: 600)

With the show delay, you can prevent the taskbar for a full-screen session being covered by the device's taskbar. A show delay is necessary if the taskbar for the full-screen session is set to be shown automatically and both taskbars are positioned at the same screen edge. If no show delay is set and the user brings up the taskbar for the full-screen session, this will immediately be covered by the device's taskbar. During the show delay time interval, the user has time to move the mouse pointer away from the edge of the screen.

Taskbar hide delay

Time interval in milliseconds before the taskbar is hidden. This setting is only effective if **Taskbar auto hide** is enabled. (Default: 400)

- **Numeric values:** This value specifies the maximum number of rows. (Default: 1)

Show labels in window button bar

☒ The names of the ongoing sessions are displayed in the associated window buttons. (Default)

☐ Only the icons are displayed.

Taskbar system tray

☒ The system tray is shown in the taskbar. (Default)

The following parameters enable icons to access the system tray applications. For details on system tray apps, see [Tray Applications in IGEL OS 12](#) .

The parameters for the desktop and the parameters for the lockscreen are independent from each other. You need to enable / disable the icons for both use cases separately. You can enable taskbar items for the lockscreen under **User Interface > Desktop > Screenlock / Screensaver > Taskbar**. For more information, see [Taskbar](#) .

Show UMS connection status tray icon on desktop

☒ The current status of the Universal management Suite (UMS) connection is shown in the system tray. For example, with the icon



for connected. Clicking the icon displays information about the connected UMS server. (Default)

Show battery tray icon on desktop

☒ The current status of the battery is shown in the system tray. For example, with the icon



. Hover over the icon to see information on the charge. Clicking the icon displays the battery tray app. (Default)

Show ethernet connection status tray icon on desktop

☒ The current status of the LAN network connection is shown in the system tray. For example, with the icon



for connected. Clicking the icon displays the LAN tray app. (Default)

Show wifi connection status tray icon on desktop

☒ The current status of the Wi-Fi network connection is shown in the system tray. For example, with the icon



. Clicking the icon displays the Wi-Fi tray app. (Default)

Show mobile-broadband connection status tray icon on desktop

☒ The current status of the mobile network connection is shown in the system tray. For example, with the icon



or



. Clicking the icon displays the mobile broadband tray app. (Default)

Show input settings tray icon on desktop

☒ If a mouse is detected, the



icon is shown in the system tray. If a touchpad is detected, or both a mouse and a touchpad are detected, the



icon is shown. Clicking the icon displays the mouse & touchpad tray app. (Default)

Show display tray icon on desktop

☒ The current display configuration icon is shown in the system tray. For example, with the



icon. Clicking the icon displays the display tray app. (Default)

Show audio tray icon on desktop

☒ The



and



icons are shown in the system tray. Clicking the icon displays the sound tray app. (Default)


Size of icons in system tray

Specifies the size of system tray icons (volume, network connection etc.). You can select a pre-defined value or enter a numeric value.

Predefined values:

- **Automatic:** The size is adjusted to the height and width of the taskbar.
 - **Small:** 20 pixels (Default)
 - **Medium:** 40 pixels
 - **Large:** 60 pixels
-
- The access to tray apps on lockscreen is configured separately under **User Interface > Desktop > Screenlock / Screensaver > Taskbar**. For details, see [Taskbar in Locked Screen in IGEL OS 12](#).
 - The configurations in the tray app might slightly differ from the configurations available in IGEL Setup. IGEL Setup remains the place for administrators to set the framework for their end users (e. g. access to tray apps or starting sessions). The tray apps are designed for end users to make individual adjustments as needed.

Accessibility Tray App

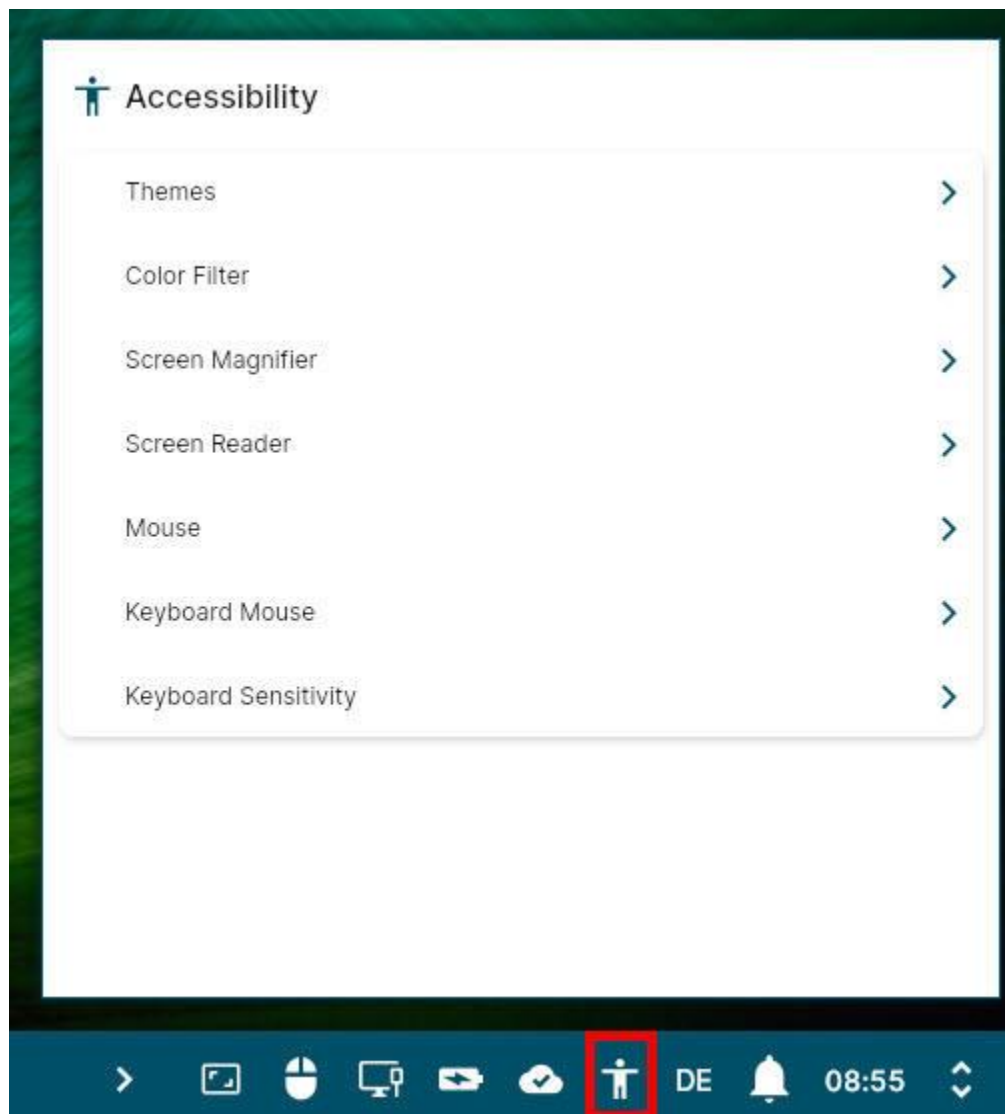

The accessibility tray app provides a central place to adjust IGEL OS 12 for improved readability, visibility, and input control. From here, you can configure themes, color filters, screen magnifier and screen reader, as well as mouse and keyboard behaviour.

Each area includes a reset icon  in the top-right corner to quickly revert to the default configuration.

Themes

< Themes 🔊



Adjust the user interface theme to your likes. Be aware that setting a new theme will reload the IGEL Desktop.

Theme

Colored IGEL Theme 



Base Color

#004f68



Set Theme




Choose a base theme from the dropdown to adjust the user interface theme. By default, **Colored IGEL Theme** is selected. Confirm your choice by clicking **Set Theme**.

Available themes

In the field **Base Color**, it is possible to enter a color code in HTML hex format to set a custom base color, e. g. #000000 to display black.

In IGEL Setup, you can use a color picker to design individual base colors. For more information see [Themes](#).

Color Filter

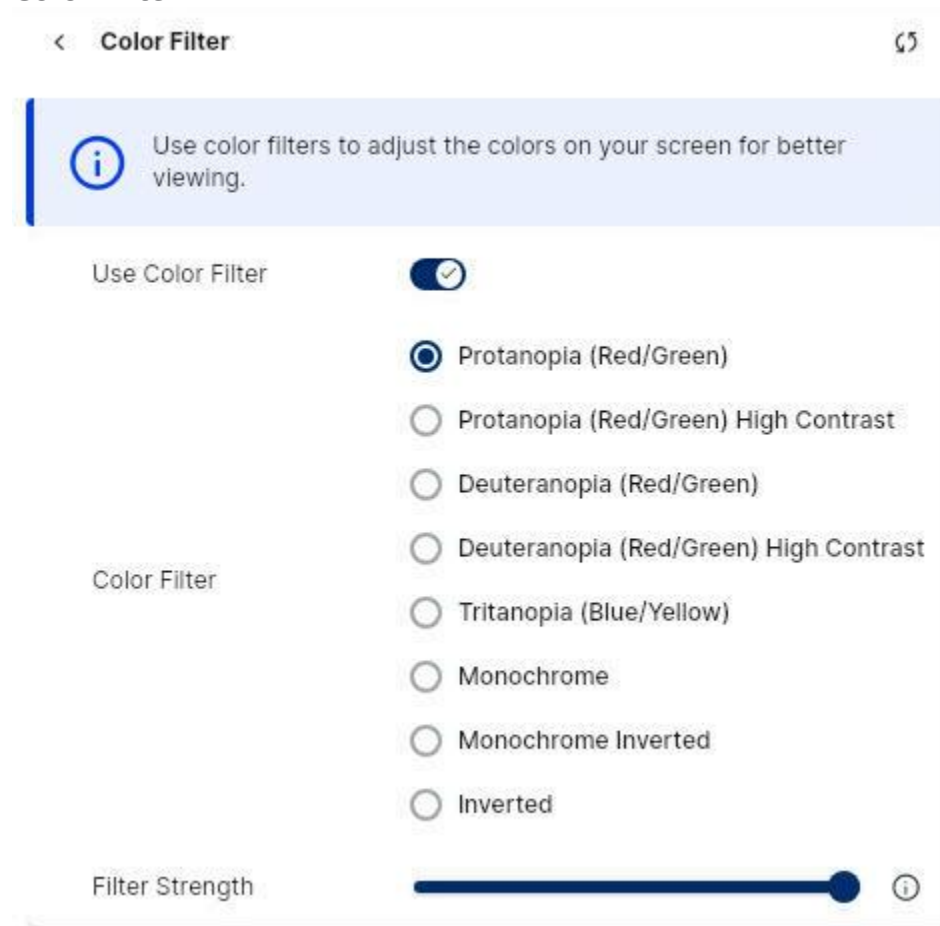

Use the toggle next to **Use Color Filter** to enable or disable color filters. By default, this option is disabled.

Available color filters

Set the **Filter Strength** either by dragging or clicking in the bar. (Default filter strength: 100)


Screen Magnifier



Use the toggle next to **Use Screen Magnifier** to enable or disable the screen magnifier. By default, the screen magnifier is disabled. Enabling the screen magnifier opens a separate window and tray app where you can configure the screen reader. For more information see [Using the Screen Magnifier Tray App](#).

In **IGEL Setup**, it is possible to configure the starting methods for sessions, for more information see [Screen Magnifier](#).


Screen Reader

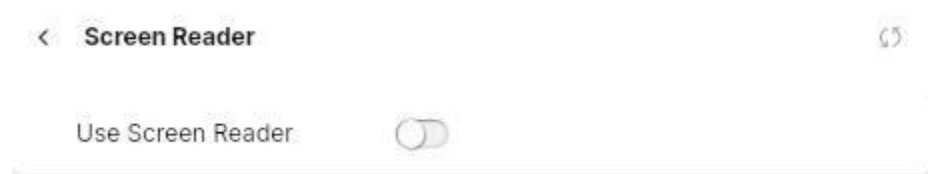

Use the toggle next to **Use Screen Reader** to enable or disable the screen reader. By default, the screen reader is disabled.


In **IGEL Setup**, it is possible to configure the starting methods for sessions, for more information see [Screen Reader](#).

Mouse

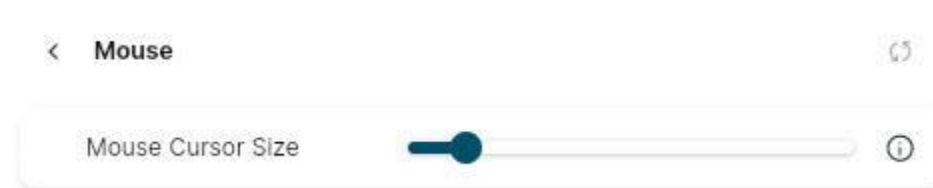

Modify the mouse pointer size from the bar by dragging or by clicking in the bar. The available mouse pointer sizes range from 16 to 94 (Default size: 24).

Keyboard Mouse

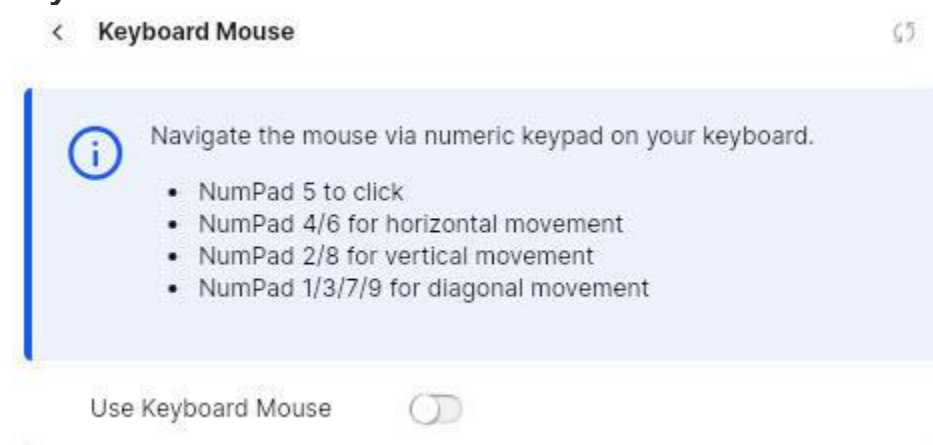

Use the toggle to enable or disable the keyboard mouse. By default, the keyboard mouse is disabled.

Click here to see how to navigate the mouse when the keyboard mouse is enabled:

Keyboard Sensitivity

< Keyboard Sensitivity ↻

 Adjust keyboard settings to your needs for a better typing experience.

Test your keyboard sensitivity settings:

Repeat Keys

Use Repeat Keys

☒



Repeat Delay



Repeat Rate



Slow Keys

Use Slow Keys

☐



Input Delay



Press Beep

☐



Acceptance Beep

☐



Rejection Beep

☐



Bounce Keys

Use Bounce Keys

☐



Rejection Beep

☐



Sticky Keys

Use Sticky Keys

☐



Deactivation by two Keys

☐



Repeat Keys

Use the toggle next to **Use Repeat Keys** to enable or disable repeat keys. By default, this option is enabled.

Configuration options for repeat keys:

Slow Keys

Use the toggle next to **Use Slow Keys** to enable or disable slow keys. By default, this option is disabled.

Configuration options for slow keys:

Bounce Keys

Use the toggle next to **Use Bounce Keys** to enable or disable bounce keys. By default, this option is disabled.


Configuration option for bounce keys:

Sticky Keys

Use the toggle next to **Use Sticky Keys** to enable or disable sticky keys. By default, this option is disabled.

Configuration option for sticky keys:

Using the Screen Magnifier Tray App

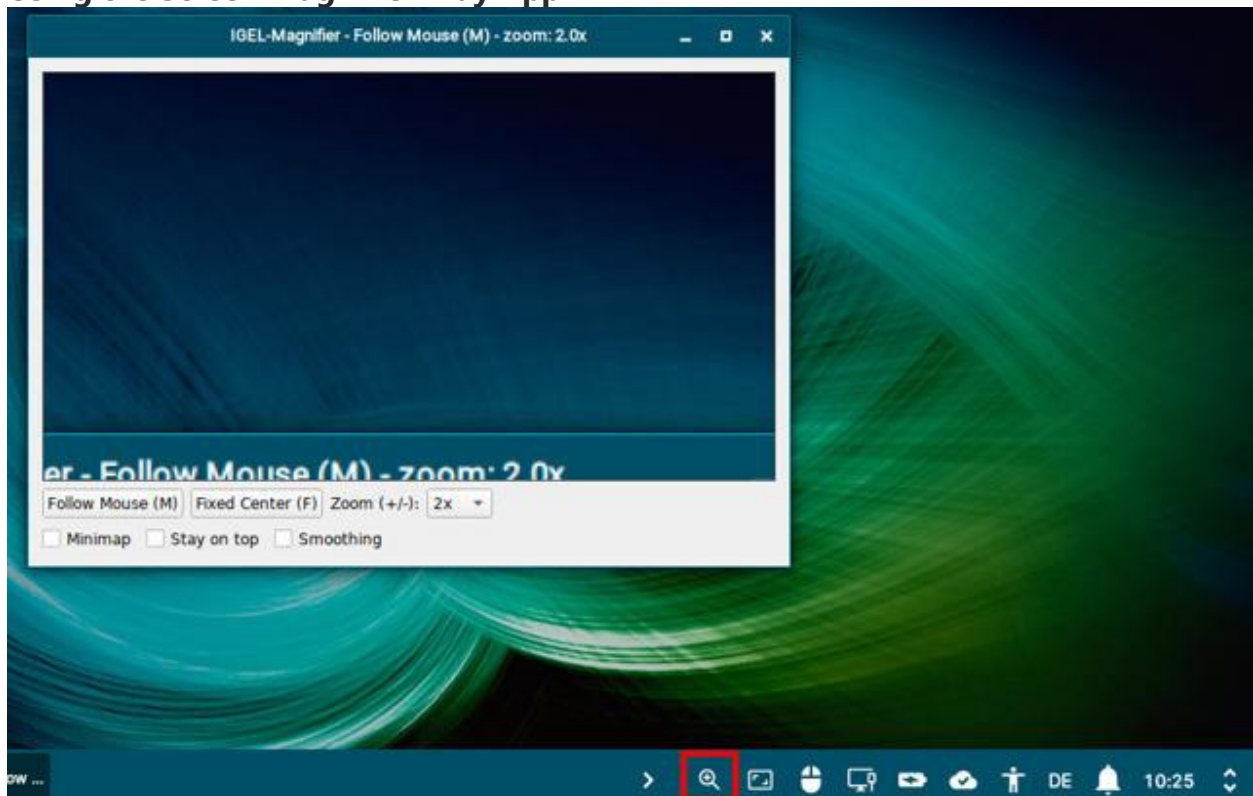



The screen magnifier tray app only appears when the screen magnifier option is enabled. Clicking on the tray app will open and close the screen magnifier window.

Configuration options within the screen magnifier window:



Follow Mouse (M)

This option is enabled by default. The magnified area follows the mouse.

Fixed Center (F)

The magnified area stays at a fixed position on the screen. Dragging the window to a different spot changes the magnified area to be displayed.

Zoom (+/-)

Set the zoom level from 1x to 16x. By default, this value is set to 2x.

Minimap

☒ Enables a minimap at the bottom of the window. It shows the magnified area on the screen.

☐ Minimap is disabled. (Default)

Stay on top

- ☒ The magnifier window always stays on top of other screens. (Default)
- ☐ The magnifier window behaves like a normal window. It can be covered by other applications.

Smoothing


- ☒ Reduces pixelation and jagged edges in the magnified area.
 - ☐ Smoothing is disabled. (Default)
- The access to tray apps on lockscreen is configured separately under **User Interface > Desktop > Screenlock / Screensaver > Taskbar**.

[Taskbar in Locked Screen in IGEL OS 12.](#)

Taskbar

This article shows how to configure the taskbar for the login dialog and for when the screen is locked in IGEL OS.

Menu path: **User Interface > Desktop > Screenlock / Screensaver > Taskbar**

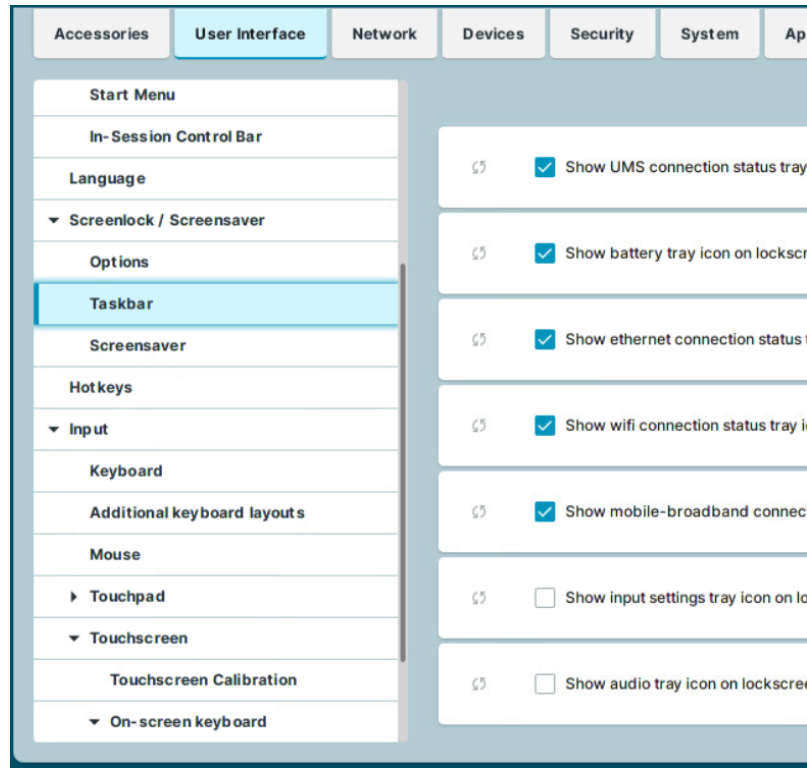

You can use the following parameters to enable / disable access to tray apps when the screen is locked. The parameters for the desktop (that can be found under **User Interface > Desktop > Taskbar Items**) and the parameters for the lockscreen are independent from each other. You need to enable / disable the icons for both use cases separately. For more information, see [Tray Applications in IGEL OS 12](#) and [Taskbar Items in IGEL OS 12](#).

Show UMS connection status tray icon on lockscreen

☒ When the screen is locked, the current status of the Universal management Suite (UMS) connection is shown in the system tray. For example, with the icon



for connected. Clicking the icon displays information about the connected UMS server. (Default)

Show battery tray icon on lockscreen

☒ When the screen is locked, the current status of the battery is shown in the system tray. For example, with the icon



. Hover over the icon to see information on the charge. Clicking the icon displays the battery tray app. (Default)

Show ethernet connection status tray icon on lockscreen

☒ The current status of the LAN network connection is shown in the system tray. For example, with the icon



for connected. Clicking the icon displays the LAN tray app. (Default)

Show wifi connection status tray icon on lockscreen

☒ The current status of the Wi-Fi network connection is shown in the system tray. For example, with the icon



. Clicking the icon displays the Wi-Fi tray app. (Default)

Show mobile-broadband connection status tray icon on lockscreen

☒ The current status of the network connection is shown in the system tray. For example, with the icon



or



. Clicking the icon displays the mobile broadband tray app. (Default)

Show input settings tray icon on lockscreen

☒ If a mouse is detected, the



icon is shown in the system tray. If a touchpad is detected, or both a mouse and a touchpad are detected, the



icon is shown. Clicking the icon displays the mouse & touchpad tray app.

☐ The icon is not shown when the screen is locked. (Default)

Show audio tray icon on lockscreen

☒ The



and



icons are shown in the system tray. Clicking the icon displays the sound tray app.

☐ The icon is not shown when the screen is locked. (Default)

Taskbar Settings for the Login Dialog

Show taskbar in login screen

- ☒ A taskbar is shown in the login screen. (Default)

Show clock

- ☒ A clock is shown in the taskbar in the login screen. (Default)

Show keyboard layout switcher

- ☒ A keyboard layout switcher is shown in the taskbar in the login screen. (Default)

Show on-screen keyboard button

- ☒ A button to start an on-screen keyboard is shown in the taskbar in the login screen.
- ☐ The button is not shown. (Default)

Start on-screen keyboard automatically

- ☒ The on-screen keyboard is started automatically with the login screen.
- ☐ The on-screen keyboard is not started automatically. (Default)

Show reboot button

- ☒ The reboot button is shown in the taskbar in the login screen.
- ☐ The button is not shown. (Default)

Show shutdown button

- ☒ The shutdown button is shown in the taskbar in the login screen. (Default)

Taskbar Settings When the Screenlock Is Active

Show taskbar in screenlock

- ☒ A taskbar is shown when the screen is locked. (Default)

Show clock

- ☒ A clock is shown in the taskbar when the screen is locked. (Default)

Show keyboard layout switcher

- ☒ A keyboard layout switcher is shown in the taskbar when the screen is locked.
(Default)

Show on-screen keyboard button

- ☒ A button to start an on-screen keyboard is shown in the taskbar when the screen is locked.
- ☐ The button is not shown. (Default)

Start on-screen keyboard automatically

- ☒ The on-screen keyboard is started automatically when the screen is locked.
- ☐ The on-screen keyboard is not started automatically. (Default)

Show reboot button


- ☒ The reboot button is shown in the taskbar when the screen is locked.
- ☐ The button is not shown. (Default)

Show shutdown button

- ☒ The shutdown button is shown in the taskbar when the screen is locked.
- ☐ The button is not shown. (Default)

Show logoff button

- ☒ The logoff button is shown in the taskbar when the screen is locked.
- ☐ The button is not shown. (Default)
 - The configurations in the tray app might slightly differ from the configurations available in IGEL Setup. IGEL Setup remains the place for administrators to set the framework for their end users (e. g. access to tray apps or starting sessions). The tray apps are designed for end users to make individual adjustments as needed.
 - **Accessibility Tray App**

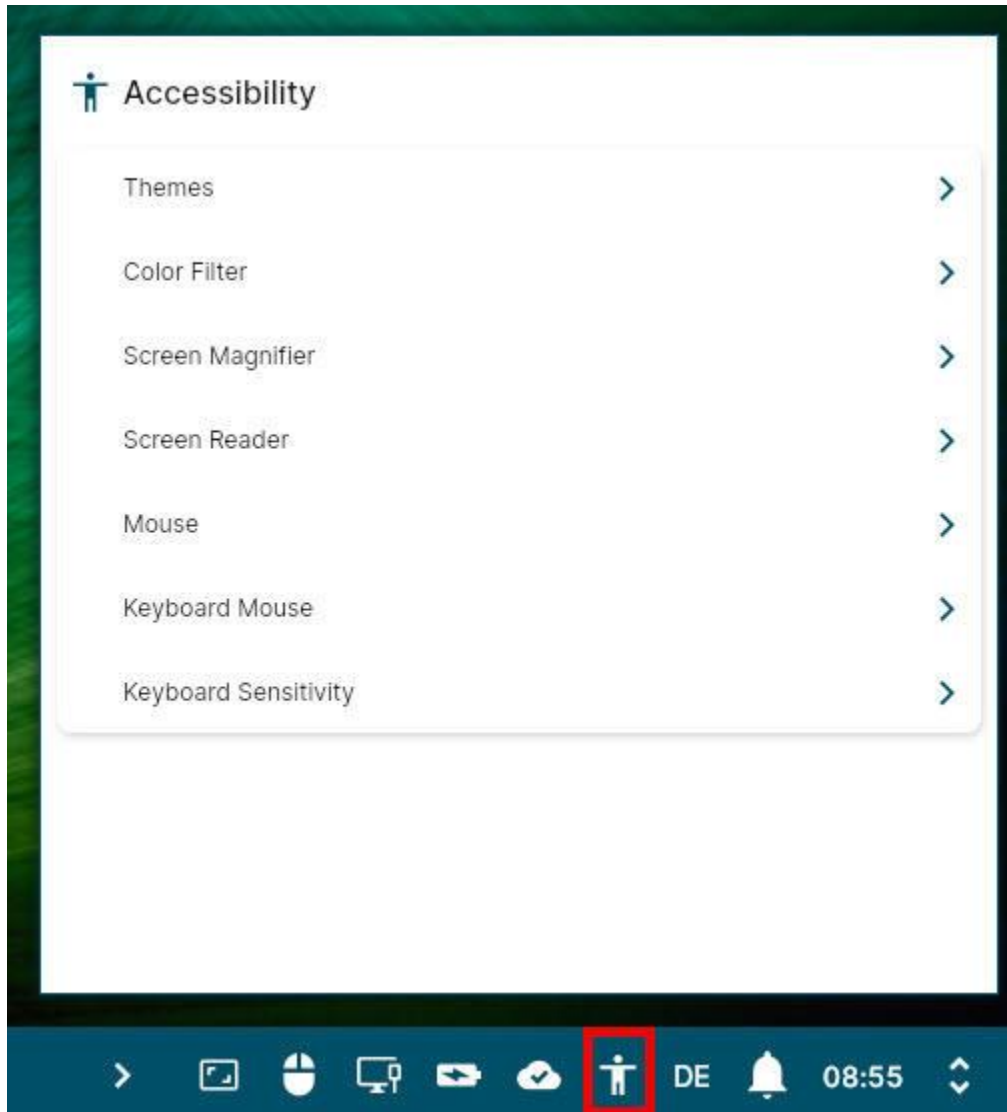

-
- The accessibility tray app provides a central place to adjust IGEL OS 12 for improved readability, visibility, and input control. From here, you can configure themes, color filters, screen magnifier and screen reader, as well as mouse and keyboard behaviour. Each area includes a reset icon  in the top-right corner to quickly revert to the default configuration.
-

- **Themes**

< Themes

i Adjust the user interface theme to your likes. Be aware that setting a new theme will reload the IGEL Desktop.

Theme Colored IGEL Theme *i*

Base Color #004f68 *i*


Set Theme *i*

-
-
- Choose a base theme from the dropdown to adjust the user interface theme. By default, **Colored IGEL Theme** is selected. Confirm your choice by clicking **Set Theme**.

Available themes:-

- Colored IGEL Theme
 - Dark IGEL Theme
 - Light IGEL Theme
 - High Contrast Theme
 - Inverted High Contrast Theme
 - Custom Theme
-
- In the field **Base Color**, it is possible to enter a color code in HTML hex format to set a custom base color, e. g. #000000 to display black.
 - In IGEL Setup, you can use a color picker to design individual base colors. For more information see [Themes](#).

- **Color Filter**

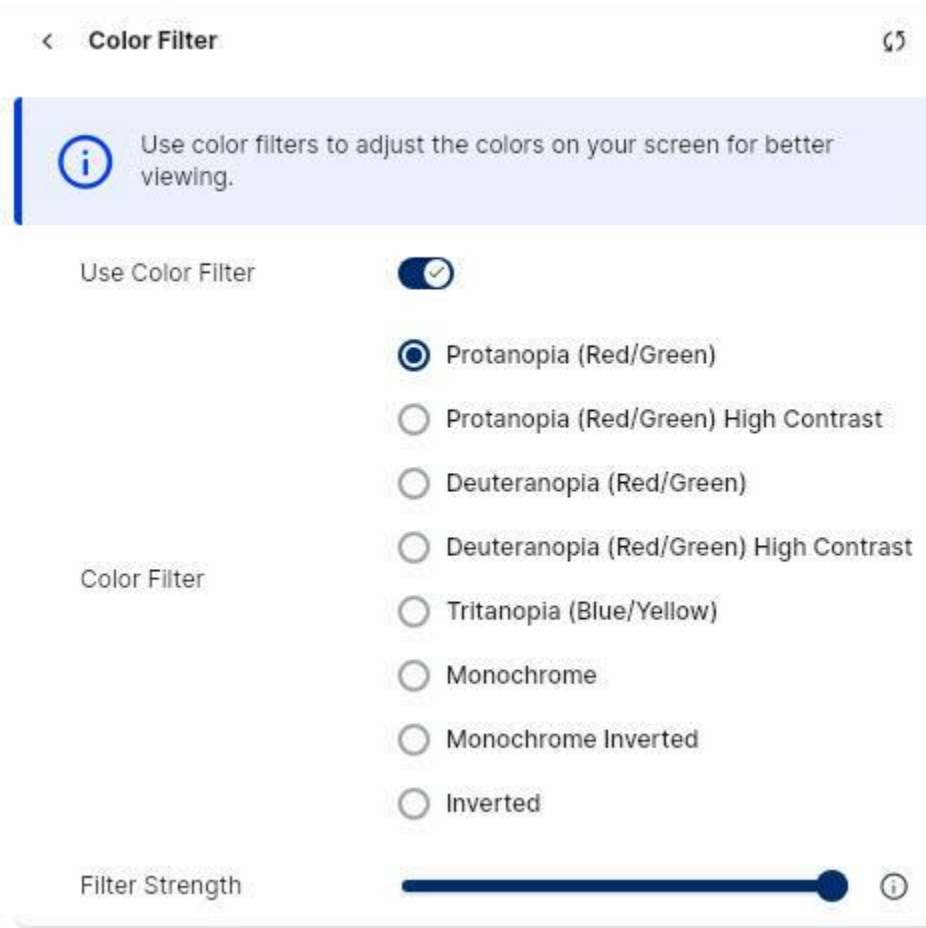

-
-
- Use the toggle next to **Use Color Filter** to enable or disable color filters. By default, this option is disabled.

Available color filters:-


- Protanopia (Red/Green)
- Protanopoa (Red/Green) High Contrast
- Deuteranopia (Red/Green)
- Deuteranopia (Red/Green) High Contrast
- Tritanopia (Blue/Yellow)
- Monochrome
- Monochrome Inverted
- Inverted
- Set the **Filter Strength** either by dragging or clicking in the bar. (Default filter strength: 100)

- **Screen Magnifier**



-
-
- Use the toggle next to **Use Screen Magnifier** to enable or disable the screen magnifier. By default, the screen magnifier is disabled. Enabling the screen magnifier opens a separate window and tray app where you can configure the screen reader. For more information see [Using the Screen Magnifier Tray App](#).
- In **IGEL Setup**, it is possible to configure the starting methods for sessions, for more information see [Screen Magnifier](#).

- **Screen Reader**

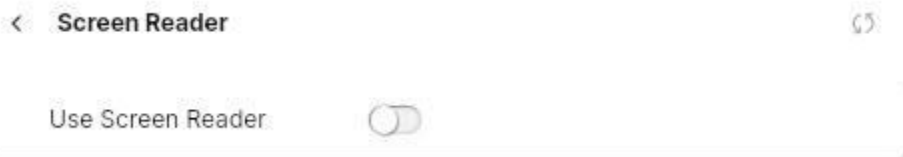


-
- Use the toggle next to **Use Screen Reader** to enable or disable the screen reader. By default, the screen reader is disabled.
- In **IGEL Setup**, it is possible to configure the starting methods for sessions, for more information see [Screen Reader](#).

- **Mouse**



-
- Modify the mouse pointer size from the bar by dragging or by clicking in the bar. The available mouse pointer sizes range from 16 to 94 (Default size: 24).

- **Keyboard Mouse**

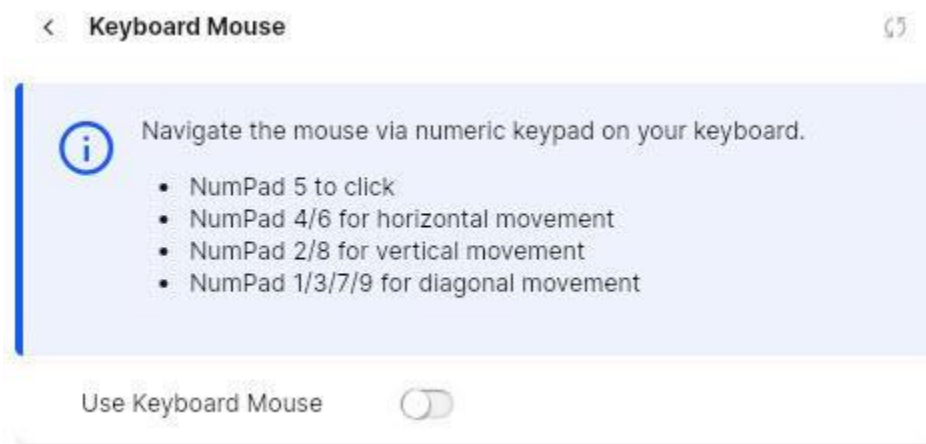

-
- Use the toggle to enable or disable the keyboard mouse. By default, the keyboard mouse is disabled.

Click here to see how to navigate the mouse when the keyboard mouse is enabled:

- Use **NumPad 5** for left-clicks.
- Use **Shift + NumPad 5** for right-clicks
- Use **NumPad 4** and **6** for horizontal movement.
- Use **NumPad 2** and **8** for vertical movement.
- Use **NumPad 1, 3, 7** and **9** for diagonal movement.

- **Keyboard Sensitivity**

<
Keyboard Sensitivity
↻

i
Adjust keyboard settings to your needs for a better typing experience.

Test your keyboard sensitivity settings:

Repeat Keys

Use Repeat Keys
☒
i

Repeat Delay
i

Repeat Rate
i

Slow Keys

Use Slow Keys
☐
i

Input Delay
i

Press Beep
☐
i

Acceptance Beep
☐
i

Rejection Beep
☐
i

Bounce Keys

Use Bounce Keys
☐
i

Rejection Beep
☐
i

Sticky Keys

Use Sticky Keys
☐
i

Deactivation by two Keys
☐
i

- **Repeat Keys**
- Use the toggle next to **Use Repeat Keys** to enable or disable repeat keys. By default, this option is enabled.

Configuration options for repeat keys:-

- **Repeat Delay:** Determines the delay (in milliseconds) before automatic repetition begins. (Default: 660)
- **Repeat Rate:** Determines the number of times a character repeats per second. (Default: 40)

- **Slow Keys**

- Use the toggle next to **Use Slow Keys** to enable or disable slow keys. By default, this option is disabled.

Configuration options for slow keys:-

- **Input Delay:** Set the delay in milliseconds before the key input is accepted.
- **Press Beep:** Output beep when a key is pressed.
- **Acceptance Beep:** Output beep when a key was registered.
- **Rejection Beep:** Output beep when a key was not registered.

• **Bounce Keys**

- Use the toggle next to **Use Bounce Keys** to enable or disable bounce keys. By default, this option is disabled.
- Configuration option for bounce keys:-
Rejection Beep: Output beep when a duplicated press happened.

• **Sticky Keys**

- Use the toggle next to **Use Sticky Keys** to enable or disable sticky keys. By default, this option is disabled.
- Configuration option for sticky keys:-
Deactivation by two keys: Disable sticky keys by pressing two modifier keys simultaneously.

Using the Screen Magnifier Tray App:-

Configuration options within the screen magnifier window:



Follow Mouse (M)

This option is enabled by default. The magnified area follows the mouse.

Fixed Center (F)

The magnified area stays at a fixed position on the screen. Dragging the window to a different spot changes the magnified area to be displayed.

Zoom (+/-)

Set the zoom level from 1x to 16x. By default, this value is set to 2x.

Minimap

☒ Enables a minimap at the bottom of the window. It shows the magnified area on the screen.

☐ Minimap is disabled. (Default)


Stay on top

☒ The magnifier window always stays on top of other screens. (Default)

☐ The magnifier window behaves like a normal window. It can be covered by other applications.

Smoothing

- ☒ Reduces pixelation and jagged edges in the magnified area.
- ☐ Smoothing is disabled. (Default)

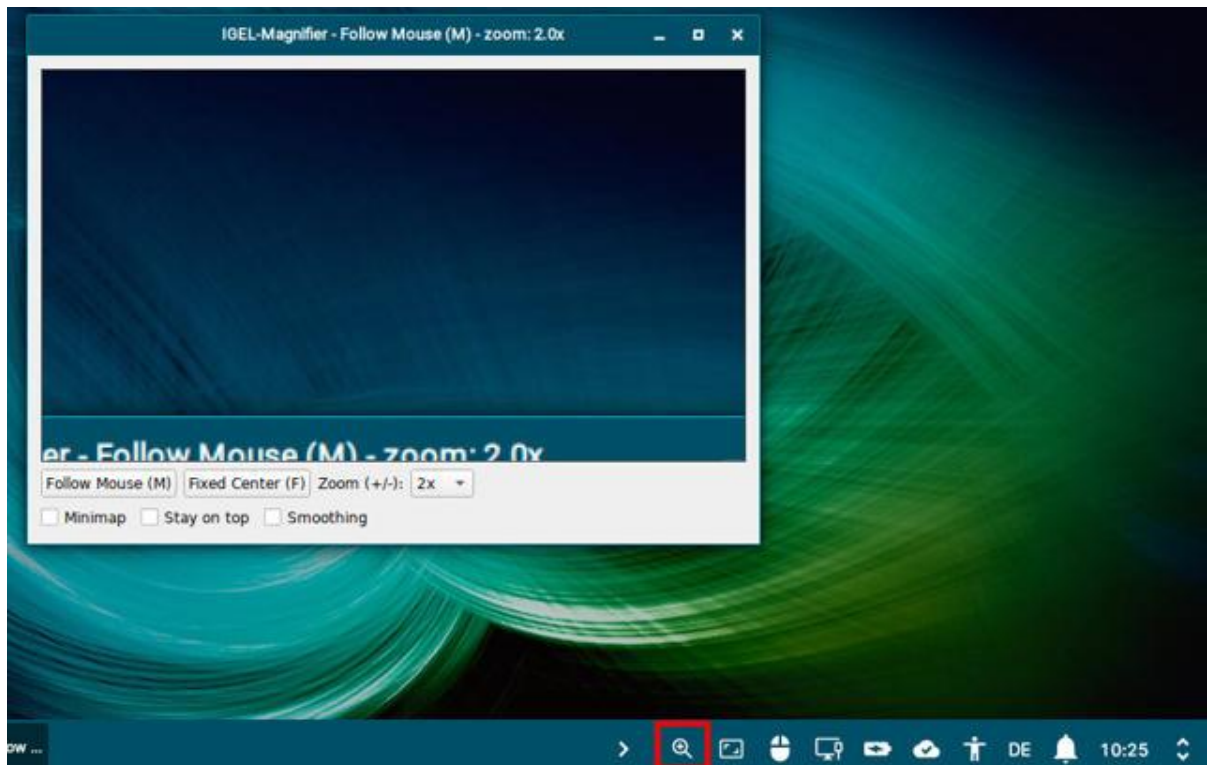

- The screen magnifier tray app  only appears when the screen magnifier option is enabled. Clicking on the tray app will open and close the screen magnifier window.

