# **Application Note AN0003**

Binary Messages

Of

SkyTraq Venus 6 GPS Receiver

Ver 1.10

July 17, 2009

## **Binary Message Protocol**


The Skytraq binary message protocol manual provides the detailed descriptions on the SkyTraq binary protocol serving as a communicating interface between SkyTraq GPS receivers and an external host such as PC, Notebook and mobile personal device. It is a standard protocol used by all SkyTraq devices and provides users a satisfactory control over the GPS receivers.

The SkyTraq GPS receiver outputs standard NMEA messages during normal operation. This NMEA messages may be a scheduled output at a specified rate subject to user's requests. The SkyTraq binary message protocol is designed with cares on reliable transmissions of data, ease & efficiency of implement, and payload independence mechanism which ensure users to retrieve data in a most effective & flexible way. The overall binary protocol messages can be categorized as input and output messages. Input messages provide the functionality to users to control the behavior of the GPS receiver and to retrieve the detailed information of the GPS status in real-time. Output messages, on the other hand, are information strings that GPS receiver responses to requests from hosts and can optionally periodically reports the Position, Velocity and Time (PVT) via NMEA or binary messages.

#### **BINARY MESSAGE STRUCTURE**

### Message Format

The following picture shows the structure of a binary message.

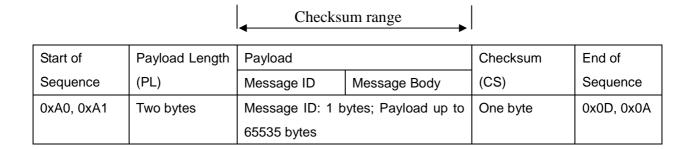

The syntax of the message is shown below.

## Start of Sequence

This field contains two bytes of values 0xA0, 0xA1 which indicate start of Messages.

# Payload Length

The payload length (PL) field contains 16 bits of value which indicates the length of payload.

## Payload

The payload field consists of 2 sub-fields, Message ID and Message Body. Message ID field defines the message ID.

Sub-Field	Values
Message ID	0x01~0xFF
Message Body	Data Bytes

# Checksum

Checksum (CS) field is transmitted in all messages. The checksum field is the last field in a message before the end of sequence field. The checksum is the 8-bit exclusive OR of only the payload bytes which start from Message ID until the last byte prior to the checksum byte. A reference to the calculation of CS is provided

below,

CS = 0, N=PL; For n = 0 to N $CS = CS ^ < Payload Byte # <math>n > 0$ 

# End of Sequence

This field contains two bytes of values 0x0D, 0x0A which indicate end of Messages.

# **Data Byte Ordering**

All payloads in binary protocol are transferred in little-endian format. The low order byte is transmitted first followed by the high order byte for data size larger than a byte (e.g. UINT32, DPFP).

# **Data Type Definition**

UINT8	8 bit unsigned integer
UINT16	16 bit unsigned integer
UINT32	32 bit unsigned integer
SINT8	8 bit signed integer
SINT16	16 bit signed integer
SINT32	32 bit signed integer
SPFP	32 bit single precision floating point number
DPFP	64 bit double precision floating point number

#### **MESSAGE FLOW**

Host can perform actions to GPS receiver by issuing a request or a set message. The message flow between Host and GPS receiver is designed under the considerations of certain reliable transmission. SkyTraq binary message protocol requires an ACK response from the GPS receiver upon receiving a successful input message and on the other hand, requires a NACK response from the receiver to a failed input message. Figure 1 shows a message flow that a host requests information from GPS receiver and the GPS receiver responses with an ACK and information respectively. Figure 2 shows a message flow with un-successful input message. Therefore, all requests (input messages) will have a corresponding ACK or NACK to be related with. However, output messages will not require the host to confirm by an ACK or NACK back in current design.

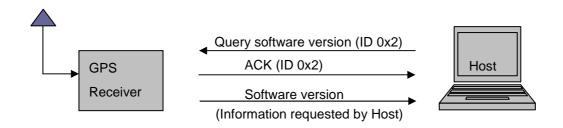


Figure 1

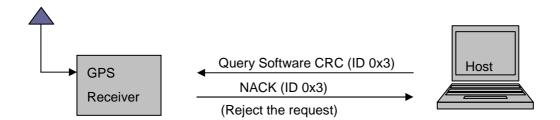


Figure 2

# **MESSAGE LIST**

This section provides brief information about available SkyTraq binary input and output messages shown in a tabular list. All the messages are listed by Message ID. Full descriptions of input and output messages will be described in later Sections.

Input Syst	Input System Messages						
ID(Hex)	ID(Decimal)	Attribute	Name	Descriptions			
0x1	1	Input	System Restart	Force system to restart			
0x2	2	Input	Query Software version	Query revision information of software			
0x3	3	Input	Query Software CRC	Query the CRC of the software			
0x4	4	Input	Set Factory Defaults	Set system to factory default values			
0x5	5	Input	Configure Serial Port	Set up serial port COM, baud rate, data			
				bits, stop bits and parity			
0x6	6	Input	Reserved	Reserved			
0x7	7	Input	Reserved	Reserved			
0x8	8	Input	Configure NMEA	Configure NMEA output message			
0x9	9	Input	Configure Output	Configure the output message format			
			Message Format	from GPS receiver			
0xC	12	Input	Configure Power Mode	Set system power mode			
0xE	14	Input	Configure position	Configure the position update rate of			
			update rate	GPS system			
0x10	16	Input	Query position update	Query the position update rate of GPS			
			rate	system			
0x11	17	Input	Configure Navigation	Configure the navigation output message			
			Message Interval	interval			
Input GPS	Messages						
ID(Hex)	ID(Decimal)	Attribute	Name	Descriptions			
0x29	41	Input	Configure Datum	Configure Datum of the GPS receiver			
0x2D	45	Input	Query Datum	Query datum used by the GPS receiver			
0x30	48	Input	Get ephemeris	Retrieve ephemeris data of the GPS			
				receiver			
0x31	49	Input	Set ephemeris	Set ephemeris data to the GPS receiver			
0x37	55	Input	Configure WAAS	Configure the enable or disable of WAAS			
0x38	56	Input	Query WAAS status	Query WAAS status of GPS receiver			
0x39	57	Input	Configure position	Enable or disable position pinning of GPS			
			pinning	receiver			
0x3A	58	Input	Query position pinning	Query position pinning status of the GPS			
				receiver			

0x3B	59	Input	Configure position	Set position pinning parameters of GPS					
			pinning parameters	receiver					
0x3C	60	Input	Configuration	Configure the navigation mode of GPS					
			navigation mode	system					
0x3D	61	Input	Query navigation mode	Query the navigation mode of GPS					
				receiver					
0x3E	62	Input	Configure 1PPS mode	Set 1PPS mode to the GPS receiver					
0x3F	63	Input	Query 1PPS mode	Query 1PPS mode of the GPS receiver					
Output Sys	Output System Messages								
ID(Hex)	ID(Decimal)	Attribute	Name	Descriptions					
0x80	128	Output	Software version	Software revision of the receiver					
0x81	129	Output	Software CRC	Software CRC of the receiver					
0x82	130	Output	Reserved	Reserved					
0x83	131	Output	ACK	ACK to a successful input message					
0x84	132	Output	NACK	Response to an unsuccessful input					
				message					
0x86	134	Output	Position update rate	Position update rate of GPS system					
Output GP	S Messages								
ID(Hex)	ID(Decimal)	Attribute	Name	Descriptions					
0xA8	168	Output	Navigation Data	Output user navigation data in binary					
				format					
0xAE	174	Output	GPS Datum	Datum used by the GPS receiver					
0xB3	179	Output	GPS WAAS status	WAAS status of the GPS receiver					
0xB4	180	Output	GPS Position pinning	Position pinning status of the GPS					
			status	receiver					
0xB5	181	Output	GPS navigation mode	Navigation mode of the GPS receiver					
0xB6	182	Output	GPS 1PPS mode	1PPS mode of GPS receiver					

# **INPUT MESSAGES**

# SYSTEM RESTART – Force System to restart (0x1)

This is a request message which will reset and restart the GPS receiver. This command is issued from the host to GPS receiver and GPS receiver should respond with an ACK or NACK. The payload length is 15 bytes.

#### Structure:

<0xA0,0xA1>< PL><01>< message body><CS><0x0D,0x0A>

# Example:

A0 A1 00 0F 01 01 07 D8 0B 0E 08 2E 03 09 C4 30 70 00 64 16 0D 0A

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	01		UINT8	-
			00 = Reserved		
			01 = System Reset, Hot start		
2	Start Mode	01	02 = System Reset, Warm start	UINT8	
			03 = System Reset, Cold start		
			04 = Reserved		
3-4	UTC Year	07D8	>= 1980	UINT16	
5	UTC Month	0B	1 ~ 12	UINT8	
6	UTC Day	0E	1 ~ 31	UINT8	
7	UTC Hour	08	0 ~ 23	UINT8	
8	UTC Minute	2E	0 ~ 59	UINT8	
9	UTC Second	03	0 ~ 59	UINT8	
			Between – 9000 and 9000		1/100
10-11	Latitude	09C4	> 0: North Hemisphere	SINT16	
			< 0: South Hemisphere		degree
			Between – 18000 and 18000		1/100
12-13	Longitude	3070	> 0: East Hemisphere	SINT16	
			< 0: West Hemisphere		degree
14-15	Altitude	0064	Between -1000 and 18300	SINT16	Meter
Payload	d Length : 15 bytes				

# QUERY SOFTWARE VERSION – Query revision information of loaded software (0x2)

This is a request message which is issued from the host to GPS receiver to retrieve loaded software version. The GPS receiver should respond with an ACK along with information on software version when succeeded and should respond with an NACK when failed. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><02>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 02 00 02 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	02		UINT8	
2	Software Type	00	00 = Reserved 01 = System code	UINT8	
Payload Length : 2 bytes					

# QUERY SOFTWARE CRC - Query CRC information of loaded software (0x3)

This is a request message which is issued from the host to GPS receiver to retrieve loaded software CRC. The GPS receiver should respond with an ACK along with information on software version when succeeded and should respond with an NACK when failed. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><03>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 03 00 03 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	03		UINT8	
2	Software Type	00	00 = Reserved 01 = System code	UINT8	
Payload Length : 2 bytes					

# SET FACTORY DEFAULTS – Set the system to factory default values (0x4)

This is a request message which is issued from the host to GPS receiver. It will reset the GPS receiver's internal parameters to factory default values. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The user data will be erased and filled with factory default values. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><04>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 04 00 04 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit	
1	Message ID	04		UINT8		
			00 = Reserved			
2	Туре	00	01 = reboot after setting to factory	UINT8		
			defaults			
Payload Length: 2 bytes						

# CONFIGURE SERIAL PORT – Set up serial port property (0x5)

This is a request message which will configure the serial COM port, baud rate. This command is issued from the host to GPS receiver and GPS receiver should respond with an ACK or NACK. The payload length is 4 bytes.

#### Structure:

<0xA0,0xA1>< PL><05>< message body><CS><0x0D,0x0A>

# Example:

A0 A1 00 04 05 00 00 00 05 0D 0A

1 2 3 4

Field	Name	Example(hex)	Description	Туре	Unit			
1	Message ID	05		UINT8				
2	COM port	00	00 = COM 1	UINT8				
			0: 4800					
			1: 9600					
3	Baud Rate	00	2: 19200	UINT8				
3			3: 38400					
			4: 57600					
			5: 115200					
4	Attributes	00	0: update to SRAM	UINT8				
4	Allibutes		1: update to both SRAM & FLASH					
Payload	Payload Length : 4 bytes							

# CONFIGURE NMEA MESSAGE – Configure NMEA message interval (0x8)

This is a request message which will set NMEA message configuration. This command is issued from the host to GPS receiver and GPS receiver should respond with an ACK or NACK. The payload length is 9 bytes.

#### Structure:

<0xA0,0xA1>< PL><08>< message body><CS><0x0D,0x0A>

# Example:

A0 A1 00 09 08 01 01 01 00 01 00 00 00 08 0D 0A

1 2 3 4 5 6 7 8 9

Field	Name	Example(hex)	Description	Туре	Unit		
1	Message ID	08		UINT8			
2	GGA Interval	01	0 ~255, 0: disable	UINT8	Second		
3	GSA Interval	01	0 ~255, 0: disable	UINT8	Second		
4	GSV Interval	01	0 ~255, 0: disable	UINT8	Second		
5	GLL Interval	00	0 ~255, 0: disable	UINT8	Second		
6	RMC Interval	01	0 ~255, 0: disable	UINT8	Second		
7	VTG Interval	00	0 ~255, 0: disable	UINT8	Second		
8	ZDA Interval	00	0 ~255, 0: disable	UINT8	Second		
0	Attributoo	00	0: update to SRAM	LUNTO			
9	Attributes	00	1: update to both SRAM & FLASH	UINT8			
Payloa	Payload Length : 9 bytes						

# CONFIGURE MESSAGE TYPE – Configure and select output message type (0x9)

This is a request message which will change the GPS receiver output message type. This command is issued from the host to GPS receiver and GPS receiver should respond with an ACK or NACK. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><09>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 09 00 00 09 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit		
1	Message ID	09		UINT8			
	Туре		00 : No output				
2		00	01 : NMEA message	UINT8			
			02 : Binary Message				
	Attributes	00	0: update to SRAM	LUNTO			
3			1: update to both SRAM & FLASH	UINT8			
Payload	Payload Length : 3 bytes						

# CONFIGURE SYSTEM POWER MODE –Set the power mode of GPS system (0xC)

This is a request message which is issued from the host to GPS receiver to configure the system power mode. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><0C>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 0C 00 00 0C 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	0C		UINT8	
2	Mode	00	00 = Normal (disable)	LIINITO	
2	iviode	00	01 = Power Save (enable)	UINT8	
	Attributes	00	0: update to SRAM		
3			1: update to both SRAM & FLASH	UINT8	
			2: temporarily enabled		
Payload	Payload Length: 3 bytes				

# CONFIGURE SYSTEM POSITION RATE – Configure the position update rate of GPS system (0xE)

This is a request message which is issued from the host to GPS receiver to configure the system position update rate. Receivers with position rate 4 or higher needs to configure baud rate to 38400 or higher value. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><0E>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 0E 01 00 0F 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	0E		UINT8	
			Value with 1, 2, 4, 5, 8 or 10		
2	Rate	01	01: 1Hz update rate	UINT8	
2			Note: value with 4 or higher should work		
			with baud rate 38400 or higher		
	Attributes	00	0: update to SRAM	LUNTO	
3			1: update to both SRAM & FLASH	UINT8	
Payload Length: 3 bytes					

# QUERY POSITION UPDATE RATE – Query the position update rate of GPS system (0x10)

This is a request message which is issued from the host to GPS receiver to query position update rate. The GPS receiver should respond with an ACK along with information on software version when succeeded and should respond with an NACK when failed. The payload length is 1 byte.

Structure:

<0xA0,0xA1>< PL><10>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 01 10 10 0D 0A

1

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	10		UINT8	
Payload Length : 1 byte					

# CONFIGURE NAVIGATION MESSAGE INTERVAL – Configure navigation message interval (0x11)

This is a request message which will set navigation message interval. The navigation message is one of SkyTraq binary messages. This command is issued from the host to GPS receiver and GPS receiver should respond with an ACK or NACK. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><11>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 11 01 00 10 0D 0A

1 23

Field	Name	Example(hex)	Description	Туре	Unit	
1	Message ID	11		UINT8		
2	Navigation Message Interval	01	0 ~255, 0: disable	UINT8	Second	
3	Attributes	00	0: update to SRAM 1: update to both SRAM & FLASH	UINT8		
Payload Length : 3 bytes						

#### **CONFIGURE DATUM – Configure datum used for GPS position transformation (0x29)**

This is a request message which will setup parameters used for GPS position transformation. This command is issued from the host to GPS receiver and GPS receiver should respond with an ACK or NACK. The payload length is 19 bytes.

#### Structure:

<0xA0,0xA1>< PL><29>< message body><CS><0x0D,0x0A>

#### Example:

A0 A1 00 13 29 00 13 07 FF 7A FF 97 FE D9 00 7D DF 39 00 46 F4 10 00 CE 0D 0A

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19

Field	Name	Example(hex)	Description	Туре	Unit		
1	Message ID	29		UINT8			
2-3	index	0013	Refer to Appendix B for available Datum	UINT16			
4	Ellip idx	07	Refer to Appendix A for available Value	UINT8			
5-6	Delta X	FF7A	Refer to Appendix A and B for available	SINT16	Meter		
5-6	Della A	FF/A	Delta X	SINTIO	ivietel		
7-8	Delta Y	FF97	Refer to Appendix A and B for available	SINT16	Meter		
7-0			Delta Y				
9-10	Delta Z	FED9	Refer to Appendix A and B for available	SINT16	Meter		
9-10	Della Z		Delta Z				
11-14	Semi-major axis	007DDF39	Refer to Appendix A	UINT32			
15-18	Inversed Flattening	0046F410	Refer to Appendix A	UINT32			
10	Attributos	00	0: update to SRAM	LIINITO			
19	Attributes	00	1: update to both SRAM & FLASH	UINT8			
Payload	Payload Length : 19 bytes						

- 1. In order to reduce number of bytes to send in the configure datum command, the Semi-Major Axis is to be deducted by 6,370,000, with the result multiplied by 1,000.
  - Thus if converting 6,378,249.145 the result would be: 6,378,249.145 6,370,000 equals 8,249.145 And converting 8,249.145 x 1000 to hex is 007DDF39.
- 2. Same as for Inversed Flattening which is to be deducted by 293; with the result multiplied by 10,000,000 then converted to hex.
- 3. The exception is: the Inversed Flattening for Ellipsoid index 20 and 23 will lose precision after deducting by 293, multiply by 10,000,000 and convert to hex. Therefore, upon receiving the configure datum command, our firmware will use the internal hardcoded inversed flattening values for of 20 and 23, regardless of what is sent in the set datum command.

# QUERY DATUM – Query datum used by the GPS receiver (0x2D)

This is a request message which is issued from the host to GPS receiver to retrieve used datum information. The GPS receiver should respond with an ACK along with the datum information when succeeded and should respond with an NACK when failed. The payload length is 1 byte.

Structure:

<0xA0,0xA1>< PL><2D>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 01 2D 2D 0D 0A

1

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	2D		UINT8	
Payload Length : 1 byte					

# Get Ephemeris – Get ephemeris used of firmware (0x30)

This is a request message which is issued from the host to GPS receiver to retrieve ephemeris data. The GPS receiver should respond with an ACK along with information on ephemeris when succeeded and should respond with an NACK when failed. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><30>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 30 00 30 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	30		UINT8	
2	SV#	00	0: means all SVs 1~32 : mean for the particular SV	UINT8	
Payload Length: 2 bytes					

# Set Ephemeris – Set ephemeris to GPS firmware (0x31)

This is a request message which is issued from the host to GPS receiver to set ephemeris data (open an ephemeris file) to GPS receiver. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 87 bytes.

#### Structure:

<0xA0,0xA1>< PL><31>< message body><CS><0x0D,0x0A>

# Example:

A0 A1 00 57 31 00 02 00 77 88 04 61 10 00 00 00 00 00 00 00 00 00 00 00 DB DF 59 A6 00 00 1E 0A
1 2 3 28 29
47 7C 00 77 88 88 DF FD 2E 35 A9 CD B0 F0 9F FD A7 04 8E CC A8 10 2C A1 0E 22 31 59 A6 74 00 77
30 31
89 0C FF A3 59 86 C7 77 FF F8 26 97 E3 B9 1C 60 59 C3 07 44 FF A6 37 DF F0 B0 5E 0D 0A
64 65 86 87

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	31		UINT8	
2-3	SV id	0x1	Satellite id	UINT16	
4	SubFrameData[0][0]	00	Eph data subframe 1	UINT8	
5	SubFrameData[0][1]	00	Eph data subframe 1	UINT8	
6	SubFrameData[0][2]	00	Eph data subframe 1	UINT8	
7	SubFrameData[0][3]	00	Eph data subframe 1	UINT8	
8	SubFrameData[0][4]	00	Eph data subframe 1	UINT8	
9	SubFrameData[0][5]	00	Eph data subframe 1	UINT8	
10	SubFrameData[0][6]	00	Eph data subframe 1	UINT8	
11	SubFrameData[0][7]	00	Eph data subframe 1	UINT8	
12	SubFrameData[0][8]	00	Eph data subframe 1	UINT8	
13	SubFrameData[0][9]	00	Eph data subframe 1	UINT8	
14	SubFrameData[0][10]	00	Eph data subframe 1	UINT8	
15	SubFrameData[0][11]	00	Eph data subframe 1	UINT8	
16	SubFrameData[0][12]	00	Eph data subframe 1	UINT8	
17	SubFrameData[0][13]	00	Eph data subframe 1	UINT8	
18	SubFrameData[0][14]	00	Eph data subframe 1	UINT8	
19	SubFrameData[0][15]	00	Eph data subframe 1	UINT8	
20	SubFrameData[0][16]	00	Eph data subframe 1	UINT8	
21	SubFrameData[0][17]	00	Eph data subframe 1	UINT8	
22	SubFrameData[0][18]	00	Eph data subframe 1	UINT8	
23	SubFrameData[0][19]	00	Eph data subframe 1	UINT8	

24	SubFrameData[0][20]	00	Eph data subframe 1	UINT8	
25	SubFrameData[0][21]	00	Eph data subframe 1	UINT8	
26	SubFrameData[0][22]	00	Eph data subframe 1	UINT8	
27	SubFrameData[0][23]	00	Eph data subframe 1	UINT8	
28	SubFrameData[0][24]	00	Eph data subframe 1	UINT8	
29	SubFrameData[0][25]	00	Eph data subframe 1	UINT8	
30	SubFrameData[0][26]	00	Eph data subframe 1	UINT8	
31	SubFrameData[0][27]	00	Eph data subframe 1	UINT8	
32~59	SubFrameData[1][0~27]	00	Eph data subframe 2, same as field 4-31	UINT8	
60-87	SubFrameData[2][0~27]	00	Eph data subframe 3, same as field 4-31	UINT8	
Payload Length : 87 bytes					

# CONFIGURE WAAS - Configure the enable or disable of WAAS (0x37)

This is a request message which is issued from the host to GPS receiver to enable or disable WAAS. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><37>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 37 01 00 36 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	37		UINT8	
2	enable	1	0: disable	UINT8	
2			1: enable		
2	Attributes	00	0: update to SRAM	UINT8	
3			1: update to both SRAM & FLASH		
Payload Length: 3 bytes					

# QUERY WAAS STATUS - Query WAAS status of GPS receiver (0x38)

This is a request message which is issued from the host to GPS receiver to query WAAS status. The GPS receiver should respond with an ACK along with AGPS aiding status when succeeded and should respond with an NACK when failed. The payload length is 1 byte.

Structure:

<0xA0,0xA1>< PL><38>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 01 38 38 0D 0A

1

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	38		UINT8	
Payload Length : 1 byte					

# CONFIGURE POSITION PINNING – Enable or disable position pinning of GPS receiver (0x39)

This is a request message which is issued from the host to GPS receiver to configure the system position pinning. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><39>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 39 01 38 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	39		UINT8	
2	Position pinning	01	0: disable (default) 1: enable	UINT8	
Payload Length: 2 bytes					

# QUERY POSITION PINNING – Query position pinning status of GPS receiver (0x3A)

This is a request message which is issued from the host to GPS receiver to query position pinning status. The GPS receiver should respond with an ACK along with position pinning status when succeeded and should respond with an NACK when failed. The payload length is 1 byte.

Structure:

<0xA0,0xA1>< PL><3A>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 01 3A 3A 0D 0A

1

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	3A		UINT8	
Payload Length : 1 byte					

#### CONFIGURE POSITION PINNING PARAMETERS –Set position pinning parameters of GPS receiver (0x3B)

This is a request message which is issued from the host to GPS receiver to configure the system position pinning parameters. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 11 bytes.

Structure:

<0xA0,0xA1>< PL><3B>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 0B 3B 00 02 00 0A 00 08 00 2D 01 F4 E3 0D 0A

1 2 3 4 5 6 7 8 9 10 11

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	3B		UINT8	
2-3	Pinning speed	0002		UINT16	Km/Hr
4-5	Pinning cnt	000A		UINT16	Second
6-7	Unpinning speed	0008		UINT16	Km/Hr
8-9	Unpinning cnt	002D		UINT16	Second
10-11	Unpinning distance	01F4		UINT16	Meter
Payload	Length: 11 bytes				

# CONFIGURE NAVIGATION MODE – Configure the navigation mode of GPS system (0x3C)

This is a request message which is issued from the host to GPS receiver to configure the system navigation mode.

The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed.

The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><3C>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 3C 00 00 3C 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	3C		UINT8	
2	2 Navigation mode	00	0: car	UINT8	
2			1: pedestrian	UINTO	
	Attributos	00	0: update to SRAM	UINT8	
3	3 Attributes	00	1: update to both SRAM & FLASH		
Payload Length : 3 bytes					

# QUERY NAVIGATION MODE – Query the navigation mode of GPS receiver (0x3D)

This is a request message which is issued from the host to GPS receiver to query navigation mode. The GPS receiver should respond with an ACK along with navigation mode when succeeded and should respond with an NACK when failed. The payload length is 1 byte.

Structure:

<0xA0,0xA1>< PL><3D>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 01 3D 3D 0D 0A

1

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	3D		UINT8	
Payload Length : 1 byte					

# CONFIGURE 1PPS MODE –Set 1PPS mode to the GPS receiver (0x3E)

This is a request message which is issued from the host to GPS receiver to configure the system 1PPS mode. The GPS receiver should respond with an ACK when succeeded and should respond with an NACK when failed. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><3E>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 3E 00 00 3E 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit	
1	Message ID	3E		UINT8		
			0: off			
2	1PPS mode	00	1: on when 3D fix	UINT8		
			2: on when 1 SV			
2	Attributoo	00	0: update to SRAM	LUNTO		
3 Attributes	Allibules	butes 00	1: update to both SRAM & FLASH	UINT8		
Payload	Payload Length : 3 bytes					

# QUERY 1PPS MODE - Query 1PPS mode of the GPS receiver (0x3F)

This is a request message which is issued from the host to GPS receiver to query 1PPS mode. The GPS receiver should respond with an ACK along with 1PPS mode when succeeded and should respond with an NACK when failed. The payload length is 1 byte.

Structure:

<0xA0,0xA1>< PL><3F>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 01 3F 3F 0D 0A

1

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	3F		UINT8	
Payload Length : 1 byte					

# **OUTPUT MESSAGES**

# SOFTWARE VERSION - Software version of the GPS receiver (0x80)

This is a response message which provides the software version of the GPS receiver. This message is sent from the GPS receiver to host. The example below output the SkyTraq software version as 01.01.01-01.03.14-07.01.18 on System image. The payload length is 14 bytes.

#### Structure:

<0xA0,0xA1>< PL><80>< message body><CS><0x0D,0x0A>

#### Example:

A0 A1 00 0E 80 01 00 01 01 01 00 01 03 0E 00 07 01 12 98 0D 0A

1 2 34 5 6 78 9 1011121314

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	80		UINT8	
0	Software Type	00	0: Reserved	LUNITO	
2	Software Type	00	1: System code	UINT8	
3-6	Kernel Version	00010001	X1.Y1.Z1 = SkyTraq Kernel Version	UINT32	
3-0	Remer version	00010001	Ex. X1=01, Y1=00, Z1=01 (1.0.1)		
7-10	ODM version	00010307	X1.Y1.Z1 = SkyTraq Version	UINT32	
7-10	ODIVI VEISION	00010307	Ex. X1=01, Y1=03, Z1=01 (1.3.1)	UIN I 32	
11-14	Dovision	00060000	YYMMDD = SkyTraq Revision	LUNTOO	
11-14	Revision	00060C0F	Ex. YY=06, MM=01, DD=10 (060110)	UINT32	
Payload	d Length : 14 bytes				

# SOFTWARE CRC - Software CRC of the GPS receiver (0x81)

This is a response message which provides the software CRC of the GPS receiver. This message is sent from the GPS receiver to host. The payload length is 4 bytes.

Structure:

<0xA0,0xA1>< PL><81>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 04 81 01 98 76 6E 0D 0A

1 2 34

Field	Name	Example(hex)	Description	Туре	Unit			
1	Message ID	81		UINT8				
2 Software Type	00	0: Reserved	LUNITO					
2	Software Type	00	1: System code	UINT8				
3-4	CRC	9876	CRC value	UINT16				
Payload	Payload Length : 4 bytes							

# ACK - Acknowledgement to a Request Message (0x83)

This is a response message which is an acknowledgement to a request message. The payload length is 2 bytes

# Structure:

<0xA0,0xA1>< PL><83>< message body><CS><0x0D,0x0A>

# Example:

A0 A1 00 02 83 02 81 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit		
1	Message ID	83		UINT8			
2	ACK ID	02	Message ID of the request message	UINT8			
Payload Length : 2 bytes							

# NACK - Response to an unsuccessful request message (0x84)

This is a response message which is a response to an unsuccessful request message. This is used to notify the Host that the request message has been rejected. The payload length is 2 bytes

Structure:

<0xA0,0xA1>< PL><84>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 84 01 82 0D 0A

12

Field	Name	Example(hex)	Description	Туре	Unit		
1	Message ID	84		UINT8			
2	ACK ID	01	Message ID of the request message	UINT8			
Payload Length : 2 bytes							

## POSITON UPDATE RATE – Position Update rate of the GPS system (0x86)

This is a response message to **QUERY POSITION UPDATE RATE** which provides the position update rate of the GPS receiver. This message is sent from the GPS receiver to host. The payload length is 2 bytes.

#### Structure:

<0xA0,0xA1>< PL><86>< message body><CS><0x0D,0x0A>

### Example:

A0 A1 00 02 86 01 87 0D 0A

1 2

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	86		UINT8	
2	Update Rate	01	01: 1Hz	UINT8	
Payload	Length : 2 bytes				

### NAVIGATION DATA MESSAGE – message of user navigation data(0xA8)

This is a response message which provides data of user navigation solution. This message is sent from the GPS receiver to host. The payload length is 59 bytes

#### Structure:

<0xA0,0xA1>< PL><A8>< message body><CS><0x0D,0x0A>

### Example:

A0 A1 00 3B A8 02 08 06 04 02 32 18 18 0E C5 E1 99 48 20 78 ED 00 00 2E 3B 00 00 26 93 00 93 00 93 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 00 93 00 93 EE 35 4D 30 1D 99 AA 37 0F D7 0B 74 00 00 00 00 00 00 00 00 00 00 00 00 F5 0D 0A 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	A8		UINT8	
			Quality of fix		
			0: no fix		
2	Fix Mode	02	1: 2D	UINT8	
			2: 3D		
			3: 3D+DGPS		
2	Number of SV in	00	Number of SV in fix	LUNITO	
3	fix	08	0-12	UINT8	
4-5	GPS Week	0604	GPS week number	UINT16	
0.0	TOW	00004040	GPS time of week	LUNITOO	1/100
6-9	TOW	02321818	Scaling 0.01	UINT32	sec
			> 0: North Hemisphere		1/1e-7
10-13	Latitude	0EC5E199	< 0: South Hemisphere	SINT32	
			Scaling 1e-7		degree
14-17	Longitudo	482078ED	> 0: East Hemisphere	SINT32	1/1e-7
14-17	Longitude	402076ED	< 0: West Hemisphere	SINTSZ	degree
18-21	allipacid altituda	00002E3B	height above ellipsoid	UINT32	1/100
10-21	ellipsoid altitude,	00002E3B	Scaling 0.01	UINT 32	meter
22-25	mean sea level	00002693	height above mean sea level	UINT32	1/100
22-25	altitude	00002093	Scaling 0.01	UINT32	meter
26-27	GDOP	0093	Geometric dilution of precision	UINT16	1/100
20-27	GDOF	0093	Scaling 0.01	UINTTO	1/100
28-29	PDOP	0003	Position dilution of precision	UINT16	1/100
20-29	FDOF	0093	Scaling 0.01	UINI IO	1/100
30-31	HDOP	0093	Horizontal dilution of precision	UINT16	1/100
30-31	ПООР	0093	Scaling 0.01	UINT TO	1/100

22.22	32-33 VDOP	0093	Vertical dilution of precision	UINT16	1/100
32-33	VDOP	0093	Scaling 0.01	UINTIO	
24.25	TDOD	0003	Time dilution of precision	UINT16	1/100
34-35	TDOP	0093	Scaling 0.01	UINTIO	1/100
20.20	FOFF V	EE254D20	ECEF X coordinate	CINITOO	1/100
36-39	ECEF-X	EE354D30	Scaling 0.01	SINT32	meter
40.42	ECEE V	1D99AA37	ECEF Y coordinate	SINT32	1/100
40-43	ECEF-Y	TD99AA37	Scaling 0.01	3111132	meter
44-47	F0FF 7	0ED70B74	ECEF Z coordinate	SINT32	1/100
44-47	ECEF-Z	0FD70B74	Scaling 0.01		meter
48-51	ECEF-VX	00000000	ECEF X Veolcity	SINT32	1/100
40-01	ECEF-VA	0000000	Scaling 0.01	3111132	m/s
52-55	ECEF-VY	00000000	ECEF Y Veolcity	SINT32	1/100
02-00	ECEF-V I	0000000	Scaling 0.01	SINISZ	m/s
56-59	ECEE VZ	00000000	ECEF Z Veolcity	SINT32	1/100
56-59	ECEF-VZ	0000000	Scaling 0.01		m/s
Payload Le	ength: 59 bytes				

## GPS DATUM - datum used by the GPS receiver (0xAE)

This is a response message which provides the datum information of the GPS receiver. This message is sent from the GPS receiver to host. The payload length is 3 bytes.

Structure:

<0xA0,0xA1>< PL><AE>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 03 AE 00 13 BD 0D 0A

1 2 3

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	AE		UINT8	
2-3	Datum Index	0013	Datum index Refer to Appendix A & B	UINT16	
Payload Length: 3 bytes					

## GPS Ephemeris data – ephemeris data of the GPS receiver (0xB1)

This is a response message which provides the Ephemeris Data of the GPS receiver to Host. The Host will save the ephemeris data as an ephemeris file. This message is sent from the GPS receiver to host. The payload length is 87 bytes.

### Structure:

<0xA0,0xA1>< PL><B1>< message body><CS><0x0D,0x0A>

### Example:

A0 A1 00 57 B1 00 02 00 77 88 04 61 10 00 00 00 00 00 00 00 00 00 00 00 DB DF 59 A6 00 00 1E 0A
1 2 3 28 29
47 7C 00 77 88 88 DF FD 2E 35 A9 CD B0 F0 9F FD A7 04 8E CC A8 10 2C A1 0E 22 31 59 A6 74 00 77
30 31
89 0C FF A3 59 86 C7 77 FF F8 26 97 E3 B9 1C 60 59 C3 07 44 FF A6 37 DF F0 B0 5E 0D 0A
64 65

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	B1		UINT8	
2-3	SV id	0x1	Satellite id	UINT16	
4	SubFrameData[0][0]	00	Eph data subframe 1	UINT8	
5	SubFrameData[0][1]	00	Eph data subframe 1	UINT8	
6	SubFrameData[0][2]	00	Eph data subframe 1	UINT8	
7	SubFrameData[0][3]	00	Eph data subframe 1	UINT8	
8	SubFrameData[0][4]	00	Eph data subframe 1	UINT8	
9	SubFrameData[0][5]	00	Eph data subframe 1	UINT8	
10	SubFrameData[0][6]	00	Eph data subframe 1	UINT8	
11	SubFrameData[0][7]	00	Eph data subframe 1	UINT8	
12	SubFrameData[0][8]	00	Eph data subframe 1	UINT8	
13	SubFrameData[0][9]	00	Eph data subframe 1	UINT8	
14	SubFrameData[0][10]	00	Eph data subframe 1	UINT8	
15	SubFrameData[0][11]	00	Eph data subframe 1	UINT8	
16	SubFrameData[0][12]	00	Eph data subframe 1	UINT8	
17	SubFrameData[0][13]	00	Eph data subframe 1	UINT8	
18	SubFrameData[0][14]	00	Eph data subframe 1	UINT8	
19	SubFrameData[0][15]	00	Eph data subframe 1	UINT8	
20	SubFrameData[0][16]	00	Eph data subframe 1	UINT8	
21	SubFrameData[0][17]	00	Eph data subframe 1	UINT8	
22	SubFrameData[0][18]	00	Eph data subframe 1	UINT8	
23	SubFrameData[0][19]	00	Eph data subframe 1	UINT8	

24	SubFrameData[0][20]	00	Eph data subframe 1	UINT8		
25	SubFrameData[0][21]	00	Eph data subframe 1	UINT8		
26	SubFrameData[0][22]	00	Eph data subframe 1	UINT8		
27	SubFrameData[0][23]	00	Eph data subframe 1	UINT8		
28	SubFrameData[0][24]	00	Eph data subframe 1	UINT8		
29	SubFrameData[0][25]	00	Eph data subframe 1	UINT8		
30	SubFrameData[0][26]	00	Eph data subframe 1	UINT8		
31	SubFrameData[0][27]	00	Eph data subframe 1	UINT8		
32~59	SubFrameData[1][0~27]	00	Eph data subframe 2, same as field 4-31	UINT8		
60-87	SubFrameData[2][0~27]	00	Eph data subframe 3, same as field 4-31	UINT8		
Payload	Payload Length : 87 bytes					

## GPS WAAS STATUS - WAAS status of the GPS receiver (0xB3)

This is a response message which provides the status of the WAAS receiver. This message is sent from the GPS receiver to host. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><B3>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 B3 00 B3 0D 0A

12

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	B3		UINT8	
2	WAAS status	00	0: disable	UINT8	
2	WAAS status	00	1: enable	UINTO	
Payload Length : 2 bytes					

## GPS POSITON PINNING STATUS – Position pinning status of the GPS receiver (0xB4)

This is a response message to *QUERY POSITION PINNING* which provides the position pinning status of the GPS receiver. This message is sent from the GPS receiver to host. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><B4>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 B4 00 B4 0D 0A

12

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	B4		UINT8	
2	status	00	0: disable	UINT8	
2	Status	00	1: enable	UINTO	
Payload Length: 2 bytes					

## GPS NAVIGATION MODE - Navigation mode of the GPS receiver (0xB5)

This is a response message to **QUERY NAVIGATION MODE** which provides the navigation mode of the GPS receiver. This message is sent from the GPS receiver to host. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><B5>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 B5 00 B5 0D 0A

12

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	B5		UINT8	
2	Navigation mode	00	0: car 1: pedestrian	UINT8	
Payload	Payload Length: 2 bytes				

## GPS 1PPS MODE - 1PPS mode of the GPS receiver (0xB6)

This is a response message to **QUERY 1PPS MODE** which provides the 1PPS mode of the GPS receiver. This message is sent from the GPS receiver to host. The payload length is 2 bytes.

Structure:

<0xA0,0xA1>< PL><B6>< message body><CS><0x0D,0x0A>

Example:

A0 A1 00 02 B6 00 B6 0D 0A

12

Field	Name	Example(hex)	Description	Туре	Unit
1	Message ID	B6		UINT8	
2	1PPS mode	01	0: off	UINT8	
2	TPP3 IIIode	01	1: on		
Payload Length: 2 bytes					

# A. Ellipsoid List

Ellipsoid Index	Ellipsoid	Semi-major axis (a)	Inversed Flattening (1/f)
1	Airy 1830	6377563.396	299.3249646
2	Modified Airy	6377340.189	299.3249646
3	Australian National	6378160	298.25
4	Bessel 1841 (Namibia)	6377483.865	299.1528128
5	Bessel 1841	6377397.155	299.1528128
6	Clarke 1866	6378206.4	294.9786982
7	Clarke 1880	6378249.145	293.465
8	Everest (India 1830)	6377276.345	300.8017
9	Everest (Sabah Sarawak)	6377298.556	300.8017
10	Everest (India 1956)	6377301.243	300.8017
11	Everest (Malaysia 1969)	6377295.664	300.8017
12	Everest (Malay. & Sing)	6377304.063	300.8017
13	Everest (Pakistan)	6377309.613	300.8017
14	Modified Fischer 1960	6378155	298.3
15	Helmert 1906	6378200	298.3
16	Hough 1960	6378270	297
17	Indonesian 1974	6378160	298.247
18	International 1924	6378388	297
19	Krassovsky 1940	6378245	298.3
20	GRS 80	6378137	298.257222101
21	South American 1969	6378160	298.25
22	WGS 72	6378135	298.26
23	WGS 84	6378137	298.257223563

### **B. Datum Reference List**

Datum index	Datum Name	Delta X	Delta Y	Delta Z	Ellipsoid	Ellipsoid Index	Region of Use
0	WGS-84	0	0	0	WGS 84	23	Global
1	Adindan	-118	-14	218	Clarke 1880	7	Burkina Faso
2	Adindan	-134	-2	210	Clarke 1880	7	Cameroon
3	Adindan	-165	-11	206	Clarke 1880	7	Ethiopia
4	Adindan	-123	-20	220	Clarke 1880	7	Mali
5	Adindan	-166	-15	204	Clarke 1880	7	MEAN FOR Ethiopia;
5		-100	-15		Clarke 1000		Sudan
6	Adindan	-128	-18	224	Clarke 1880	7	Senegal
7	Adindan	-161	-14	205	Clarke 1880	7	Sudan
8	Afgooye	-43	-163	45	Krassovsky 1940	19	Somalia
9	Ain el Abd 1970	-150	-250	-1	International 1924	18	Bahrain
10	Ain el Abd 1970	-143	-236	7	International 1924	18	Saudi Arabia
11	American Samoa 1962	-115	118	426	Clarke 1866	6	American Samoa Islands
12	Anna 1 Astro 1965	-491	-22	435	Australian National	3	Cocos Islands
13	Antigua Island Astro 1943	-270	13	62	Clarke 1880	7	Antigua (Leeward Islands)
14	Arc 1950	-138	-105	-289	Clarke 1880	7	Botswana
15	Arc 1950	-153	-5	-292	Clarke 1880	7	Burundi
16	Arc 1950	-125	-108	-295	Clarke 1880	7	Lesotho
17	Arc 1950	-161	-73	-317	Clarke 1880	7	Malawi
18	Arc 1950	-143	-90	-294	Clarke 1880	7	MEAN FOR Botswana; Lesotho; Malawi; Swaziland; Zaire; Zambia; Zimbabwe
19	Arc 1950	-134	-105	-295	Clarke 1880	7	Swaziland
20	Arc 1950	-169	-19	-278	Clarke 1880	7	Zaire
21	Arc 1950	-147	-74	-283	Clarke 1880	7	Zambia
22	Arc 1950	-142	-96	-293	Clarke 1880	7	Zimbabwe
23	Arc 1960	-160	-6	-302	Clarke 1880	7	MEAN FOR Kenya; Tanzania
24	Arc 1960	-157	-2	-299	Clarke 1880	7	Kenya
25	Arc 1960	-175	-23	-303	Clarke 1880	7	Taanzania
26	Ascension Island 1958	-205	107	53	International 1924	18	Ascension Island
27	Astro Beacon E 1945	145	75	-272	International 1924	18	Iwo Jima
28	Astro DOS 71/4	-320	550	-494	International 1924	18	St Helena Island
29	Astro Tern Island (FRIG) 1961	114	-116	-333	International 1924	18	Tern Island
30	Astronomical Station 1952	124	-234	-25	International 1924	18	Marcus Island
31	Australian Geodetic 1966	-133	-48	148	Australian National	3	Australia; Tasmania
32	Australian Geodetic 1984	-134	-48	149	Australian National	3	Australia; Tasmania
33	Ayabelle Lighthouse	-79	-129	145	Clarke 1880	7	Djibouti
34	Bellevue (IGN)	-127	-769	472	International 1924	18	Efate & Erromango Islands
35	Bermuda 1957	-73	213	296	Clarke 1866	6	Bermuda
36	Bissau	-173	253	27	International 1924	18	Guinea-Bissau
37	Bogota Observatory	307	304	-318	International 1924	18	Colombia
38	Bukit Rimpah	-384	664	-48	Bessel 1841	5	Indonesia (Bangka & Belitung Ids)
39	Camp Area Astro	-104	-129	239	International 1924	18	Antarctica (McMurdo Camp Area)
40	Campo Inchauspe	-148	136	90	International 1924	18	Argentina
41	Canton Astro 1966	298	-304	-375	International 1924	18	Phoenix Islands
42	Cape	-136	-108	-292	Clarke 1880	7	South Africa
43	Cape Canaveral	-2	151	181	Clarke 1866	6	Bahamas; Florida
44	Carthage	-263	6	431	Clarke 1880	7	Tunisia
45	Chatham Island Astro 1971	175	-38	113	International 1924	18	New Zealand (Chatham Island)
46	Chua Astro	-134	229	-29	International 1924	18	Paraguay
47	Corrego Alegre	-206	172	-6	International 1924	18	Brazil
48	Dabola	-83	37	124	Clarke 1880	7	Guinea
49	Deception Island	260	12	-147	Clarke 1880	7	Deception Island; Antarctia

50	Djakarta (Batavia)	-377	681	-50	Bessel 1841	5	Indonesia (Sumatra)
51	DOS 1968	230	-199	-752	International 1924	18	New Georgia Islands (Gizo Island)
52	Easter Island 1967	211	147	111	International 1924	18	Easter Island
53	Estonia; Coordinate System 1937	374	150	588	Bessel 1841	5	Estonia
54	European 1950	-104	-101	-140	International 1924	18	Cyprus
55	European 1950	-130	-117	-151	International 1924	18	Egypt
56	European 1950	-86	-96	-120	International 1924	18	England; Channel Islands; Scotland; Shetland Islands
57	European 1950	-86	-96	-120	International 1924	18	England; Ireland; Scotland; Shetland Islands
58	European 1950	-87	-95	-120	International 1924	18	Finland; Norway
59	European 1950	-84	-95	-130	International 1924	18	Greece
60	European 1950	-117	-132	-164	International 1924	18	Iran
61	European 1950	-97	-103	-120	International 1924	18	Italy (Sardinia)
62	European 1950	-97	-88	-135	International 1924	18	Italy (Sicily)
63	European 1950	-107	-88	-149	International 1924	18	Malta
64	European 1950	-87	-98	-121	International 1924	18	MEAN FOR Austria; Belgium; Denmark; Finland; France; W Germany; Gibraltar; Greece; Italy; Luxembourg; Netherlands; Norway; Portugal; Spain; Sweden; Switzerland
65	European 1950	-87	-96	-120	International 1924	18	MEAN FOR Austria; Denmark; France; W Germany; Netherlands; Switzerland
66	European 1950	-103	-106	-141	International 1924	18	MEAN FOR Iraq; Israel; Jordan; Lebanon; Kuwait; Saudi Arabia; Syria
67	European 1950	-84	-107	-120	International 1924	18	Portugal; Spain
68	European 1950	-112	-77	-145	International 1924	18	Tunisia
69	European 1979	-86	-98	-119	International 1924	18	MEAN FOR Austria; Finland; Netherlands; Norway; Spain; Sweden; Switzerland
70	Fort Thomas 1955	-7	215	225	Clarke 1880	7	Nevis; St. Kitts (Leeward Islands)
71	Gan 1970	-133	-321	50	International 1924	18	Republic of Maldives
72	Geodetic Datum 1949	84	-22	209	International 1924	18	New Zealand
73	Graciosa Base SW 1948	-104	167	-38	International 1924	18	Azores (Faial; Graciosa; Pico; Sao Jorge; Terceira)
74	Guam 1963	-100	-248	259	Clarke 1866	6	Guam
75	Gunung Segara	-403	684	41	Bessel 1841	5	Indonesia (Kalimantan)
76	GUX 1 Astro	252	-209	-751	International 1924	18	Guadalcanal Island
77	Herat North	-333	-222	114	International 1924	18	Afghanistan
78	Hermannskogel Datum	653	-212	449	Bessel 1841 (Namibia)	4	Croatia -Serbia, Bosnia-Herzegovina
79	Hjorsey 1955	-73	46	-86	International 1924	18	Iceland

80	Hong Kong 1963	-156	-271	-189	International 1924	18	Hong Kong
81	Hu-Tzu-Shan	-637	-549	-203	International 1924	18	Taiwan
82	Indian	282	726	254	Everest (India 1830)	8	Bangladesh
83	Indian	295	736	257	Everest (India 1956)	10	India; Nepal
84	Indian	283	682	231	Everest (Pakistan)	13	Pakistan
85	Indian 1954	217	823	299	Everest (India 1830)	8	Thailand
86	Indian 1960	182	915	344	Everest (India 1830)	8	Vietnam (Con Son Island)
87	Indian 1960	198	881	317	Everest (India 1830)	8	Vietnam (Near 16øN))
88	Indian 1975	210	814	289	Everest (India 1830)	8	Thailand
89	Indonesian 1974	-24	-15	5	Indonesian 1974	17	Indonesia
90	Ireland 1965	506	-122	611	Modified Airy	2	Ireland
91	ISTS 061 Astro 1968	-794	119	-298	International 1924	18	South Georgia Islands
92	ISTS 073 Astro 1969	208	-435	-229	International 1924	18	Diego Garcia
93	Johnston Island 1961	189	-79	-202	International 1924	18	Johnston Island
94	Kandawala	-97	787	86	Everest (India 1830)	8	Sri Lanka
95	Kerguelen Island 1949	145	-187	103	International 1924	18	Kerguelen Island
96	Kertau 1948	-11	851	5	Everest (Malay. & Sing)	12	West Malaysia & Singapore
97	Kusaie Astro 1951	647	1777	-1124	International 1924	18	Caroline Islands
98	Korean Geodetic System	0	0	0	GRS 80	20	South Korea
99	L. C. 5 Astro 1961	42	124	147	Clarke 1866	6	Cayman Brac Island
100	Leigon	-130	29	364	Clarke 1880	7	Ghana
101	Liberia 1964	-90	40	88	Clarke 1880	7	Liberia
102	Luzon	-133	-77	-51	Clarke 1866	6	Philippines (Excluding Mindanao)
103	Luzon	-133	-79	-72	Clarke 1866	6	Philippines (Mindanao)
104	M'Poraloko	-74	-130	42	Clarke 1880	7	Gabon
105	Mahe 1971	41	-220	-134	Clarke 1880	7	Mahe Island
106	Massawa	639	405	60	Bessel 1841	5	Ethiopia (Eritrea)
107	Merchich	31	146	47	Clarke 1880	7	Morocco
108	Midway Astro 1961	912	-58	1227	International 1924	18	Midway Islands
109	Minna	-81	-84	115	Clarke 1880	7	Cameroon
110	Minna	-92	-93	122	Clarke 1880	7	Nigeria
111	Montserrat Island Astro 1958	174	359	365	Clarke 1880	7	Montserrat (Leeward Islands)
112	Nahrwan	-247	-148	369	Clarke 1880	7	Oman (Masirah Island)
113	Nahrwan	-243	-192	477	Clarke 1880	7	Saudi Arabia
114	Nahrwan	-249	-156	381	Clarke 1880	7	United Arab Emirates
115	Naparima BWI	-10	375	165	International 1924	18	Trinidad & Tobago
116	North American 1927	-5	135	172	Clarke 1866	6	Alaska (Excluding Aleutian Ids)
117	North American 1927	-2	152	149	Clarke 1866	6	Alaska (Aleutian Ids East of 180øW)

118	North American 1927	2	204	105	Clarke 1866	6	Alaska (Aleutian Ids West of 180øW)
119	North American 1927	-4	154	178	Clarke 1866	6	Bahamas (Except San Salvador Id)
120	North American 1927	1	140	165	Clarke 1866	6	Bahamas (San Salvador Island)
121	North American 1927	-7	162	188	Clarke 1866	6	Canada (Alberta; British Columbia)
122	North American 1927	-9	157	184	Clarke 1866	6	Canada (Manitoba; Ontario)
123	North American 1927	-22	160	190	Clarke 1866	6	Canada (New Brunswick; Newfoundland; Nova Scotia; Quebec)
124	North American 1927	4	159	188	Clarke 1866	6	Canada (Northwest Territories; Saskatchewan)
125	North American 1927	-7	139	181	Clarke 1866	6	Canada (Yukon)
126	North American 1927	0	125	201	Clarke 1866	6	Canal Zone
127	North American 1927	-9	152	178	Clarke 1866	6	Cuba
128	North American 1927	11	114	195	Clarke 1866	6	Greenland (Hayes Peninsula)
129	North American 1927	-3	142	183	Clarke 1866	6	MEAN FOR Antigua; Barbados; Barbuda; Caicos Islands; Cuba; Dominican Republic; Grand Cayman; Jamaica; Turks Islands
130	North American 1927	0	125	194	Clarke 1866	6	MEAN FOR Belize; Costa Rica; El Salvador; Guatemala; Honduras; Nicaragua
131	North American 1927	-10	158	187	Clarke 1866	6	MEAN FOR Canada
132	North American 1927	-8	160	176	Clarke 1866	6	MEAN FOR CONUS
133	North American 1927	-9	161	179	Clarke 1866	6	MEAN FOR CONUS (East of Mississippi; River Including Louisiana; Missouri; Minnesota)
134	North American 1927	-8	159	175	Clarke 1866	6	MEAN FOR CONUS (West of Mississippi; River Excluding Louisiana; Minnesota; Missouri)
135	North American 1927	-12	130	190	Clarke 1866	6	Mexico
136	North American 1983	0	0	0	GRS 80	20	Alaska (Excluding Aleutian Ids)
137	North American 1983	-2	0	4	GRS 80	20	Aleutian Ids
138	North American 1983	0	0	0	GRS 80	20	Canada
139	North American 1983	0	0	0	GRS 80	20	CONUS
140	North American 1983	1	1	-1	GRS 80	20	Hawaii
141	North American 1983	0	0	0	GRS 80	20	Mexico; Central America
142	North Sahara 1959	-186	-93	310	Clarke 1880	7	Algeria
143	Observatorio Meteorologico 1939	-425	-169	81	International 1924	18	Azores (Corvo & Flores Islands)
144	Old Egyptian 1907	-130	110	-13	Helmert 1906	15	Egypt
145	Old Hawaiian	89	-279	-183	Clarke 1866	6	Hawaii
146	Old Hawaiian	45	-290	-172	Clarke 1866	6	Kauai
147	Old Hawaiian	65	-290	-190	Clarke 1866	6	Maui

		1	1	1		<u> </u>	MEAN FOR Hawaii;
148	Old Hawaiian	61	-285	-181	Clarke 1866	6	Kauai; Maui; Oahu
149	Old Hawaiian	58	-283	-182	Clarke 1866	6	Oahu
150	Oman	-346	-1	224	Clarke 1880	7	Oman
151	Ordnance Survey Great Britain 1936	371	-112	434	Airy 1830	1	England
152	Ordnance Survey Great Britain 1936	371	-111	434	Airy 1830	1	England; Isle of Man; Wales
153	Ordnance Survey Great Britain 1936	375	-111	431	Airy 1830	1	MEAN FOR England; Isle of Man; Scotland; Shetland Islands; Wales
154	Ordnance Survey Great Britain 1936	384	-111	425	Airy 1830	1	Scotland; Shetland Islands
155	Ordnance Survey Great Britain 1936	370	-108	434	Airy 1830	1	Wales
156	Pico de las Nieves	-307	-92	127	International 1924	18	Canary Islands
157	Pitcairn Astro 1967	185	165	42	International 1924	18	Pitcairn Island
158	Point 58	-106	-129	165	Clarke 1880	7	MEAN FOR Burkina Faso & Niger
159	Pointe Noire 1948	-148	51	-291	Clarke 1880	7	Congo
160	Porto Santo 1936	-499	-249	314	International 1924	18	Porto Santo; Madeira Islands
161	Provisional South American 1956	-270	188	-388	International 1924	18	Bolivia
162	Provisional South American 1956	-270	183	-390	International 1924	18	Chile (Northern; Near 19 øS)
163	Provisional South American 1956	-305	243	-442	International 1924	18	Chile (Southern; Near 43 øS)
164	Provisional South American 1956	-282	169	-371	International 1924	18	Colombia
165	Provisional South American 1956	-278	171	-367	International 1924	18	Ecuador
166	Provisional South American 1956	-298	159	-369	International 1924	18	Guyana
167	Provisional South American 1956	-288	175	-376	International 1924	18	MEAN FOR Bolivia; Chile; Colombia; Ecuador; Guyana; Peru; Venezuela
168	Provisional South American 1956	-279	175	-379	International 1924	18	Peru
169	Provisional South American 1956	-295	173	-371	International 1924	18	Venezuela
170	Provisional South Chilean 1963	16	196	93	International 1924	18	Chile (Near 53 øS) (Hito XVIII)
171	Puerto Rico	11	72	-101	Clarke 1866	6	Puerto Rico; Virgin Islands
172	Pulkovo 1942	28	-130	-95	Krassovsky 1940	19	Russia
173	Qatar National	-128	-283	22	International 1924	18	Qatar
174	Qornoq	164	138	-189	International 1924	18	Greenland (South)
175	Reunion	94	-948	-1262	International 1924	18	Mascarene Islands
176	Rome 1940	-225	-65	9	International 1924	18	Italy (Sardinia)
177	S-42 (Pulkovo 1942)	28	-121	-77	Krassovsky 1940	19	Hungary
178	S-42 (Pulkovo 1942)	23	-124	-82	Krassovsky 1940	19	Poland
179	S-42 (Pulkovo 1942)	26	-121	-78	Krassovsky 1940	19	Czechoslavakia
180	S-42 (Pulkovo 1942)	24	-124	-82	Krassovsky 1940	19	Latvia
181	S-42 (Pulkovo 1942)	15	-130	-84	Krassovsky 1940	19	Kazakhstan
182	S-42 (Pulkovo 1942)	24	-130	-92	Krassovsky 1940	19	Albania

183	S-42 (Pulkovo 1942)	28	-121	-77	Krassovsky 1940	19	Romania
184	S-JTSK	589	76	480	Bessel 1841	5	Czechoslavakia (Prior 1 JAN 1993)
185	Santo (DOS) 1965	170	42	84	International 1924	18	Espirito Santo Island
186	Sao Braz	-203	141	53	International 1924	18	Azores (Sao Miguel; Santa Maria Ids)
187	Sapper Hill 1943	-355	21	72	International 1924	18	East Falkland Island
188	Schwarzeck	616	97	-251	Bessel 1841 (Namibia)	4	Namibia
189	Selvagem Grande 1938	-289	-124	60	International 1924	18	Salvage Islands
190	Sierra Leone 1960	-88	4	101	Clarke 1880	7	Sierra Leone
191	South American 1969	-62	-1	-37	South American 1969	21	Argentina
192	South American 1969,	-61	2	-48	South American 1969	21	Bolivia
193	South American 1969,	-60	-2	-41	South American 1969	21	Brazil
194	South American 1969,	-75	-1	-44	South American 1969	21	Chile
195	South American 1969,	-44	6	-36	South American 1969	21	Colombia
196	South American 1969,	-48	3	-44	South American 1969	21	Ecuador
197	South American 1969,	-47	26	-42	South American 1969	21	Ecuador (Baltra; Galapagos)
198	South American 1969,	-53	3	-47	South American 1969	21	Guyana
199	South American 1969,	-57	1	-41	South American 1969	21	MEAN FOR Argentina; Bolivia; Brazil; Chile; Colombia; Ecuador; Guyana; Paraguay; Peru; Trinidad & Tobago; Venezuela
200	South American 1969,	-61	2	-33	South American 1969	21	Paraguay
201	South American 1969,	-58	0	-44	South American 1969	21	Peru
202	South American 1969,	-45	12	-33	South American 1969	21	Trinidad & Tobago
203	South American 1969,	-45	8	-33	South American 1969	21	Venezuela
204	South Asia	7	-10	-26	Modified Fischer 1960	14	Singapore
205	Tananarive Observatory 1925	-189	-242	-91	International 1924	18	Madagascar
206	Timbalai 1948	-679	669	-48	Everest (Sabah Sarawak)	9	Brunei; E. Malaysia (Sabah Sarawak)
207	Tokyo	-148	507	685	Bessel 1841	5	Japan
208	Tokyo	-148	507	685	Bessel 1841	5	MEAN FOR Japan; South Korea; Okinawa
209	Tokyo	-158	507	676	Bessel 1841	5	Okinawa
210	Tokyo	-147	506	687	Bessel 1841	5	South Korea
211	Tristan Astro 1968	-632	438	-609	International 1924	18	Tristan da Cunha
212	Viti Levu 1916	51	391	-36	Clarke 1880	7	Fiji (Viti Levu Island)
213	Voirol 1960	-123	-206	219	Clarke 1880	7	Algeria
214	Wake Island Astro 1952	276	-57	149	International 1924	18	Wake Atoll
215	Wake-Eniwetok 1960	102	52	-38	Hough 1960	16	Marshall Islands
216	WGS 1972	0	0	0	WGS 72	22	Global Definition
217	Yacare	-155	171	37	International 1924	18	Uruguay

218	Zanderij	-265	120	-358	International 1924	18	Suriname
-----	----------	------	-----	------	--------------------	----	----------

### **Change Log**

Ver 1.10 July 17, 2009

- 1. Update "CONFIGURE MESSAGE TYPE" (id: 0x9) binary message
- 2. Add "CONFIGURE NAVIGATION MESSAGE INTERVAL" (id:0x11) binary message
- 3. Add "NAVIGATION DATA MESSAGE" (id:0xA8) binary message

Ver 1.9 July 2, 2009

1. Added explanation for configure datum command regarding Semi-Major Axis and Inversed-Flattening

Ver 1.8 June 24, 2009

2. Update "CONFIGURE MESSAGE TYPE" (id: 0x9) binary message

Ver 1.7 May 22, 2009

- 1. Add position pinning related binary messages.
- Correct typing errors and decimal message id errors.

Ver 1.6 Mar. 18, 2009

1. Add datum related binary messages and datum reference information in Appendix A & B.

Ver 1.5 Feb. 2, 2009

1. Add 1PPS related binary messages, ID: 0x3e, 0x3f, 0xb6

Ver 1.4, Aug 21, 2008

1. Update binary messages in kernel 1.4.8

Ver 0.3.1, Feb 1, 2007

- 1. Format of system restart command (Start Mode field) has been changed.
- 2. Add Kernel version to the output software version message.
- 3. Add GPS ephemeris related commands.
- 4. Change version number of this document to be the same as GUI view version number.

Ver 0.2, Dec 20, 2006

1. modify some examples

Ver 0.1, Nov 29, 2006

1. Initial release.

SkyTraq Technology, Inc. 5F, No.26, Minsiang Street, Hsinchu, Taiwan, 300 Phone: +886 3 5678650 +886 3 5678650 +886 3 5678680 Fax: info@skytraq.com.tw Email:

© 2006 SkyTraq Technology Inc. All rights reserved.

Not to be reproduced in whole or part for any purpose without written permission of SkyTraq Technology Inc ("SkyTraq"). Information provided by SkyTraq is believed to be accurate and reliable. These materials are provided by SkyTraq as a service to its customers and may be used for informational purposes only. SkyTraq assumes no responsibility for errors or omissions in these materials, nor for its use. SkyTraq reserves the right to change specification at any time without notice.

These materials are provides "as is" without warranty of any kind, either expressed or implied, relating to sale and/or use of SkyTraq products including liability or warranties relating to fitness for a particular purpose, consequential or incidental damages, merchantability, or infringement of any patent, copyright or other intellectual property right. SkyTraq further does not warrant the accuracy or completeness of the information, text, graphics or other items contained within these materials. SkyTraq shall not be liable for any special, indirect, incidental, or consequential damages, including without limitation, lost revenues or lost profits, which may result from the use of these materials.

SkyTraq products are not intended for use in medical, life-support devices, or applications involving potential risk of death, personal injury, or severe property damage in case of failure of the product.