


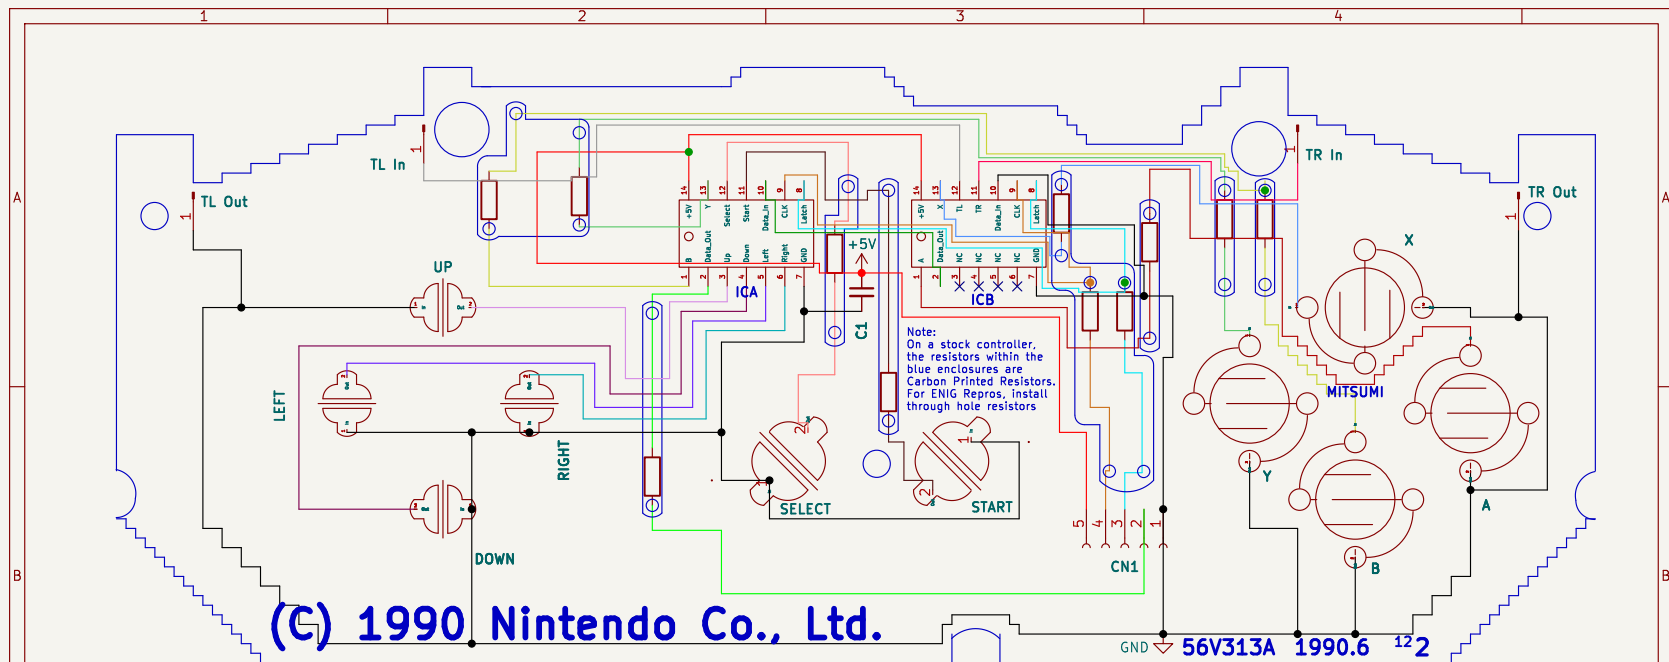

LEGEND:

SYSTEM I.BUS DPAD BUTTONS TRIGGERS/MENU

■ +5V	■ CLK	■ UP	■ A	■ L
■ GND	■ LATCH	■ DOWN	■ B	■ R
■ DATA	■ LEFT	■ X	■ START	■ SELECT
■ RIGHT	■ Y			

Used with Super Famicoms and SNES Units
Originally Designed By Nintendo, Manufactured by Mitsumi
Documented by starlightk7 for Repair Usage
This Document is Not Endorsed By Nintendo

License: CERN-OHL-S

Sheet: /
File: 56V313A.kicad_sch

Title: 56V313A

Size: User Date: 2025-08-01
KiCad E.D.A. 9.0.7

Rev: A
Id: 1/1