# Classroom Mic Quick Fix

DHH Services · keep by the charger

1. **On & charged?** Check the light or screen.
2. **Muted?** Mute is one tap away.
3. **Program 1?** Student's aid, CI or BAHA on the mic program.
4. **6–10 inches** below your mouth, facing up.
5. **Tap test.** Tap the mic; student gives a thumbs-up.

## Roger Touchscreen Mic




### TURN ON

Hold **On/Off** on the side until the screen turns on. Tap **Connect** to check the link.

### MUTE

Tap the button under the screen. Tap again to unmute.

### NO SOUND?

1. Screen on? Battery charged? Not muted?
2. Student on program 1; receiver attached and on.
3. Hold student's device within **4 in** and tap **Connect**.
4. Restart: hold **On/Off + Mute 10 s**. Connections are kept.
5. Faint? Shorten lanyard; don't lay it flat on a desk.

**Never tap NewNet.** It disconnects every student.

## Oticon EduMic




### TURN ON

Hold the button **2 s** until both lights are **white**. Let go. Wait ~10 s for **green**.

### MUTE

Briefly press the button (status flashes green). Press again to unmute.

### STATUS LIGHT


| | |
|---|---|
| ● **Green** | On, sending your voice |
| ● **Flashing green** | Muted |
| ● **Flashing blue** | Pairing |
| ● **Yellow** / ● **Magenta** | Wrong mode: call DHH |
| ● **Red** | Pairings cleared: call DHH |
| **Power flashing red** | Low battery: charge |

### NO SOUND?

1. Green light? Not flashing (muted)?
2. Student's aids on the EduMic program.
3. Student turns aids off and on (or opens/closes battery doors).

**Don't hold the button 12 s.** It clears all pairings.

## Cochlear Mini Mic 2+

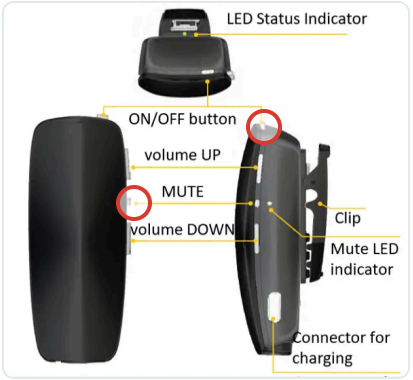


### TURN ON

Hold **ON/OFF** (top) ~1.5 s until green. Let go: **blinking green** = on. Student starts streaming (program 1, or hold processor button ~3 s).

### MUTE & VOLUME

Press **MUTE** on the side; Mute LED lights. Press again to unmute. **Volume UP/DOWN** are on the same side.

### LIGHTS

| | |
|---|---|
| ● **Blinking green** | On and ready |
| ● **Flashing yellow** | Under 30 min battery (or pairing) |
| ● **Red on charger** | Charging |

### NO SOUND?

1. Blinking green? Mute LED off?
2. Student restarts streaming on the processor.
3. Turn volume UP; processor off and on, then stream again.

**Pairing** (pen tip in pairing button, 20 s window) is done by DHH staff.

**Still not working?** Stop and call. Don't change settings on the student's own device beyond switching programs. Steps from Phonak, Oticon and Cochlear user guides; program 1 per district DHH in-service. Follow the student's plan if it differs.

DHH teacher: _____ Ext: _____