


DOORTRONIX SLIDE WIRING DIAGRAM (FIXED SIDELITE)

W	X	Y	Z
12 VAC	12 VAC		

1 AMP TOTAL
ACCESSORY POWER

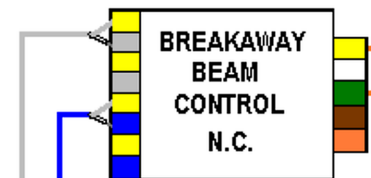

BREAKAWAY BEAMS

NORMALLY OPEN	
RELAY COMMON	
NORMALLY CLOSED	
T	U


RELAY / ELECTRIC LOCK OUTPUT



SAFETY BEAMS

EXT. ACTIVATION
SENSOR

INT. ACTIVATION
SENSOR

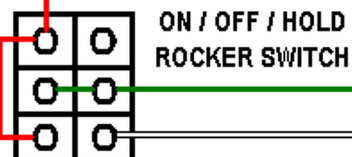

E	BREAKAWAY
F	COMMON
G	BEAMS / SAFETY
H	COMMON
I	EXTERIOR ACTIVATE
J	COMMON
K	INTERIOR ACTIVATE
L	COMMON

4	COMMON
5	SECURITY / MISC 2
6	COMMON
7	REDUCED OPEN
8	COMMON
9	SEL. SWITCH 1
10	COMMON
11	SEL. SWITCH 2
12	SEL. SWITCH 3

NOTES: TO TURN ON KEYPAD, SIMULTANEOUSLY PRESS THE
TWO LOWER BUTTONS FOR 3 SECONDS.

BREAKAWAY LOGIC N.C. (bL = nC)

FUNCTION SWITCH 3 POSITION ROCKER (FS = 03)

FUNCTION SWITCH 5 POSITION ROTARY (FS = 04)

POWER BOOST - HOLD CLOSE FORCE (D 1-04)

DIAGNOSTIC CODES

1d	ONE WAY TRAFFIC	L5	LEARN STALL
2d	TWO WAY TRAFFIC	oF	OFF
bA	BREAKAWAY	oP	OPENING DURING CLOSING
Ea	EXTERIOR ACTIVATE	oS	OPENING SPEED MODE
EO	EASY OPEN	PO	PARTIALLY OPEN
Fc	FULLY CLOSED	ro	REDUCED OPENING
Fo	FULLY OPEN	SA	SAFETY BEAMS
Ho	HOLD OPEN	SC	SLOW CLOSING
IA	INTERIOR ACTIVATE	SE	SECURITY ENTRY
LC	LEARN CLOSING	St	STALLED
Ld	LOCKED DOOR	tA	TEST ACTIVATE
Ln	LENGTH (INCHES)	tS	THRESHOLD SENSOR
Lo	LEARN OPENING	U5	UNDERSIZED



DOORTRONIX, INC
5783 County Road 1219
Malakoff, TX 75148
Phone: 888 453 5196
www.doortronixusa.com
info@doortronixusa.com