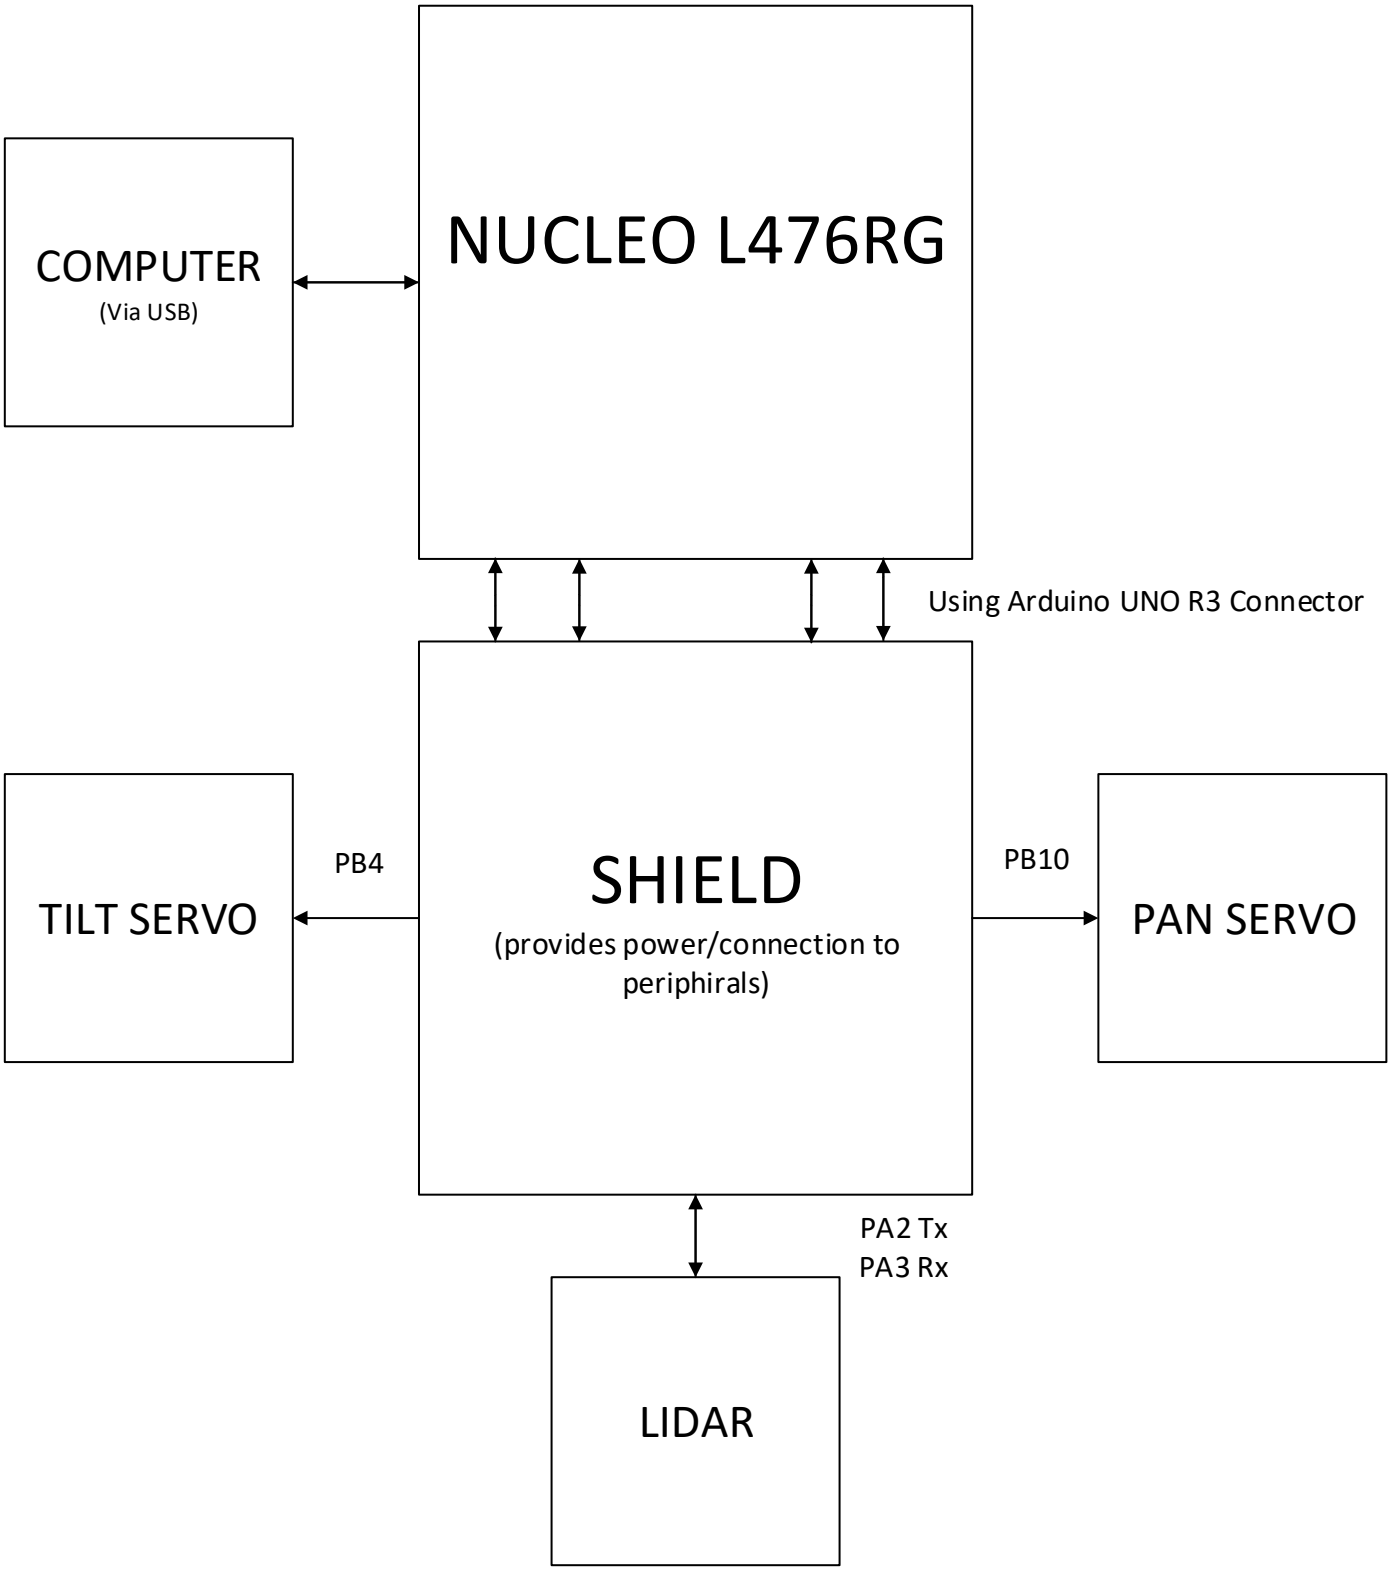

COMPUTER
(Via USB)
NUCLEO L476RG
Using Arduino UNO R3 Connector
TILT SERVO
PB4
SHIELD
(provides power/connection to periphirals)
PB10
PAN SERVO
PA2 Tx
PA3 Rx
LIDAR