
Logica 2.1 console cable

Two signal wires and ground from the Amiga's parallel port to a USB-TTL serial adapter.
The terminal runs at 9600 baud, 8N1, no flow control, VT100/ANSI, 80×25.

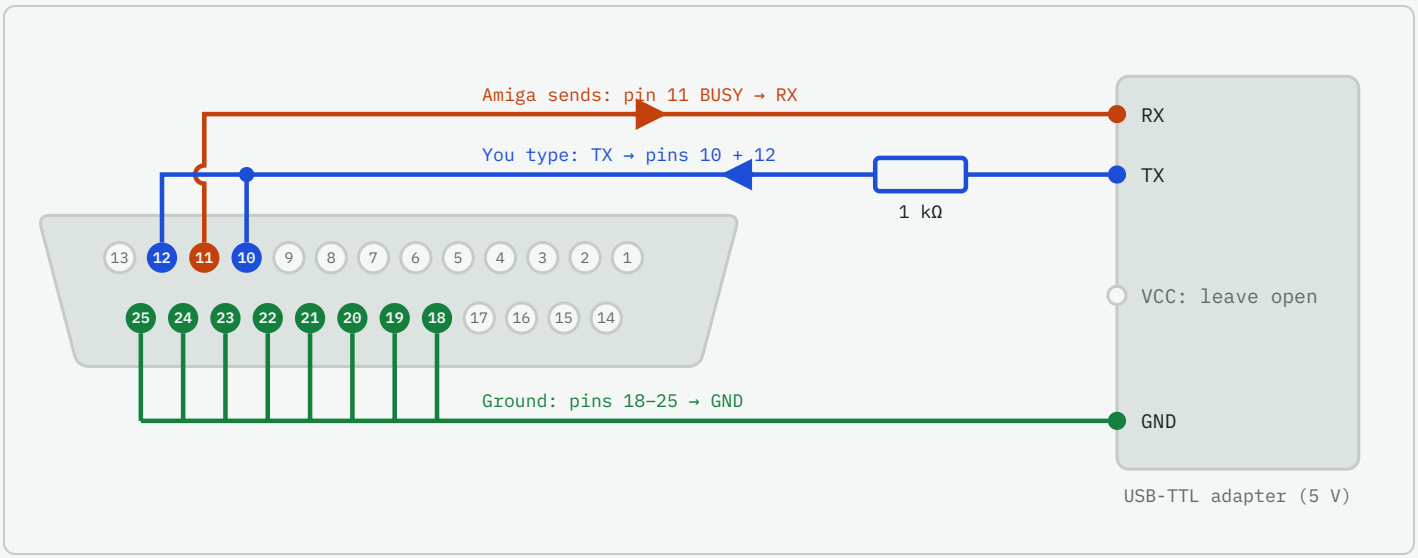

The connector is drawn as you see the Amiga's socket from behind the computer. That is also the solder side of the DB25 male plug you build, so the pin positions match while soldering. Check against the numbers moulded into the plug. Pins without a wire stay unconnected.

Pin mapping

DB25 PIN	AMIGA SIGNAL	GOES TO	DOES
11	BUSY (CIA-B PA0)	Adapter RX	Console output from the Amiga
10 + 12, tied	ACK (CIA-A FLAG) and POUT (CIA-B PA1)	1 kΩ resistor, then adapter TX	Your keys into the Amiga. POUT reads the bits; ACK is only monitored for diagnosis.
18–25	Ground	Adapter GND	Common ground. One pin is enough; several is better.

Before you plug it in

- Use a **TTL** adapter: 5 V, or 3.3 V with 5 V tolerant inputs. The Amiga drives BUSY at 5 V.
- **Never** use an RS-232 (±12 V) adapter on the parallel port.
- Keep the 1 kΩ resistor. During the advanced CIA test and the parallel port test the Amiga drives POUT itself, against the adapter's TX.
- Unplug the cable for the parallel port test's ACK check; with it plugged in, the check may fail or pass falsely.
- Leave the adapter's VCC pin unconnected; the adapter is powered over USB.