

VFFS Series

AUTOMATIC VERTICAL FORM-FILL-SEAL PACKAGING MACHINE - MANUAL



Synda Pack

SALES: +86-551-67718870

AFTER-MARKET: +86-18019552399

<https://syndapack.com>



SYNDA
INNOVATIVE PACKING SOLUTIONS


I. COMPONENTS OF VFFS PACKAGING SYSTEM

THE CONTROL CABINET AND CONTROL PANEL WILL BE INSTALLED BESIDE THE FORM-FILL-SEAL MACHINE, WHICH WILL BE CONVENIENT FOR WORKERS OPERATION. THE CONTROL PANEL CONSISTS OF TOUCH PANEL, EMERGENCY SWITCHER, POWER SWITCHER AND TEMPERATURE CONTROLLER, ETC.

1. TOUCH PANEL: IT IS FOR OPERATION OF THE VERTICAL FORM-FILL-SEAL MACHINE, INCLUDING PARAMETERS SETTING AND DISPLAYING. (AS FOR DETAILS, PLS TAKE REFERENCE TO THE SECTION OF OPERATION & COMMISSIONING) .
2. EMERGENCY SWITCHER: THIS RED SWITCHER IS MAINLY FOR EMERGENCY STOP DURING PRODUCTION. AFTER PRESSING IT, THE MACHINE WILL BE STOPPED IMMEDIATELY, WHILE THE TOUCH PANEL WILL STILL DISPLAY RELATIVE INFORMATION. IF YOU WANT TO RESTART THE MACHINE, IT NEEDS RESET THIS RED SWITCHER AND RESET THE VALUES OF "ALARM & RECOVERY" ON THE TOUCH PANEL.
3. POWER SWITCHER: IT IS MAINLY FOR POWER ISOLATION AND BREAK OF THE VERTICAL FORM-FILL-SEAL MACHINE.
4. TEMPERATURE CONTROLLER: IT CONTROLS THE TEMPERATURE OF EACH HEATING ROD. THE TEMPERATURE OF HEATING RODS WILL ONLY BE STABLE 5 MINUTES AFTER STARTING THE MACHINE.

II. WORKING PRINCIPAL

THIS SET OF VFFS MACHINE, BY EACH TEMPERATURE CELL, SWITCHER SIGNAL & CONTROL ORDER, IS CONTROLLED BY PLC. IT WILL COMPLETE EACH FUNCTION OF THE MACHINE IN ACCORD WITH THE VALUES THAT ARE SET IN ADVANCE. THE CONTROLLING PRINCIPAL IS SHOWED AS BELOW:

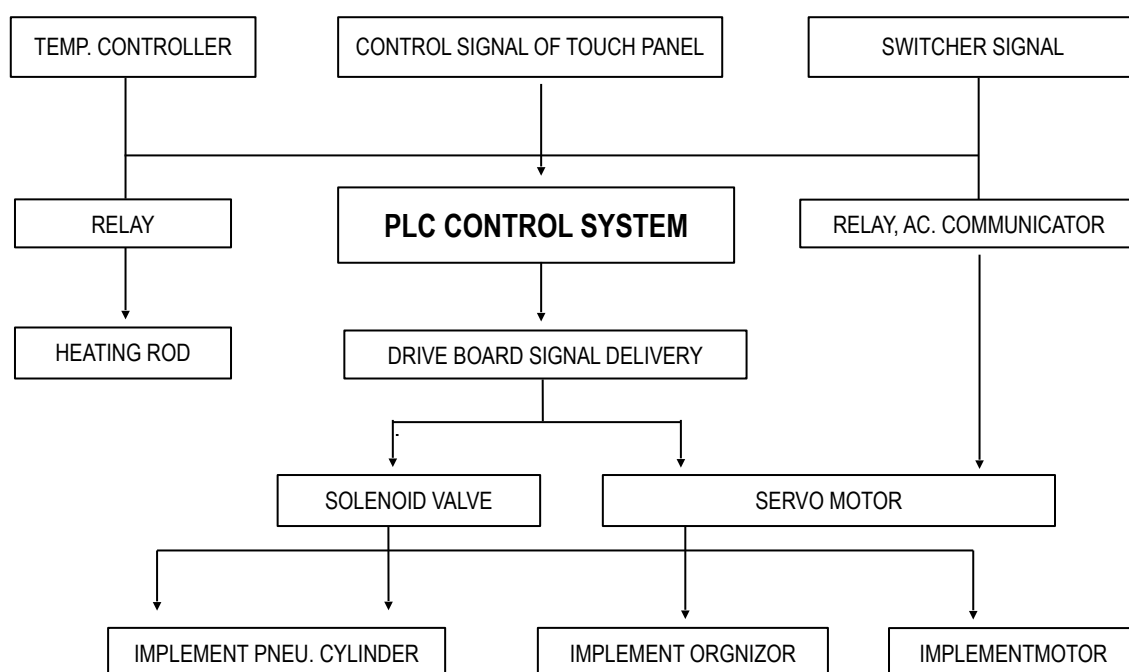

III. INSTALLATION OF VERTICAL FORM-FILL-SEAL MACHINE

1. DISMANTLE THE PACKAGE, CRANE IN SAFETY, POSITIONING THE MACHINE ACCORDING TO REQUIREMENT.
2. ADJUST THE BOLT THAT CONTACTS THE GROUND, TO MAKE THE MACHINE TAKE ON HORIZONTAL STATUS.
3. EXAMINE ALL THE BOTLS WHETHER TIGHT OR LOOSE.
4. EXAMINE ALL THE CABLES & WIRES WHETHER LOOSE OR DAMAGED.
5. EXAMINE WHETHER THERE IS OTHER STUFF INSIDE THE MACHINE, ALL THE ACTIONS NORMAL OR NOT.
6. LINK THE RELATIVE CABLES OF LINKAGE.
7. LINK AIR PIPE AND POWER OF THE COMPRESSED AIR MACHINE.
8. CONFIRM ALL THE MACHINE POWER BE ON THE STATUS OF "ON", LINK THE NEEDED 3 PHASE 4 WIRES AC380V POWER WIRES. TO LINK POWER OF OTHER AUXILIARY MACHINE AND CONFIRM IT IS LINK ED CORRECTLY.


IV. VFFS MACHINE OPERATION & COMMISSIONING

DURING NORMLY WORKING OF THE VERTICAL FORM-FILL-SEAL MACHINE, THE OPERATOR CAN CONTROL THE MACHINE BY THE TOUCH PANEL, WHILE THE MACHINE STATUS CAN ALSO BE DISPLAYED ON THE PANEL, WHICH WILL MAKE THE OPERATION MORE CONVENIENT, DIRECTLY, FAST AND RELIABLE. THE HUMAN-MACHINE SCREEN-THE TOUCH PANEL CONSISTS OF DIFFERENT FUNCTION SCREENS ON EACH WHICH HAS DIFFERENT FUNCTION BUTTONS AND VALUES. IT CAN BE TRANSFERRED AMONG THESE SCREENS.

(I) PRIMARY SCREEN (FIRST PAGE)

(II). SYSTEM COMMISSIONING /DEBUG SCREEN

THIS PAGE IS CONTROL SYSTEM COMMISSIONING/DEBUG SCREEN FOR VERTICAL FORM FILL SEAL MACHINE, WHERE THE OPERATOR WILL SEE THE STATUS OF THE MACHINE AND EACH FUNCTION BUTTON FOR COMMISSIONING.

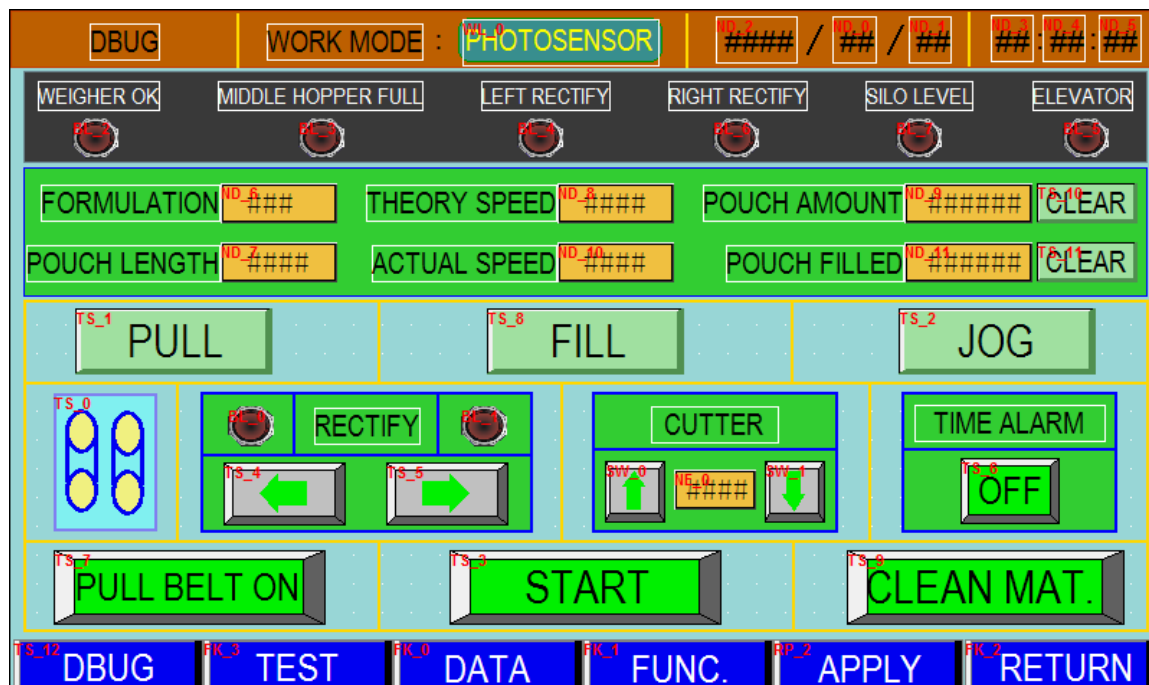


1. [WORKING MODE] DISPLAY: THE MOMENTUM WORKING MODE IS COLOR MARKED OR PHOTOSENSOR/LENGTH REGULATOR.

2. [STATUS LIGHT]: IF THE MACHINE HAS DIFFERENT STATUS WITH SIGNALS, THE LIGHTS HERE WILL BE "LIGHTENED".
3. [PRODUCTION FORMULATION] DISPLAY: IT SHOWS DIFFERENT FORMULATIONS, DIFFERENT PRODUCT HAS DIFFERENT FORMULATION OR PRODUCTION PARAMETERS.
4. [THEORY SPEED] DISPLAY: THIS VALUES IS CALCULATED BY PLC AUTOMATICALLY ACCORDING TO THE SET VALUES. THE ACTUAL SPEED WILL NOT BE FASTER THAN THEORY SPEED.
5. [ACTUAL SPEED] DISPLAY: IT WILL DISPLAY THE SPEED UNDER WORKING STATUS. IT WILL REFRESH EACH MINUTE.
6. [POUCH LENGTH] DISPLAY: IT DISPLAYS THE MOMENTUM SET LENGTH OF THE POUCH/SACHET.
7. [POUCH AMOUNT] DISPLAY: IT DISPLAYS THE POUCH/SACHETS MADE TOTAL AMOUNT.
8. [CLEAR] BUTTON: IT WILL CLEAR THE AMOUNT TO ZERO AFTER PRESS IT.
9. [POUCH FILLED] DISPLAY: IT DISPLAYS THE TOTAL AMOUNT OF POUCH FILLED.
10. [CLEAR] BUTTON: IT WILL CLEAR THE POUCH FILLED AMOUNT INTO ZERO.
11. [PULL] BUTTON: AFTER PRESSED, THE MACHINE WILL PULL A REGULATED POUCH LENGTH.
12. [FILL/POUCH MAKE] BUTTON: AFTER PRESSED, THE MACHINE WILL ENTER INTO POUCH/SACHET MAKING STATUS, MEANWHILE IT WILL SHOW "POUCH MAKING", RE-PRESS THIS BUTTON, THE MACHINE WILL ENTER INTO STATUS OF FILLING, MEANWHILE THE PANEAL WILL SHOW "FILL" STATUS.
13. [JOG] BUTTON, AFTER PRESSED, THE MACHINE WILL PACK A SACHET WITH MATERIAL. IF PRESS IT CONSECUTIVELY, THE MACHINE WILL WORK CONSECUTIVELY.
14. [PULL BELT ON] BUTTON: AFTER PRESSED, THE FILM PULLING SYNCHRONOUS BELT WILL BE CLOSED; IF YOU PRESSED AGAIN, THE SYNCHRONOUS BELT WILL BE OPENED.
15. [CUTTER UP/DOWN] GROUPED BUTTONS: THIS GROUP OF BUTTONS HAVE "UP" AND "DOWN" TWO BUTTONS. THIS BUTTON FUNCTION IS TO ADJUST THE POSITION OF THE CUTTER UNDER PHOTOSENSOR STATUS. DURING FILM PULLING, IT WILL STOP PULLING AND THE CUTTER WILL MOVE THE DISTANCE THAT THE CUTTER SETS WHEN THE PHOTOSENSOR CATCH THE MARKED COLOR, TO CONFIRM THE POSITION OF THE CUTTER. PRESS "DOWN" BUTTON ONCE, IT REPRESENTS THE POSITION OF CUTTER DECREASES 1.
16. [RECTIFY LEFT/RIGHT] GROUPED BUTTONS: THIS GROUPED BUTTONS HAVE "LEFT" AND "RIGHT" TWO BUTTONS, THE FUNCTION OF WHICH ARE TO CONTROL THE FRAME OF FILM DELIVERY MOVING LEFT OR RIGHT. IF PRESS "←" BUTTON, THE FRAME OF FILM DELIVERY WILL MOVE RIGHT; IT WILL STOP MOVING, IF STOP PRESSING THIS BUTTON. IF PRESS "→" BUTTON, THE FRAME OF FILM DELIVERY WILL MOVE TOWARD RIGHT SIDE, IT WILL STOP MOVING, IF STOP PRESSING THIS BUTTON.
17. [START/STOP] BUTTON: THE FUNCTION OF THIS BUTTON IS TO CONTROL THE STARTING OR STOPPING OF THE MACHINE. PRESS THE [START] BUTTON, THE MACHINE WILL WORK IN AUTOMATIC STATUS, THE BUTTON OF [START] DISPLAYS IN RED COLOR AND CHANGED INTO [STOP]; WHEN RE-PRESS IT, THE MACHINE WILL STOP WORKING.

18. [TIME ALARM OFF/ON] DISPLAY: WHEN THE MACHINE UNDER STATUS OF NO-ENCODER, IT SHOULD PRESS THIS BUTTON TO CLOSE FILM PULL ALARM.
19. [PULL BELT ON/STOP]: WHEN THE PULL BELT IS IN THE STATUS OF OPENING, PRESS THIS BUTTON, THE PULL BELT WILL WORK; RE-RPRESS IT, THE PULL BELT WILL STOP.
20. [CLEAN MATERIAL]: UNDER STOP STATUS OF PACKING MACHINE, WHEN THE LEFT MATERIAL NEED TO CLEAR, PRESS THIS BUTTON, THE WEIGHER WILL NOT STOP WORKING, WHILE THE FORM-FILL-SEAL MACHINE STOP WORKING, TILL THE LEFT MATERIAL INSIDE THE WEIGH HOPPERS EMPTY. AFTER IT'S EMPTY, PRESS THIS BUTTON AGIAN TO STOP THE MATERIAL CLEARING.
21. [APPLY]: AFTER PRESSING THIS BUTTON, THE PRODUCTION PARAMETERS SET WILL BE STORED IN OPERATION PANEL. THE PARAMETERS THAT STORED IN THE PANEL WILL BE SENT TO PLC, WHICH RECEIVES IT AND WORKS. IF THE MACHINE DOES NOT GET POWDER FOR 5 DAYS, THE PARAMETERS STORED IN THE PLC WILL BE LOST, IT SHOULD PRESS THIS BUTTON AFTER STARTING THE MACHINE.

(III). TEST OF VERTICAL FORM FILL SEAL MACHINE

THIS WINDOW IS FOR AUXILIARY FUNCTION WHERE OPERATORS CAN START THESE AUXILIARY FUNCTION.

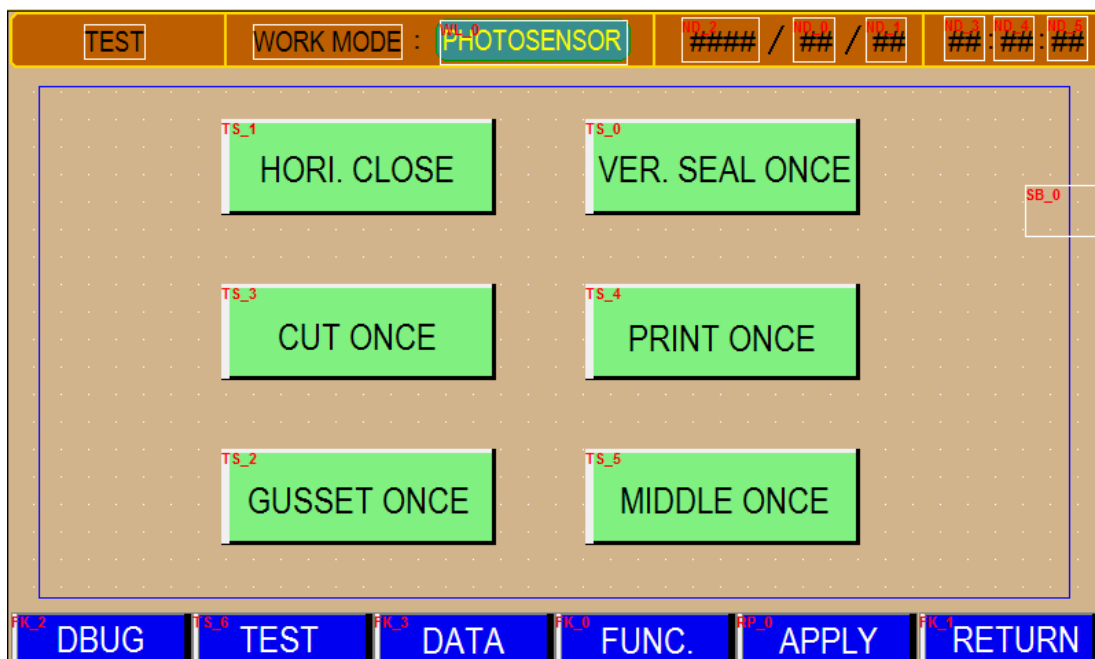


1. [HORI. CLOSE]: PRESS THIS BUTTON, THE HORIZONTAL SEALER WILL BE CLOSED; RE-PRESS IT, IT WILL BE

OPENED.

2. [VER. SEAL ONCE]: PRESS THIS BUTTON, THE VERTICAL SEALER WILL SEAL ONCE.
3. [CUT ONCE]: PRESS THIS BUTTON, THE CUTTER WILL ACT ONCE.
4. [PRINT ONCE]: PRESS THIS BUTTON, IT WILL PRINT ONCE.
5. [GUSSET ONCE]: PRESS THIS BUTTON, IT WILL GUSSET ONCE.
6. [MIDDLE ONCE]: PRESS THIS BUTTON, THE MIDDLE HOPPER WILL ACT ONCE.

(IV). FUNCTION OF VERTICAL BAGGING MACHINE

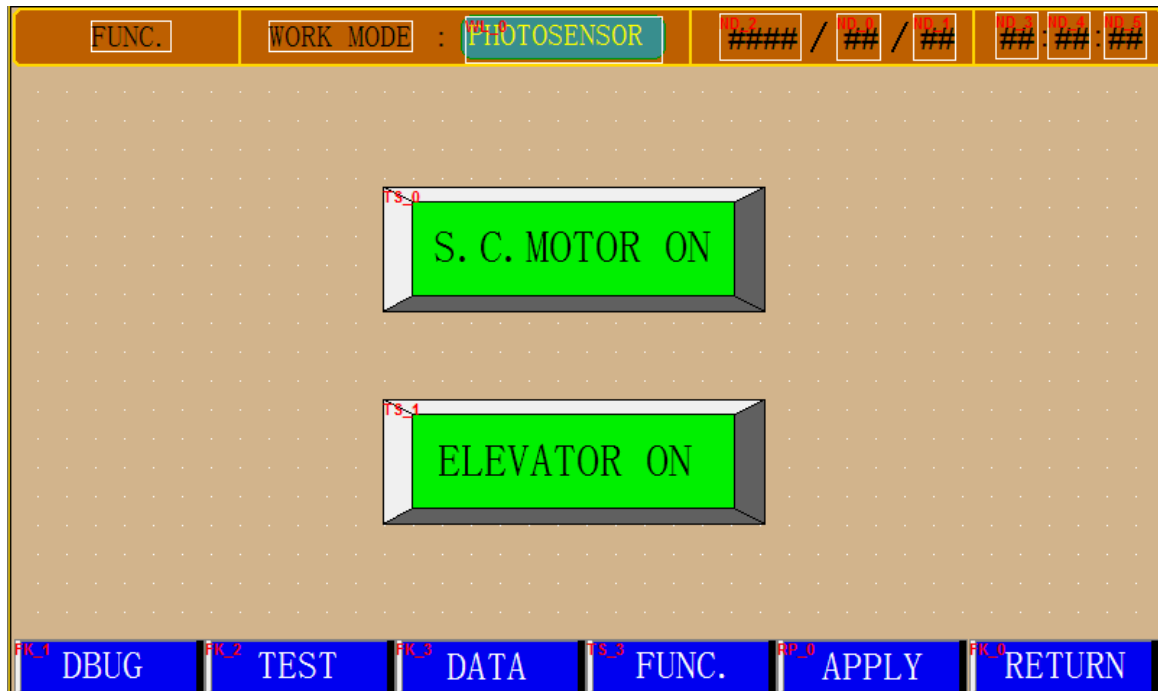

1.[S.C.MOTOR ON/STOP]: THIS BUTTON IS TO CONTROL THE SACHET BELT CONVEYOR. IF PRESS THIS BUTTON ONCE, THE SACHET CONVEYOR WILL WORK; IF RE-PRESS IT, THE SACHET CONVEYOR WILL STOP WORKING.

2. [ELEVATOR ON/STOP]: THIS BUTTON IS TO CONTROL ELEVATOR START OR STOP. IF PRESS THIS BUTTON, THE ELEVATOR WILL START TO FEED THE MATERIAL; IF RE-PRESS IT, THE ELEVATOR WILL STOP TO FEED THE MATERIAL. WHEN THE ELEVATOR IS UNDER AUTOMATICALLY WORKING CONDITION, THE ELEVATOR WILL BE CONTROLLED BY MATERIAL-LEVEL-SENSORS. IF THE SENSOR CAN NOT GET SIGNAL, THE ELEVATOR WILL CONTINUE TO WORK; IF THE SENSOR CHECKS AND GETS SIGNAL, THE ELEVATOR WILL STOP TO WORK. [THERE SOME SET OF MACHINE IS ELEVATOR, FOR SOME THERE IS NO].

(V). VFFS MACHINE PRODUCTION PARAMETERS WINDOW

THIS WINDOW IS FOR PRODUCTION PARAMETERS SETTING OF VFFS RUNNING, WHERE OPERATOR CAN SET ACCORDING TO THE CHARACTER OF THE MATERIALS. DIFFERENT PRODUCTION PARAMETERS WILL HAVE DIFFERENT PACKING SPEED.

A.PRODUCTION VALUES SETTING 1

DATA		WORK MODE : PHOTOSENSOR		#### / ## / ##		## : ## : ##	
GENERAL DATA SETTING				FILM PULL PARAMETERS SETTING			
FORMULATION		NE_3 ###		PULL SPEED		NE_0 #	
ENCODER(1)/PHOTOSENSOR(0)		NE_4 #		PULL DELAY		NE_6 ##. ## S	
MIDDLE ON(1)/OFF(0)		NE_5 #		PULL STOP TIME		NE_7 ##. ## S	
GUSSET ON(1)/OFF(0)		NE_9 #		P.SENSOR VALID DEALY		NE_8 ##. ## S	
				POUCH LENGTH		NE_4 ##### mm	
				LENGTH CORRECTION		NE_2 ###	
				FIRST PULL LENGTH		NE_40 ### mm	
				SECOND PULL LENGTH		NE_41 ### mm	
FK_4		FK_9		TS_0		FK_3	
DEBUG		TEST		DATA		FUNC.	
				APPLY		RETURN	

1. [FORMULATION] SET: TO SET DIFFERENT PRODUCT FORMULA WITH DIFFERENT PRODUCT RELATIVELY.
2. [ENCODER (1)/ PHOTOSENSOR (0)] SELECTION: TO SELECT WHETHER THE FILM HAS MARKED COLOR.
3. [MIDDLE ON (1)/ NO (0)] SELECTION: TO SELECT WHETHER IT HAS MIDDLE HOPPER OR NOT.
4. [GUSSET ON (1)/ OFF(1)] SELECTION: TO SELECT WHETHER IT HAS GUSSET OR NOT.
5. [PULL SPEED]: TO SET THE SPEED OF SERVO MOTOR FOR FILM PULLING, THE RANGE IS 0~6; THE NUMBER SMALLER, THE SPEED FASTER.
6. [PULL DELAY]: TO SET THE ACTION TIME OF FILM PULLING AFTER THE FORM-FILL-SEAL MACHINE STARTS (REFERENCE VALUES : 0.05~0.30S).
7. [PULL STOP TIME]: WHEN THE PHOTOSENSOR DOES NOT CATCH THE SIGNAL OF MARKED COLOR, OR THE SENSOR THAT POSITION THE SACHET LENGTH DOES NOT WORK, TO SET THE FILM PULLING STOP TIME. THE PULLING TIME IS 1.5 LONGER THAN THE ACTUAL PULLING TIME (THE STANDARD TIME THAT A PULLING PERIOD NEEDS).
8. [P.SENSOR VALID DELAY]: WHEN THE PHOTOSENSOR CATCHES SIGNAL DURING THIS DELAY TIME AFTER FILM PULLING STARTING, IT WILL BE LOOKED AS NON-EFFECTIVE SIGNAL (REFERENCE VALUES: 0.05S).
9. [POUCH LENGTH]: TO SET THE SACHET LENGTH FROM THE FILM.
10. [LENGTH CORRECTION]: WHEN THE SACHET LENGTH DOES NOT REACH THE SET LENGTH, IT CAN SETS THIS VALUES TO CORRECT THE SACHET LENGTH.
11. [FIRST PULL LENGTH]: TO SET THE FIRST FILM PULLING LENGTH. IF THE FILM LENGTH THAT FIRSTLY PULLED IS NOT ENOUGH AND NEEDS SECONDLY PULL, SET THIS VALUES AS "0".
12. [SECOND PULL LENGTH]: IF THERE NEEDS SECOND PULLING, SET THE LENGTH OF SECOND PULLING. IF CHOOSE ENCODER TO POSITION THE SACHET LENGTH, THE ACTUAL SACHET LENGTH IS EQUAL TO THE FIRST

PULLING LENGTH PLUS THE SECOND PULLING LENGTH.

B. PRODUCTION VALUES 2

1. [VER.SEAL DELAY]: TO SET THE TIME FROM FILM PULLING END POINT TO VERTICAL SEAL START POINT.

DATA WORK MODE : PHOTOSENSOR ##### / ## / ## ##:##:##

TIME SEQUENCE SET 1

VER. SEAL DELAY	NE_4	##. ##	S	DISCHARGE DELAY	NE_8	##. ##	S
VER. SEAL TIME	NE_5	##. ##	S	MIDDLE WAITING TIME	NE_9	##. ##	S
CUT DELAY	NE_2	##. ##	S	MIDDLE TIME	NE_10	##. ##	S
CUT TIME	NE_3	##. ##	S	FILL DELAY	NE_6	##. ##	S
HORI. SEAL DELAY	NE_0	##. ##	S	PACK SPEED	NE_7	##	
HORI. SEAL TIME	NE_1	##. ##	S				

DEBUG TEST DATA FUNC. APPLY RETURN

2. [VER.SEAL TIME]: TO SET THE VERTICAL SEAL ACTION TIME.
3. [CUT DELAY]: TO SET THE TIME FROM HORIZONTAL SEAL END POINT TO CUTTER START POINT.
4. [CUT TIME]: TO SET THE CUTTER ACTION TIME.
5. [HORI.SEAL DELAY]: TO SET THE TIME FROM FILM PULLING END POINT TO HORIZONTAL SEAL START POINT.
6. [HORI.SEAL TIME]: TO SET THE HORIZONTAL SEAL TIME.
7. [DISCHARGE DELAY]: (ONLY THERE IS MIDDLE HOPPER CAN IT USE THIS FUNCTION) TO SET THE TIME FROM MIDDLE HOPPER OPENED POINT TO WEIGHER DISCHARGE START POINT. THIS VALUES SHOULD BE SET FROM LARGE TO SMALL(REFERENCE VALUES (0.0~0.8S); THE DISTANCE BETWEEN THE WEIGHER AND MIDDLE HOPPER DECIDES THIS AMOUNT, BIGGER DISTANCE, LARGER AMOUNT, HOWEVER IT SHOULD BE ACCORDING TO THE ACTUAL SITUATION AND BE RELATIVELY ADJUSTED.
8. [MIDDLE WAITING TIME]: (ONLY THERE IS MIDDLE HOPPER CAN IT USE THIS FUNCTION) TO SET THE TIME OF MATERIAL FALLING INTO THE MIDDLE HOPPER, THIS VALUE SHOULD BE SET FROM SAMLL TO LARGE (REFERENCE VALUE 0.3~0.8S). BIGGER DISTANCE, LARGER VALUES; SMALLER DISTANCE, SMALLER VALUES. IT SHOULD BE ADJUSTED ACCORDING TO THE ACTUAL SITUATION.
9. [MIDDLE TIME]: (ONLY THERE IS MIDDLE HOPPER CAN IT USE THIS FUNCTION) TO SET THE TIME OF MIDDLE HOPPER OPENING (REFERENCE VALUES 0.3~0.5S).
10. [FILL DEALY]: WHEN THERE IS MIDDLE HOPPER, THE FILM PULLING TIME SHOULD BE THE TIME OF MIDDLE HOPPER

OPENING & DISCHARGING TIME. (REFERENCE TIME 0.3~1S); WHEN THERE IS NO MIDDLE HOPPER, THE FILM PULLING TIME SHOULD BE SAME WITH THE WEIGHER DISCHARGING TIME (REFERENCE TIME 0.1~0.5S).

11.[PACK SPEED]: TO SET THE PACKING SPEED. WHEN THIS VALUES EQUAL TO OR BIGGER THAN THE THEORY SPEED, THE ACTUAL SPEED OF PACKING MACHINE WILL NOT BE INFLUENCED BY IT.

C. VFFS MACHINE PRODUCTION VALUES 3

- [PRINT DELAY]: TO SET THE TIME FROM FILM PULLING END POINT TO PRINT START POINT.
- [PRINT TIME]: TO SET THE PRINTER WORKING TIME.
- [PRINT TEMP.]: TO SET THE TEMPERATURE OF HEATING ROD TEMPERATURE.
- [FEED DELAY]: UNDER "ELEVATOR" WORKING STATUS, TO CONTROL THE FEEDING LEVEL INSIDE THE SILO OF THE WEIGHER.
- [GUSSET DELAY]: TO SET THE TIME FROM FILM PULLING END POINT TO GUSEET ACTION START.
- [GUSSET TIME]: TO SET THE GUSSET TIME.
- [POUCH DIS. DELAY]: UNDER FILLING STATUS, PRESS THIS BUTTON TO SET THE TIME THAT HORIZONTAL SEALER STOP TO START.
- [POUCH. DIS. TIME]: IT SET THE TIME OF POUCH DISCHARGING.

D. VFFS MACHINE ALARM WINDOW

WHEN THE ALARM SITUATION OCCURS, THE HMI TOUCH PANEL WILL SHOW THE ALARM SIGNAL AUTOMATICALLY, AND THE THE PACKING MACHINE WILL ALSO BE STOPPED.



AFTER THE ALARM STOPPED, THE OPERATOR CAN RESOLVE THE IMPEDIMENT ACCORDING TO THE ALARM, AND PRESS THE "ALARM RESET", RE-START THE MACHINE.

V. MAINTENANCE & FIX-UP

A. TOURBLE & RESOLVEMENT

NO.	TROUBLE	REASON	DESOLVEMENT
1	NON-RELIABLE HORIZONTAL SEALING	A. LOW TEMPERATURE OF HEATING ROD B. SHORT SEALING TIME C. MATERIAL CLAPPED BETWEEN RODS D. HIGH TEMPERATURE OR LONG TIME SEAL E. PNEUMATIC SYSTEM TROUBLE	A. RESET THE TEMPRATURE B. RESET HORIZONTAL SEAL VALUES C. RESET HORIZONTAL SEAL VALUES D. RESET HORIZONTAL SEAL VALUES E. CHANGE FILM F. STOP & EXAMINE MACHINE
2	VERTICAL SEALING NOT SEALED	A. LOW TEMPERATURE OF THE RODS B. SHORT SEALING TIME C. FILM PULLING WAY INCORRECT D. BAD FILM QUALITY E. PENUMATIC SYSTEM TROUBLE	A. RESET TEMPERATURE B. RESET VERTICAL SEAL VALUES C. ADJUST FILM PULLING SYSTEM D. CHANGE FILM E. STOP & EXAMINE MACHINE
3	FILM CAN NOT BE CUT	A. CUTTER VALUES SET UNSUITABLE B. BLADE WITH BLEMISH OR MECHANICAL TROUBLE C. PENUMATIC SYSTEM TROUBLE	A. RESET CUTTER VALUES B. STOP & EXAMINE THE MACHINE OR CLEAN THE BLADES C. STOP & EXMAIN MACHINE
4	THE POSITION OF CUTTING IS UNSUITABLE	A. PHOTOSENSOR POSITION MOVED B. MARKED COLOR POSITION INCORRECT C. CUTTER POSITION SET INCORRECT D. MARKED COLOR SENSOR EXAMINES INCORRECTLY	A. RE-ADJUST B. CHECK THE MARKED COLOR OF THE FILM C. RE-CALIBRAT D. RE-DAJUST MARKED COLOR SENSOR
5	PRINT UNCLEARLY, PRINT DEEP TO BREAK SACHET, LACERATE SACHET	A. UNSUITABLE TEMPERATURE SETTING B. UNSUITABLE PRINT VALUES SETTING C. POWER CIRCUIT SHORT OR AIR CIRCUIT TROUBLE D. SAMLL PRINT RIBBON FEEDING E. CODES TOO CLOSE TO THE RUBBER PAD	A. RE-PRINT AFTER ADJUST B. RE-SET PRINT VALUES C. STOP & EXAMINE MACHINE D. RE-ADJUST E. RE-ADJUST

6	MATERIAL CLAPPED UNDER LINKAGE STATUS	A.HORIZONTAL SEAL VALUES UNSUITABLE B. WEIGHING AMOUNT TOO BIG C. FILLING VALUES UNSUITABLE	A.RESET HORIZONTAL VALUES B.RE-ADJUST THE WEIGHT VALUES C. RESET THE FILLING VALUES
---	---------------------------------------	---	---

B. PROBLEMS & RESETTLEMENT

ALARM CONTENT	REASON	PROCESS
FILM RAN OUT OF	THE THE FILM HAS BEEN RUN OUT OF, LIGHTER IS ON	CHANG THE FILM OR ADJUST THE FILM SWITCHER
EMERGENCY STATUS	THE EMERGENCY SWITCHER HAS BEEN PRESSED	LOOSE THE EMERGENCY SWITCHER
SERVO MOTOR OVER-LOAD	SERVO MOTOR ALARM	CHECK THE SERVO MOTOR MECHANICALLY AND ELECTRICALALL
DOOR NOT CLOSED	FRONT TWO DOORS NOT CLOSED	CLOSE THE TWO DOORS
FILM PULLING BELT NOT CLOSED	FILM PULLING BELT NOT CLOSED	PRESS "PULL BELT OFF" BUTTON TO CLOSE IT
THE FRONT HORIZONTAL SEAL TEMPERATURE IS ABNORMAL	1.THE TEMPERATURE NOT REACH THE SET ONE; 2.THE ROD IS BAD; 3. CIRCUIT TROUBLE	1.TO MAKE THE TEMPERATURE REACH THE SET ONE; 2. TO CHANGE THE RO; 3. MAINTENANCE
THE BACK HORIZONTAL SEAL IS ABNORMAL	SAME WITH ABOVE	SAME WITH ABOVE
THE VERTICAL SEAL TEMPERATURE IS ABNORMAL	SAME WITH ABOVE	SAME WITH ABOVE
ROLL BRAKE ALARM	THE SCREW SWITCHER OF THE BRAKE HAS BEEN ON	CLOSE THE SCREW SWITCHER

THE ALARM ABOVE WILL MAKE THE FORM-FILL-SEAL MACHINE STOP WORKING. IT MUST WAIT TO BE RESET AFTER ALARM IMPEDIMENT HAS BEEN REMOVED, THEN RESTART THE MACHINE.

VI. VFFS MACHINE MAINTENANCE

USUALLY TO MAINTAIN THE VFFS MACHINE IN CORRECT WAY WILL LONGER THE MACHINE LIFE.

- AFTER THE INSTALLATION AT-SCENE, THE MACHINE MUST DO TRIAL RUNNING IN SHORT PERIOD;
- IT SHOULD NORMALLY ADD LUBRICATING OIL INTO ALL THE JOINTS, MOVABLE POINTS, CHECK THE ABRASION AND ACTION SITUATION;
- NORMALLY EXAMINE THE FIXED PART, WHETHER LOOSE OR NOT;
- NORMALLY FILL OIL INTO THE 3-JOINT PARTS OF THE PNEUMATIC SYSTEM, LEASE OUT THE OIL-SEPARATOR AFTER EACH WORK SHIFTING. THE OIL EXPLORES SEWING MACHINE USED OIL OR LUBRICATING OIL.
- NORMALLY EXAMINE WHETHER THERE IS ANY OTHER STUFF INSIDE, CHECK WHETHER ALL THE COLLECTORS BEEN OXIDIZED.
- IF THERE IS SISTERLY IMPEDIMENT, PLEASE CONTACT WITH [SYNDA PACK](#). WE WILL GIVE YOU TECHNICALLY SUPPORT.