



# Construction Runner

## User Guide

Web admin and mobile app for site attendance, induction, safety documents and day-to-day site control.

Version 1.1 · September 2026

[www.construction-runner.com](http://www.construction-runner.com)

Support: [info@construction-runner.com](mailto:info@construction-runner.com)

# Contents

---

- 1. Welcome
- 2. Who uses Construction Runner
- 3. Getting started – web
- 4. Roles and access
- 5. Sites
- 6. Users, invites and approvals
- 7. Attendance
- 8. Tasks, deliveries, assets and messages
- 9. Safety (RAMS, briefings, induction safety, rules, alerts, near miss)
- 0. Induction and missing info
  - 1. Mobile app for operatives
  - 2. Subcontractors
  - 3. Settings, profile and privacy
  - 4. Troubleshooting

## 1. Welcome

---

Construction Runner is the platform your company uses to run sites: who is on site, who is inducted, which RAMS and briefings apply, and the tasks and deliveries for that site only.

There are two products that work together:

- **Web admin** – [www.construction-runner.com](http://www.construction-runner.com) – for Super Admins, Site Admins, Supervisors and Subcontractor admins.
- **Mobile app** – Construction Runner on iPhone and Android – for operatives (and for supervisors who also work on site).

Open the public website (construction photography and product overview), then choose **Member Login** to reach the admin sign-in screen.

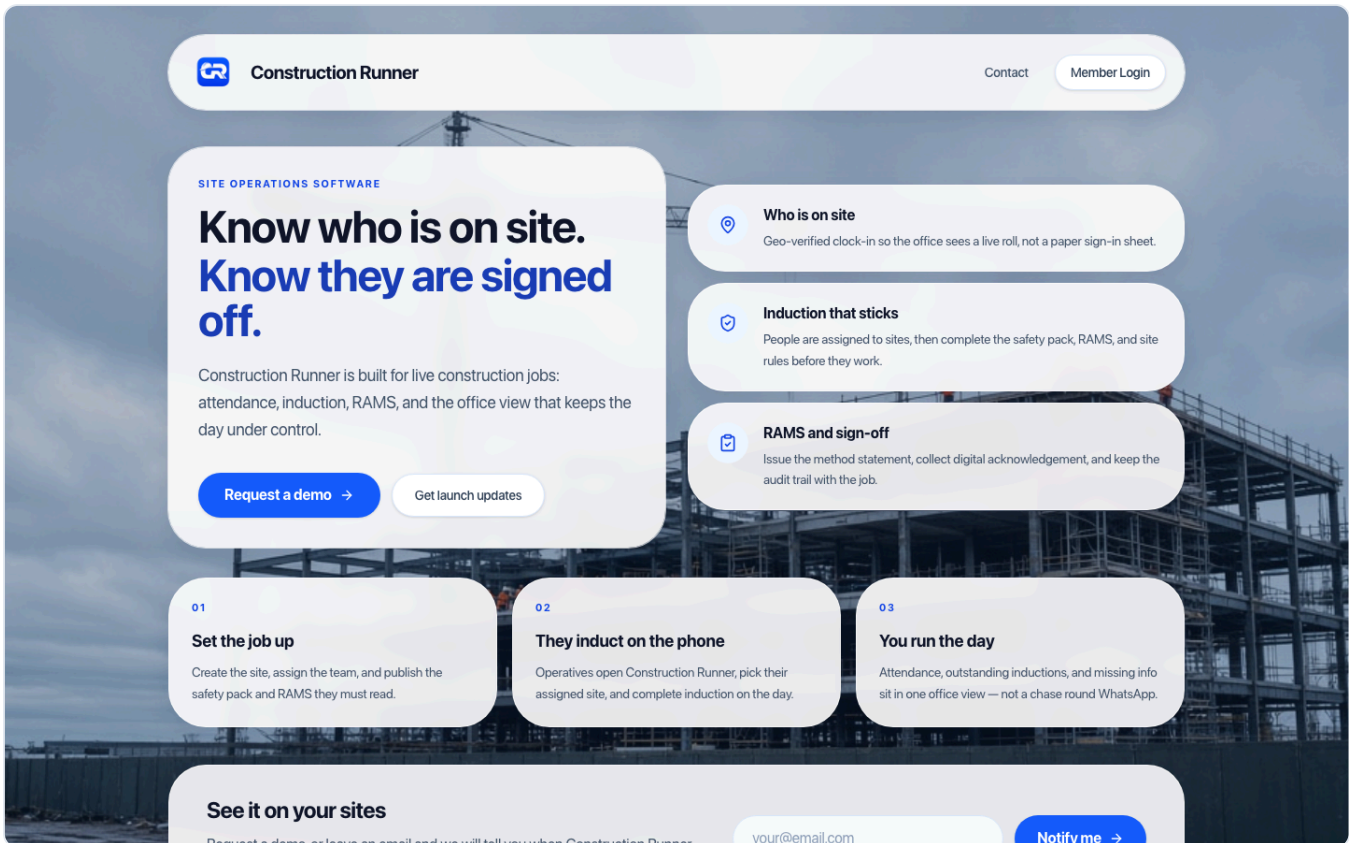


Figure 1. Public website – Member Login (top right) opens the admin sign-in page.

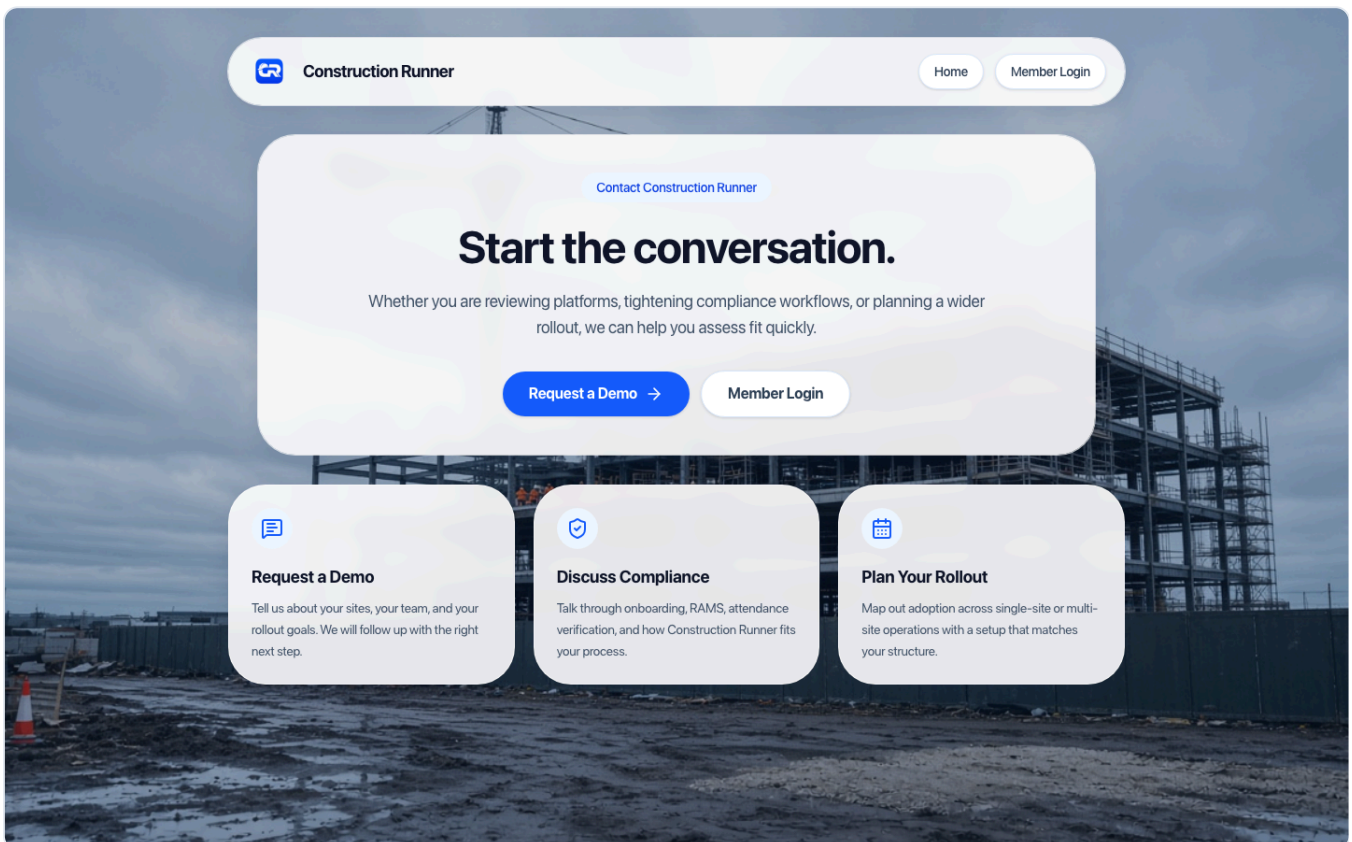


Figure 2. Contact page – request a demo or discuss a rollout at [www.construction-runner.com/contact](http://www.construction-runner.com/contact)

## 2. Who uses Construction Runner


| Role                       | Where they work | What they can do                                                                                                                                 |
|----------------------------|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Super Admin</b>         | Web             | Whole company: create sites, invite people, assign any role including Super Admin, see every site's documents and attendance.                    |
| <b>Site Admin</b>          | Web             | Only the sites ticked for them. Upload RAMS/briefings, manage attendance and users on those sites. Cannot create new sites or grant Super Admin. |
| <b>Supervisor</b>          | Web + app       | Same site ticks as Site Admin. Run live attendance and role call, add tasks, review safety. On the app they also get Supervisor Tools.           |
| <b>Operative</b>           | App only        | Sign in/out at the geofence, complete induction, acknowledge RAMS and briefings, tasks, deliveries, near miss. Web login is not available.       |
| <b>Subcontractor admin</b> | Web             | Onboard their own operatives for sites they are linked to. Invite with a site invite code.                                                       |

**Site folders.** Tasks, RAMS, briefings, site rules and alerts belong to one site. A Site Admin or Supervisor who is ticked for Kidbrooke does not see PWT's documents, and the other way around – unless you tick both sites.

## 3. Getting started – web

### Sign in

1. Go to [www.construction-runner.com](http://www.construction-runner.com) and click **Member Login** (or open `/admin/login`).
2. Enter work email and password. Optionally tick **Remember me**.
3. Or use **Sign in with Google** if your company uses Google accounts.

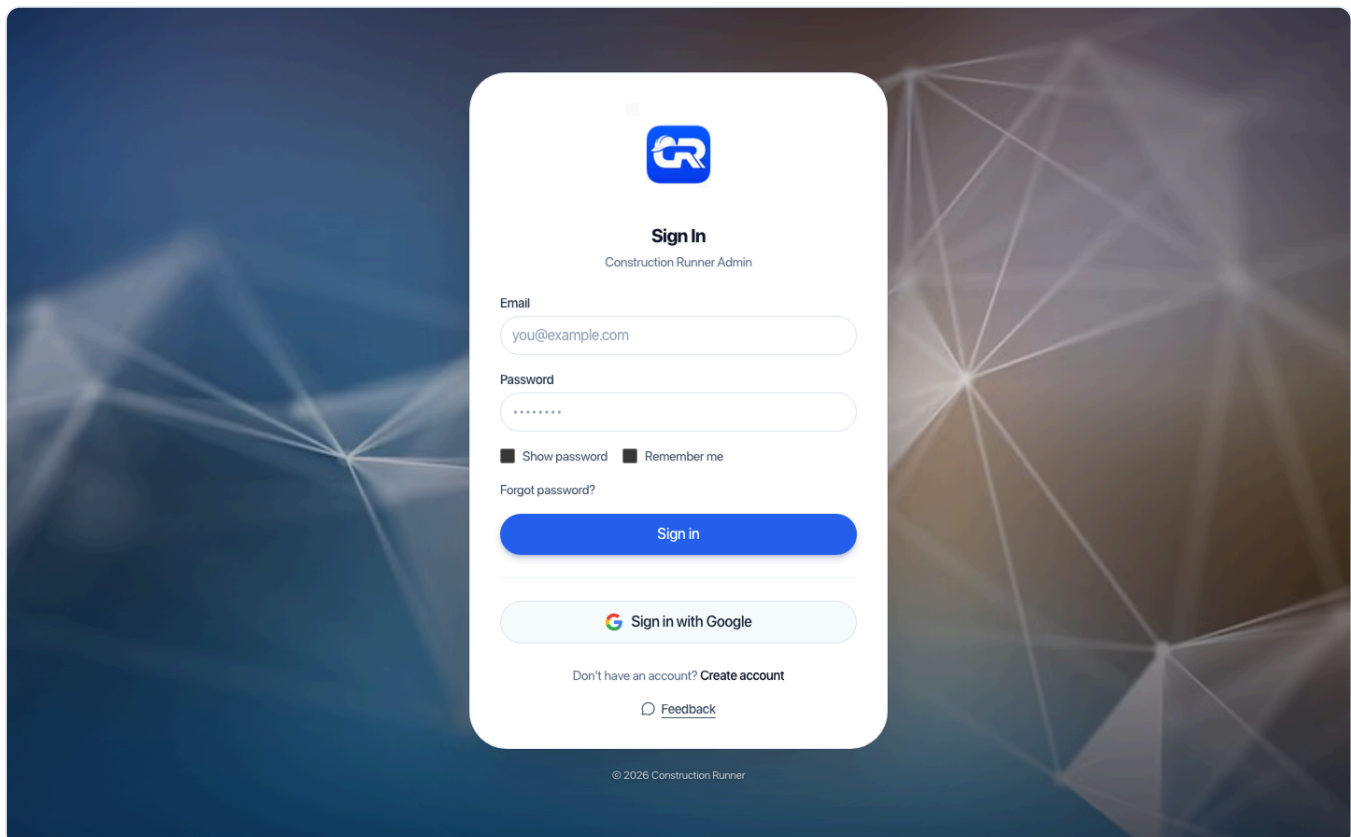

The image shows the 'Sign In' page for Construction Runner Admin. The page has a dark blue background with a white geometric pattern. A white rounded rectangle contains the login form. At the top is the Construction Runner logo (a blue square with a white 'CR' inside). Below the logo is the text 'Sign In' and 'Construction Runner Admin'. The form includes an 'Email' field with the placeholder 'you@example.com', a 'Password' field with a masked password '\*\*\*\*\*', and two checkboxes: 'Show password' and 'Remember me'. Below these is a link for 'Forgot password?'. A large blue 'Sign in' button is positioned below the password field. At the bottom of the form is a 'Sign in with Google' button, which features the Google logo. Below the Google button is a link for 'Don't have an account? Create account' and a 'Feedback' link with an external icon. At the very bottom of the page, below the white rounded rectangle, is the copyright notice '© 2026 Construction Runner'.

© 2026 Construction Runner

Figure 3. Construction Runner Admin – Sign in.

**Pending approval.** After you register you cannot sign in on web or app until a Super Admin (or other approver) approves you. The login screen will say your account is pending approval.

**Operatives.** If an operative tries the website they see: “Operative web login is a future feature. Please use the mobile app.”

## Create an account

From sign-in, click **Create account**. Two tabs:

- **Join with invite code** – Full Name, Work Email, Company Invite Code (from Settings → Company), Set Password, then **Submit registration**.
- **Request new company** – for a brand-new organisation. Pending superuser approval.

The screenshot shows the 'Create an account' page. At the top, there is a link '← Return to previous page'. Below it, the heading 'Create an account' is centered. A sub-header explains: 'To join an existing organisation you need the **company invite code** from your administrator. Only use "Request new company" if you are setting up a brand-new organisation.' Below this are two tabs: 'Join with invite code' (active) and 'Request new company'. The 'Join with company invite code' tab contains a privacy notice: 'Your data is collected solely for site access, safety compliance, induction, RAMS acceptance, and legal H&S obligations. It is not used for marketing or profiling.' The registration form includes fields for 'Full Name', 'Work Email', 'Company Invite Code', and 'Set Password'. Each field has a placeholder text: 'Your full name', 'Your work email', 'Company invite code', and 'Choose a password' respectively. A blue 'Submit registration' button is at the bottom of the form. A small footer note states: 'By continuing, you agree to our Privacy & Security Policy.'

Figure 4. Create an account – join with company invite code.

## Forgot password

1. On sign-in, click **Forgot password?**
2. Enter the account email and click **Send reset link**.
3. Open the email, set a new password, then sign in.

A Super Admin can also send a reset from Users → row menu → **Send reset email**.

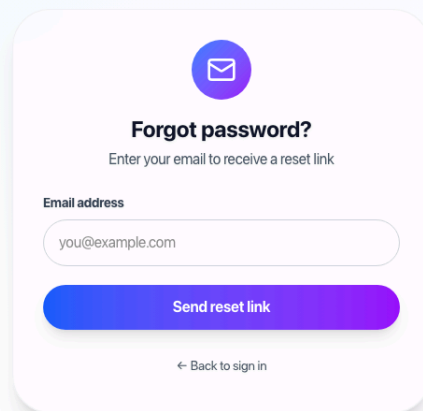
A screenshot of a 'Forgot password?' form. At the top is a purple circle with a white envelope icon. Below it, the text 'Forgot password?' is in bold, followed by 'Enter your email to receive a reset link'. There is a label 'Email address' above a text input field containing 'you@example.com'. Below the input field is a purple button with the text 'Send reset link'. At the bottom, there is a link that says '← Back to sign in'.

Figure 5. Forgot password – email a reset link.

## 4. Roles and access

After sign-in, the left sidebar is your map of the product. Super Admins see the full company. Site Admins and Supervisors only see the sites assigned to them. The **Dashboard** opens with a company snapshot – active sites, who is on site, and open tasks – so you can jump into the work that matters today.

| Sidebar                                                                               | Typical users                                            |
|---------------------------------------------------------------------------------------|----------------------------------------------------------|
| Dashboard                                                                             | Everyone on web                                          |
| Sites, Subcontractors, Missing Info, Users, Pending approvals, Attendance             | Super Admin, Site Admin, Supervisor, Subcontractor admin |
| Tasks, Deliveries, Assets, Messages                                                   | Same                                                     |
| Safety: RAMS, Briefings, Induction safety, COSHH, Site Rules, Alerts, Near Miss, Logs | Same                                                     |
| Settings / Profile                                                                    | Everyone on web                                          |

**Missing Info.** The sidebar shows people missing emergency contact or medical details. (A fuller Induction Compliance list can be turned on for some companies; most companies use Missing Info.)

Only a Super Admin (or platform Superuser) can:

- Click **Add New Site**
- Assign the Super Admin role

Site Admins and Supervisors can invite or approve people as **Operative** only.



## 5. Sites

Open **Sites**. Super Admins see every company site. Site Admins and Supervisors see only assigned sites. Status columns use the same soft chips as the rest of the admin (Active / On map / Required).

**Construction Runner**

**Sites**

Manage all active sites in your organisation. Each site has its own documents, tasks and briefings.

[Add New Site](#)

| NAME                            | ACTIVE   | LOCATION    | GEOFENCE | VISIBLE | INDUCTION |
|---------------------------------|----------|-------------|----------|---------|-----------|
| Kidbrooke Village KV3G/F        | Active   | London SE3  | 150 m    | On map  | Required  |
| Plumstead West Thamesmead (PWT) | Active   | London SE28 | 180 m    | On map  | Required  |
| LSQ – Woolwich                  | Active   | London SE18 | 120 m    | On map  | Required  |
| LSQ – Bermondsey                | Inactive | London SE16 | 120 m    | Hidden  | Optional  |

**Site Name**  
Use the name people will recognise on the app.

**Geofence radius**  
GPS boundary for mobile Sign In / Sign Out.

**Induction required**  
Operatives complete site induction before signing in.

Figure 6. Illustrated Sites screen (labels match the live admin). Each site is its own folder for documents and tasks.

### Add or edit a site (Super Admin)

1. Click **Add New Site** (or open a site → Details).
2. Enter **Site Name** and address. Set location on the map if needed.
3. Set **Geofence radius (metres)** – this is the GPS boundary for mobile Sign In / Sign Out.
4. Tick **Show on mobile map** if operatives should see it on the app map.
5. Tick **Induction required for this site** if people must complete induction before they can sign in.
6. Click **Save / Save changes**.

Row actions include View map, Toggle visible, Toggle active, and Delete site. Open a site to use the **Details**, **Subcontractors** and **Induction** tabs.

## 6. Users, invites and approvals

### Invite someone

1. Open **Users** → **Invite User**.
2. Enter name, email and role.
3. For Site Admin or Supervisor, tick every site they should see (they can be on more than one). Click **Invite**.

### Approve a registration

1. Open **Pending approvals**. Until you approve, they cannot sign in on web or app.
2. Choose **Assign role**: Operative, Supervisor, Site Admin, or Super Admin.

3. For Supervisor or Site Admin, tick **Sites they can access (tick all that apply)** – at least one site.
4. Click **Approve** or **Reject**.

**Construction Runner**

**Pending approvals**  
Approve or reject users who have registered. Until approved, they cannot sign in to the web admin or mobile app.

| NAME        | EMAIL               | REQUESTED | ASSIGN ROLE | SITES                                                                                                                                                                                                                         |
|-------------|---------------------|-----------|-------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Alex Morgan | alex@contractor.com | Operative | Supervisor  | <div>Sites they can access (tick all that apply)</div> <div><input checked="" type="checkbox"/> Kidbrooke Village</div> <div><input checked="" type="checkbox"/> PWT</div> <div><input type="checkbox"/> LSQ - Woolwich</div> |

**Roles you can assign**  
Operative · Supervisor · Site Admin · Super Admin (Super Admin can only be granted by a Super Admin).

**Approve**  
Reject

Figure 7. Illustrated Pending approvals – assign a role and tick sites before Approve.

## Change sites later

On Users, open the row menu for a Site Admin or Supervisor and choose **Assign sites....** Tick every site they work on, use Select all / Clear if needed, then **Save**.



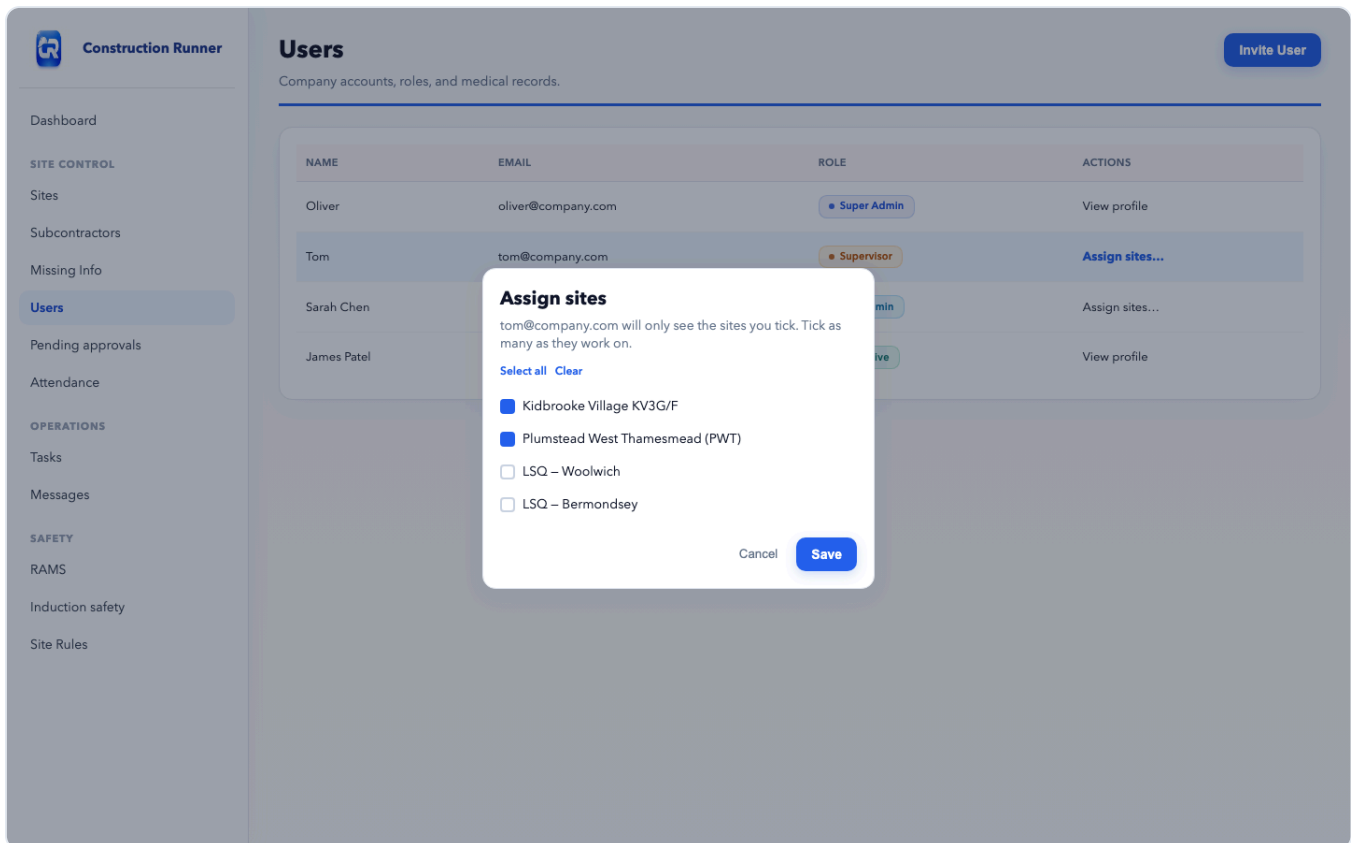


Figure 8. Illustrated Assign sites – multiple sites for Site Admins and Supervisors. Role chips match the live admin.

Other user actions: View profile, Medical records, Set role, Send reset email, Delete user.

**Company invite code.** Settings → Company shows the code staff use on Create account. Use **Regenerate Invite Code** if the old code should stop working.

## 7. Attendance

Open **Attendance**. Pick a date (or **Today**). Two tabs:

- **Live** – who is signed in. Archives at midnight UK time; pick a past date to view the archive. Use **Record attendance** for a manual web Sign In / Sign Out (this does not replace GPS check-in on the app).
- **Role Call** – fire roll call. Signed in first, signed out on the other sub-tab. Filter by site. **Export CSV**, **Export PDF**, **Archive & Clear Day**.


**Construction Runner**

Dashboard
SITE CONTROL
Sites
Missing Info
Users
**Attendance**
OPERATIONS
Tasks
Messages
SAFETY
RAMS
Induction safety
Site Rules

## Attendance

Live sign-in logs and role call. Live list archives at midnight (UK).

Live

Role Call

**Live Attendance**

| NAME        | SITE              | STATUS          | SIGNED IN |
|-------------|-------------------|-----------------|-----------|
| Tom         | Kidbrooke Village | On site         | 07:12     |
| James Patel | PWT               | On site         | 07:28     |
| Alex Morgan | Kidbrooke Village | Auto signed out | 07:05     |

**Record attendance**  
Manual web sign-in for an operative. Does not replace GPS check-in on the app.  
Operative  
  
Site  
  

Record Attendance

Figure 9. Illustrated Attendance – Live log plus optional manual Record attendance.

Mobile auto sign-out reasons can appear as geofence exit, left site, or auto sign-out (for example if GPS goes silent for too long).

## 8. Tasks, deliveries, assets and messages

### Tasks

**Add Task** – Title, Description (optional), Assigned To (multiple people), **Site** (required), Due date. Super Admins, Site Admins and Supervisors can add tasks. Operatives complete them on the app (Open / In progress / Done).

### Deliveries

**Add Delivery** – Reference, Supplier / Wholesaler, Site, Scheduled At, Notes. Operatives can submit proof of delivery and load photos on the app.

### Assets

Add equipment, assign to operatives, upload inspection evidence. Operatives see **My Assets** on the app.

### Messages

Open **Messages**. You only see conversations you are in. Click **New**, then pick the people who should receive the thread. You can optionally choose **Broadcast to all company users** when everyone needs the same message. Reply in the thread.

**Always pick the site.** When you create a task, delivery, RAMS, briefing or alert you will be asked for a site. That item stays in that site only.

# 9. Safety

Open **Safety** in the sidebar.

| Item             | What to do                                                                                                                                         |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|
| RAMS             | Upload RAMS for a chosen site (PDF). Operatives acknowledge on the app. Company logo from Settings appears on PDFs.                                |
| Briefings        | Upload toolbox talks. Operatives <b>Sign &amp; acknowledge</b> . Super Admins/Supervisors can download acknowledgement reports.                    |
| Induction safety | Company safety pack shown during induction (the “read site safety information” step). Edit once for the company; it is not the same as Site Rules. |
| COSHH            | Substance information, hazard symbols and PPE.                                                                                                     |
| Site Rules       | PPE, Emergency Procedures, Conduct – <b>per site</b> . Save; optional file on emergency rules.                                                     |
| Alerts           | Add Alert – Info / Warning / Critical + site.                                                                                                      |
| Near Miss        | Reports from the app. <b>Mark reviewed</b> , Export PDF. Unreviewed count shows a red badge on Safety.                                             |

**Induction safety vs Site Rules.** Induction safety is the shared company pack everyone reads when inducting. Site Rules are site-specific (PPE, emergency, conduct) and can differ between Kidbrooke and PWT.

 Construction Runner

Dashboard

OPERATIONS

Tasks

Messages

SAFETY

**RAMS**

Briefings

Induction safety

COSHH

Site Rules

Alerts

Near Miss

## RAMS

Risk Assessments & Method Statements. Choose a site first – this document stays in that site only.

Site **Kidbrooke Village KV3G/F**

| DOCUMENT                            | SITE              | UPLOADED    | ACKNOWLEDGEMENTS |
|-------------------------------------|-------------------|-------------|------------------|
| KV3 – Electrical first fix RAMS.pdf | Kidbrooke Village | 12 Sep 2026 | 18 / 22          |
| KV3 – Working at height.pdf         | Kidbrooke Village | 04 Sep 2026 | 22 / 22          |

**Induction safety**  
Company safety pack used during induction – not the same as Site Rules.

**Site Rules**  
PPE, emergency procedures, conduct – per site.

**Near Miss**  
Reports from the app. Mark reviewed when closed out.

Figure 10. Illustrated RAMS – select the site, then upload. Acknowledgements show per document. Safety also lists Induction safety and Site Rules.


# 10. Induction and missing info

**Missing Info** lists people who still need emergency contact or medical details filled in. Use it to chase incomplete profiles before they arrive on site.

Induction is stored per site and expires **365 days** after completion. On a site, the Induction tab shows Inducted, Expired, Induction Required, and lets an admin mark complete or reset.

When someone inducts on the app they: read **Induction safety** (company pack) → acknowledge RAMS → confirm site rules → **Complete induction**.

Admins who go to site should be inducted like everyone else (see Profile → Induction on the app, or the site Induction tab on web).

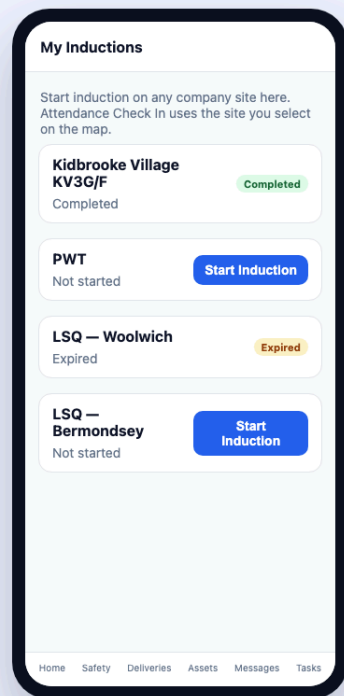

### My Inductions


Profile → My Inductions is how someone starts induction on a new site. Statuses: Not Started, Completed, Expired (365 days from completion).

If a site has induction required, Check In will send them through Site induction before they can Sign In.

Figure 11. Illustrated My Inductions on the app – start induction on a new site here. Statuses: Not Started, Completed, Expired.

## 11. Mobile app for operatives

Download **Construction Runner** from the App Store or Google Play. Sign in with the same email and password. Registration in the app also needs a company invite code and then admin approval.

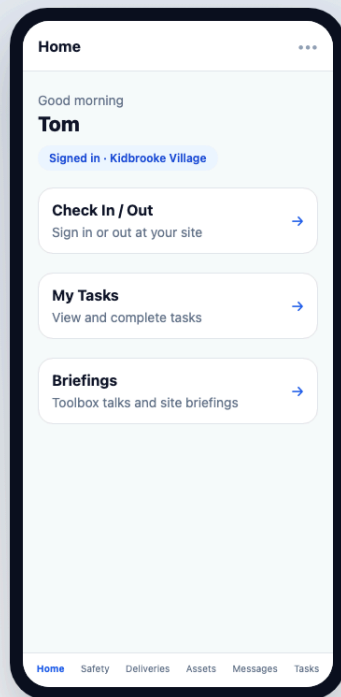

### Construction Runner app


Operatives work from the mobile app on iPhone and Android. Web login for operatives is not available — the app is the daily tool for attendance, safety and site work.

- Six tabs: Home, Safety, Deliveries, Assets, Messages, Tasks
- Profile menu: My Inductions, My Info, Settings
- Works offline for some lists; sign-in needs a live location

Figure 12. Illustrated Home tab – Check In / Out, tasks and briefings. Bottom tabs: Home, Safety, Deliveries, Assets, Messages, Tasks.

### Sign in on site

1. Home → **Check In / Out**.
2. Tap **Select site** and choose the site.
3. Wait until the map shows **Inside Site Boundary**.
4. If the site requires induction, complete **Site induction** (Read site safety information → Acknowledge RAMS → Confirm site rules → **Complete induction**).
5. On **RA/MS Acceptance** tap **Accept & Sign In**.
6. Tap **Sign In**. To leave, tap **Sign Out** or walk out of the geofence (auto sign-out).

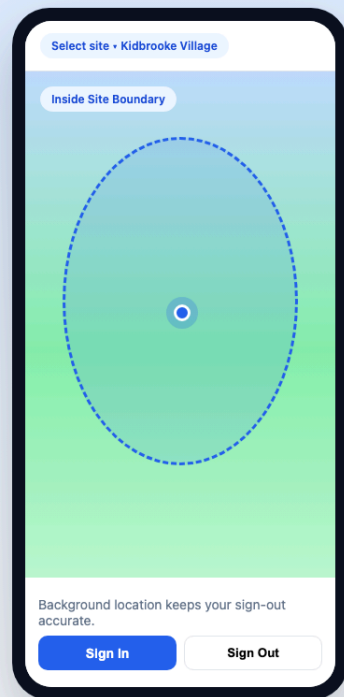

### Check In / Out

Open Home → Check In / Out. Choose the site, wait until the map shows you are inside the blue boundary, then tap Sign In.

1. Set Location to **Always** (iPhone) or **Allow all the time** (Android).
2. Complete site induction if the site requires it.
3. Accept RAMS, then Sign In.
4. Leaving the geofence signs you out automatically.

Figure 13. Illustrated Check In / Out map. You must be inside the boundary to Sign In. Leaving the site signs you out automatically.

**Location must be Always.** On iPhone, Settings → Construction Runner → Location → **Always** (not While Using). On Android, set Location to **Allow all the time**. “While Using” or “Allow Once” will not sign you out after you leave the site.

## Safety and other tabs

- Safety: Briefings (Sign & acknowledge), RAMS, Site Rules, Safety checklist, Alerts, Near Miss (**New report** → **Submit Report**), COSHH.
- Profile (: menu): Personal Info, My Info, **My Inductions**, Settings, Sign Out.
- Optional: Face ID / biometric login and app lock in Settings.

**My Inductions vs Select site.** Use My Inductions to start induction on a site you have not done yet. Use Select site on the map for today's attendance. Induction still blocks Sign In when the site requires it and you have not completed it.

**Connection and GPS.** Sign In needs a live connection and location. The web admin does not offer an Offline queue screen.

## 12. Subcontractors

1. Main contractor: Subcontractors → **Invite Subcontractor** → choose **Site to link** → **Generate invite code** → copy the code.
2. Partner opens [www.construction-runner.com/join](http://www.construction-runner.com/join) – **Join as subcontractor** – enter code and email → Continue, then sign in once approved.
3. Subcontractor admins use **Operative Onboarding** to invite their own people and upload documents.

## 13. Settings, profile and privacy

**Settings** tabs: Personal Information, Company (name, address, logo, invite code), Notifications, Security (Change Password, Two-Factor Authentication, Session Timeout), Display, Data & Privacy (Export Data, Delete Account).

**Profile** tabs: Personal, Activity, Certification & Training, Medical History, Induction, Privacy & Data. Need help? The sidebar links to [info@construction-runner.com](mailto:info@construction-runner.com). Privacy policy: </legal/privacy-and-security>

Notifications in the top bar clear when you close the panel after reading them (you do not have to click each item).

## 14. Troubleshooting

| Problem                                | What to try                                                                                                                                               |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| Cannot sign in after registering       | Wait for Pending approvals. Ask a Super Admin to Approve and, for Supervisor/Site Admin, tick sites.                                                      |
| Operative sent to the website          | Use the Construction Runner mobile app.                                                                                                                   |
| Supervisor or Site Admin sees no sites | Users → Assign sites... and tick at least one site.                                                                                                       |
| Cannot Sign In on the app              | Enable Always / Allow all the time location. Stand inside the geofence. Complete induction if required. Accept RAMS. Check you have a network connection. |
| Did not auto sign out                  | Confirm Location is Always. Open Settings from the in-app prompt. Stay signed in only while on site.                                                      |
| Reset link expired                     | Request a new link from Forgot password.                                                                                                                  |
| Wrong documents on a site              | Check the site selected when uploading. Content does not copy across sites.                                                                               |
| Near Miss badge stays on               | Open Near Miss and Mark reviewed.                                                                                                                         |
| Cannot see a message thread            | You only see conversations you were added to. Ask the sender to include you, or use Broadcast when everyone must see it.                                  |

Construction Runner User Guide v1.1 – September 2026. Screenshots of the public website are live captures. Admin and app figures are illustrated layouts that match live button labels and the current table chrome. For support: [info@construction-runner.com](mailto:info@construction-runner.com)