

---

## [Linux ASM114x Firmware Update Tool]

---

July 12, 2016 (v0.1)

---

### Change History

| Rev. | Date       | Issuer     | Description   |
|------|------------|------------|---------------|
| 0.1  | 12/07/2016 | Lars Chang | Initial Draft |
|      |            |            |               |

## ASM114x Firmware Update Tool V1.0.0.0 for Linux UBuntu 14.04


```
test@test-System-Product-Name: ~/code/114/114xfwdl_linux_32
test@test-System-Product-Name:~/code/114/114xfwdl_linux_32$ sudo ./114xfwdl
ASM114x Firmware Update Tool V1.0.0.0
Usage: 114XFWDL [option]...
-U filename    Update firmware.
-C             Verify firmware.
-D             Display running firmware version.
-T             Check running firmware version.
-P             Specify port number., 3 -->port 1 & port 2
-S             Force Enter Test Mode.
-W filename    import Customer information in SPI-ROM
-R filename    export Customer information in file
test@test-System-Product-Name:~/code/114/114xfwdl_linux_32$
```

ASMedia

## Usage example:

### Update Firmware

sudo ./114xfwdl -U 150408\_30\_01\_03.bin

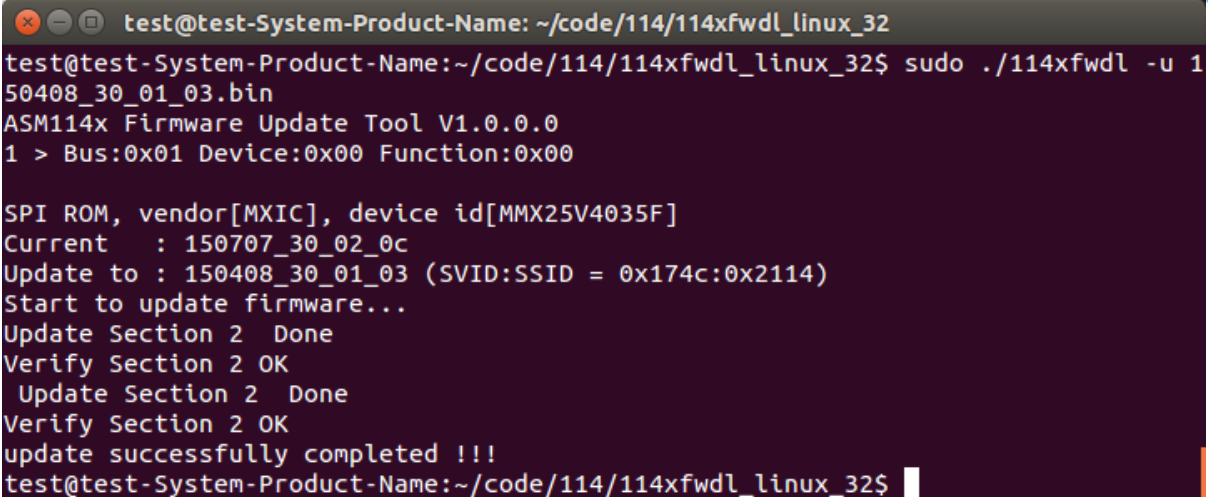


```
test@test-System-Product-Name: ~/code/114/114xfwdl_linux_32
test@test-System-Product-Name:~/code/114/114xfwdl_linux_32$ sudo ./114xfwdl -u 150408_30_01_03.bin
ASM114x Firmware Update Tool V1.0.0.0
1 > Bus:0x01 Device:0x00 Function:0x00

SPI ROM, vendor[MXIC], device id[MMX25V4035F]
Current   : 150707_30_02_0c
Update to : 150408_30_01_03 (SVID:SSID = 0x174c:0x2114)
Start to update firmware...
Update Section 2 Done
Verify Section 2 OK
Update Section 2 Done
Verify Section 2 OK
update successfully completed !!!
test@test-System-Product-Name:~/code/114/114xfwdl_linux_32$
```

### Display Firmware

sudo ./114xfwdl -D

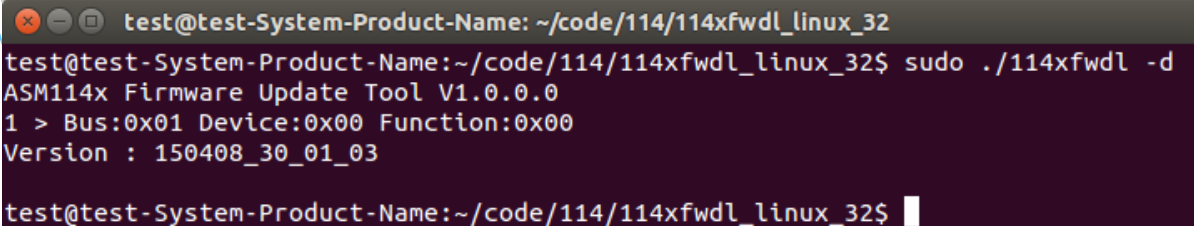

```
test@test-System-Product-Name: ~/code/114/114xfwdl_linux_32
test@test-System-Product-Name:~/code/114/114xfwdl_linux_32$ sudo ./114xfwdl -d
ASM114x Firmware Update Tool V1.0.0.0
1 > Bus:0x01 Device:0x00 Function:0x00
Version : 150408_30_01_03

test@test-System-Product-Name:~/code/114/114xfwdl_linux_32$
```

```
sudo ./114xfwdl -C
sudo ./114xfwdl -W D0_aaa.bin
sudo ./114xfwdl -R D0_aaa.bin
sudo ./114xfwdl -T 114xFW.CFG
```

**Error code and failed message table as below:**

|     |       |                            |
|-----|-------|----------------------------|
| 0   |       | ASMT_SUCCESS               |
| -1  | (255) | ASMT_IO_ERROR              |
| -2  | (254) | ASMT_FWVERSION_UNMATCH     |
| -3  | (253) | ASMT_UNMATCH               |
| -4  | (252) | ASMT_DEVICE_NOT_FOUND      |
| -5  | (251) | ASMT_FILE_NOT_FOUND        |
| -6  | (250) | ASMT_SPI_VERIFY_ERROR      |
| -7  | (249) | ASMT_RESET_FAIL            |
| -8  | (248) | ASMT_MEMORY_ALLOCATE_ERROR |
| -9  | (247) | ASMT_TIMEOUT               |
| -10 | (246) | ASMT_PARAMETER_INVALID     |

**\*About 114xFW.CFG**

There are 2 function sin this file.

1. Customer Configure: this function is be used to check running firmware version  
“/T”

Example:firmare version: 150707\_30\_02\_00

FWVERSION1 = 0x00150707

FWVERSION1 = 0x00300200

2. Create new binary file named 114XFW.NEW: this function is be used to  
created a new binary file that it be named **114XFW.NEW** and download this  
binary file into SPI-ROM.

The new binary file will change your SVID and SSID, if NEWFILE is equal to  
1(enable)

Example:

NEWFILE=1 // 1: enable, 0: disable

SVID=0x1234 // System Vendor ID

SSVID=0x5678 // Subsystem ID