

[STM32G0 Workshop - Installation Procedure \(v1.2\)](#)

Welcome to the STM32G0 Workshop!

Please follow all installation steps below before the day of the Workshop.

[STM32G0 Workshop – Requirements](#)

Important:

You need to have administration rights to be able to install drivers and software and also to do the workshop.

System requirements:

Windows® 7 and later or MacBook running Windows using Parallels, VM Fusion

Software requirements:

Install Java™ Run Time Environment for 1.8.0 or later. If Java™ is not installed on your computer or if you have an old version, STM32CubeMX and STM32CubeProgrammer installer will open the Java™ download web page and stop.

Minimum Recommended Hardware Requirements:

- Type A USB port
- 2+ GHz processor
- 4 GB of system memory (RAM)
- 7 GB of available disk space

Note : For machines with USB Type C, please bring a Type A to Type C adapter.

STM32G0 Workshop - Installation Procedure – Introduction:

In the following installation procedure, you are going to install the following Software/Tools/Libraries that are needed for the Workshop:

- **STM32CubeMX**: version 5.0.1 minimum required, if you have a previous version you will need to install a new version as explained in this installation procedure.
- **STM32CubeProgrammer**: version 1.4.0 minimum required, if you have a previous version you will need to install a new version as explained in this installation procedure.
- **Keil uVision 5** : version 5.26 minimum required, if you have a previous version you will need to install a new version as explained in this installation procedure.
- **Keil pack for STM32G0**: Keil.STM32G0xx_DFP.x.x.x.pack : version 1.0.0 minimum required, if you have a previous version you will need to install the correct pack as explained in this installation procedure.
- **STM32CubeG0**: version 1.0.0 minimum required, if you have a previous version you will need to install a new one as explained in this installation procedure.
- **Tera Term**: In one of the labs we use a Terminal application to display printf output, any Terminal Software can be used; however, Tera Term is recommended.

Note: Some of the versions of the software and libraries on our website might have newer version than the version seen in the document, please use the latest version from the links provided in the installation procedure below.

The entire installation procedure can take several hours (downloading and installing).

STM32G0 Workshop - Installation Procedure

For the Workshop installation please follow the steps below:

1- **STM32CubeMX**: STM32Cube initialization code generator


Click Link: [STM32CubeMX](#)

Minimum version to be installed: 5.0.1

Or use Direct Install Link:

https://www.st.com/content/st_com/en/products/development-tools/software-development-tools/stm32-software-development-tools/stm32-configurators-and-code-generators/stm32cubemx.html

In the web browser, the following page will come up:

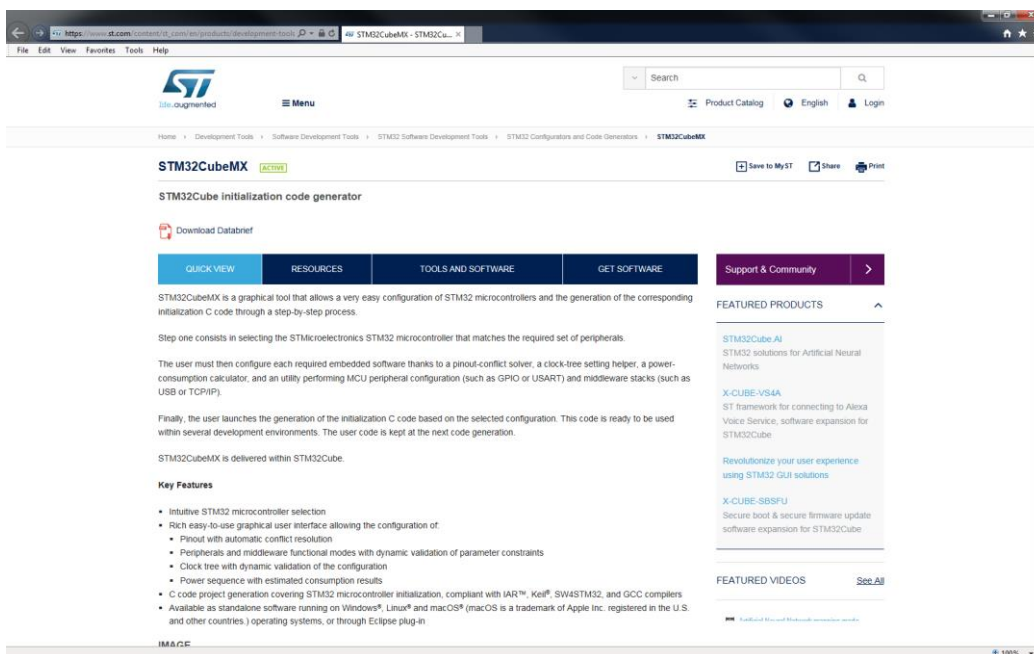

GET SOFTWARE

Click on “GET SOFTWARE” button:

GET SOFTWARE

Part Number	Software Version	Marketing Status	Supplier	Download	Previous versions
STM32CubeMX	5.0.1	Active	ST	Get Software	Select version ▾

[Get Software](#)

Click on:

When the following page appears:

RESOURCES
TOOLS AND SOFTWARE
GET SOFTWARE

X

License Agreement

ACCEPT

Please indicate your acceptance or NON-acceptance by selecting "I ACCEPT" or "I DO NOT ACCEPT" as indicated below in the media.

BY INSTALLING COPYING, DOWNLOADING, ACCESSING OR OTHERWISE USING THIS SOFTWARE PACKAGE OR ANY PART THEREOF (AND THE RELATED DOCUMENTATION) FROM STMICROELECTRONICS INTERNATIONAL N.V, SWISS BRANCH AND/OR ITS AFFILIATED COMPANIES (STMICROELECTRONICS), THE RECIPIENT, ON BEHALF OF HIMSELF OR HERSELF, OR ON BEHALF OF ANY ENTITY BY WHICH SUCH RECIPIENT IS EMPLOYED AND/OR ENGAGED AGREES TO BE BOUND BY THIS SOFTWARE PACKAGE LICENSE AGREEMENT.

[ACCEPT](#)

Click on:

RESOURCES

TOOLS AND SOFTWARE

GET SOFTWARE

X

Get Software

If you have an account on my.st.com, login and download the software without any further validation steps.

Login/Register

If you don't want to login now, you can download the software by simply providing your name and e-mail address in the form below and validating it.

This allows us to stay in contact and inform you about updates of this software.

For subsequent downloads this step will not be required for most of our software.

First Name:

Last Name:

E-mail address:

☐ I have read and understood the [Sales Terms & Conditions](#), [Terms of Use](#) and [Privacy Policy](#)

ST (as data controller according to the Privacy Policy) will keep a record of my navigation history and use that information as well as the personal data that I have communicated to ST for marketing purposes relevant to my interests. My personal data will be provided to ST affiliates and distributors of ST in countries located in the European Union and outside of the European Union for the same marketing purposes [READ MORE >>](#)

I understand that I can withdraw my consent at any time through opt-out links embedded in communication I receive or by managing my account settings. I can also exercise other user's rights at any time as described in the Privacy Policy.

Download

[Terms](#) | [Privacy Policy](#) | [Contacts](#)

There are 3 ways of getting the software:

Login/Register

If you have an ST account click on:

Login/Register

If you don't have one, create one by clicking on:

If you don't have an account and don't want to create one, fill in the information below:

First Name:

Last Name:

E-mail address:

Click on the check box:

☒ I have read and understood the [Sales Terms & Conditions](#), [Terms of Use](#) and [Privacy Policy](#)

ST (as data controller according to the Privacy Policy) will keep a record of my navigation history and use that information as well as the personal data that I have communicated to ST for marketing purposes relevant to my interests. My personal data will be provided to ST affiliates and distributors of ST in countries located in the European Union and outside of the European Union for the same marketing purposes [READ MORE >>](#)

Download

Then click:


Save the file 'en.stm32cubemx.zip' at a location of your choice:

Do you want to open or save en.stm32cubemx.zip (104 MB) from my.st.com? Open Save Cancel ×


Unzip the file (en.stm32cubemx.zip) and you will see this:

	SetupSTM32CubeMX-5.0.1.app	12/20/2018 2:57 PM	File folder	
	en.stm32cubemx.zip	1/17/2019 4:03 PM	Compressed (zipp...	107,208 KB
	Readme.html	12/20/2018 2:57 PM	HTML Document	5 KB
	SetupSTM32CubeMX-5.0.1.exe	12/20/2018 2:57 PM	Application	108,359 KB
	SetupSTM32CubeMX-5.0.1.linux	12/20/2018 2:57 PM	LINUX File	12 KB


Right Click on 'SetupSTM32CubeMX-x.x.x.exe' (x.x.x is the version number) and Run as administrator:

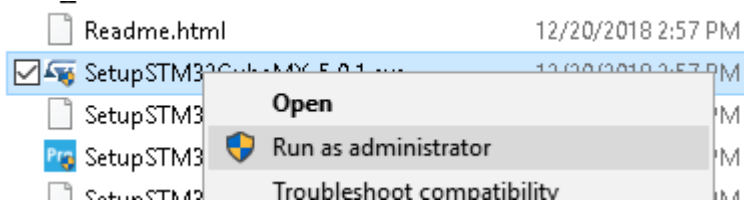


Press Next:

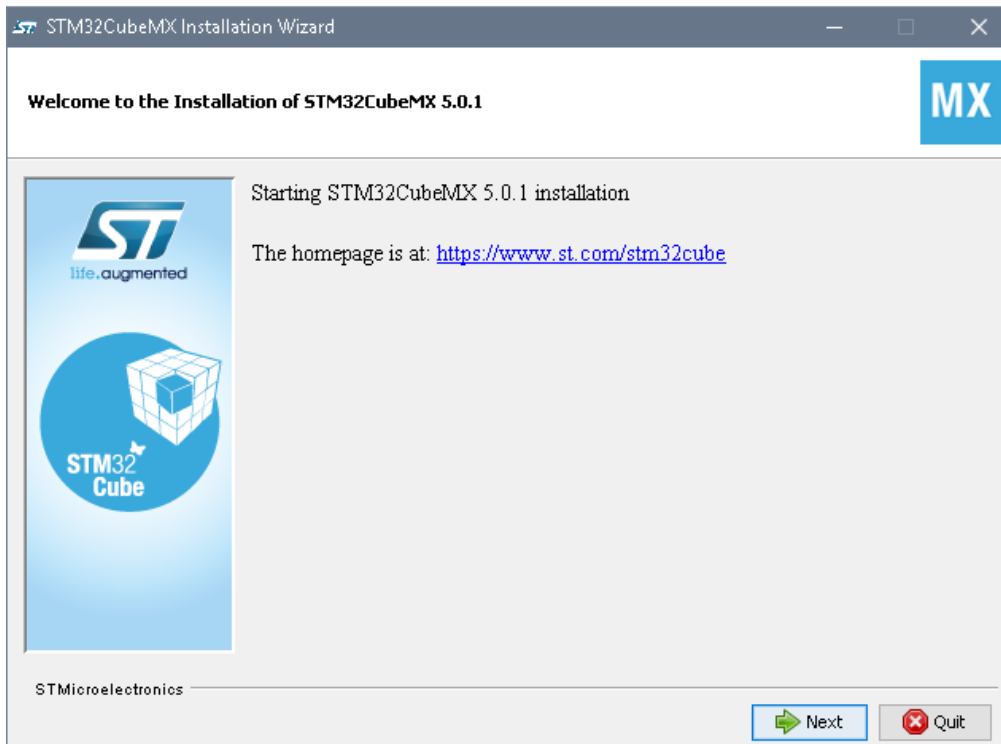

Press Next:

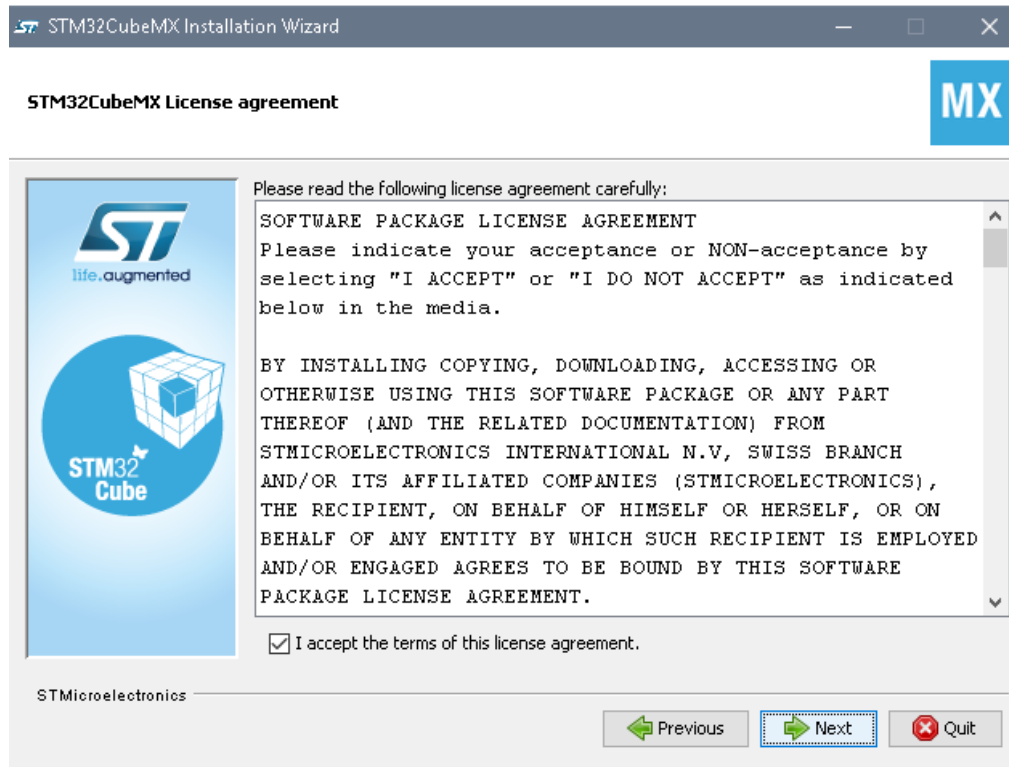


Check the 2 boxes and then Press Next:

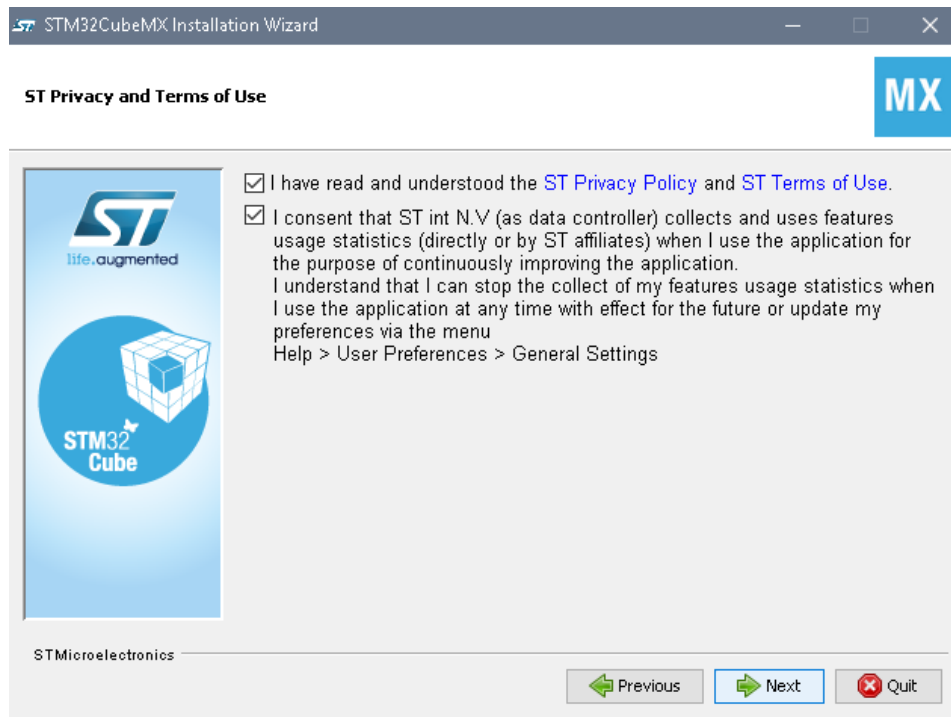


Important note: If you have a previous version it will be overwritten if you keep the default path. So if you want to keep your previous version you will need to install the new version at a different directory. But for the workshop make sure to use the correct version (version that we are installing here).


Once you have decided on the path then press Next:

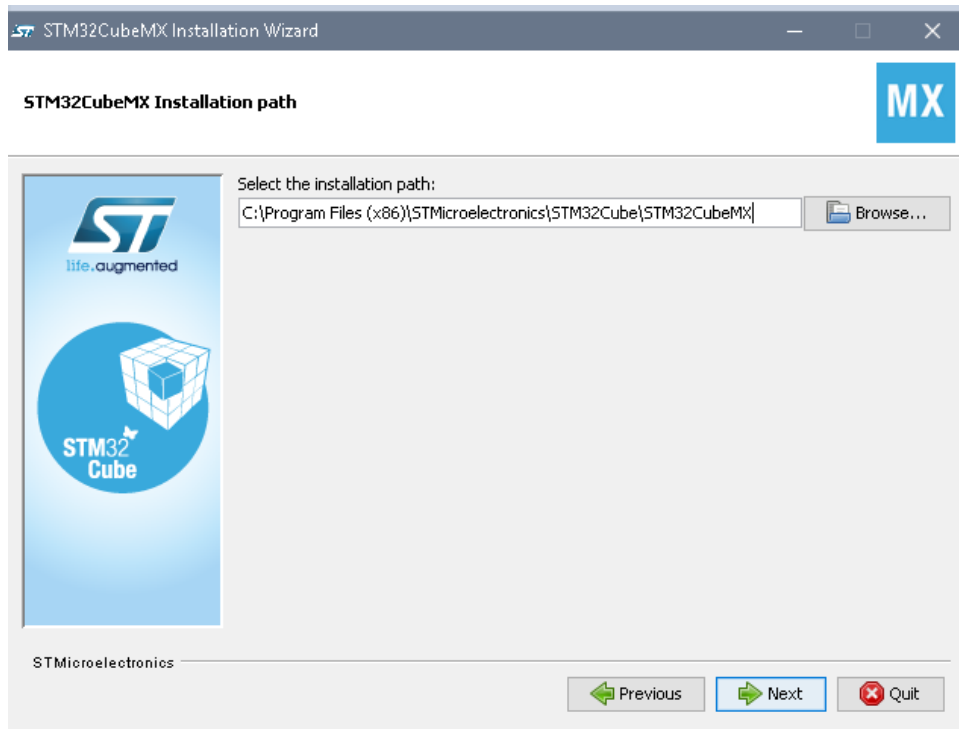


Press OK to Create the directory if it does not already exist:

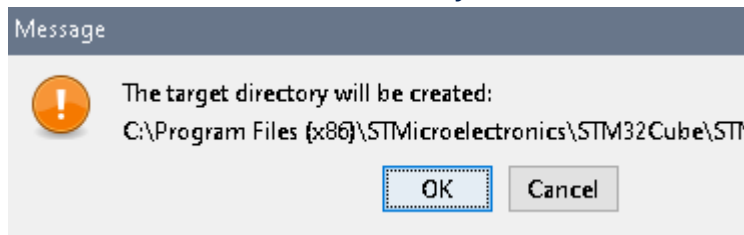


Press Next:

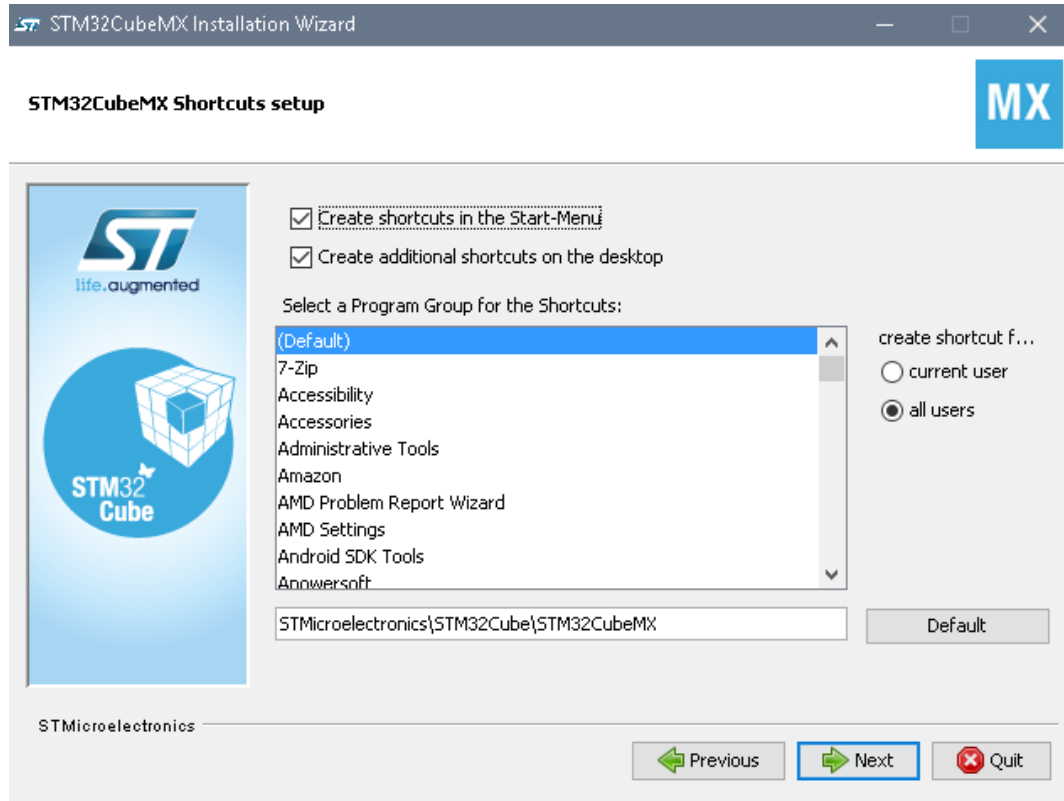

Wait for the Install to complete and then Press Next

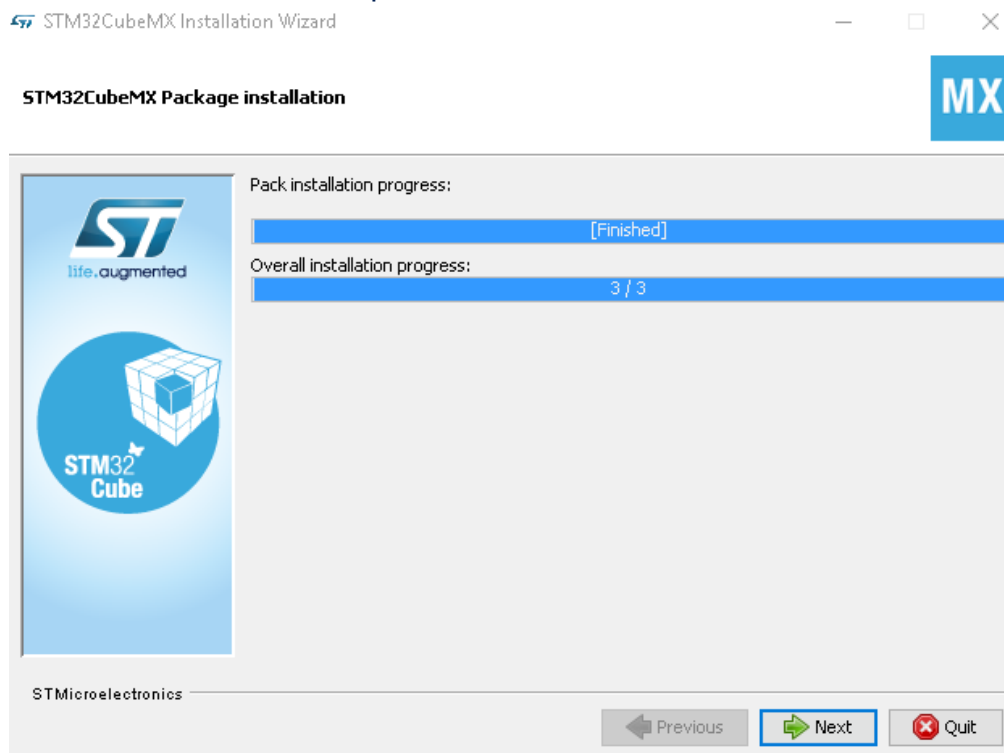

Press Done:

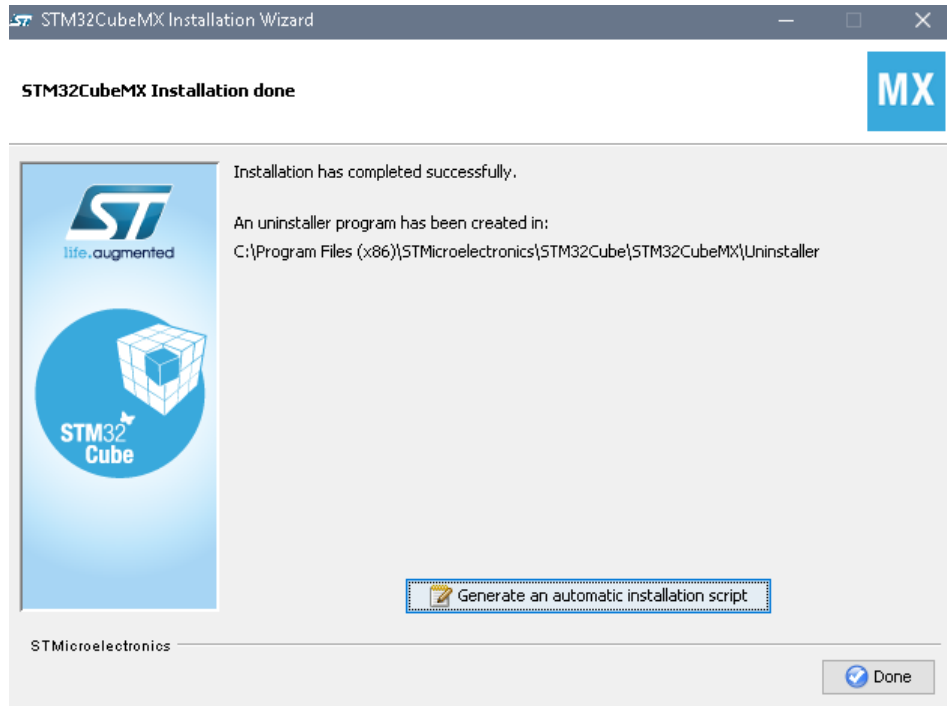


2- STM32CubeProg: STM32CubeProgrammer software for programming STM32 products

Click Link: [STM32CubeProg](https://www.st.com/content/st_com/en/products/development-tools/software-development-tools/stm32-software-development-tools/stm32-programmers/stm32cubeprog.html)

Minimum version required: 1.4.0

Direct Install Link:

https://www.st.com/content/st_com/en/products/development-tools/software-development-tools/stm32-software-development-tools/stm32-programmers/stm32cubeprog.html

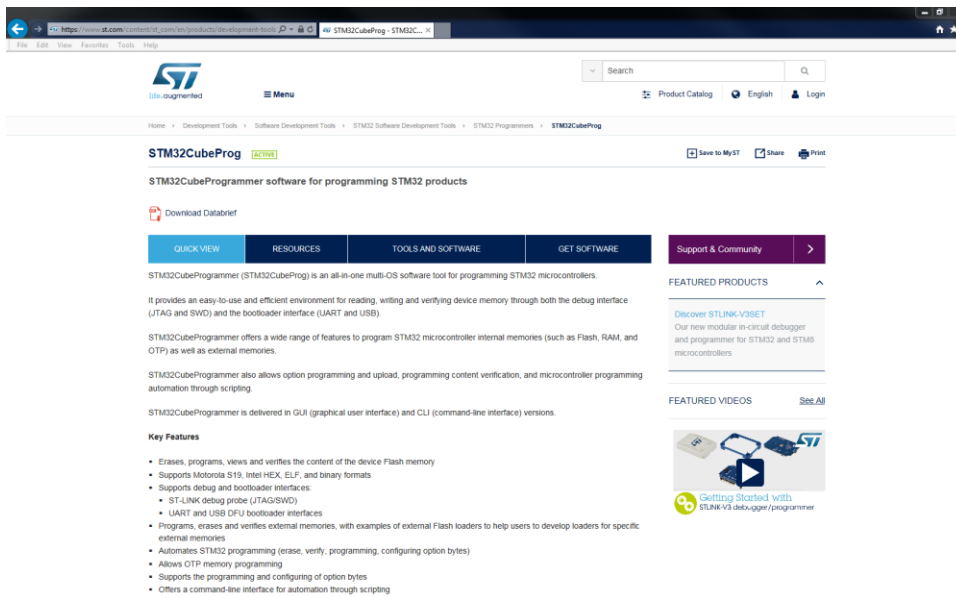

GET SOFTWARE

Click on:

GET SOFTWARE

Part Number	Software Version	Marketing Status	Supplier	Download
STM32CubeProg	1.4.0	Active	ST	Get Software

Get Software

Click on:



License Agreement

[ACCEPT](#)

Please indicate your acceptance or NON-acceptance by selecting "I ACCEPT" or "I DO NOT ACCEPT" as indicated below in the media.

BY INSTALLING COPYING, DOWNLOADING, ACCESSING OR OTHERWISE USING THIS SOFTWARE PACKAGE OR ANY PART THEREOF (AND THE RELATED DOCUMENTATION) FROM STMICROELECTRONICS INTERNATIONAL N.V, SWISS BRANCH AND/OR ITS AFFILIATED COMPANIES (STMICROELECTRONICS), THE RECIPIENT, ON BEHALF OF HIMSELF OR HERSELF, OR ON BEHALF OF ANY ENTITY BY WHICH SUCH RECIPIENT IS EMPLOYED AND/OR ENGAGED AGREES TO BE BOUND BY THIS SOFTWARE PACKAGE LICENSE AGREEMENT.

[ACCEPT](#)

Click on:



Get Software

If you have an account on my.st.com, login and download the software without any further validation steps.

Login/Register

If you don't want to login now, you can download the software by simply providing your name and e-mail address in the form below and validating it.

This allows us to stay in contact and inform you about updates of this software.

For subsequent downloads this step will not be required for most of our software.

First Name:

Last Name:

E-mail address:

☐ I have read and understood the [Sales Terms & Conditions](#), [Terms of Use](#) and [Privacy Policy](#)

ST (as data controller according to the Privacy Policy) will keep a record of my navigation history and use that information as well as the personal data that I have communicated to ST for marketing purposes relevant to my interests. My personal data will be provided to ST affiliates and distributors of ST in countries located in the European Union and outside of the European Union for the same marketing purposes [READ MORE >>](#)

I understand that I can withdraw my consent at any time through opt-out links embedded in communication I receive or by managing my account settings. I can also exercise other user's rights at any time as described in the Privacy Policy.

Download

There are 3 ways of getting the software:

Login/Register

If you have an ST account click on:

Login/Register

If you don't have one, create one by clicking on:

If you don't have an account and don't want to create one, fill in the information below:

First Name:

Last Name:

E-mail address:

Click on the check box:

☒ I have read and understood the [Sales Terms & Conditions](#), [Terms of Use](#) and [Privacy Policy](#)

ST (as data controller according to the Privacy Policy) will keep a record of my navigation history and use that information as well as the personal data that I have communicated to ST for marketing purposes relevant to my interests. My personal data will be provided to ST affiliates and distributors of ST in countries located in the European Union and outside of the European Union for the same marketing purposes [READ MORE >>](#)

Download

Then click:

Save the file at a location of your choice:


Do you want to open or save en.stm32cubeprog.zip (160 MB) from my.st.com?

Open Save Cancel


Unzip the file (en.stm32cubeprog.zip)

	SetupSTM32CubeProgrammer-1.4.0.app	1/17/2019 4:16 PM	File folder	
	en.stm32cubeprog.zip	1/17/2019 4:16 PM	Compressed (zipp...	164,650 KB
	SetupSTM32CubeProgrammer-1.4.0.exe	12/28/2018 1:20 PM	Application	165,170 KB
	SetupSTM32CubeProgrammer-1.4.0.linux	12/28/2018 1:21 PM	LINUX File	742 KB


Right Click on SetupSTM32CubeProgrammer-x.x.x.exe and Run as administrator

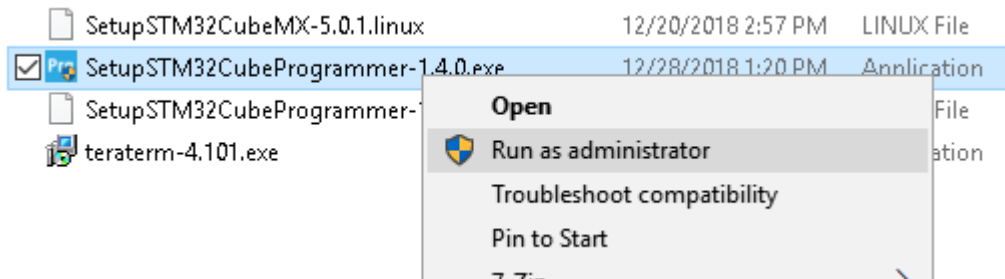


Press Next:

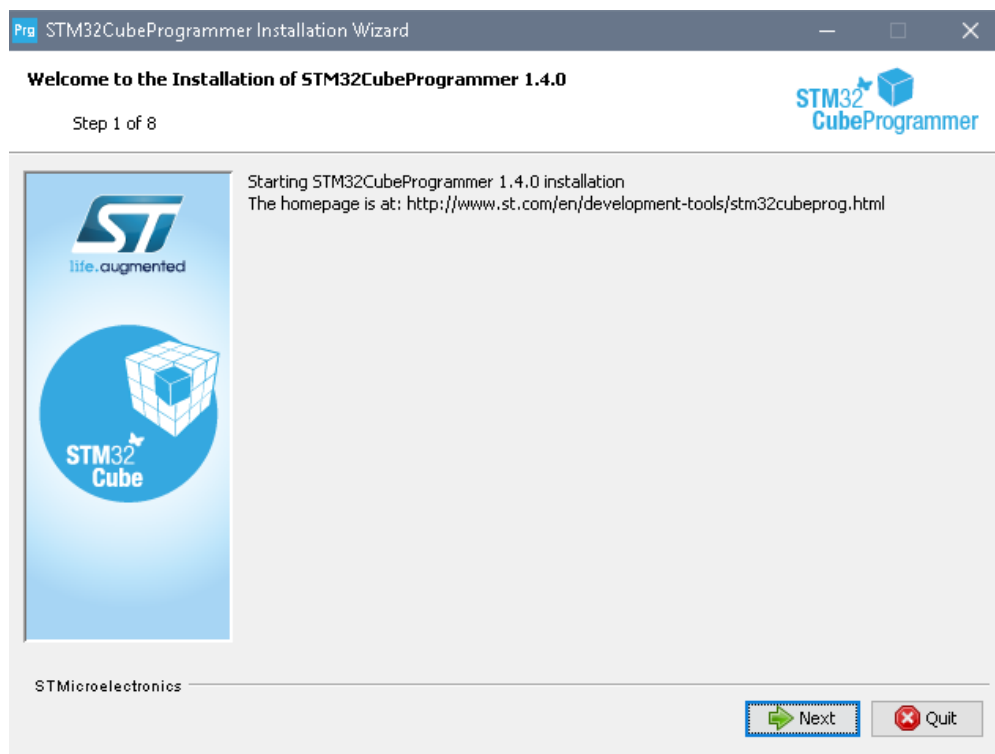

Press Next:

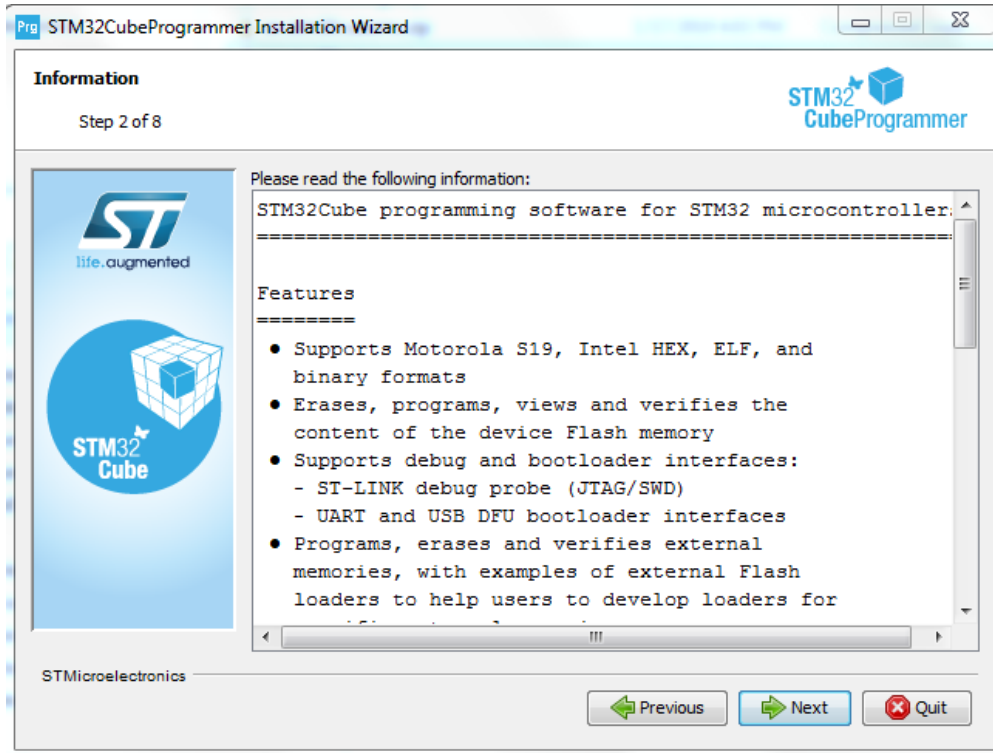


Accept the Terms and then click on Next:

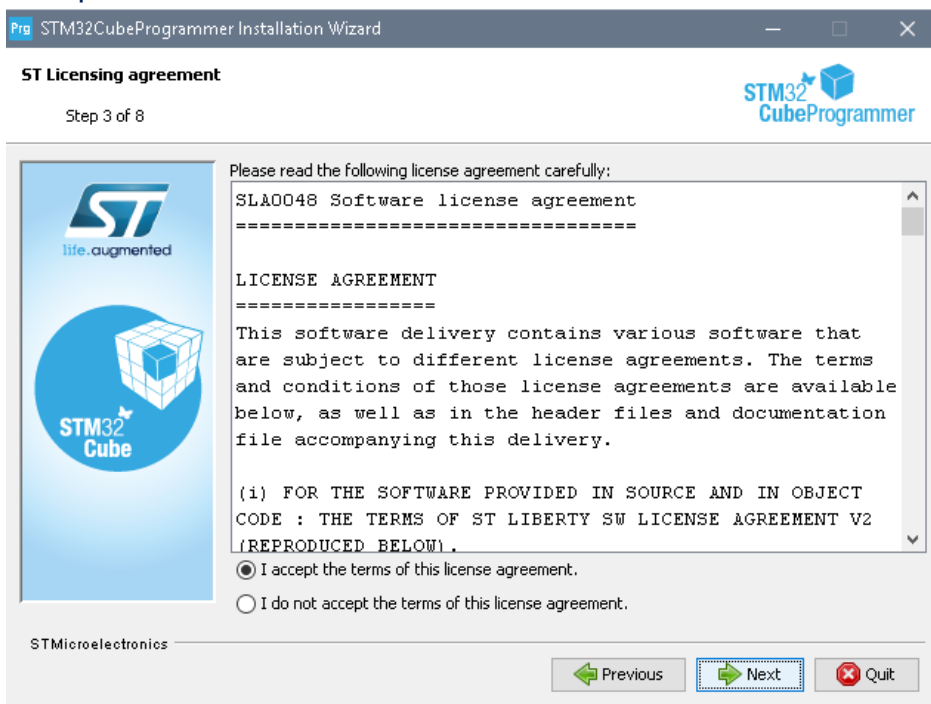


Important note: If you have a previous version it will be overwritten if you keep the default path. So if you want to keep your previous version you will need to install the new version at a different directory. But for the workshop make sure to use the correct version (version that we are installing here).

Once you have decided on the path then press Next:

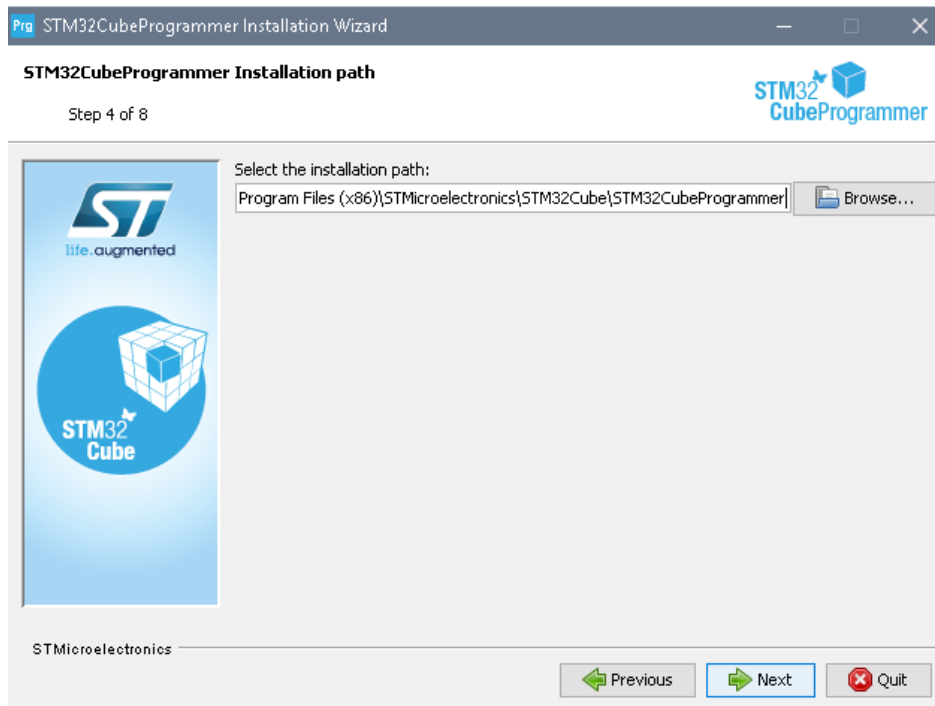


Press OK to create the Directory if the directory does not exist:

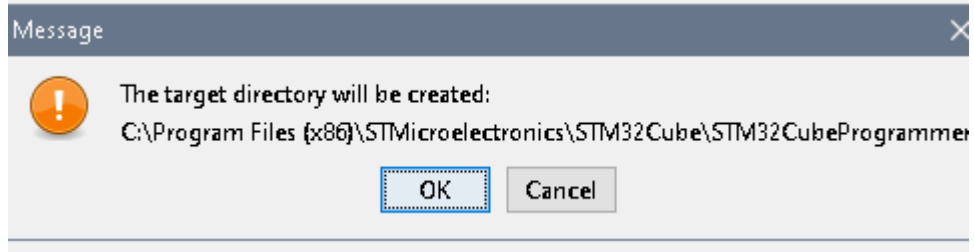


Follow those steps to install the ST-LINK Driver:


Press Next:

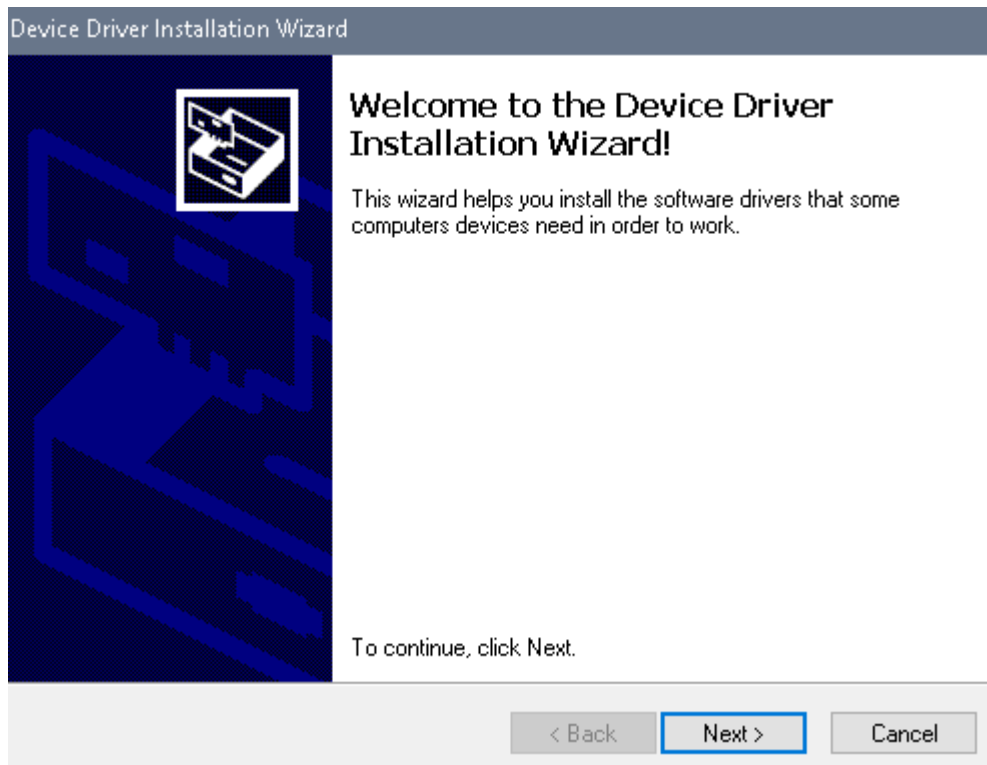


Press Finish:

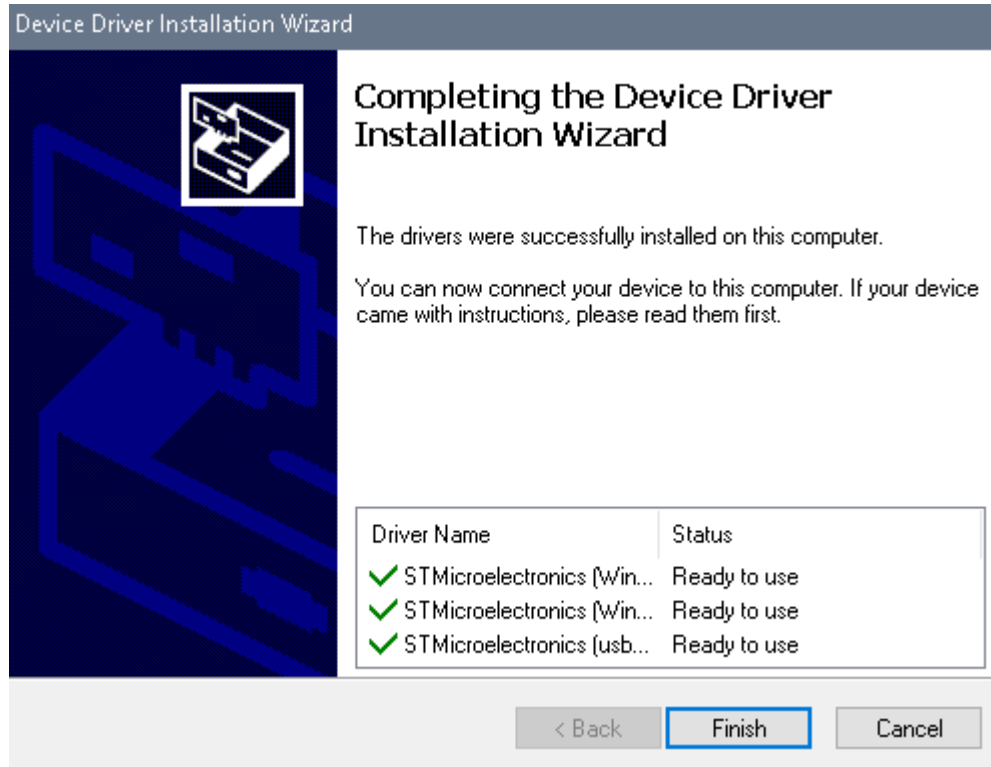

Wait for the install to complete and then press Next:

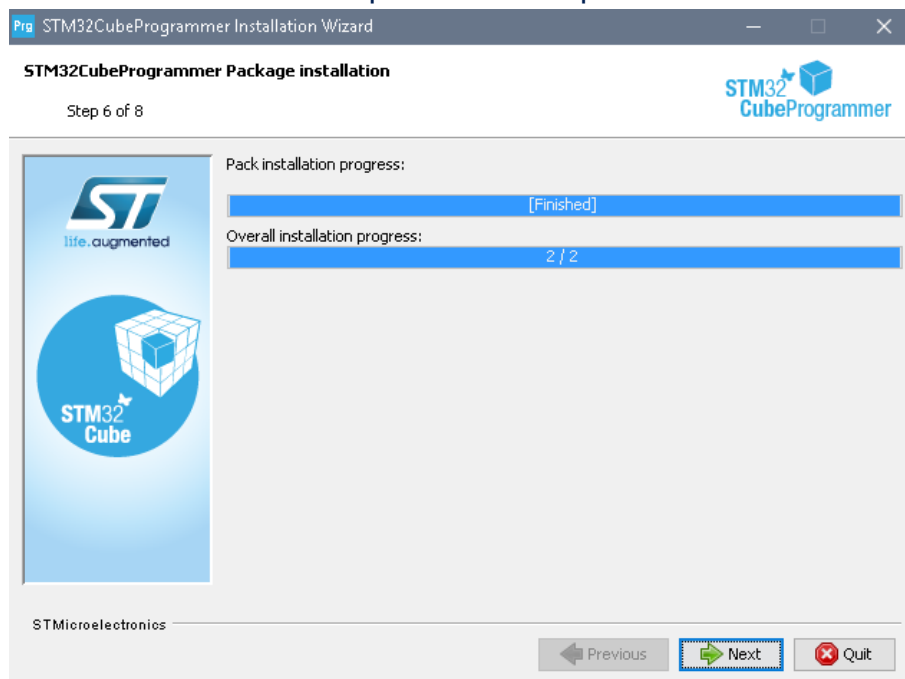

Press Done:

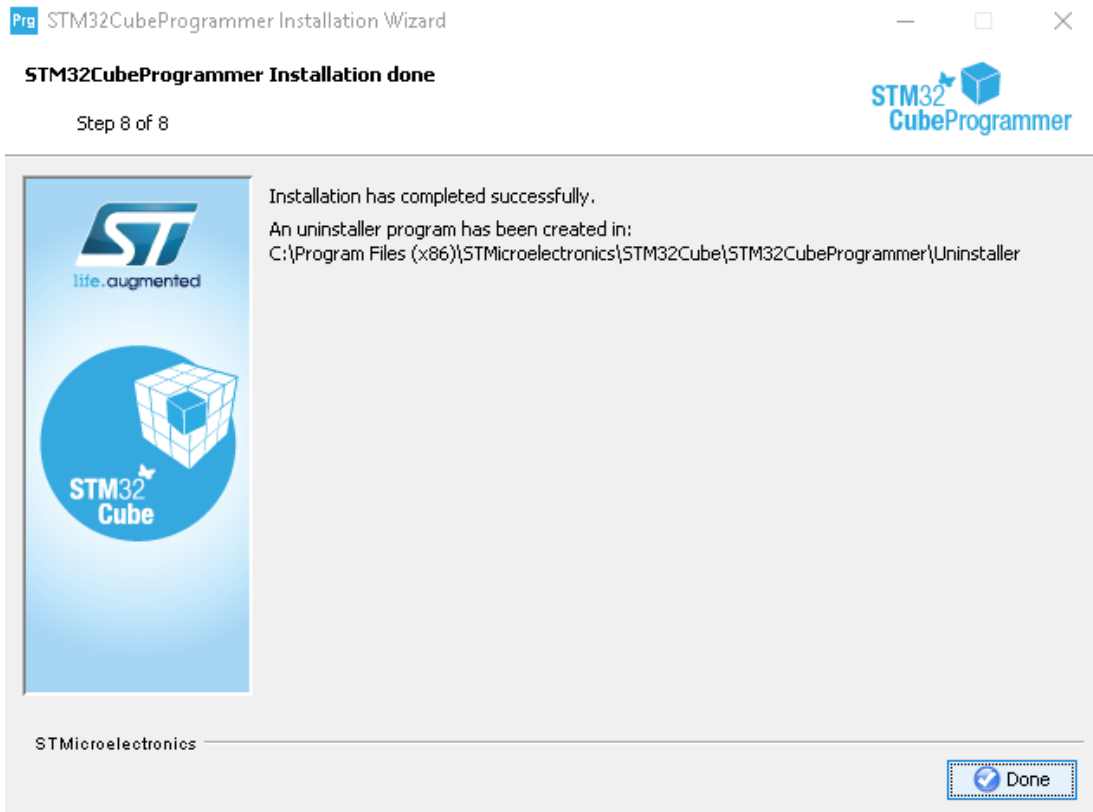

Now try to open STM32CubeProgrammer to make sure it was installed properly.

3- IDE: Keil uVision 5

Click Link: [Keil uVision5](http://www2.keil.com/stmicroelectronics-stm32/mdk)

Minimum version required: 5.26

Or use Direct Link to the free version:

<http://www2.keil.com/stmicroelectronics-stm32/mdk>



On this page you will find the PSN (Product Serial Number) to be used to activate the license:

4PPFW-QBEHZ-M0D5M

To download Keil uVision5 click on:



Enter the following info and press Submit:

Enter Your Contact Information Below

First Name:

Last Name:

E-mail:

Company:

Address:

City:

State/Province:

Zip/Postal Code:

Country:

Phone:

☐ Send me e-mail when there is a new update.

NOTICE:

If you select this check box, you **will** receive an e-mail message from Keil whenever a new update is available. If you don't wish to receive an e-mail notification, don't check this box.

Which device are you using?
(eg, STM32)

Click on the checked box and submit:

Arm will process your information in accordance with the Evaluation section of our [Privacy Policy](#).

☒ By ticking this box you confirm you have read and accept our [Privacy Policy](#) and indicate your consent to receiving marketing communications from Arm. Please visit our [Subscription Centre](#) to manage your marketing preferences or unsubscribe from future communications.

Submit

Reset

On the web browser, this will be displayed:

MDK-ARM

MDK-ARM Version 5.26
Version 5.26

- Review the [hardware requirements](#) before installing this software.
- Note the [limitations of the evaluation tools](#).
- [Further installation instructions for MDK5](#)

(MD5:3938932e4e7ba7ee3b579f9a6a270710)

To install the MDK-ARM Software...

- Right-click on **MDK526.EXE** and save it to your computer.
- PDF files may be opened with Acrobat Reader.
- ZIP files may be opened with PKZIP or WINZIP.

MDK526.EXE (915,212K)
Monday, September 10, 2018


MDK526.EXE (915,212K)
Monday, September 10, 2018

Click on:


Save mdkxxx.exe (xxx is the version number) at a location of your choice:




Right Click on mdkxxx.exe and Run as Administrator:

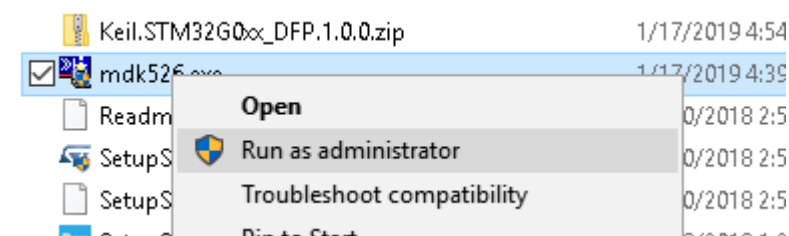


Press Next:

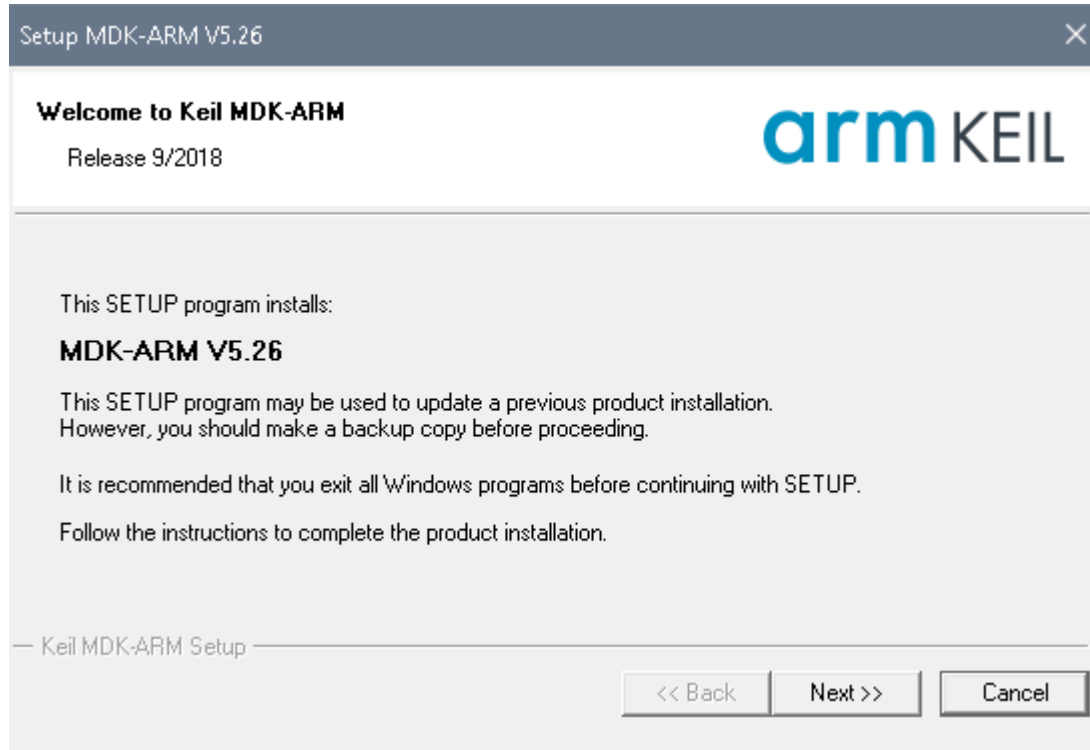

Check the box and click Next:

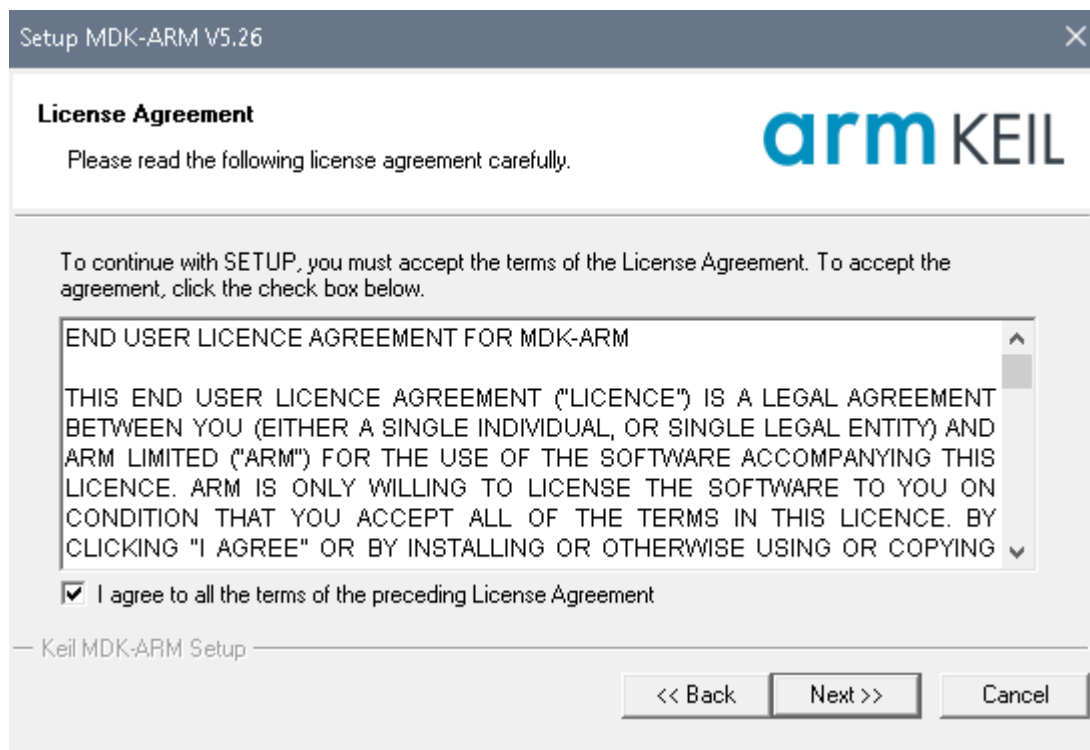

Keep the default path and then click Press:

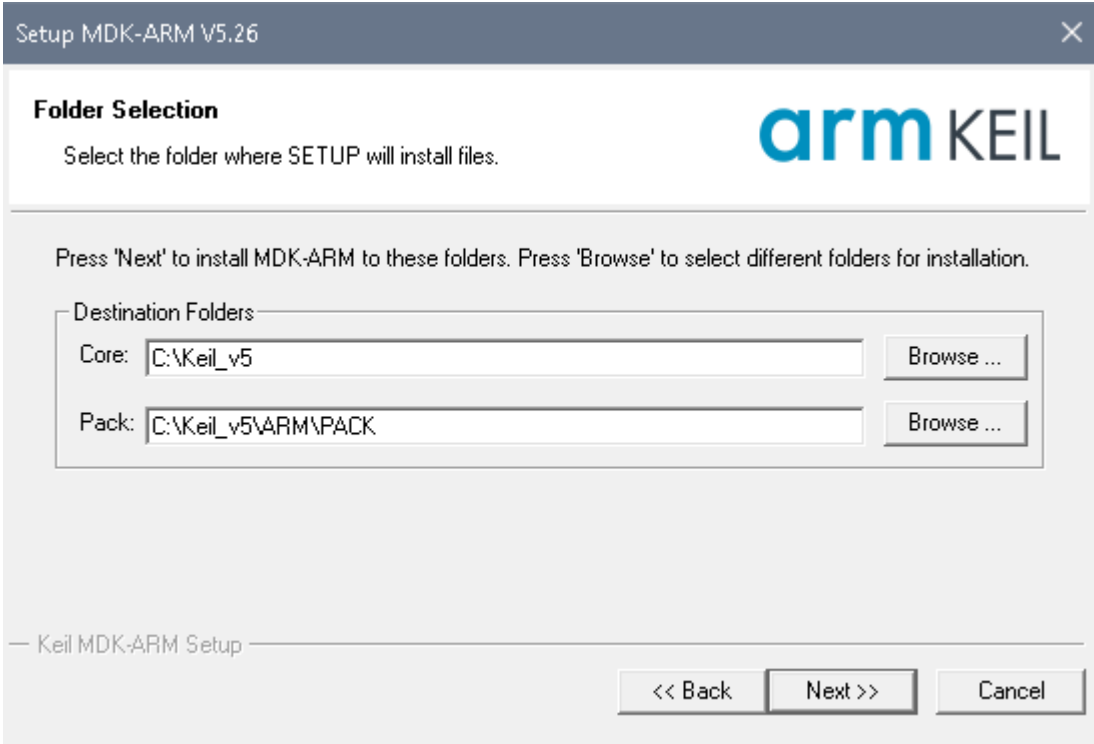

Setup MDK-ARM V5.26

Folder Selection

Select the folder where SETUP will install files.

arm KEIL

Press 'Next' to install MDK-ARM to these folders. Press 'Browse' to select different folders for installation.

Destination Folders


Core: C:\Keil_v5 Browse ...

Pack: C:\Keil_v5\ARM\PACK Browse ...

— Keil MDK-ARM Setup —

<< Back Next >> Cancel

Enter the info requested and then click Next:

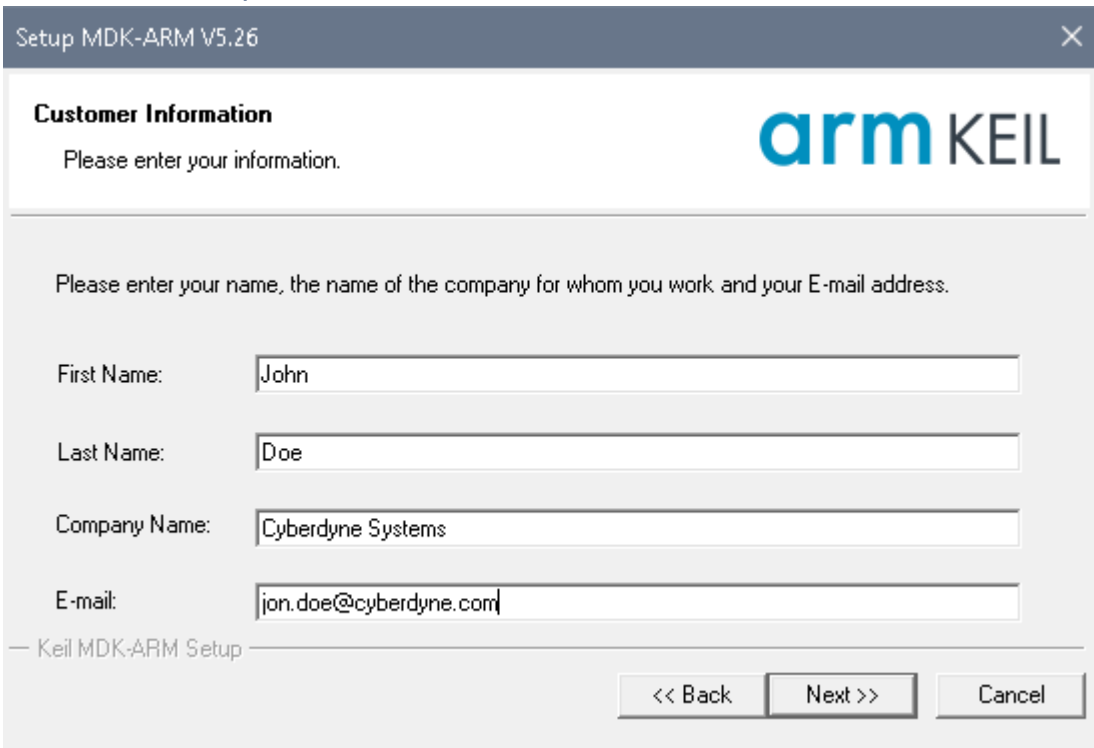

Setup MDK-ARM V5.26

Customer Information

Please enter your information.

arm KEIL

Please enter your name, the name of the company for whom you work and your E-mail address.

First Name: John

Last Name: Doe


Company Name: Cyberdyne Systems

E-mail: jon.doe@cyberdyne.com


— Keil MDK-ARM Setup —

<< Back Next >> Cancel

No need to install this so click on Don't Install:

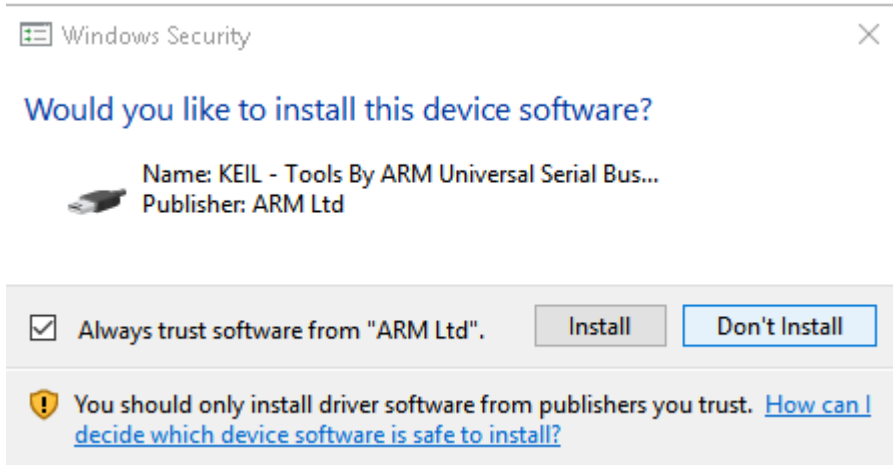

Wait for the Setup to complete and then Click Finish.

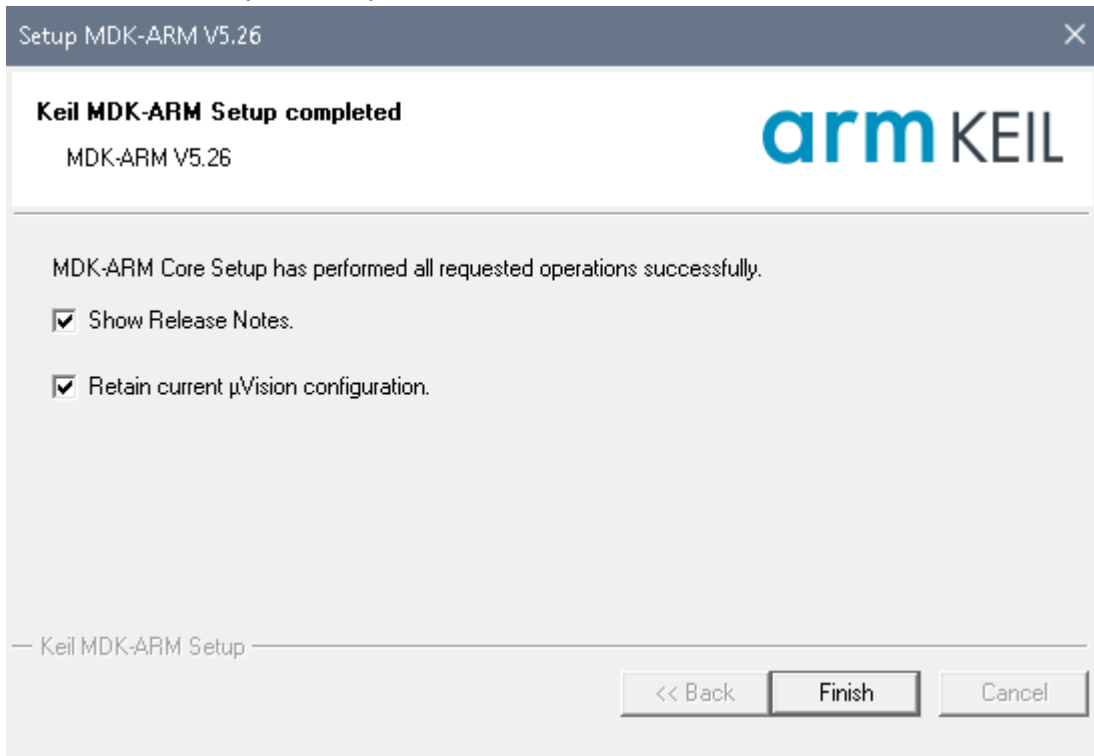

Note: If pack installer is automatically launched please close it.


4- Keil pack for STM32G0:Keil.STM32G0xx_DFP.1.0.0.pack

Click Link: [Keil pack for STM32G0](#)

Minimum version required: 1.0.0

Or use Direct Link to install:

<https://www.keil.com/dd2/stmicroelectronics/stm32g071rbtx/#/eula-container>

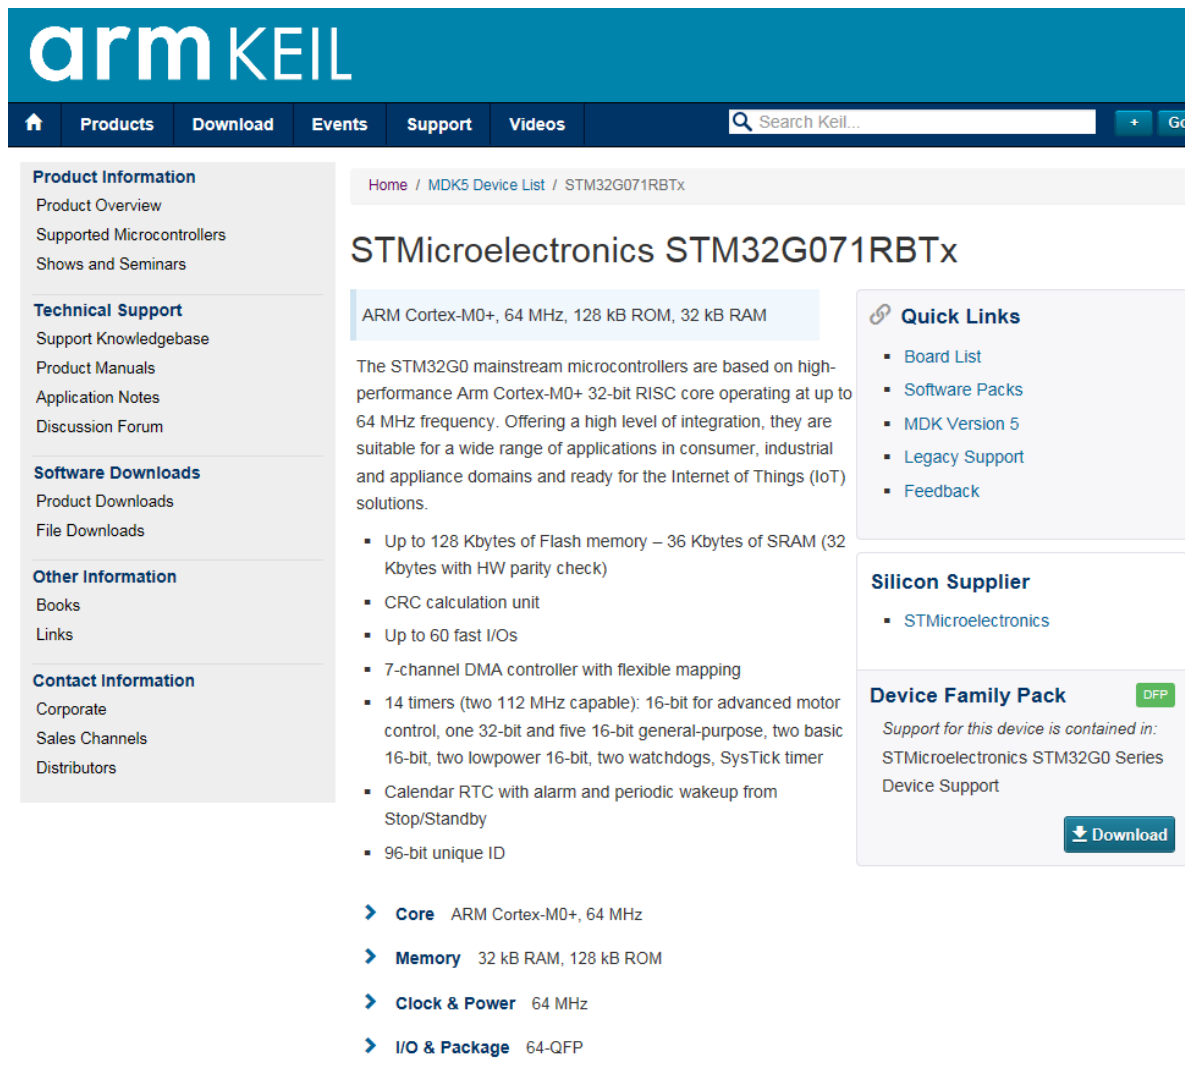

The screenshot shows the ARM KEIL website interface. The top navigation bar includes links for Home, Products, Download, Events, Support, and Videos, along with a search bar. The left sidebar contains sections for Product Information, Technical Support, Software Downloads, Other Information, and Contact Information. The main content area displays the product page for the STM32G071RBTx, which is an ARM Cortex-M0+ microcontroller. The page includes a breadcrumb trail, a title, a brief description, a list of features, and a 'Quick Links' section. A 'Device Family Pack' section is also present, indicating that support for this device is contained in the STM32G0 Series Device Support pack, with a 'Download' button.

Product Information

- Product Overview
- Supported Microcontrollers
- Shows and Seminars

Technical Support

- Support Knowledgebase
- Product Manuals
- Application Notes
- Discussion Forum

Software Downloads

- Product Downloads
- File Downloads

Other Information

- Books
- Links

Contact Information

- Corporate
- Sales Channels
- Distributors

Home / MDK5 Device List / STM32G071RBTx

STMicroelectronics STM32G071RBTx

ARM Cortex-M0+, 64 MHz, 128 kB ROM, 32 kB RAM

The STM32G0 mainstream microcontrollers are based on high-performance Arm Cortex-M0+ 32-bit RISC core operating at up to 64 MHz frequency. Offering a high level of integration, they are suitable for a wide range of applications in consumer, industrial and appliance domains and ready for the Internet of Things (IoT) solutions.

- Up to 128 Kbytes of Flash memory – 36 Kbytes of SRAM (32 Kbytes with HW parity check)
- CRC calculation unit
- Up to 60 fast I/Os
- 7-channel DMA controller with flexible mapping
- 14 timers (two 112 MHz capable): 16-bit for advanced motor control, one 32-bit and five 16-bit general-purpose, two basic 16-bit, two lowpower 16-bit, two watchdogs, SysTick timer
- Calendar RTC with alarm and periodic wakeup from Stop/Standby
- 96-bit unique ID

> **Core** ARM Cortex-M0+, 64 MHz
 > **Memory** 32 kB RAM, 128 kB ROM
 > **Clock & Power** 64 MHz
 > **I/O & Package** 64-QFP

Quick Links

- Board List
- Software Packs
- MDK Version 5
- Legacy Support
- Feedback

Silicon Supplier

- STMicroelectronics

Device Family Pack DFP

Support for this device is contained in:
STMicroelectronics STM32G0 Series
Device Support

[Download](#)

Click on:



Accept this:

End User Licence Agreement (EULA)

END USER LICENCE AGREEMENT FOR MDK-ARM

THIS END USER LICENCE AGREEMENT ("LICENCE") IS A LEGAL AGREEMENT BETWEEN YOU (EITHER A SINGLE INDIVIDUAL, OR SINGLE LEGAL ENTITY) AND ARM LIMITED ("ARM") FOR THE USE OF THE SOFTWARE ACCOMPANYING THIS LICENCE. ARM IS ONLY WILLING TO LICENSE THE SOFTWARE TO YOU ON CONDITION THAT YOU ACCEPT ALL OF THE TERMS IN THIS LICENCE. BY CLICKING "I AGREE" OR BY INSTALLING OR OTHERWISE USING OR COPYING THE SOFTWARE YOU INDICATE THAT YOU AGREE TO BE BOUND BY ALL OF THE TERMS OF THIS LICENCE. IF YOU DO NOT AGREE TO THE TERMS OF THIS LICENCE, ARM IS UNWILLING TO LICENSE THE SOFTWARE TO YOU AND YOU MAY NOT INSTALL, USE OR COPY THE SOFTWARE, AND YOU SHOULD PROMPTLY RETURN THE SOFTWARE TO YOUR SUPPLIER AND ASK FOR A REFUND OF ANY LICENCE FEE PAID (IF ANY).

"Licence Key" means an electronic numbered licence key issued to you by ARM to enable the use of the Software, or the built-in evaluation mode ("Evaluation Only") that enables the use of the Software.

"Middleware" means all of the following software components; (a) RL-TCPnet (networking suite) in


Do you Accept or Decline the terms of this License Agreement?

Save Keil.STM32G0xx_DFP.x.x.x.zip at the location of your choice:

Do you want to open or save **Keil.STM32G0xx_DFP.1.0.0.zip** (21.0 MB) from **keilpack.azureedge.net**?


5- Activate Keil uVision5 and Install STM32G0 Pack for Keil uVision5

Right click on Keil uVision5 icon on your desktop or open it from the Start Menu and run as admin:

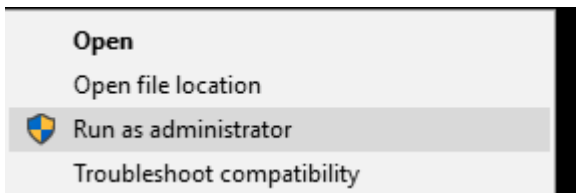


Activate Keil uVision5:


Click File -> License Management

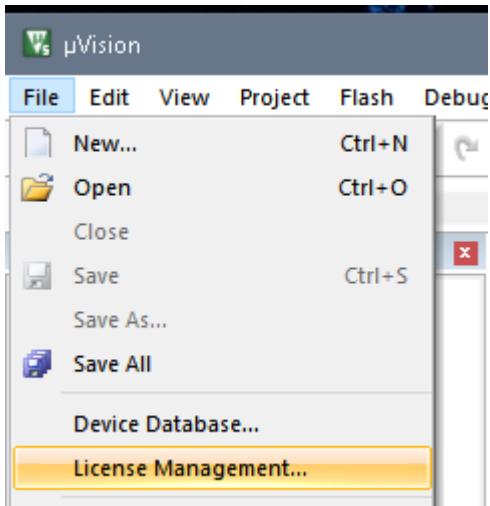

In the License management window, Click “Get LIC via internet...”

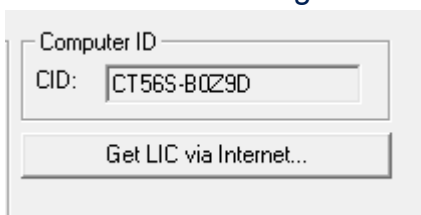


Click OK:

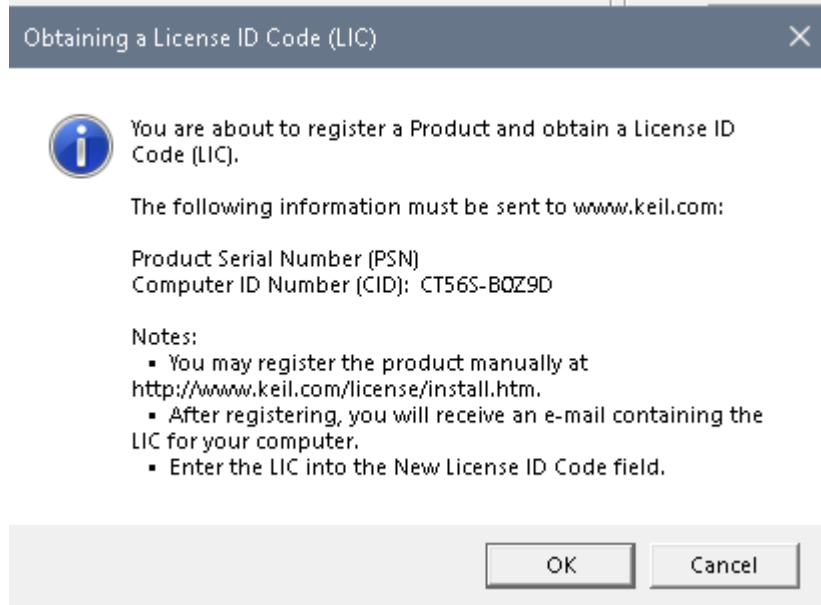

This will open a browser window and you will see this page, fill in the information for the PSN use the following string: **4PPFW-QBEHZ-M0D5M**

Fill in the rest of the required fields and make sure to use a correct email address because the license will be sent to you through email.

Then click Submit at the end of the page:

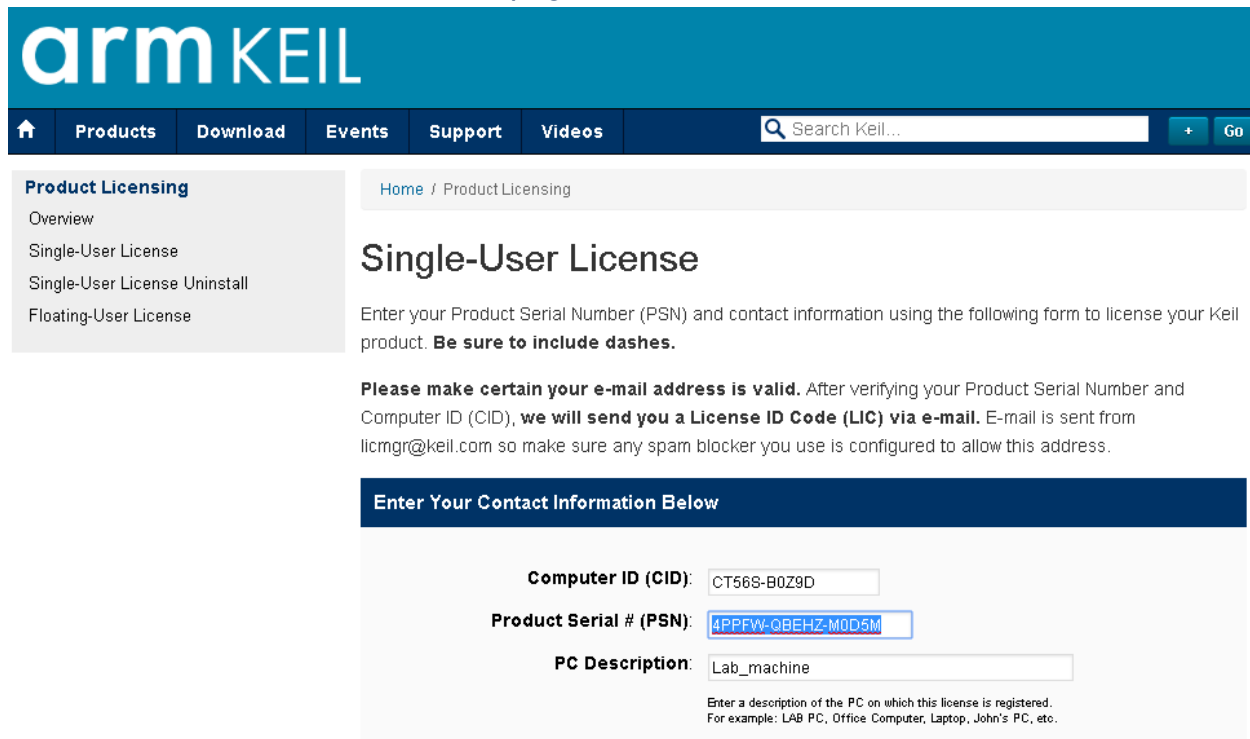

Thanks for Licensing Your Product

We have sent your product registration information including the License ID Code (LIC) via e-mail to **[redacted]**.

When you receive this e-mail, copy the License ID Code (LIC) and paste it into the **New License ID Code** input field in the µVision License Manager Dialog — Single-User License Tab (available from the File Menu).

If you have multiple Keil products you may [Register Another Product](#) at this time.

Now check your email you should have received an email like this, copy the License ID Code (LIC) at the end of the email.



licmgr@keil.com

to me ▾

Thank you for licensing your Keil product. Your License ID Code (LIC) is printed below. Print a copy of this e-mail to keep for your records.

MDK-ARM Cortex-M0/M0+ 256K

For ST Only


Support Ends 31 Jan 2020

PC Description : LAB_MACHINE

Computer ID (CID): CT56S-B0Z9D

License ID Code (LIC): **T0D12-9G7I3-L3Y4L-DRAGE-MI3FH-T158F**

Now go back to the License Management window in Keil uVision5 and enter the License ID Code (LIC) you just copied from your email and then click on “Add LIC”.

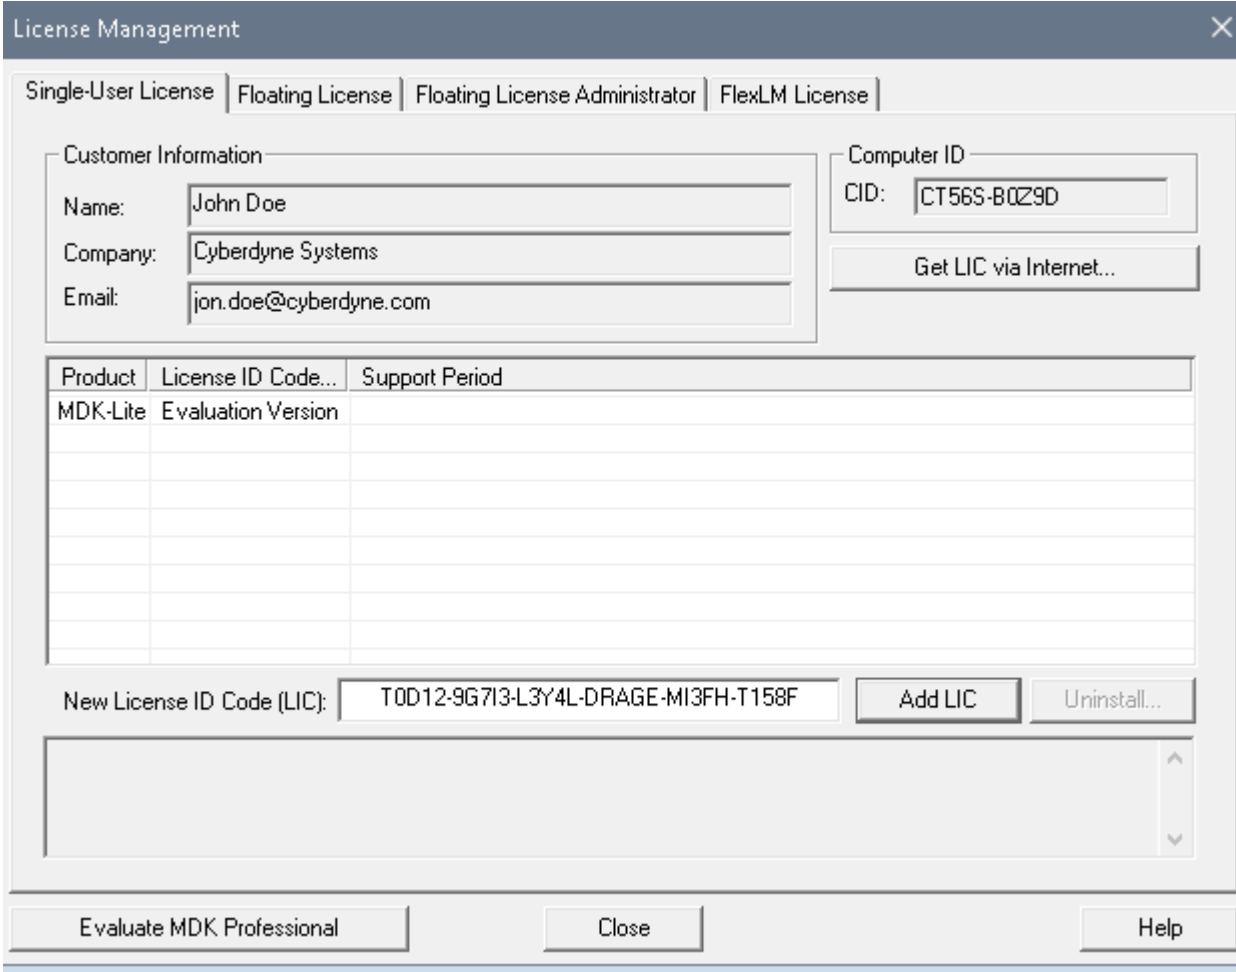

The screenshot shows the 'License Management' window with the 'Single-User License' tab selected. The 'Customer Information' section contains fields for Name (John Doe), Company (Cyberdyne Systems), and Email (jon.doe@cyberdyne.com). The 'Computer ID' section shows CID: CT56S-BQZ9D and a 'Get LIC via Internet...' button. Below this is a table with columns 'Product', 'License ID Code...', and 'Support Period'. The first row shows 'MDK-Lite' and 'Evaluation Version'. At the bottom, the 'New License ID Code (LIC):' field contains 'T0D12-9G7I3-L3Y4L-DRAGE-MI3FH-T158F', with 'Add LIC' and 'Uninstall...' buttons next to it. The bottom bar has 'Evaluate MDK Professional', 'Close', and 'Help' buttons.


This should activate your license for a year:

Product	License ID Code (LIC)/Product variant	Support Period
MDK-ARM Cortex-M0/M0+ 256K for ST	T0D12-9G7I3-L3Y4L-DRAGE-MI3FH-T158F	Expires: Jan 2020

Then close License Management Window.


Install STM32G0 Pack:

From Keil uVision5 click on Pack Installer icon:

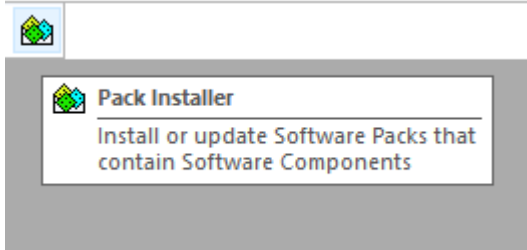


Or use the menu from Keil: Project -> Manage-> Pack Installer


If this Window appears click OK:

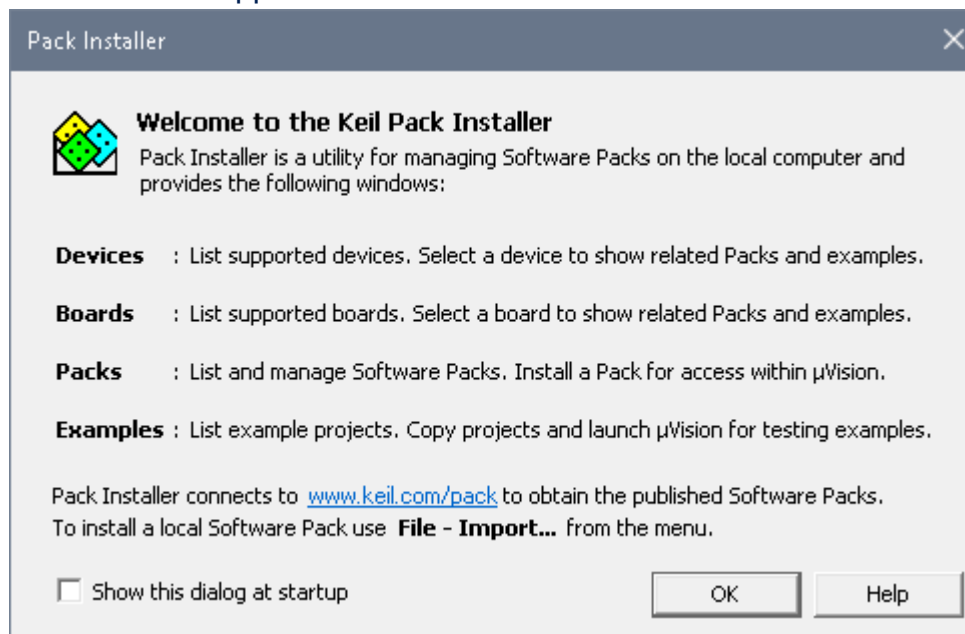


From Pack Installer: Go File -> Import:

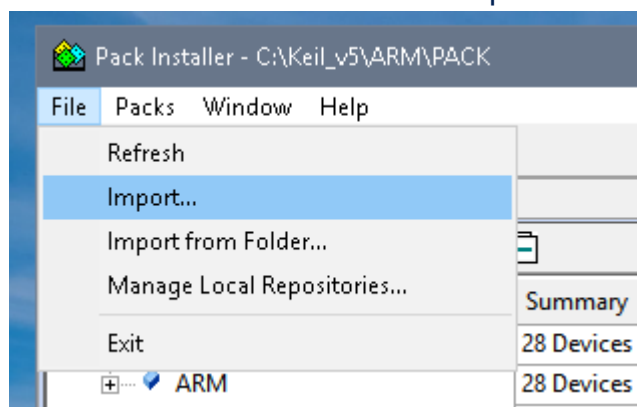


Locate on your drive: Keil.STM32G0xx_DFP.x.x.x.zip (you downloaded it in the previous step) and then click “Open”

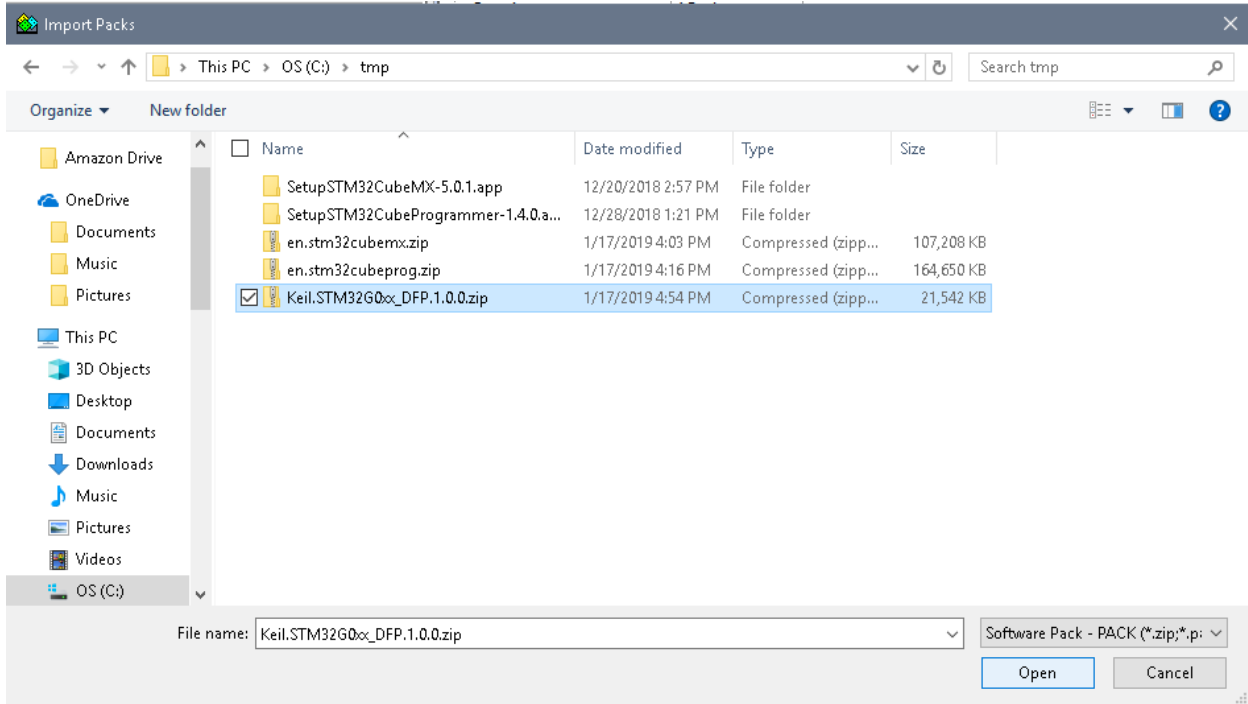

Once the Pack has been installed you should see the STM32G0 Series in the Pack Installer:

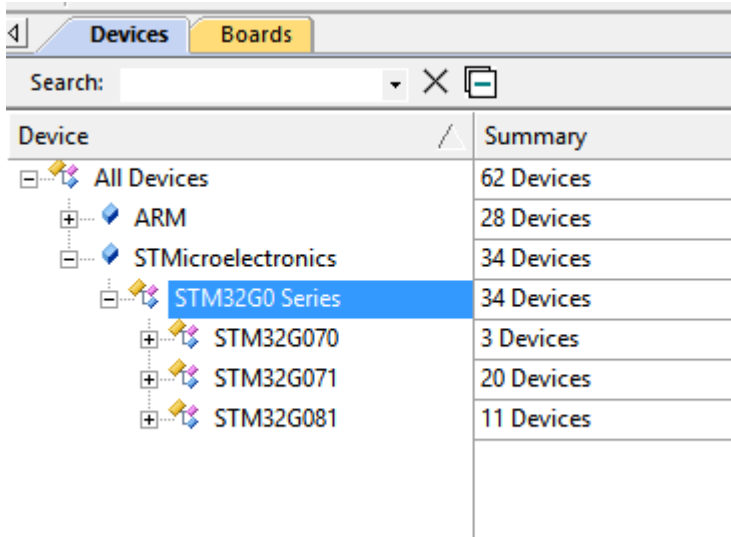

Click Yes in Keil uVision5:

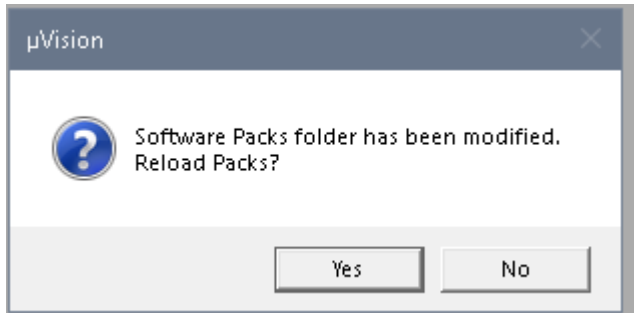


Close Keil uVision5 and Pack Installer.

6- **STM32CubeG0**: Install STM32Cube MCU Package for STM32G0 series

Double click on STM32CubeMX icon or look for it in your Start Menu:




Note: Use Help > Updater Settings > Connection Parameters to enter any proxy necessary for CubeMX to access the internet.

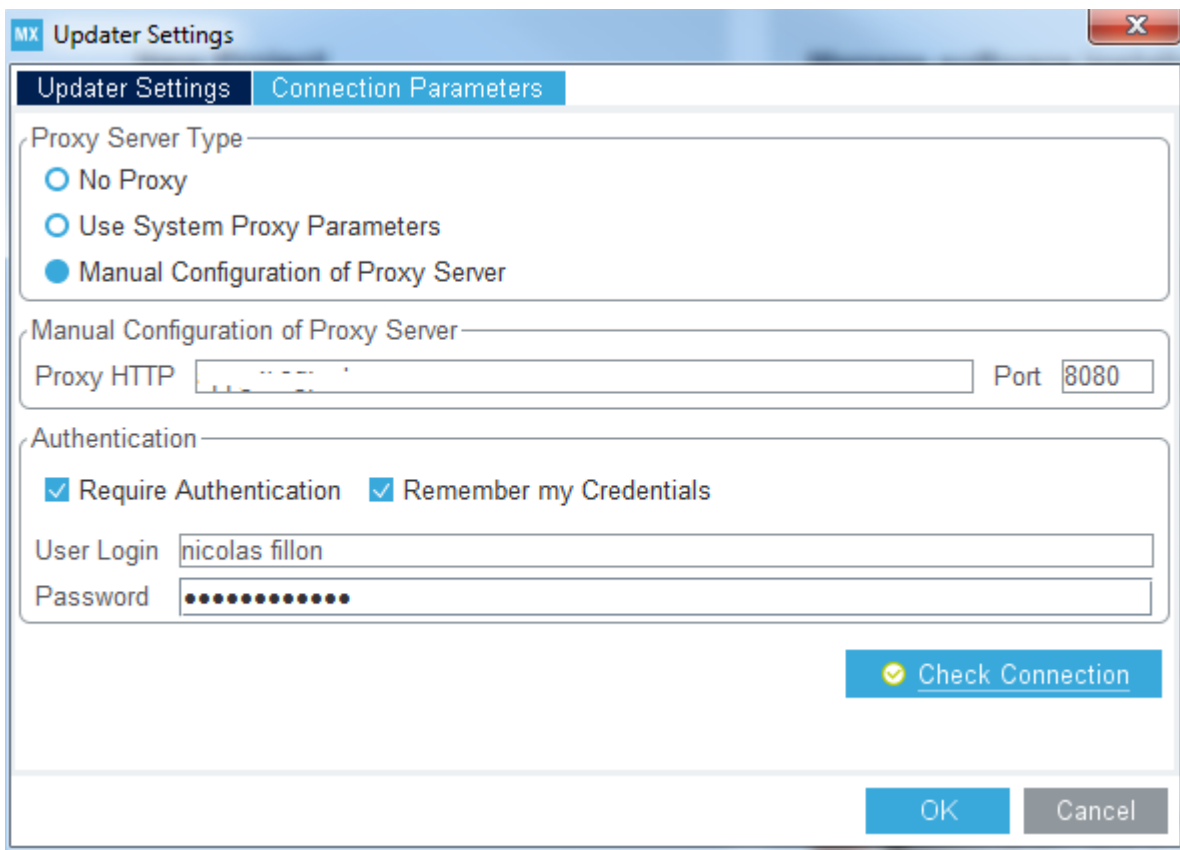

Note :For those behind a corporate firewall or having issue with installing the Cube Library from the internet, you can use “From local” to do an offline install of the STM32CubeG0 Library, the offline installation is explained in Appendix at the end of this document.


From STM32CubeMX: Help -> Manage embedded software packages

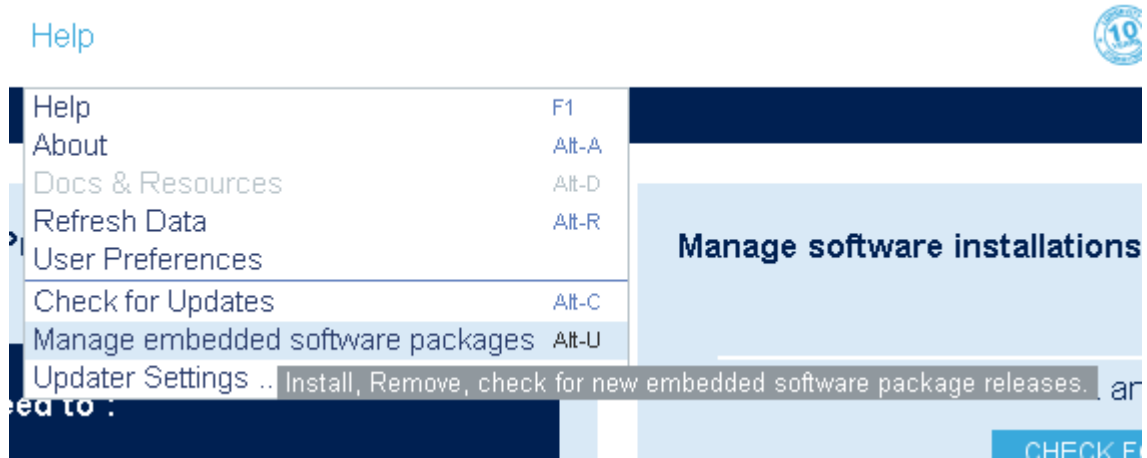

Click on Refresh:



Under STM32G0, expand then check the STM32 MCU Package for STM32G0 and click Install Now

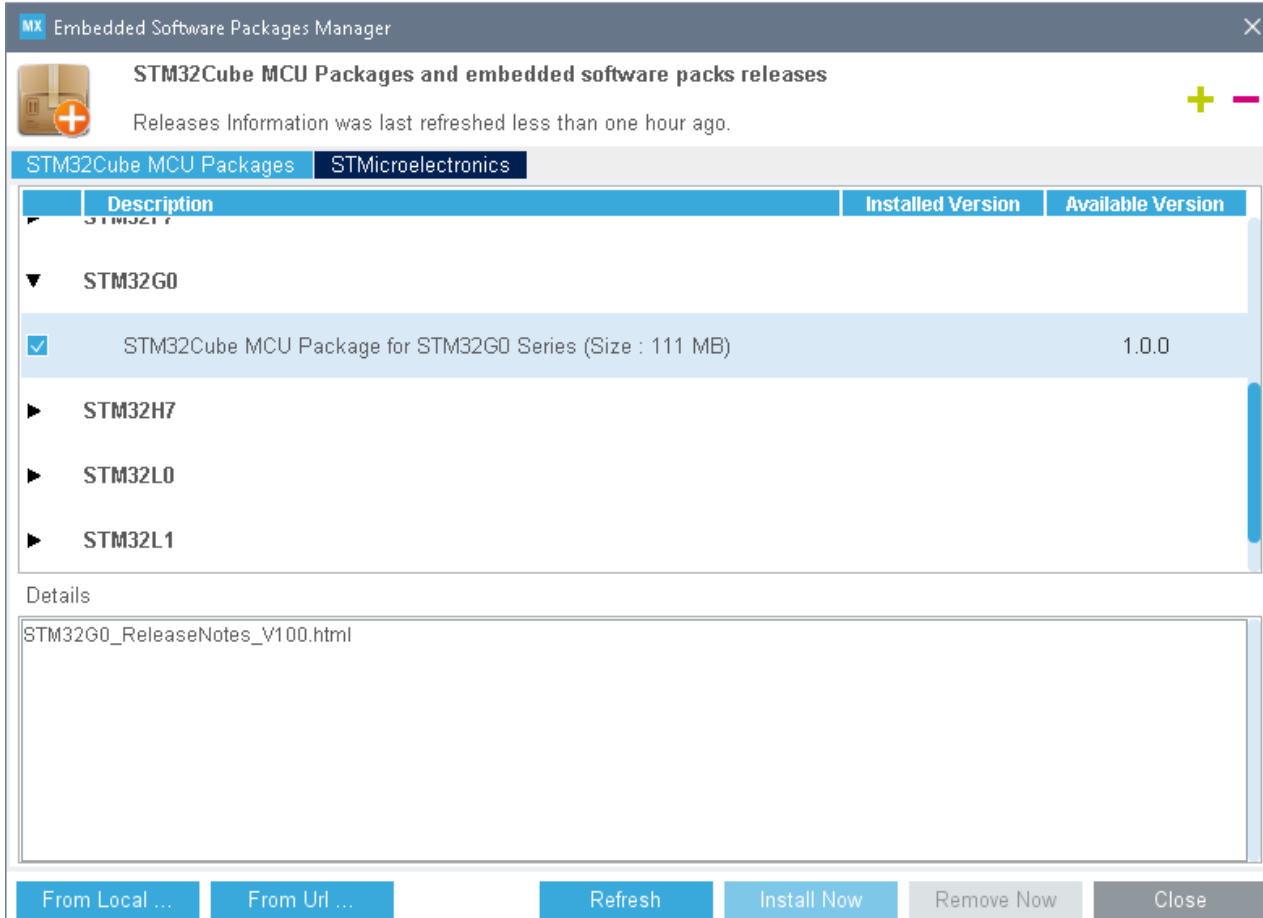

Embedded Software Packages Manager

STM32Cube MCU Packages and embedded software packs releases

Releases Information was last refreshed less than one hour ago.

STM32Cube MCU Packages | STMicroelectronics

Description	Installed Version	Available Version
STM32G0		
☒ STM32Cube MCU Package for STM32G0 Series (Size : 111 MB)		1.0.0
▶ STM32H7		
▶ STM32L0		
▶ STM32L1		

Details

STM32G0_ReleaseNotes_V100.html

From Local ... From Url ... Refresh Install Now Remove Now Close

Once installed it should look like this:

▼ STM32G0			
	STM32Cube MCU Package for STM32G0 Series	1.0.0	1.0.0

7- Tera Term: Terminal software


In one of the labs we use a Terminal application to display printf output, any Terminal Software can be used; however, Tera Term is recommended.

Click Link: [Tera Term](#)

Current version used: 4.101

Or use Direct Link to install:

<https://osdn.net/projects/ttssh2/downloads/70355/teraterm-4.101.exe/>

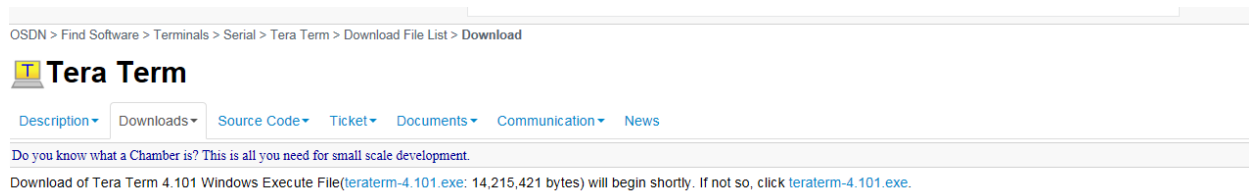


Click on:

[teraterm-4.101.exe](#).


Save teraterm-x.xxx.exe at your desired location:




Right click and Run as administrator

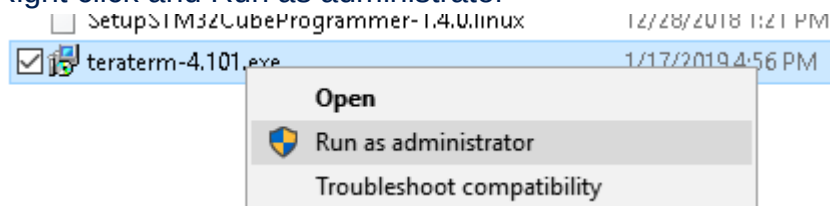


Accept and then click Next:

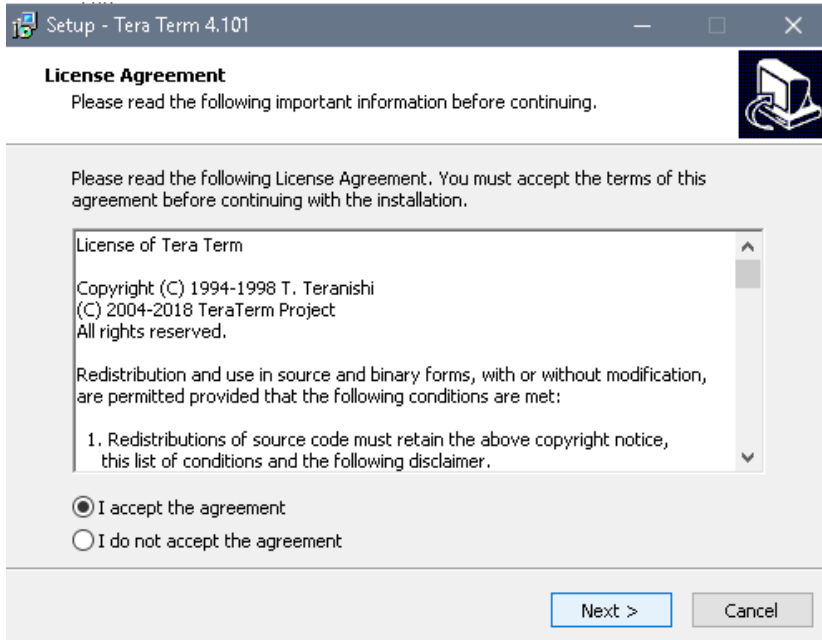


Keep the default settings and then click Next:

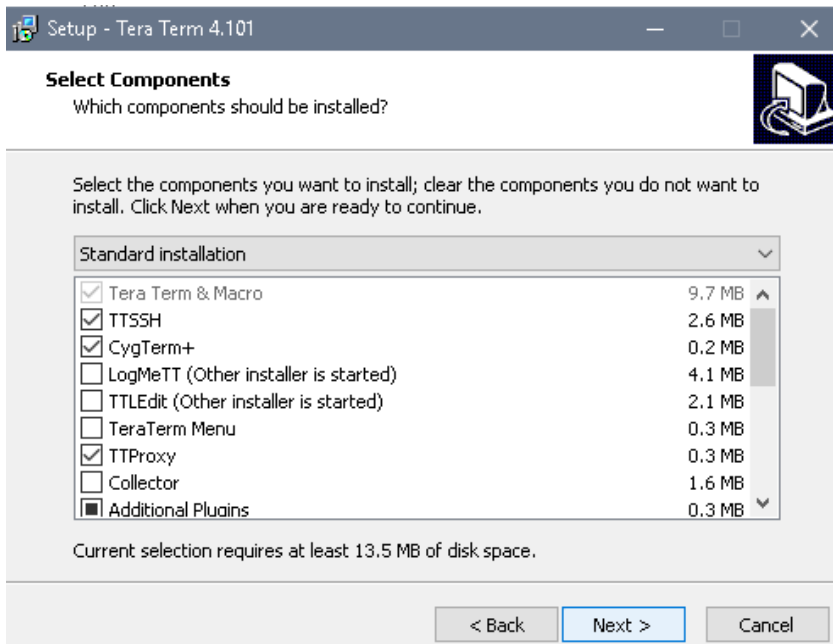


Select the language you want and then click Next:

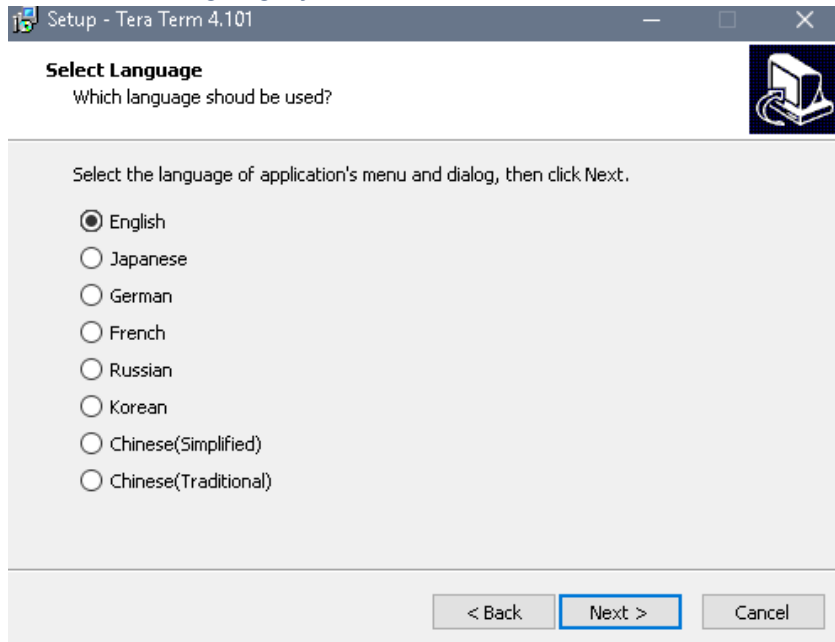


Keep the default settings and then click Next:

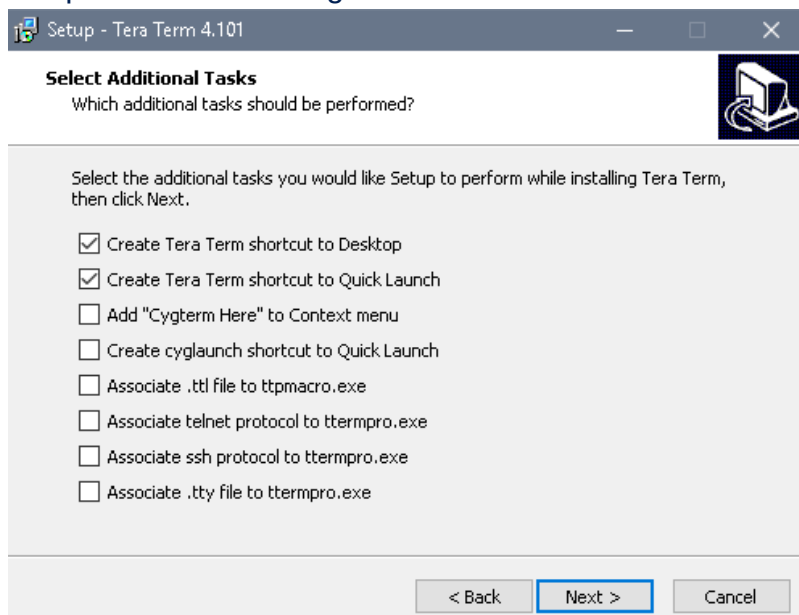

Click on Install:

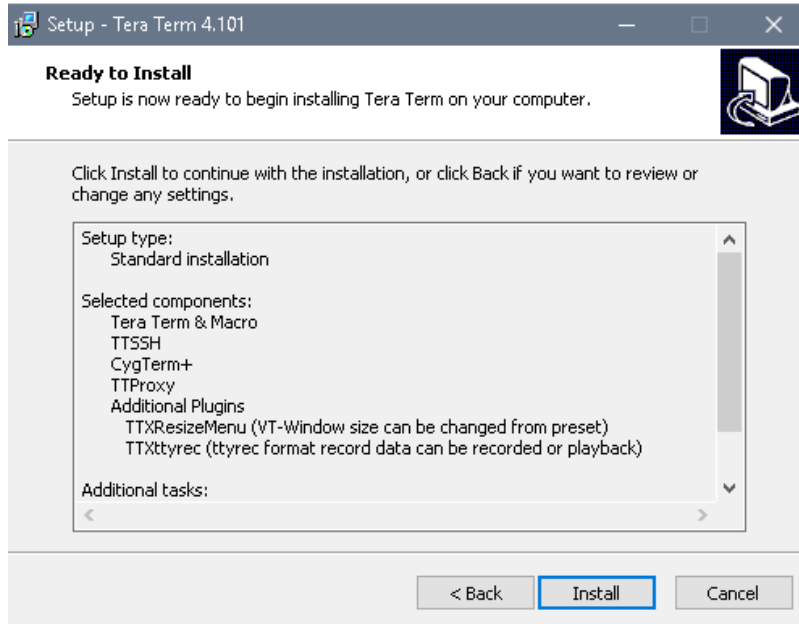


Click on Finish:

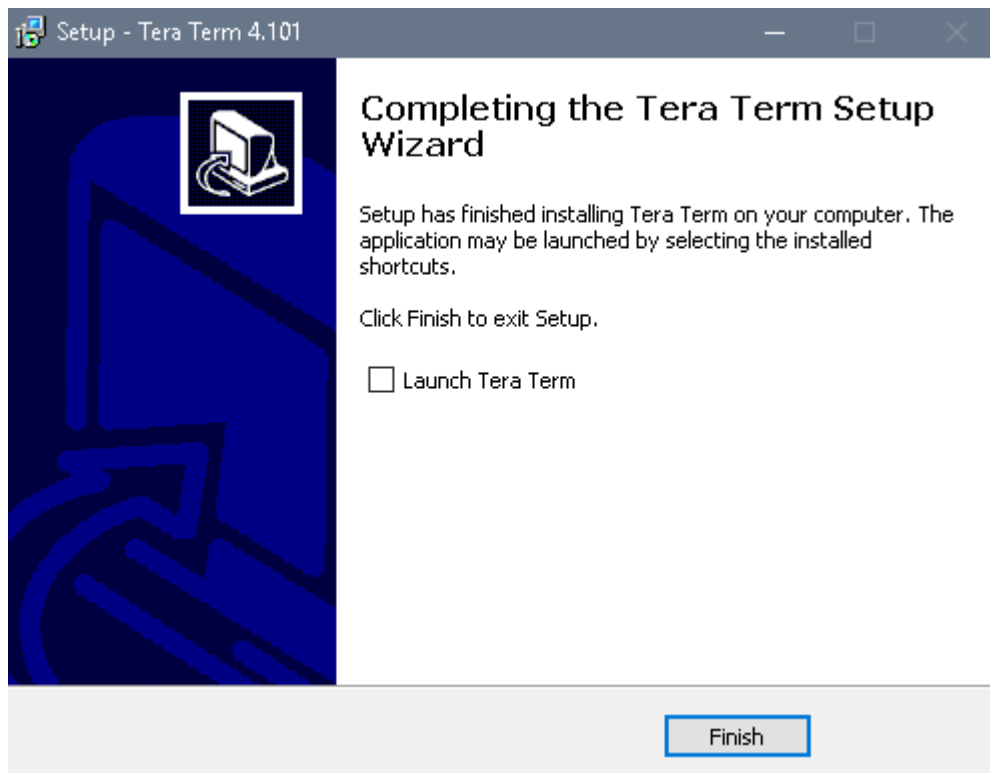

STM32G0 Workshop – Tool Validator


The tool called “STM32G0_Workshop_Tool_Validator.exe” will validate the installed software/software components/libraries that will be used in the Workshop. The Tool is included in the zip file “STM32G0_Workshop_Installation.zip”.

Launch the application “STM32G0_Workshop_Tool_Validator.exe” by Right clicking on the icon and Run as administrator:

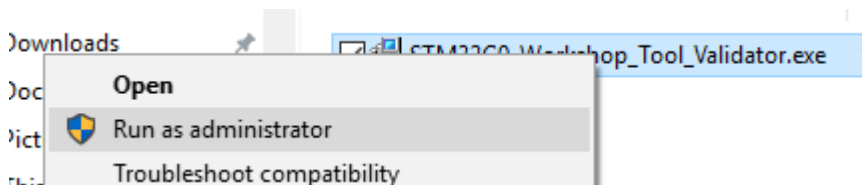

The tool will analyze your system and make sure that all the software/software components/libraries are installed correctly.

If the full install was successful you will see this:

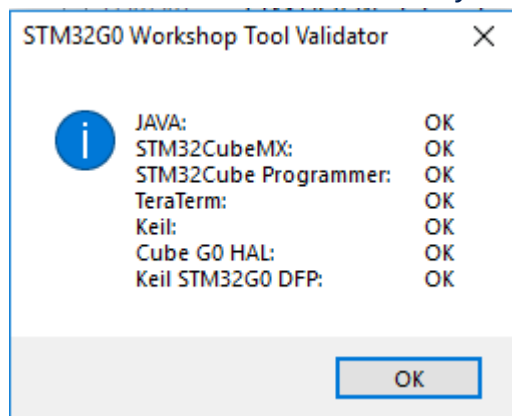


If you did not get all Oks please refer to the **important notes** on the next page.

All the software/software components/libraries above are marked as OK, meaning that the install was completed successfully.

If you don't see OK in every field that means that either the software, software component or the libraries were not installed properly, were not installed at all or that the wrong version was installed on your system. If it is marked other than OK, you will need to install or re-install by going back to the related procedure step(s) in this document.


If you still have issues with the install, please refer to the generated log report file (STM32G0_Workshop_Tools.txt) created on your Desktop by the Tool Validator:

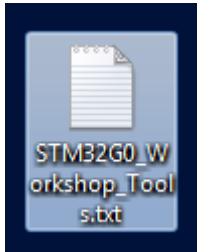

It provides more information about the install of the Workshop material that might be helpful to determine the issue.

Important notes about “STM32G0_Workshop_Tool_Validator v1.0.exe”: this is a basic application to help validate the tool installation. It has some limitations as follows:

1. When multiple instances of a tool are installed in different directories, the Tool Validator only checks the version of the one at the default path.
2. Versions other than v1.4.0 of the STM32CubeProgrammer are not detected and reported properly. If a version later than v1.4.0 is installed in addition to v1.4.0, the Tool Validator will only detect and report v1.4.0. The workshop requires v1.4.0 or later to be installed and used in the workshop.
3. Regarding the STM32CubeG0 Library, the Tool Validator is only able to detect and report if version 1.0.0 is installed. If version 1.0.0 is not installed and a newer version is (i.e. 1.1.0), the tool will report that the library is not installed. This message can be ignored as long as a newer version of the library is installed.
4. If you have installed STM32CubeProgrammer v2.0.0 and/or STM32CubeG0 Library v1.1.0 (Cube G0 HAL) you will get the following report when running the Tool Validator:

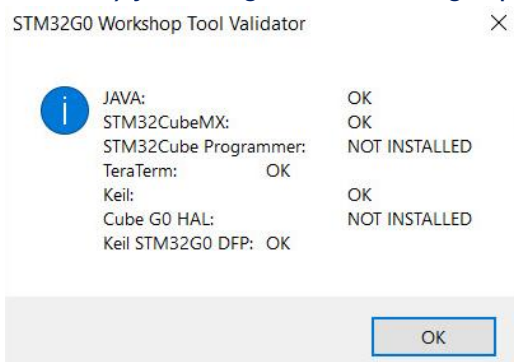

Do not worry about the “NOT INSTALLED” messages, this is known issue of the Tool Validator. So you should be fine for the Workshop.



If you still have issues please contact ST by entering an online support request (OLS) at:

<https://my.st.com/ols>

Enter a New Request and use “**STM32G0 Workshop Installation**” for the Subject.

Please describe in details the issue encountered and also attach the log file from the Tool Validator (STM32G0_Workshop_Tools.txt).

[Appendix: STM32CubeG0 Firmware Library offline installation](#)

You only need to do this step if you were not able to do install of the STM32CubeG0 from STM32CubeMX in the step 6 of this document.

For those behind a corporate firewall or having issue with installing the Cube Library, you can use “From local” to do an offline install as explained here:


Go to this link to download the STM32CubeG0 Library:

Click Link: [STM32CubeG0](#)

Minimum version required: 1.0.0

Or use Direct Link to install:

https://www.st.com/content/st_com/en/products/embedded-software/mcus-embedded-software/stm32-embedded-software/stm32cube-mcu-packages/stm32cubeg0.html

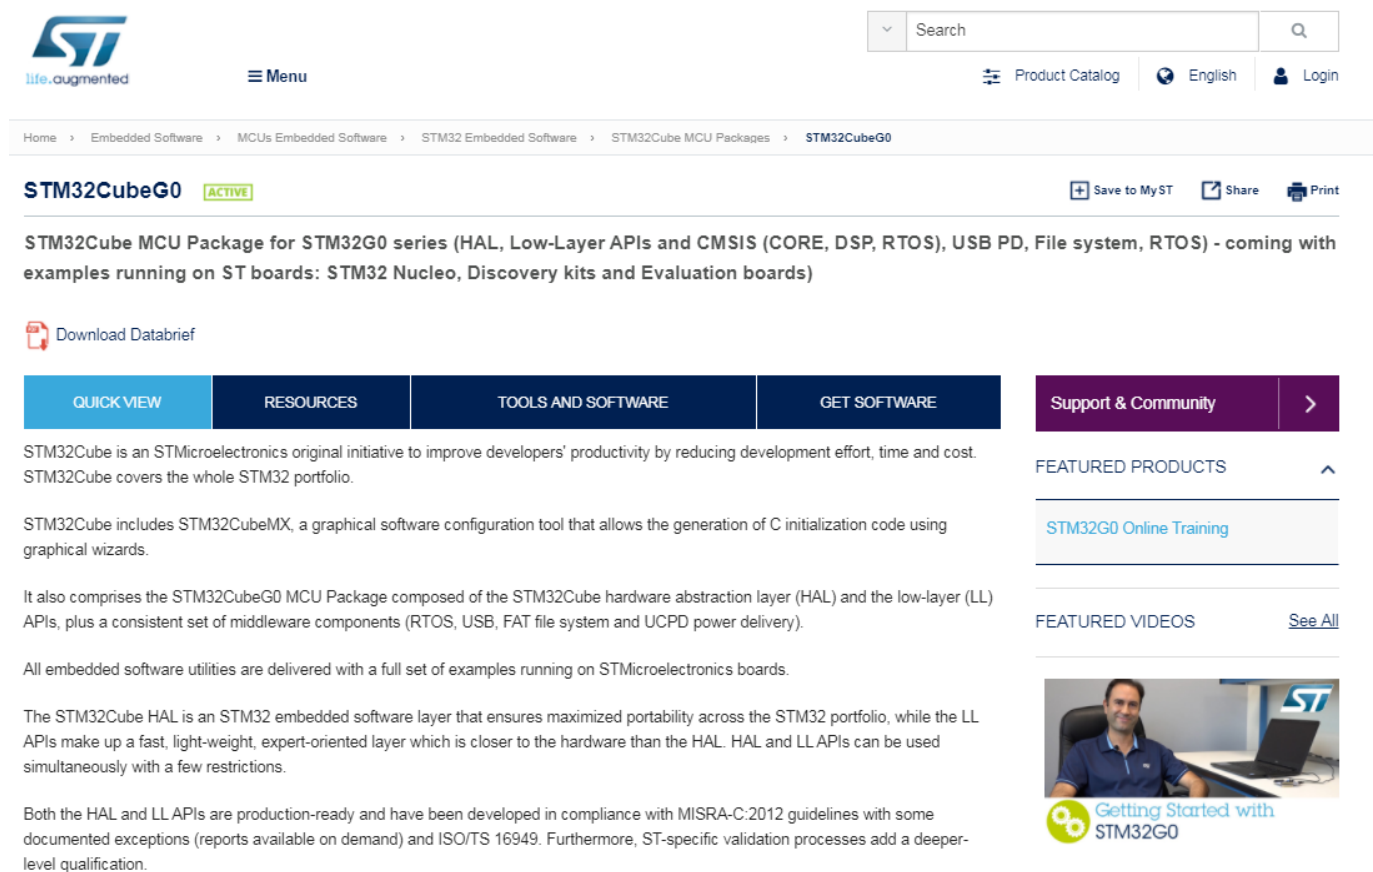

The screenshot shows the STM32CubeG0 product page on the ST website. The page header includes the ST logo, a search bar, and navigation links for Product Catalog, English, and Login. The breadcrumb trail indicates the path: Home > Embedded Software > MCUs Embedded Software > STM32 Embedded Software > STM32Cube MCU Packages > STM32CubeG0. The main heading is "STM32CubeG0" with an "ACTIVE" tag. Below this, a description states: "STM32Cube MCU Package for STM32G0 series (HAL, Low-Layer APIs and CMSIS (CORE, DSP, RTOS), USB PD, File system, RTOS) - coming with examples running on ST boards: STM32 Nucleo, Discovery kits and Evaluation boards)". A "Download Databrief" link is provided. A navigation bar includes "QUICK VIEW", "RESOURCES", "TOOLS AND SOFTWARE", and "GET SOFTWARE". The main content area describes the STM32Cube initiative, the STM32CubeMX tool, and the STM32CubeG0 MCU Package. A sidebar on the right contains "Support & Community", "FEATURED PRODUCTS" (with a link to "STM32G0 Online Training"), and "FEATURED VIDEOS" (with a link to "See All"). A video thumbnail titled "Getting Started with STM32G0" is also visible.

STM32CubeG0 ACTIVE Save to My ST Share Print

STM32Cube MCU Package for STM32G0 series (HAL, Low-Layer APIs and CMSIS (CORE, DSP, RTOS), USB PD, File system, RTOS) - coming with examples running on ST boards: STM32 Nucleo, Discovery kits and Evaluation boards)

 Download Databrief

QUICK VIEW **RESOURCES** **TOOLS AND SOFTWARE** **GET SOFTWARE**

STM32Cube is an STMicroelectronics original initiative to improve developers' productivity by reducing development effort, time and cost. STM32Cube covers the whole STM32 portfolio.

STM32Cube includes STM32CubeMX, a graphical software configuration tool that allows the generation of C initialization code using graphical wizards.

It also comprises the STM32CubeG0 MCU Package composed of the STM32Cube hardware abstraction layer (HAL) and the low-layer (LL) APIs, plus a consistent set of middleware components (RTOS, USB, FAT file system and UCPD power delivery).

All embedded software utilities are delivered with a full set of examples running on STMicroelectronics boards.

The STM32Cube HAL is an STM32 embedded software layer that ensures maximized portability across the STM32 portfolio, while the LL APIs make up a fast, light-weight, expert-oriented layer which is closer to the hardware than the HAL. HAL and LL APIs can be used simultaneously with a few restrictions.

Both the HAL and LL APIs are production-ready and have been developed in compliance with MISRA-C:2012 guidelines with some documented exceptions (reports available on demand) and ISO/TS 16949. Furthermore, ST-specific validation processes add a deeper-level qualification.

Support & Community >

FEATURED PRODUCTS ^

[STM32G0 Online Training](#)

FEATURED VIDEOS [See All](#)

 **Getting Started with STM32G0**

GET SOFTWARE

Click on:

GET SOFTWARE

Part Number	General Description	Software Version	Supplier	Marketing Status	Download
STM32CubeG0	STM32Cube MCU Package for STM32G0 series (HAL, Low-Layer APIs and CMSIS (CORE, DSP, RTOS), USB PD, File system, RTOS) - coming with examples running on ST boards: STM32 Nucleo, Discovery kits and Evaluation boards)	1.0.0	ST	Active	Get Software

Get Software

Click on:

RESOURCES

TOOLS AND SOFTWARE

GET SOFTWARE

X

License Agreement

ACCEPT

Please indicate your acceptance or NON-acceptance by selecting "I ACCEPT" or "I DO NOT ACCEPT" as indicated below in the media.

BY INSTALLING COPYING, DOWNLOADING, ACCESSING OR OTHERWISE USING THIS SOFTWARE PACKAGE OR ANY PART THEREOF (AND THE RELATED DOCUMENTATION) FROM STMICROELECTRONICS INTERNATIONAL N.V, SWISS BRANCH AND/OR ITS AFFILIATED COMPANIES (STMICROELECTRONICS), THE RECIPIENT, ON BEHALF OF HIMSELF OR HERSELF, OR ON BEHALF OF ANY ENTITY BY WHICH SUCH RECIPIENT IS EMPLOYED AND/OR ENGAGED AGREES TO BE BOUND BY THIS SOFTWARE PACKAGE LICENSE AGREEMENT.

ACCEPT

Click on:

RESOURCES

TOOLS AND SOFTWARE

GET SOFTWARE

X

Get Software

If you have an account on my.st.com, login and download the software without any further validation steps.

Login/Register

If you don't want to login now, you can download the software by simply providing your name and e-mail address in the form below and validating it.

This allows us to stay in contact and inform you about updates of this software.

For subsequent downloads this step will not be required for most of our software.

First Name:

Last Name:

E-mail address:

☐ I have read and understood the [Sales Terms & Conditions](#), [Terms of Use](#) and [Privacy Policy](#)

ST (as data controller according to the Privacy Policy) will keep a record of my navigation history and use that information as well as the personal data that I have communicated to ST for marketing purposes relevant to my interests. My personal data will be provided to ST affiliates and distributors of ST in countries located in the European Union and outside of the European Union for the same marketing purposes [READ MORE >>](#)

I understand that I can withdraw my consent at any time through opt-out links embedded in communication I receive or by managing my account settings. I can also exercise other user's rights at any time as described in the Privacy Policy.

Download

itions | Privacy Policy | Contacts

There are 3 ways of getting the software:

Login/Register

If you have an ST account click on:

Login/Register

If you don't have one, create one by clicking on:

If you don't have an account and don't want to create one, fill in the information below:

First Name:

Last Name:

E-mail address:

Click on the check box:

☒ I have read and understood the [Sales Terms & Conditions](#), [Terms of Use](#) and [Privacy Policy](#)

ST (as data controller according to the Privacy Policy) will keep a record of my navigation history and use that information as well as the personal data that I have communicated to ST for marketing purposes relevant to my interests. My personal data will be provided to ST affiliates and distributors of ST in countries located in the European Union and outside of the European Union for the same marketing purposes [READ MORE >>](#)

Download

Then click:


Save the file en.stm32cubeg0.zip at a location of your choice:




en.stm32cubeg0.zip
112/112 MB

In STM32CubeMX : Help -> Manage embedded software packages


Help

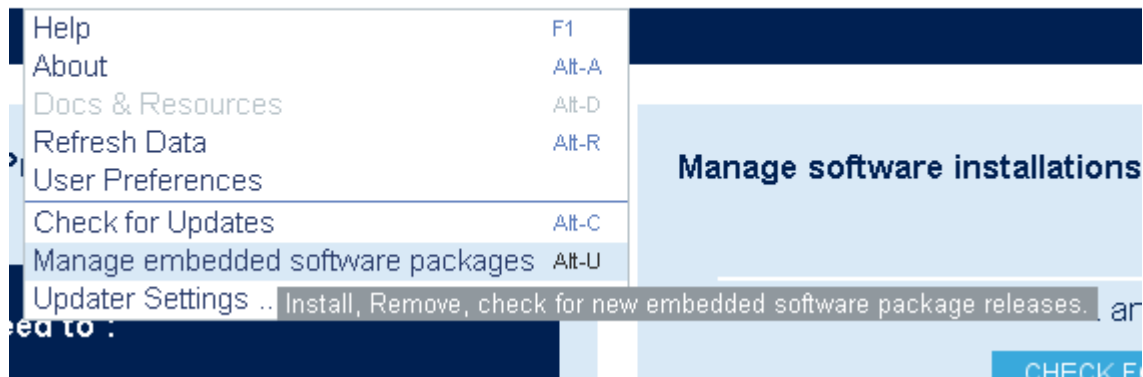

Click : From Local... :

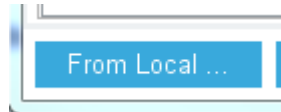

Point to the en.stm32cubeg0.zip file that you have downloaded:

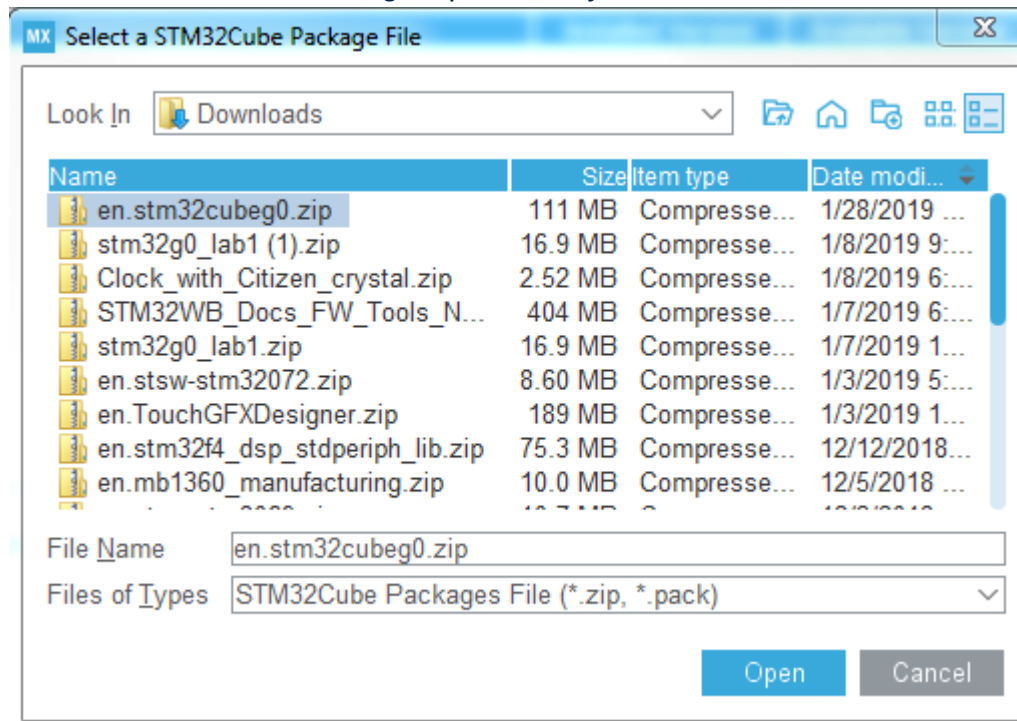

This will install the Cube Library for the STM32G0 at the correct location for you.
At the end when the install is complete you will see this:

▼	STM32G0		
■	STM32Cube MCU Package for STM32G0 Series	1.0.0	1.0.0