

Installation Procedure (v1.0)

Workshop: **STM32H5: Ultimate combination of performance, integration, and affordability**

Please follow all the installation steps below before the Workshop.

Workshop – Requirements

Important:

You need to have administration rights to be able to install drivers and software and to do the workshop.

System requirements:

Windows® (10 or later, 64 bits (x64)), macOS® (12 – Monterey, or 13 – Ventura), or Linux® (Ubuntu® LTS 20.04 and 22.04, and Fedora® 36). Please see the STM32CubeIDE installation guide for more details, it can be found at:

(https://www.st.com/resource/en/user_manual/um2563-stm32cubeide-installation-guide-stmicroelectronics.pdf)

Minimum Hardware Requirements:

- Two USB ports (one used for the debugger and the other one for the USB hands-on exercise)
- Two USB Type-A to Type-C Cables will be provided at the in-person workshops (see important notes below).
- 4 GB of system memory (RAM)
- 7 GB of available disk space

Important Notes:

1. For machines with only USB Type-C ports, please bring two Type-C to Type-C cables or a USB hub (Type-C upstream connection) with at least two Type-A downstream ports.
2. Make sure the system's USB ports to be used in the workshop are enabled.

STM32H5 Workshop - Installation Procedure – Introduction:

The following Software/Tools/Libraries are needed for the Workshop:

1. **STM32CubeIDE**: version 1.13.1 minimum required, if you have a previous version you will need to install a new version as explained in this installation procedure.
 - [Page 4](#)
2. **STM32CubeH5**: version 1.1.1 minimum required, if you have a previous version you will need to install a new one as explained in this installation procedure.
 - [Page 12](#)
3. **STM32CubeProgrammer**: version 2.14.0 minimum required, if you have a previous version you will need to install a new version as explained in this installation procedure.
 - [Page 17](#)
4. **Presentation and code to use during the workshop**: It can be found in a downloadable zip file mentioned on the page below.
 - [Page 27](#)

Note, the above-mentioned are available from ST personnel at the workshop on a shared USB flash drive in case you had trouble downloading and installing from the internet. They are in a Tools folder included in the zip file.

Appendix A: STM32CubeH5 Firmware Library Offline installation: This is only needed at an in-person workshop when the tools were not previously installed and must be from the files provided on a shared USB flash drive.

- [Page 28](#)

Notes:

- 1- Some of the versions of the software and libraries on the ST website might have newer versions than the version seen in the document, please use the latest version from the links provided in the installation procedure below.**
- 2- The instructions and screenshots are specific to tools versions specified above, the layout and appearance might change with version but the procedural steps for the workshop would remain the same.**
- 3- The instructions and screenshots are specific to a Windows® based system.**
- 4- The look of the website may change but the links provided in this document remain the same.**

The installation procedure can take several hours for downloading and installing based on the speed of the internet connection and performance of the computer system.

Questions and support ahead of the workshop

1. If you have issues during the software download and install, contact ST by entering an Online Support Request for workshops at <https://ols.st.com/s/newcase?o=ws> to help resolve the issue.
2. In the Workshop/Event Description field, select:
“STM32H5: Ultimate combination of performance, integration, and affordability”
3. To ensure your request is quickly routed to the correct support team, please indicate the Workshop Request Type, either Technical or Non-Technical, that best describes your question.

STM32H5 Workshop - Installation Procedure

For the Workshop installation please follow the steps below:

1- STM32CubeIDE: STM32Cube initialization code generator


Click Link: [STM32CubeIDE](#)

Minimum version to be installed: 1.13.1

Or use Direct Install Link:

<https://www.st.com/en/development-tools/stm32cubeide.html>

In the web browser, a similar page as follows will come up:

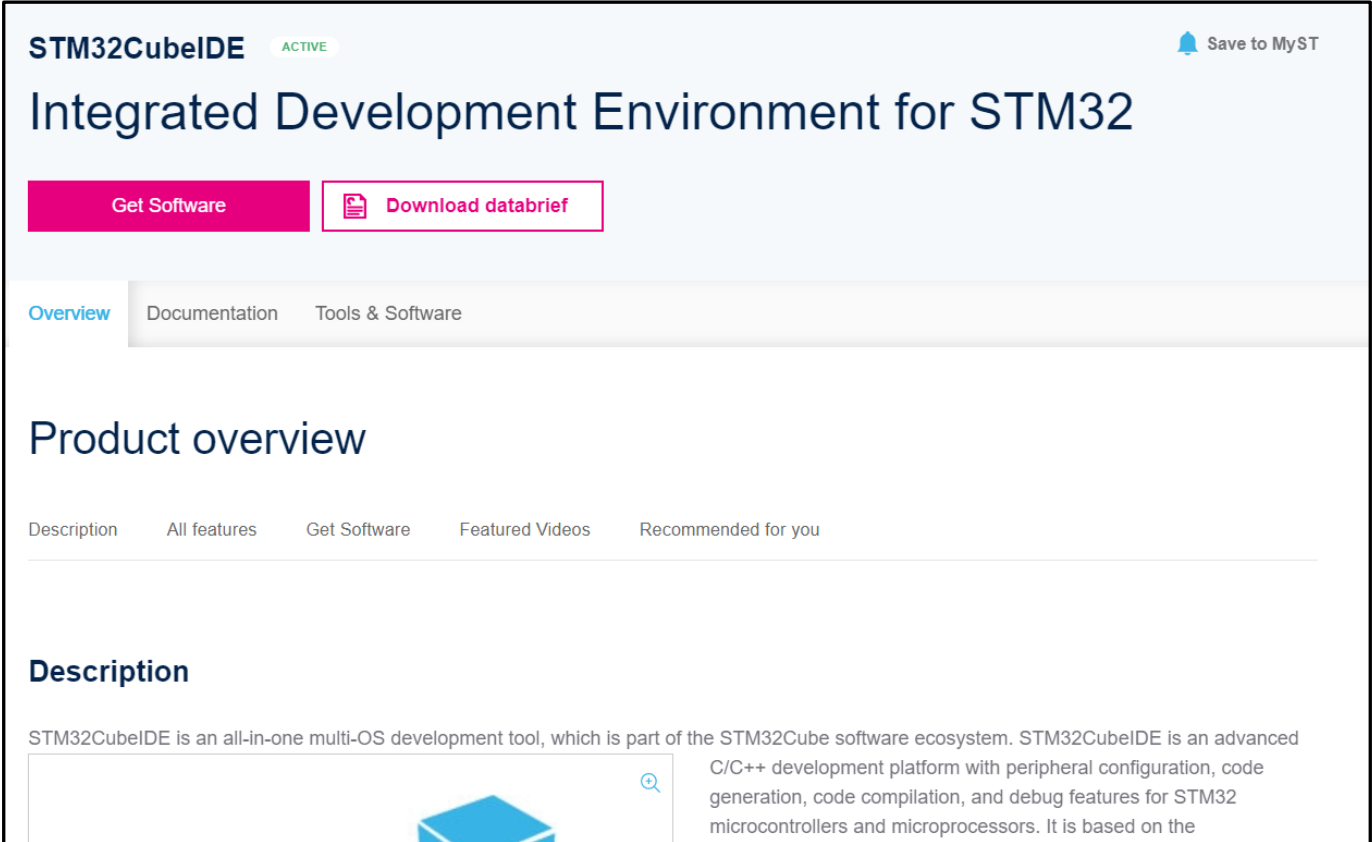

The screenshot shows the STM32CubeIDE product page. At the top, the title "STM32CubeIDE" is followed by a green "ACTIVE" badge. To the right is a "Save to MyST" button with a bell icon. Below the title is the subtitle "Integrated Development Environment for STM32". Two buttons are present: a blue "Get Software" button and a "Download databrief" button with a document icon. A navigation bar contains "Overview" (highlighted in blue), "Documentation", and "Tools & Software". The main heading is "Product overview". Below it is a horizontal menu with "Description", "All features", "Get Software", "Featured Videos", and "Recommended for you". The "Description" section is active, showing the text: "STM32CubeIDE is an all-in-one multi-OS development tool, which is part of the STM32Cube software ecosystem. STM32CubeIDE is an advanced C/C++ development platform with peripheral configuration, code generation, code compilation, and debug features for STM32 microcontrollers and microprocessors. It is based on the". A blue cube icon is partially visible at the bottom left.

Get Software

Click on “Get Software” button:

Click on “Get Latest” for the target operating system (shown below is for Windows):

+	STM32CubeIDE-Win	STM32CubeIDE Windows Installer	ST	Get latest	Select version ▼
---	------------------	--------------------------------	----	------------	------------------

When the following page appears:

×

License Agreement

ACCEPT

Please indicate your acceptance or NON-acceptance by selecting "I ACCEPT" or "I DO NOT ACCEPT" as indicated below in the media.

BY INSTALLING COPYING, DOWNLOADING, ACCESSING OR OTHERWISE USING THIS SOFTWARE PACKAGE OR ANY PART THEREOF (AND THE RELATED DOCUMENTATION) FROM STMICROELECTRONICS INTERNATIONAL N.V, SWISS BRANCH AND/OR ITS AFFILIATED COMPANIES (STMICROELECTRONICS), THE RECIPIENT, ON BEHALF OF HIMSELF OR HERSELF, OR ON BEHALF OF ANY ENTITY BY WHICH SUCH RECIPIENT IS EMPLOYED AND/OR ENGAGED AGREES TO BE BOUND BY THIS SOFTWARE PACKAGE LICENSE AGREEMENT.

Under STMicroelectronics' intellectual property rights and subject to applicable licensing terms for any third-party software incorporated in this software package and applicable Open Source Terms (as defined here below), the redistribution, reproduction and use in source and binary forms of the software package or any part thereof, with or without modification, are permitted provided that the following conditions are met:

1. Redistribution of source code (modified or not) must retain any copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form, except as embedded into microcontroller or microprocessor device manufactured by or for STMicroelectronics or a software update for such device, must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of STMicroelectronics nor the names of other contributors to this software package may be used to endorse or promote products derived from this software package or part thereof without specific written permission.
4. This software package or any part thereof, including modifications and/or derivative works of this software package, must be used and execute solely and exclusively on or in combination with a microcontroller or a microprocessor devices manufactured by or for STMicroelectronics.
5. No use, reproduction or redistribution of this software package partially or totally may be done in any manner that would subject this software package to any Open Source Terms (as defined below).
6. Some portion of the software package may contain software subject to Open Source Terms (as defined below) applicable for each such portion ("Open Source Software"), as further specified in the software package. Such Open Source Software is supplied under the applicable Open Source Terms and is not subject to the terms and conditions of license hereunder. "Open Source Terms" shall mean any open source license which requires as part of distribution of software that the source code of such software is distributed therewith or otherwise made available, or open source license that substantially complies with the Open Source definition specified at www.opensource.org and any other comparable open source license such as for example GNU General Public License (GPL), Eclipse Public License (EPL), Apache Software License, BSD license and MIT license.

Click on:

ACCEPT

×

Get Software

If you have an account on my.st.com, login and download the software without any further validation steps.

Login/Register

If you don't want to login now, you can download the software by simply providing your name and e-mail address in the form below and validating it.

This allows us to stay in contact and inform you about updates of this software.

For subsequent downloads this step will not be required for most of our software.

First Name:

Last Name:

E-mail address:

Please review our [Privacy Statement](#) that describes how we process your profile information and how to assert your personal data protection rights

☐ Please keep me informed about future updates for this software or new software in the same category

Download

There are 3 ways of getting the software:

Login/Register

If you have an ST account, click on:

Login/Register

If you don't have one, create one by clicking on:

If you don't have an account and don't want to create one, fill in the information below:


First Name:	
Last Name:	
E-mail address:	

Please review our [Privacy Statement](#) that describes how we process your profile information and how to assert your personal data protection rights


The software will automatically download in your browser.

Get Software

If not click “Get Software”

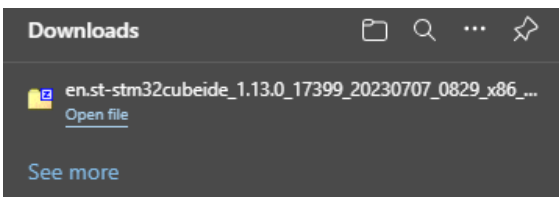


Unzip the file (en.st-stm32cubeide_x.x.x_xxxx.zip) and you will see this:

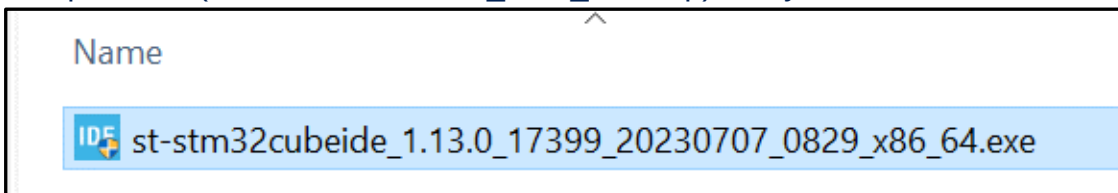


Note: you may see a newer version in your case than the screenshot above.


Right Click on 'st-stm32cubeide_x.x.x_yyy_x86_64.exe' (x.x.x is the version number) and click on 'Run as administrator':

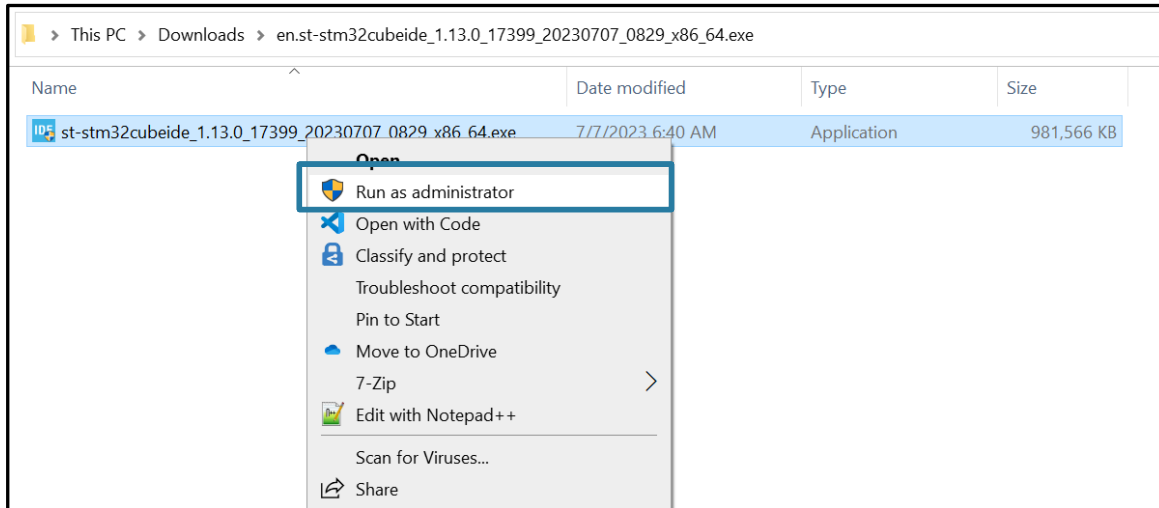


Press "Next":

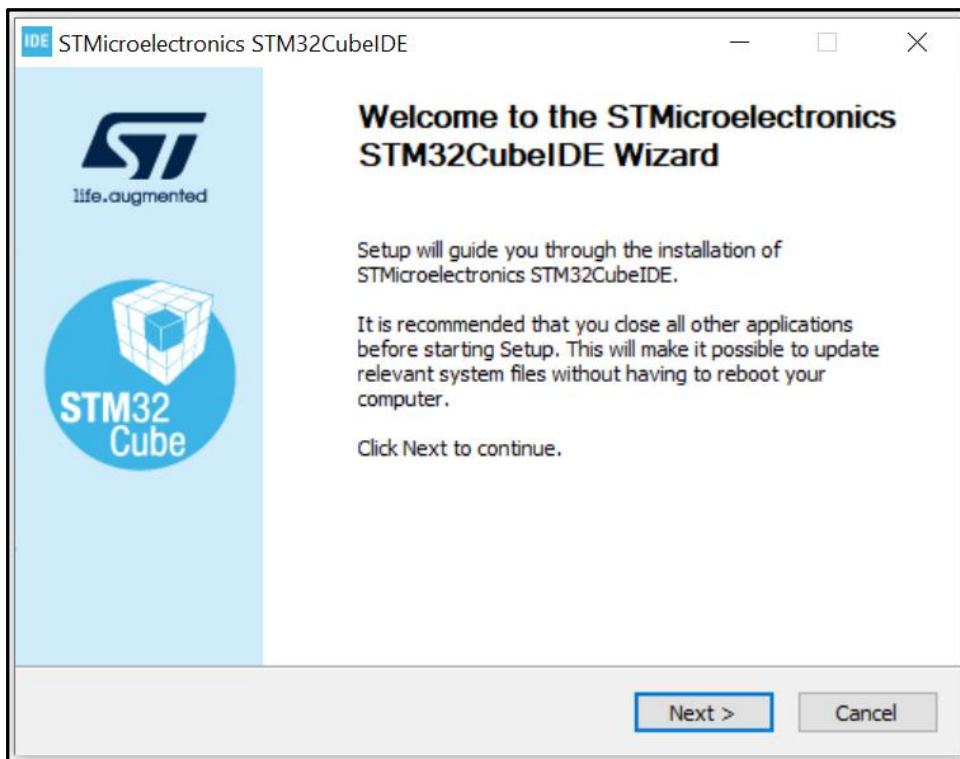


Press “I agree”:

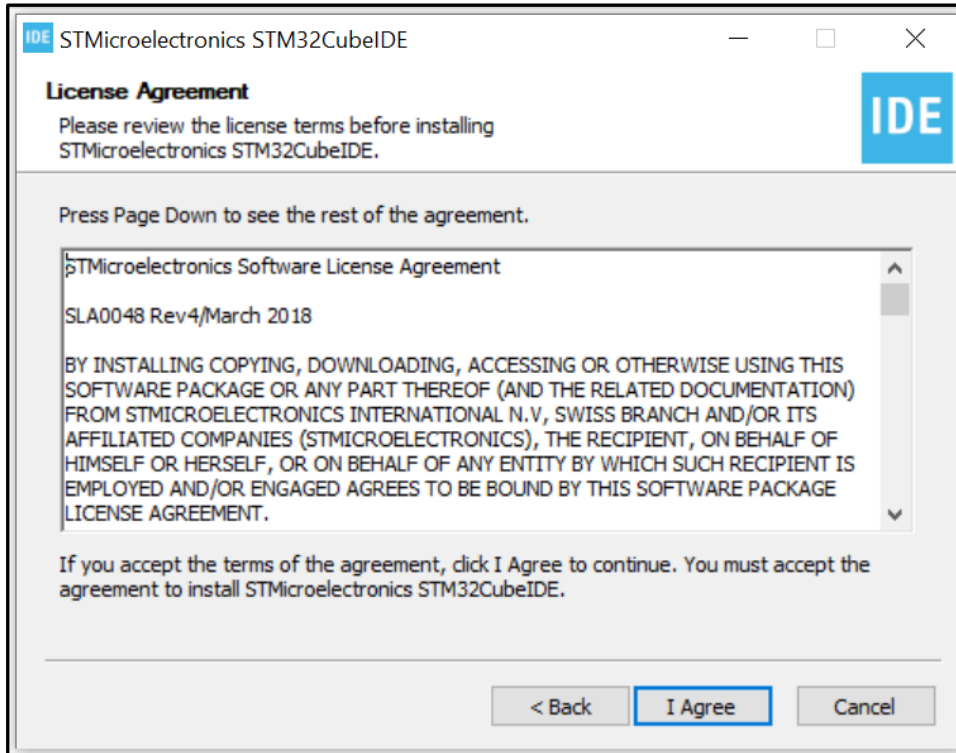


Use the default Destination Folder - press “Next”:

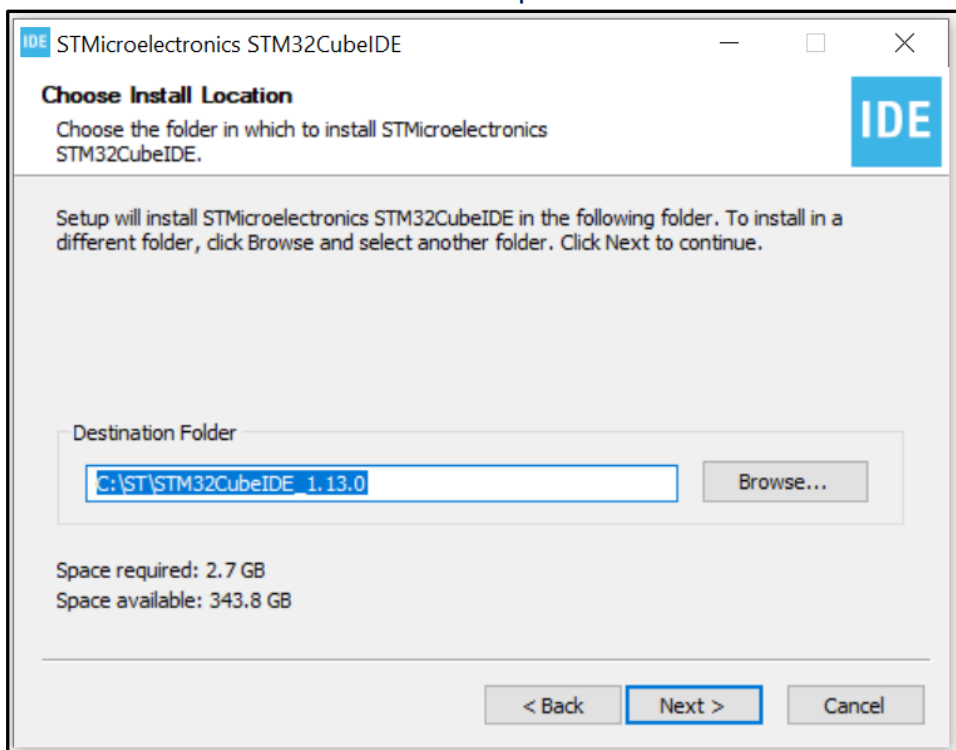


Press: “Install”

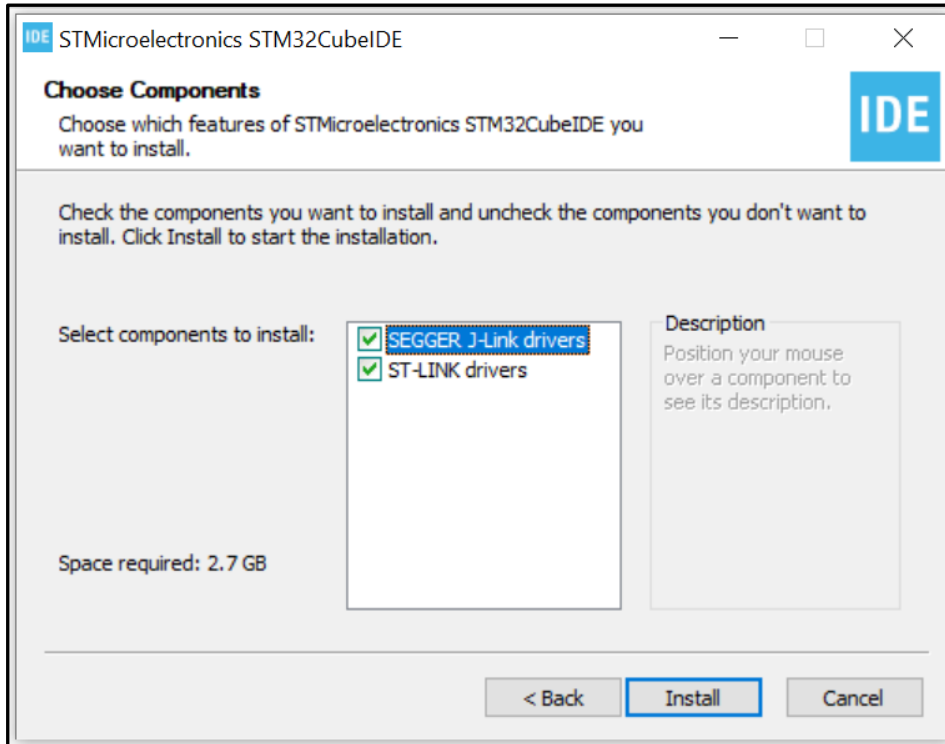

Wait for the install to complete and then press “Next”:

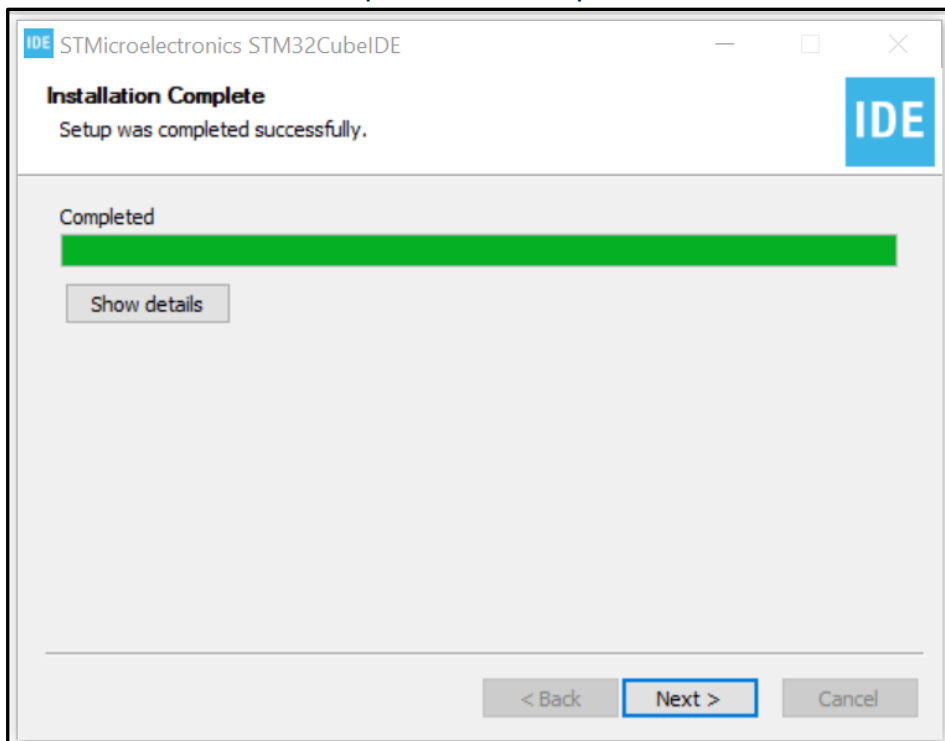


Press “Finish”

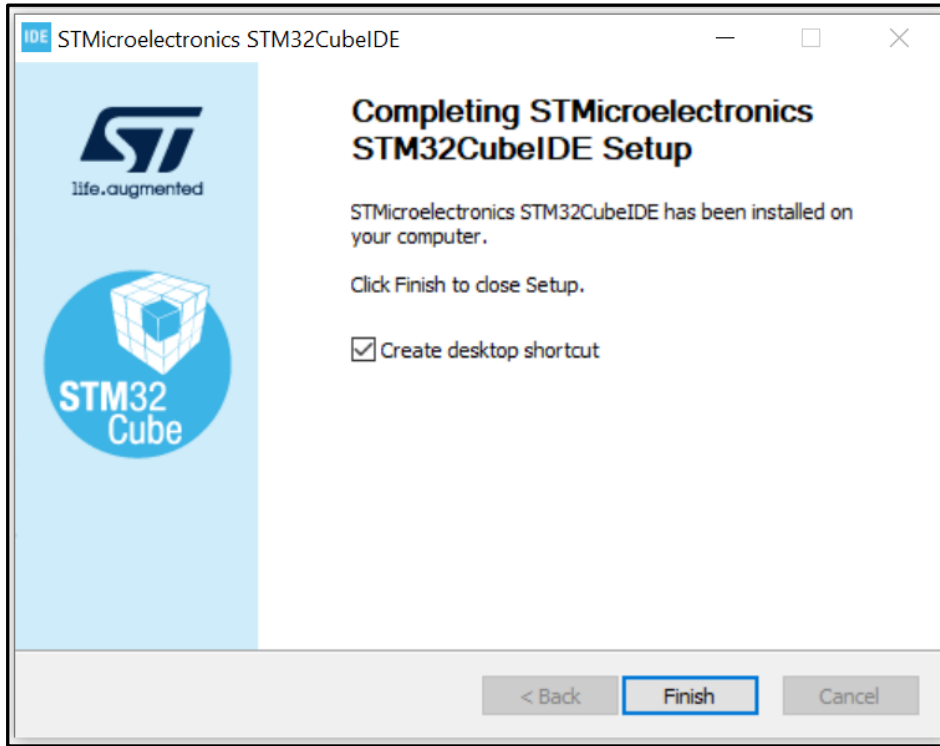


2- STM32CubeH5: Install STM32Cube MCU Package for STM32H5 series


Double click on STM32CubeIDE icon or look for it in your Start Menu:

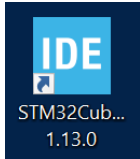

Click Launch:

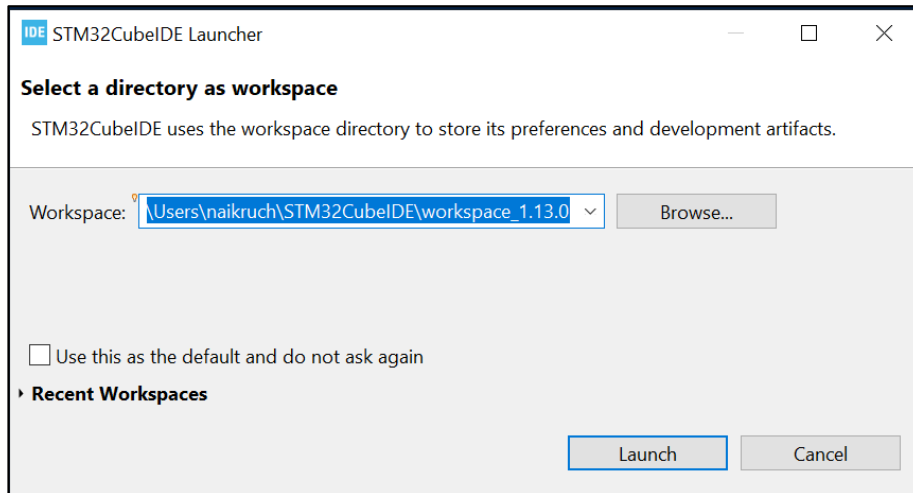

Make your choice for the Usage Statistics Agreement:

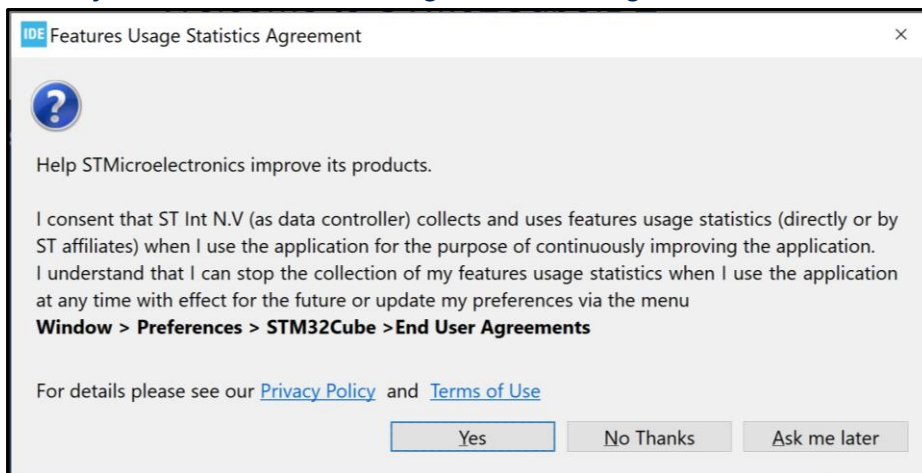


Note: For those behind a corporate firewall or having issue with installing the Cube Library from the internet, you can use “From local” to do an offline install of the STM32CubeH5 Library. More information can be found in the [Appendix](#) Section.

Note: Before installing the package, make sure you are logged-in to the STM32CubeIDE with your “myST” account. Follow the instructions below to log-in correctly.

Click on “myST”:

File Edit Source Refactor Navigate Search Project Run Window Help  myST

Follow the instructions in the prompt (shown below) to login to your myST user.

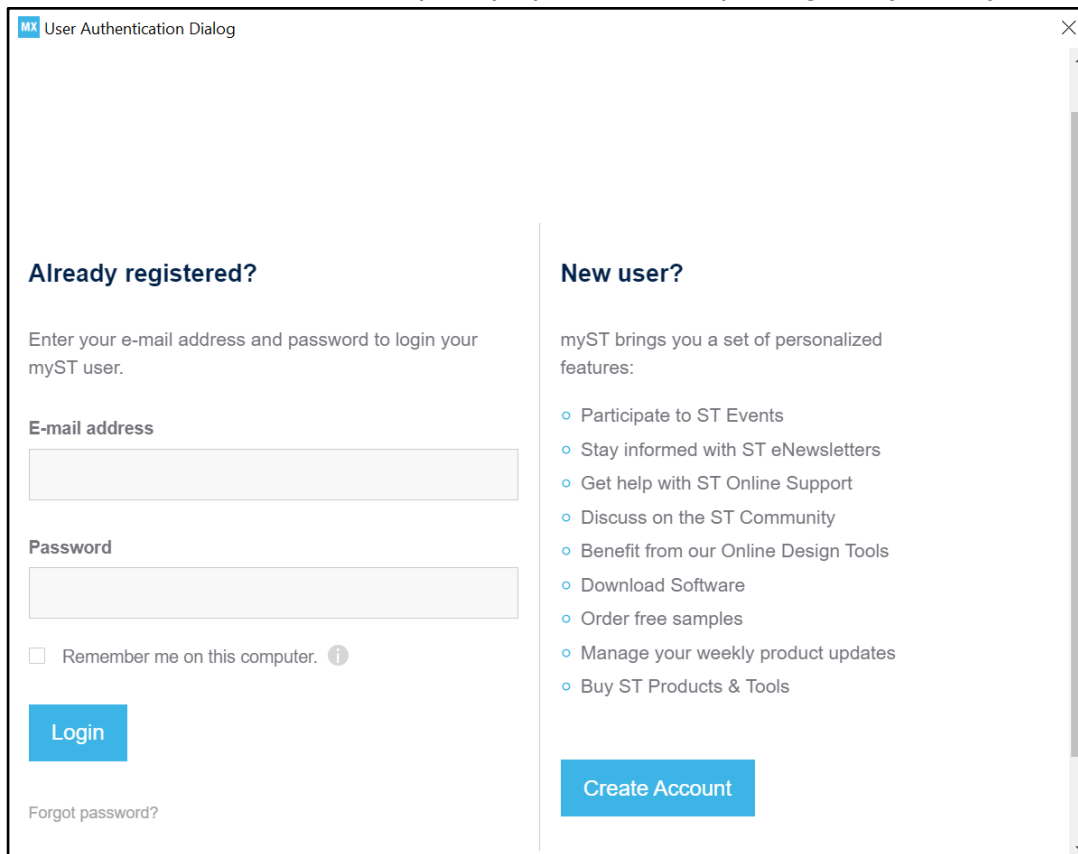

The screenshot shows a 'User Authentication Dialog' window. It is divided into two main sections: 'Already registered?' and 'New user?'. The 'Already registered?' section prompts the user to enter their e-mail address and password to login. It includes input fields for 'E-mail address' and 'Password', a checkbox for 'Remember me on this computer.', a 'Login' button, and a 'Forgot password?' link. The 'New user?' section lists features of the myST account, such as participating in ST events, staying informed with newsletters, getting help with online support, discussing on the ST community, benefiting from online design tools, downloading software, ordering free samples, managing weekly product updates, and buying ST products & tools. It includes a 'Create Account' button.

If you do not already have the myST account, click on “Create Account”:

Create Account

Enter the details as instructed by the prompt.

Accept the “Terms of Use” at the end of the prompt and click on “Register”.

Please review our [Privacy Statement](#) that describes how we process your profile information and how to assert your personal data protection rights

☐ I accept the [Terms of Use](#) *

Feedback

Register


Follow the instructions above to login with the newly created credentials.

After successfully logging-in, you can see a prompt as shown below:



Press 'OK' and we are ready to proceed further with the firmware package installation.


Once you are logged in, follow the instructions below to install the STM32CubeH5 Package.
From STM32CubeIDE: Help -> Manage embedded software packages:

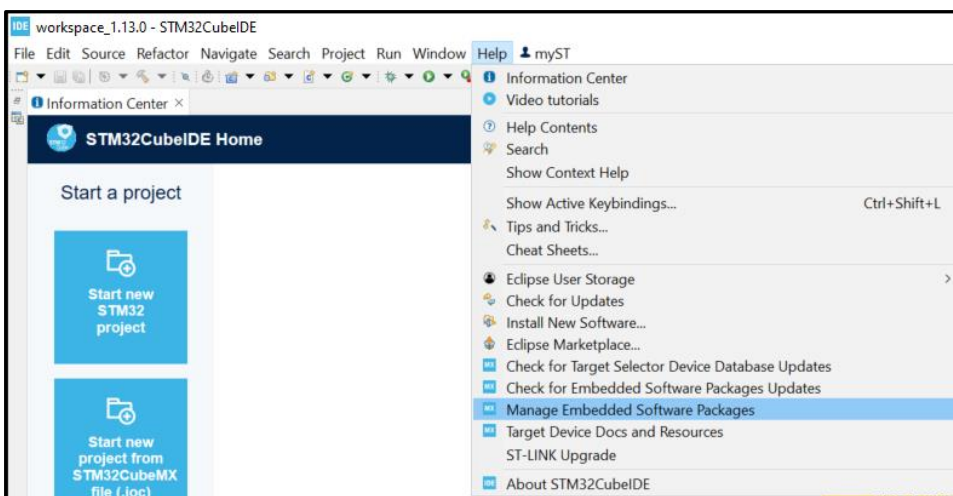

Click on "Refresh":



Under STM32H5, expand then check the **latest** STM32 MCU Package for STM32H5 and click “Install”:

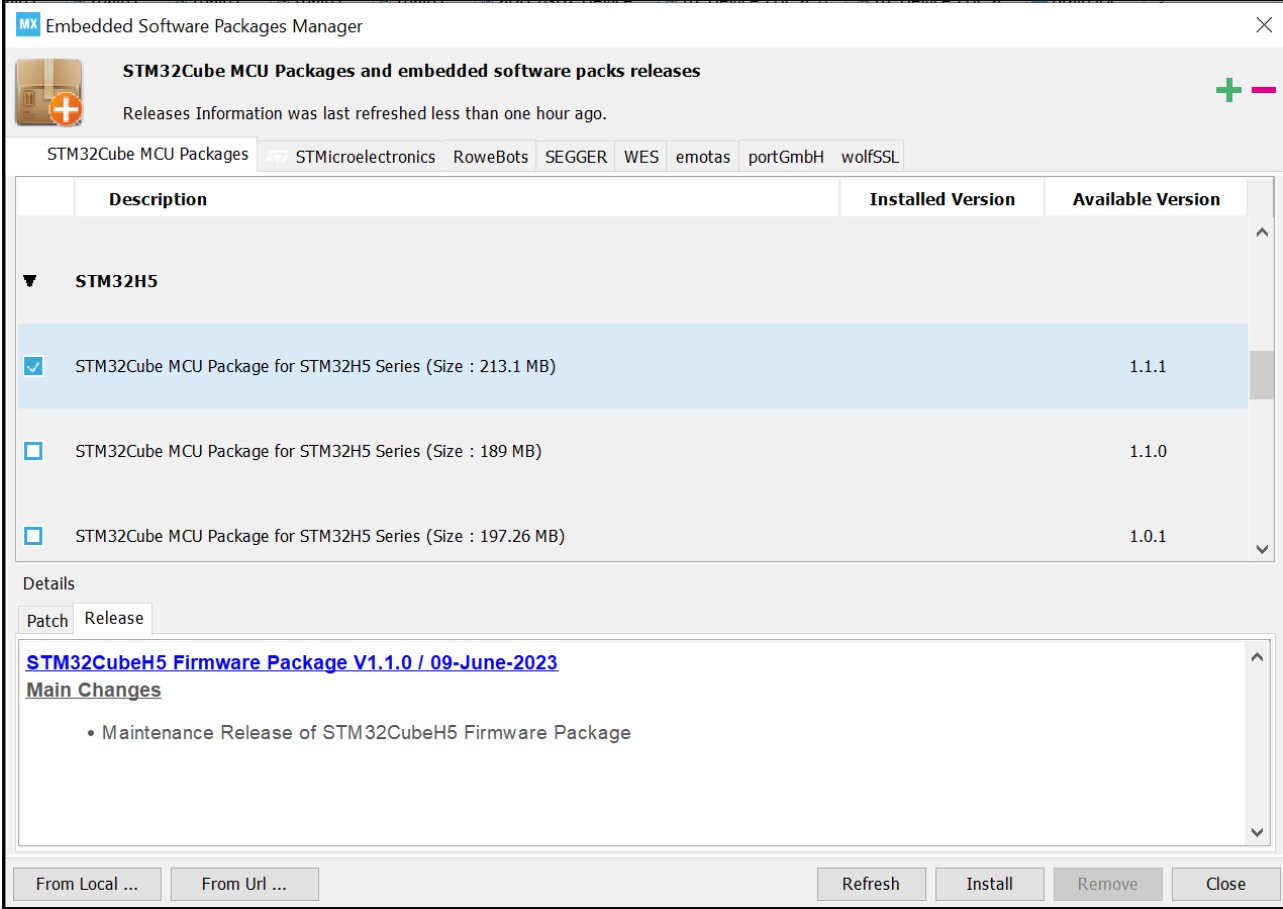

The screenshot shows the 'Embedded Software Packages Manager' window. The title bar reads 'MX Embedded Software Packages Manager'. The main content area is titled 'STM32Cube MCU Packages and embedded software packs releases'. Below this, there's a breadcrumb trail: 'STM32Cube MCU Packages > STMicroelectronics > RoweBots > SEGGER > WES > emotas > portGmbH > wolfSSL'. A table lists available packages for the 'STM32H5' category. The first package, 'STM32Cube MCU Package for STM32H5 Series (Size : 213.1 MB)', is selected with a checkmark and shows an available version of '1.1.1'. Below it are two other packages with versions '1.1.0' and '1.0.1'. A 'Details' section at the bottom shows the 'Release' tab selected, displaying the link 'STM32CubeH5 Firmware Package V1.1.0 / 09-June-2023' and a 'Main Changes' section with the text 'Maintenance Release of STM32CubeH5 Firmware Package'. At the bottom of the window are buttons for 'From Local ...', 'From Url ...', 'Refresh', 'Install', 'Remove', and 'Close'.

Description	Installed Version	Available Version
▼ STM32H5		
☒ STM32Cube MCU Package for STM32H5 Series (Size : 213.1 MB)		1.1.1
☐ STM32Cube MCU Package for STM32H5 Series (Size : 189 MB)		1.1.0
☐ STM32Cube MCU Package for STM32H5 Series (Size : 197.26 MB)		1.0.1

Details

Patch Release


[STM32CubeH5 Firmware Package V1.1.0 / 09-June-2023](#)

Main Changes


- Maintenance Release of STM32CubeH5 Firmware Package

From Local ... From Url ... Refresh Install Remove Close

Agree on the terms of this license agreement, by selecting “I have read, and I agree to the terms of this license agreement” and then press Finish.

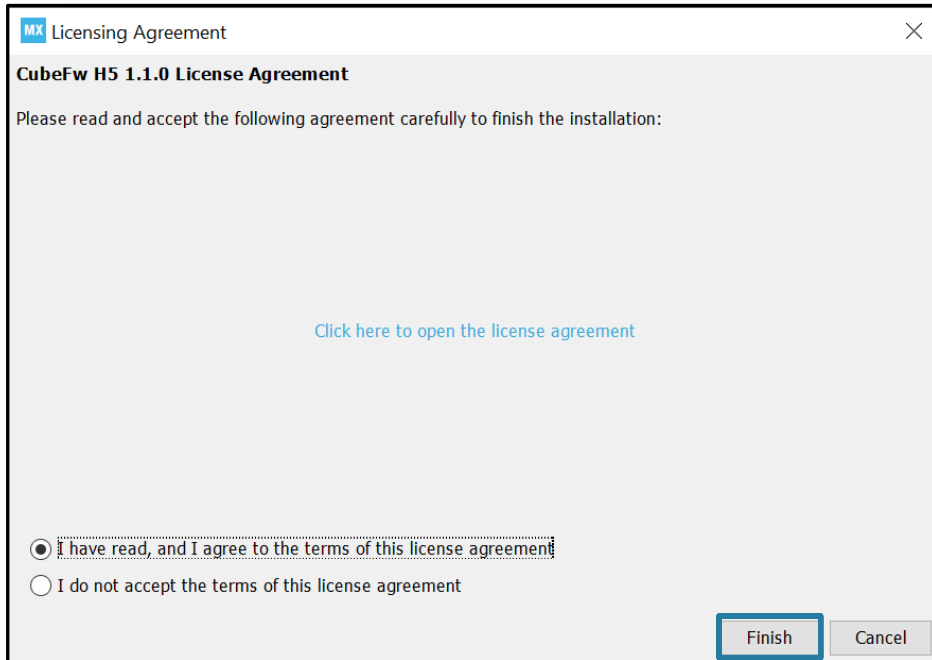

Once installed it should look like this and you can press “Close”:

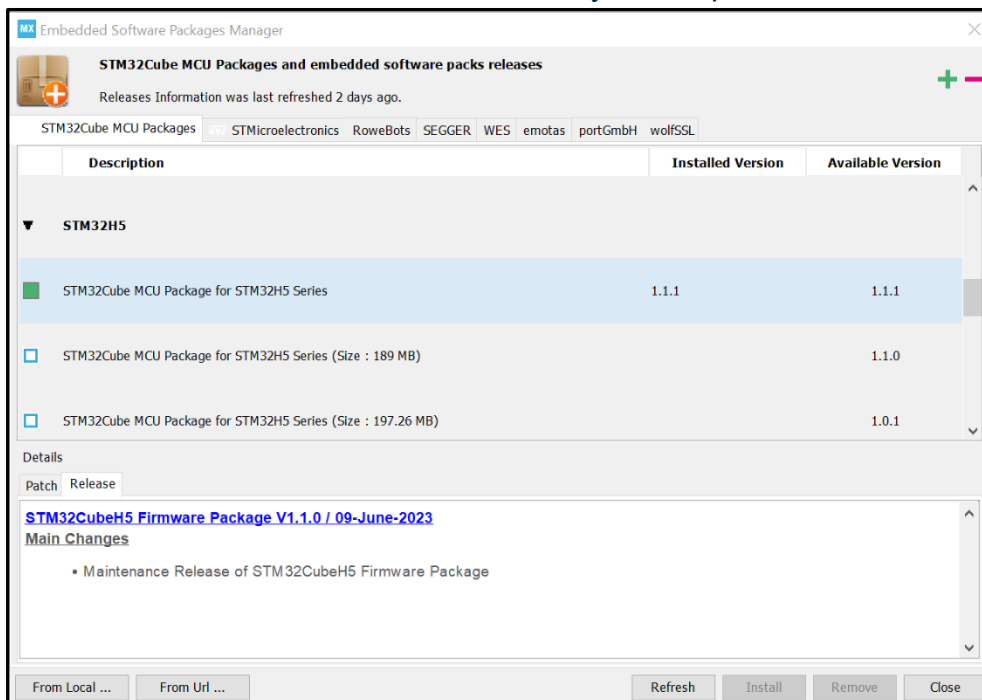

Note: In your system it might show a newer version depending on the latest version available

3 - STM32CubeProg: STM32CubeProgrammer software for programming STM32 products


Click Link: [STM32CubeProg](#)

Minimum version required: 2.14.0

Direct Install Link:

https://www.st.com/content/st_com/en/products/development-tools/software-development-tools/stm32-software-development-tools/stm32-programmers/stm32cubeprog.html

Note to Mac users, please check Appendix B on [page 36](#).

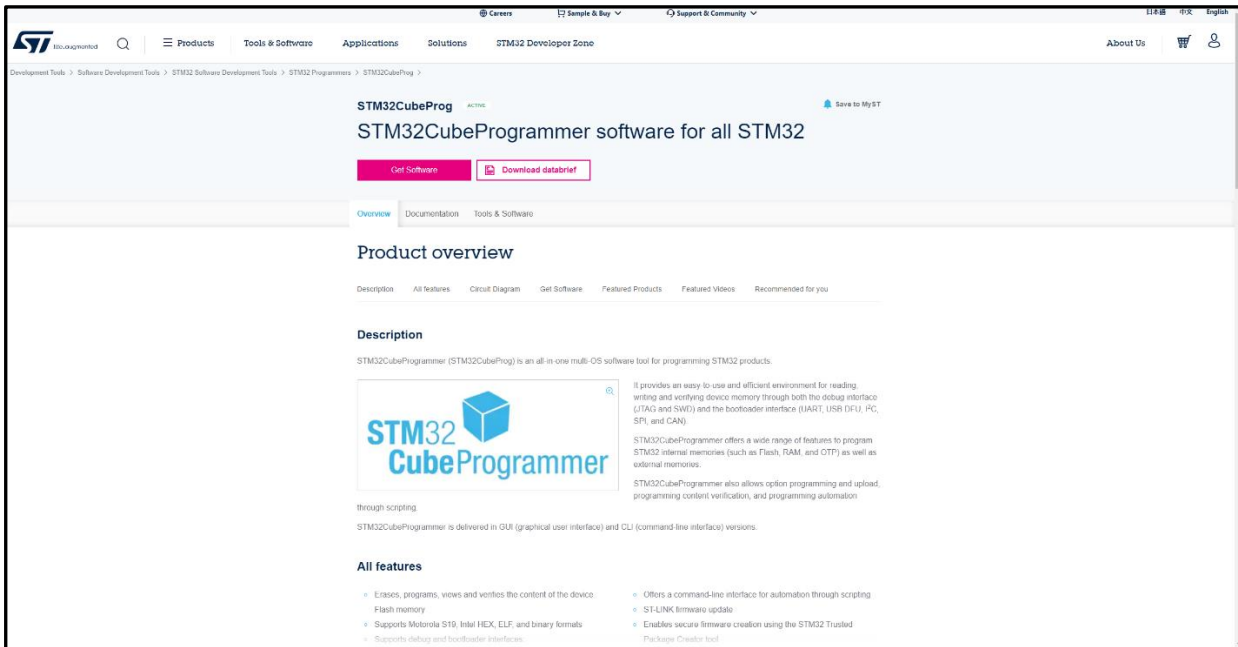

STM32CubeProg ACTIVE [Save to My ST](#)

STM32CubeProgrammer software for all STM32

[Get Software](#) [Download databrief](#)

[Overview](#) [Documentation](#) [Tools & Software](#)

Product overview

[Description](#) [All features](#) [Circuit Diagram](#) [Get Software](#) [Featured Products](#) [Featured Videos](#) [Recommended for you](#)

Description

STM32CubeProgrammer (STM32CubeProg) is an all-in-one multi-OS software tool for programming STM32 products.



It provides an easy-to-use and efficient environment for reading, writing and verifying device memory through both the debug interface (JTAG and SWD) and the bootloader interface (UART, USB DFU, PC, SPI, and CAN).

STM32CubeProgrammer offers a wide range of features to program STM32 internal memories (such as Flash, RAM, and OTP) as well as external memories.

STM32CubeProgrammer also allows option programming and upload, programming content verification, and programming automation through scripting.

STM32CubeProgrammer is delivered in GUI (graphical user interface) and CLI (command line interface) versions.

All features

- Erases, programs, views and verifies the content of the device Flash memory
- Supports Motorola S19, Intel HEX, ELF, and binary formats
- Supports device and bootloader interfaces
- Offers a command-line interface for automation through scripting
- ST-LINK firmware update
- Enables secure firmware creation using the STM32 Trusted Firmware (TrustZone)

[Get Software](#)

Click on:

Get Software					
	Part Number ▲	General Description	Latest version	Download	All versions
+	STM32CubePrg-Lin	STM32CubeProgrammer software for Linux	2.14.0	Get latest	Select version ▼
+	STM32CubePrg-Mac	STM32CubeProgrammer software for Mac	2.14.0	Get latest	Select version ▼
+	STM32CubePrg-W32	STM32CubeProgrammer software for Win32	2.14.0	Get latest	Select version ▼
+	STM32CubePrg-W64	STM32CubeProgrammer software for Win64	2.14.0	Get latest	Select version ▼

Please get the latest software version available that will be accessible by clicking on:

[Get latest](#)

×

License Agreement

ACCEPT

Please indicate your acceptance or NON-acceptance by selecting "I ACCEPT" or "I DO NOT ACCEPT" as indicated below in the media.

BY INSTALLING COPYING, DOWNLOADING, ACCESSING OR OTHERWISE USING THIS SOFTWARE PACKAGE OR ANY PART THEREOF (AND THE RELATED DOCUMENTATION) FROM STMICROELECTRONICS INTERNATIONAL N.V, SWISS BRANCH AND/OR ITS AFFILIATED COMPANIES (STMICROELECTRONICS), THE RECIPIENT, ON BEHALF OF HIMSELF OR HERSELF, OR ON BEHALF OF ANY ENTITY BY WHICH SUCH RECIPIENT IS EMPLOYED AND/OR ENGAGED AGREES TO BE BOUND BY THIS SOFTWARE PACKAGE LICENSE AGREEMENT.

Under STMicroelectronics' intellectual property rights and subject to applicable licensing terms for any third-party software incorporated in this software package and applicable Open Source Terms (as defined here below), the redistribution, reproduction and use in source and binary forms of the software package or any part thereof, with or without modification, are permitted provided that the following conditions are met:

ACCEPT

Click on:

×

Get Software

If you have an account on my.st.com, login and download the software without any further validation steps.

[Login/Register](#)

If you don't want to login now, you can download the software by simply providing your name and e-mail address in the form below and validating it.

This allows us to stay in contact and inform you about updates of this software.

For subsequent downloads this step will not be required for most of our software.

First Name:

Last Name:

E-mail address:

Please review our [Privacy Statement](#) that describes how we process your profile information and how to assert your personal data protection rights

☐ Please keep me informed about future updates for this software or new software in the same category

[Download](#)

There are 3 ways of getting the software:

If you have an ST account, click on: [Login/Register](#)

If you don't have one, create one by clicking on: [Login/Register](#)

If you don't have an account and don't want to create one, fill in the information below:

First Name:

Last Name:

E-mail address:

Please review our [Privacy Statement](#) that describes how we process your profile information and how to assert your personal data protection rights

Download


Then click:

Unzip the file (en.stm32cubeprg-win64-v2-14-0.zip)


This PC > Downloads >			
Name	Date modified	Type	Size
Today (4)			
en.st-stm32cubeide_1.13.0_17399_20230707_0829_x86_64.exe (1).zip	7/17/2023 12:04 PM	zip Archive	973,978 KB
en.stm32cubeide-v1-1-0.zip	7/17/2023 1:57 PM	zip Archive	194,538 KB
en.stm32cubeprg-win64-v2-14-0.zip	7/17/2023 2:22 PM	zip Archive	382,200 KB
en.stm32cubeprg-win64-v2-14-0	7/17/2023 2:26 PM	File folder	

Note: you may see a newer version in your case than the screenshot above.


Right Click on SetupSTM32CubeProgrammer-win64.exe and Run as administrator.

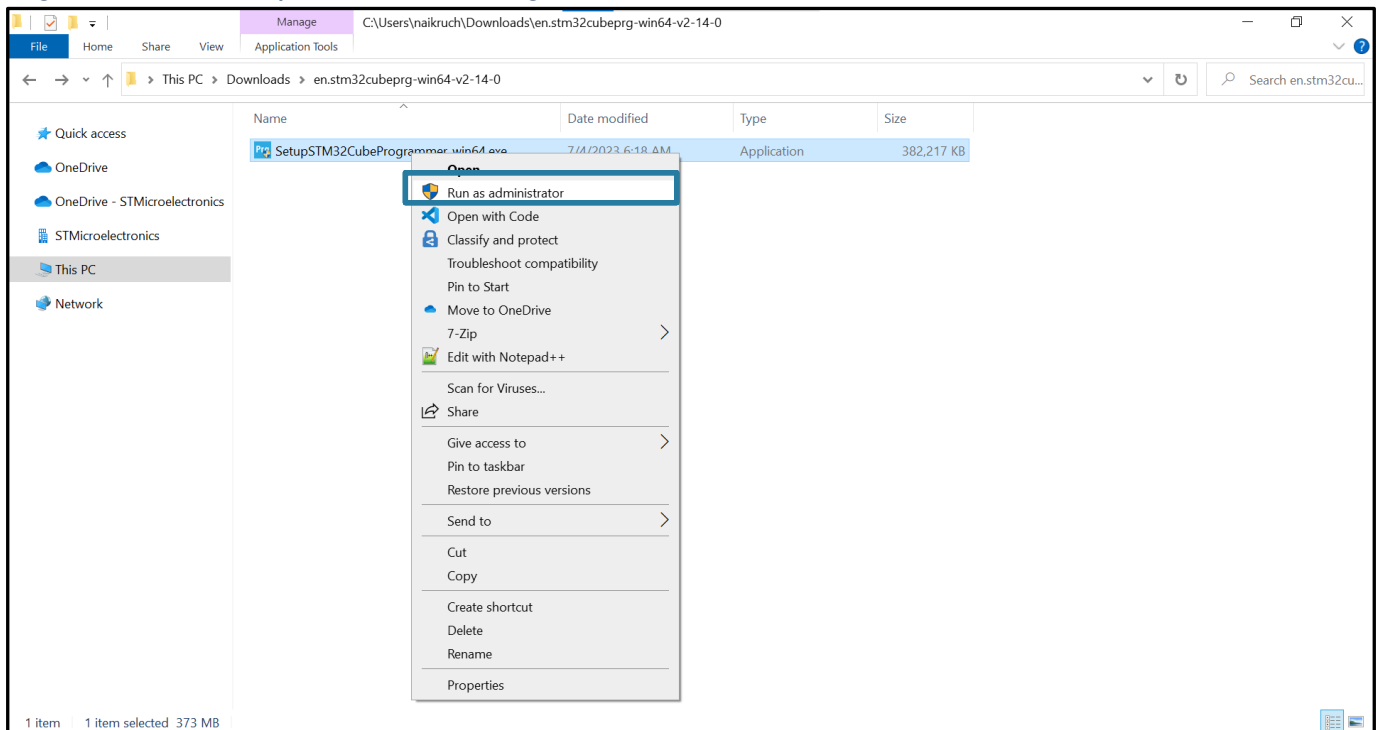


Press Next:

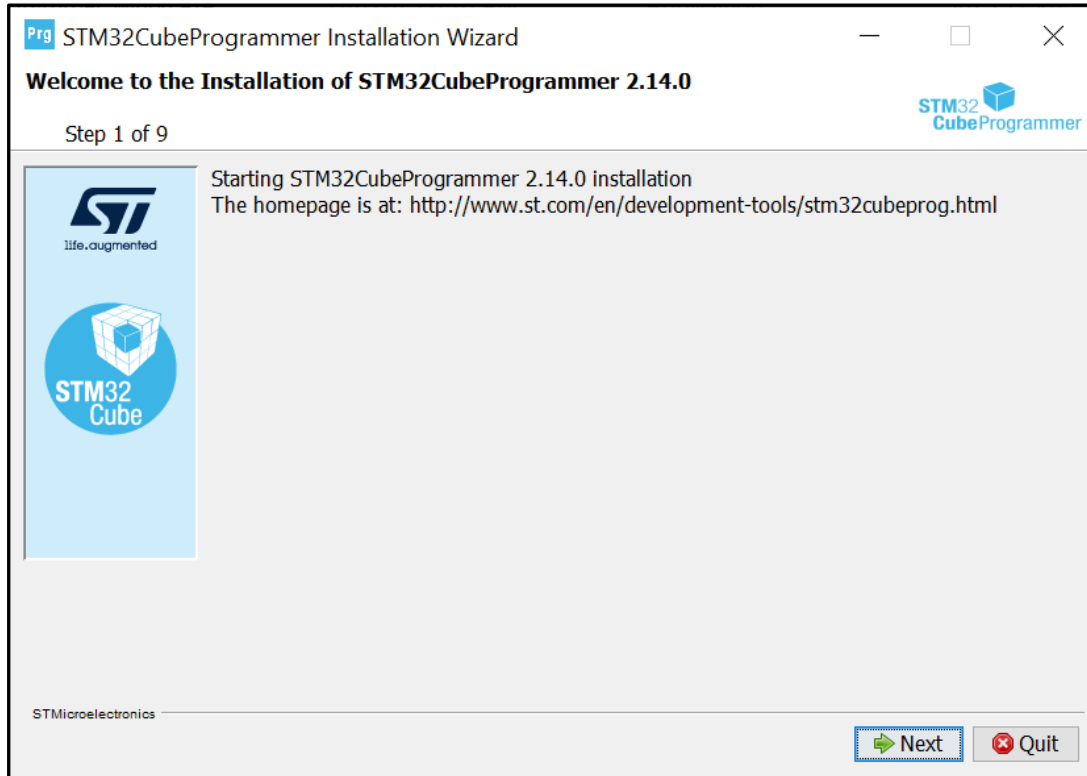

Press Next:

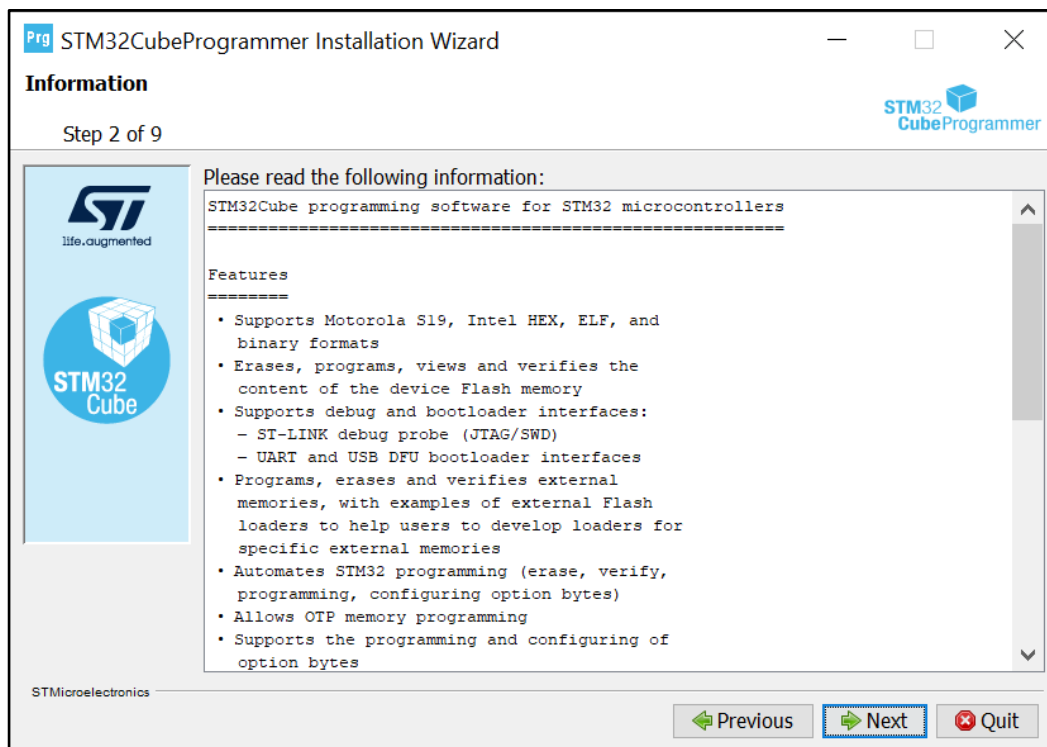

Accept the Terms and then click on Next:

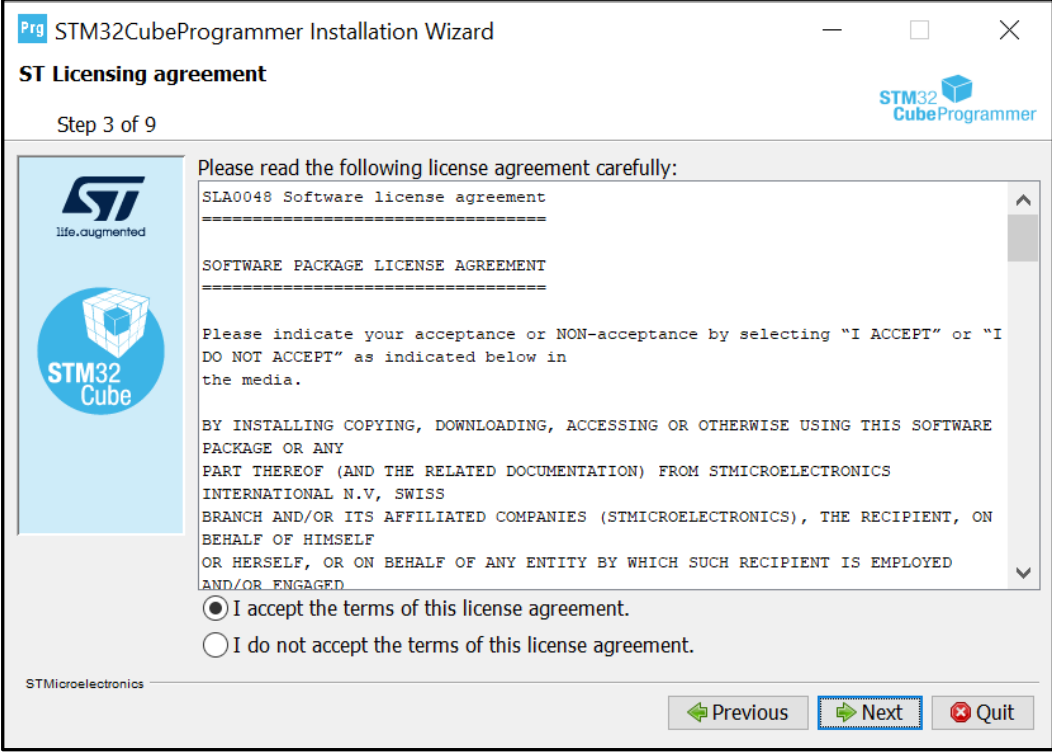

STM32CubeProgrammer Installation Wizard

ST Licensing agreement

Step 3 of 9

Please read the following license agreement carefully:

SLA0048 Software license agreement

SOFTWARE PACKAGE LICENSE AGREEMENT

Please indicate your acceptance or NON-acceptance by selecting "I ACCEPT" or "I DO NOT ACCEPT" as indicated below in the media.

BY INSTALLING COPYING, DOWNLOADING, ACCESSING OR OTHERWISE USING THIS SOFTWARE PACKAGE OR ANY PART THEREOF (AND THE RELATED DOCUMENTATION) FROM STMICROELECTRONICS INTERNATIONAL N.V, SWISS BRANCH AND/OR ITS AFFILIATED COMPANIES (STMICROELECTRONICS), THE RECIPIENT, ON BEHALF OF HIMSELF OR HERSELF, OR ON BEHALF OF ANY ENTITY BY WHICH SUCH RECIPIENT IS EMPLOYED AND/OR ENGAGED


☒ I accept the terms of this license agreement.

☐ I do not accept the terms of this license agreement.

STMicroelectronics

Previous Next Quit

Accept the Privacy Policy and Terms of Use.

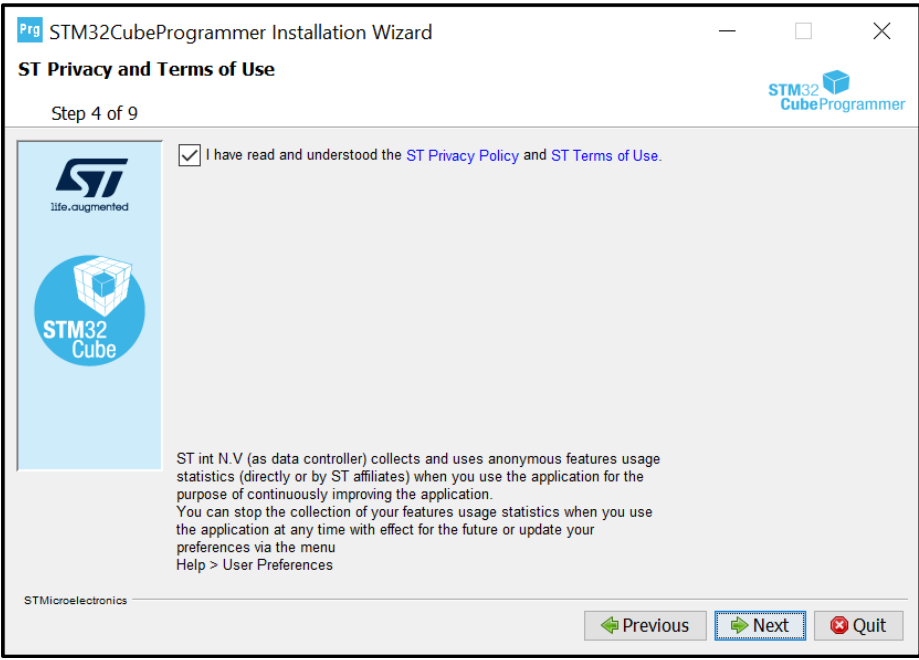

STM32CubeProgrammer Installation Wizard

ST Privacy and Terms of Use

Step 4 of 9

☒ I have read and understood the ST Privacy Policy and ST Terms of Use.


ST int N.V (as data controller) collects and uses anonymous features usage statistics (directly or by ST affiliates) when you use the application for the purpose of continuously improving the application. You can stop the collection of your features usage statistics when you use the application at any time with effect for the future or update your preferences via the menu Help > User Preferences

STMicroelectronics


Previous Next Quit

Important note: If you have a previous version, it will be overwritten if you keep the default path. So, if you want to keep your previous version you will need to install the new version in a different directory. For the workshop, be sure to use the version that we are installing here or a later one.

Once you have decided on the path then press “Next”:

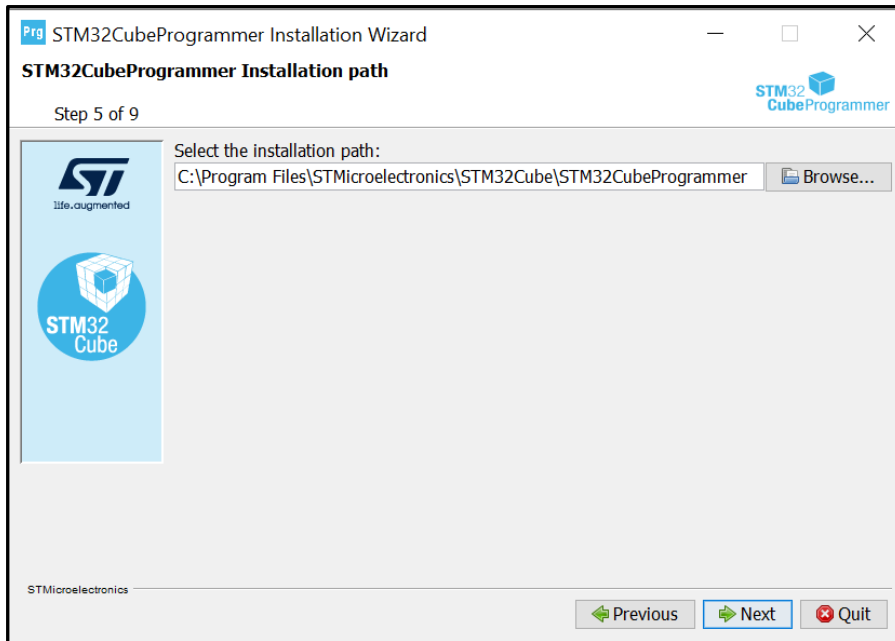


Select the packs that you want to install and press “Next”:

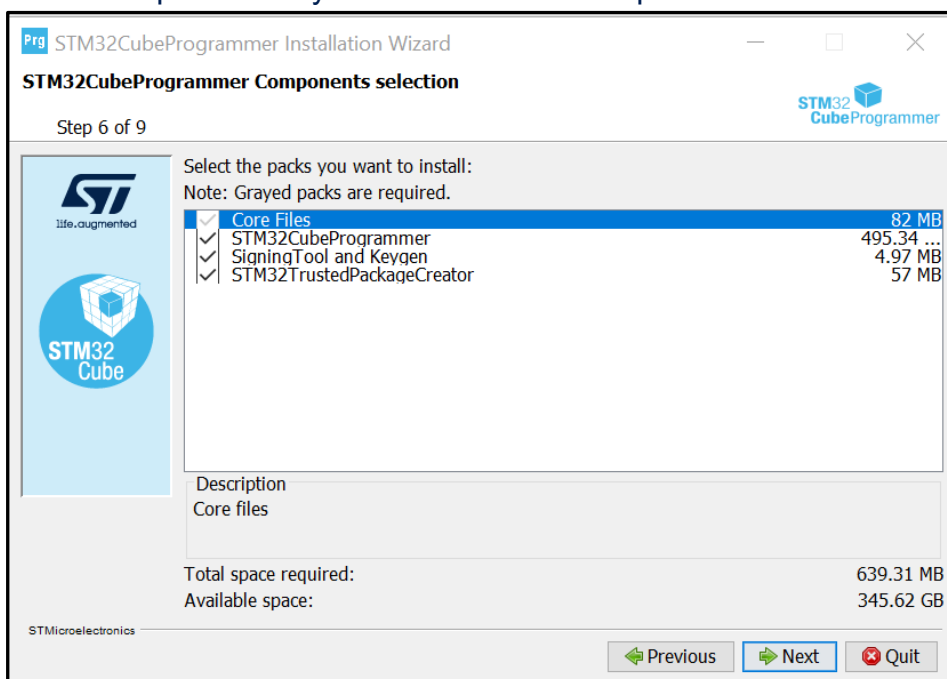


Follow those steps to install the ST-LINK Driver:


Press Next:

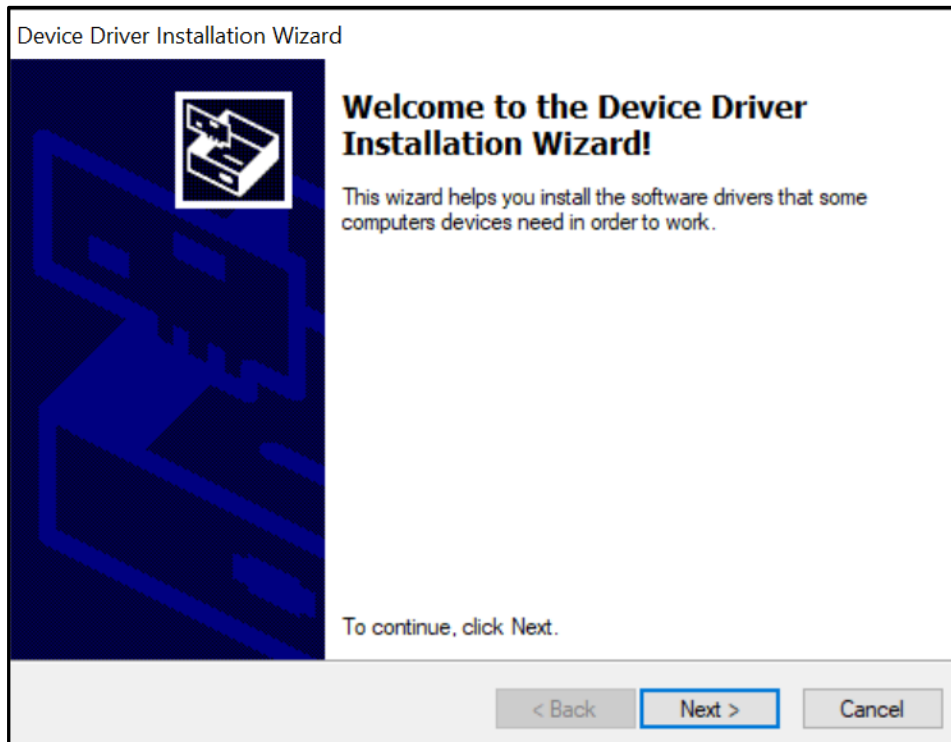


Press Finish:

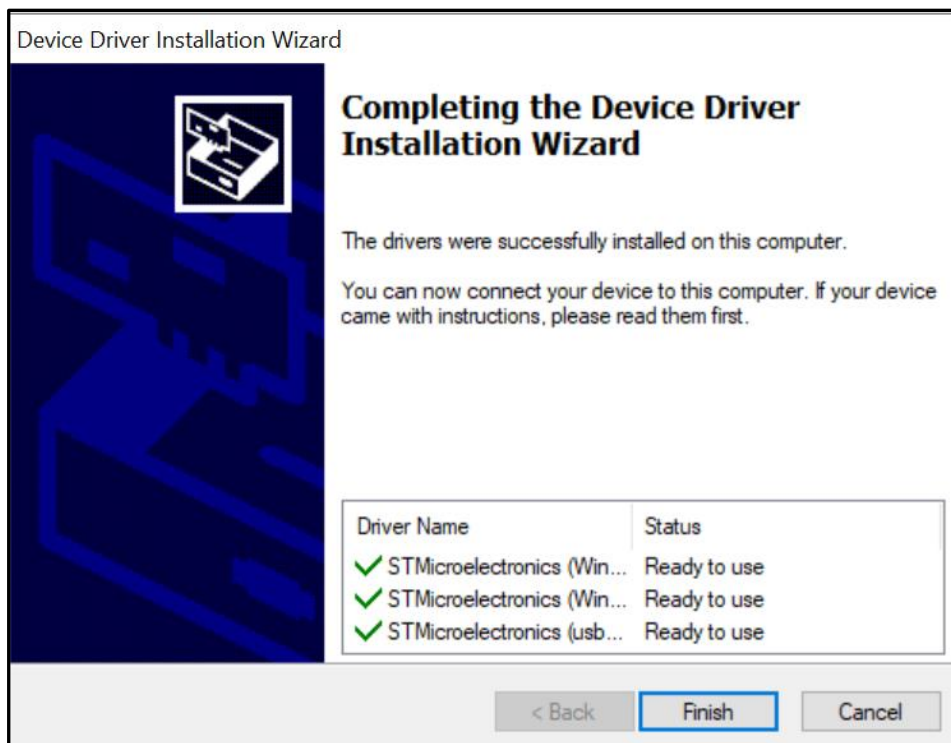


Wait for the install to complete and then press Next:

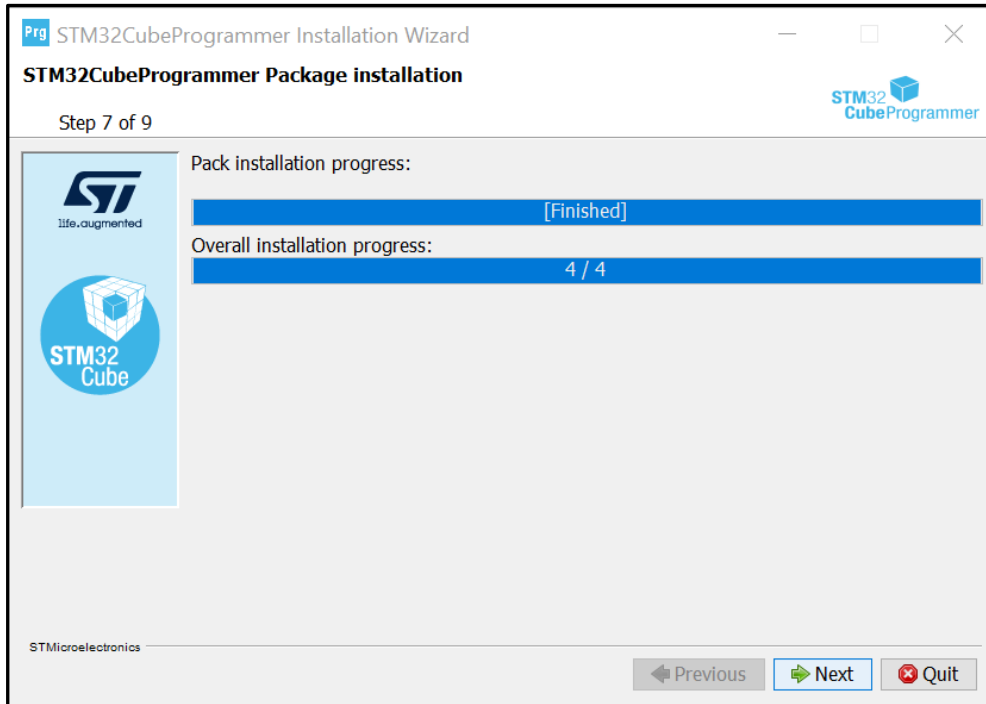

Select the options to create the shortcuts as desired and then press next:

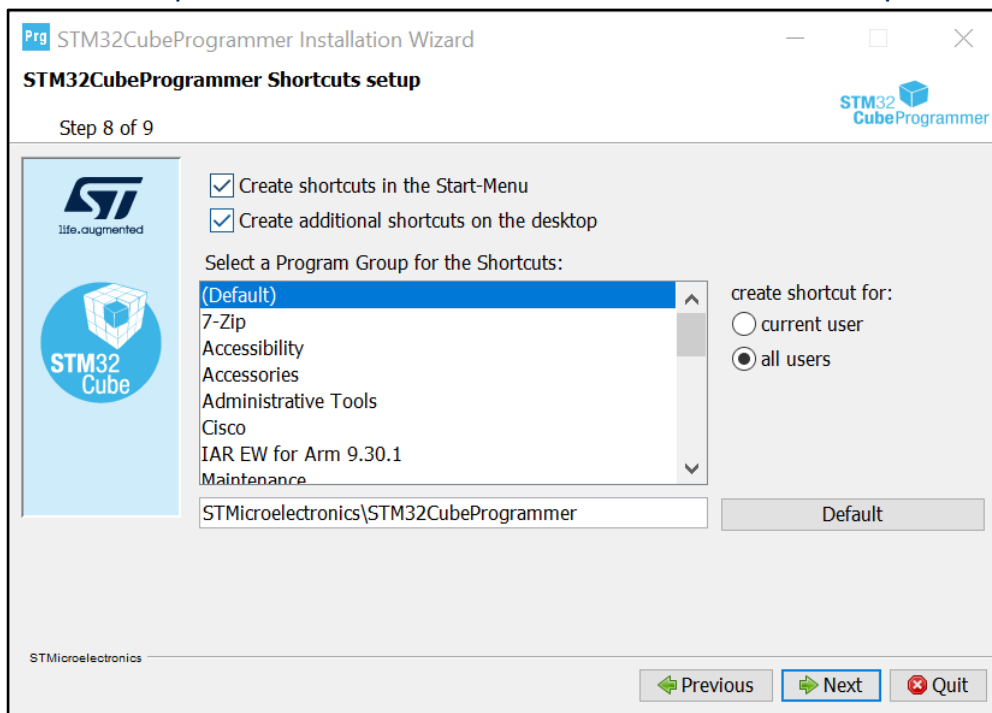

Press Done:

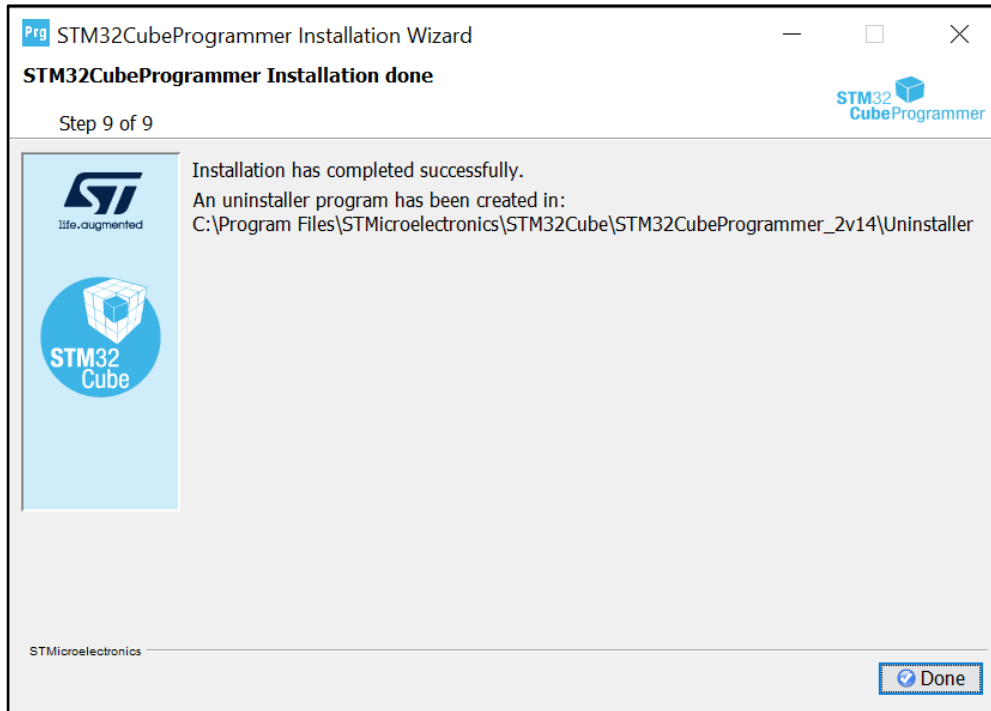

Open STM32CubeProgrammer to make sure it was installed properly.

4 – Presentation and code to be added during the workshop:

The code for some of the labs (hands-on exercises) in the workshop is included in the text file **“code_to_be_added_Workshop.txt”**. During the workshop, step-by-step instructions are included with regards to editing the starter code using the provided code segments. Rather than retyping the code, you will only need to do a simple copy-paste operation.

Additionally, files are also included in folders that will replace or be added to some of the labs per instructions provided for those labs. Reference (completed) projects are also included if needed.

These files are included in a zip file that should be downloaded from the following link (this link is also mentioned in the workshop email):

<https://www.st.com/content/dam/AME/2023/stm32h5-ws-ame-2023/stm32h5.workshop.files.zip>

Note, this zip file is also included on a shared USB flash drive available at in-person workshops.

A PDF of the presentation is included in the zip file. It is suggested to have this file open during the workshop to help during the hands-on labs.

The files/folders in the root folder after the files are extracted from the zip file are:



[file] STM32H5-workshop_vx.x.pdf <= workshop presentation



[file] code_to_be_added_Workshop.txt



[folder] I3C lab material



[folder] DebugAuthentication_lab



[folder] workshop_reference_projects

Appendix A: STM32CubeH5 Firmware Library Offline Activation

These instructions are for adding the “STM32Cube MCU Package for STM32H5 Series” at an in-person workshop and offline activation is required due to the lack of or a slow internet connection. The Firmware Library is provided at the workshop on a USB flash drive by ST personnel.

You can also download the library from st.com by following the link: <https://www.st.com/en/embedded-software/stm32cubeh5.html>. Download the latest version of STM32CubeH5 package and follow the instructions given below. Note, be sure to download the “Package” as opposed to the “Patch”.

Instructions to install the “Patch” will be followed by the instructions below.


Get Software					
Part Number ▲	General Description	Latest version	Download	All versions	
+ Patch_CubeH5	Patch for STM32CubeH5	1.1.1	Get latest	Select version ▼	
+ STM32CubeH5	STM32Cube MCU Package for STM32H5 series	1.1.0	Download latest Get from GitHub	Select version ▼	

Please follow the steps below to install the STM32CubeH5 package in STM32CubeIDE from the local filesystem:


First open up STM32CubeIDE you have already installed:




Now select a Workspace, you can keep the default one and click Launch:

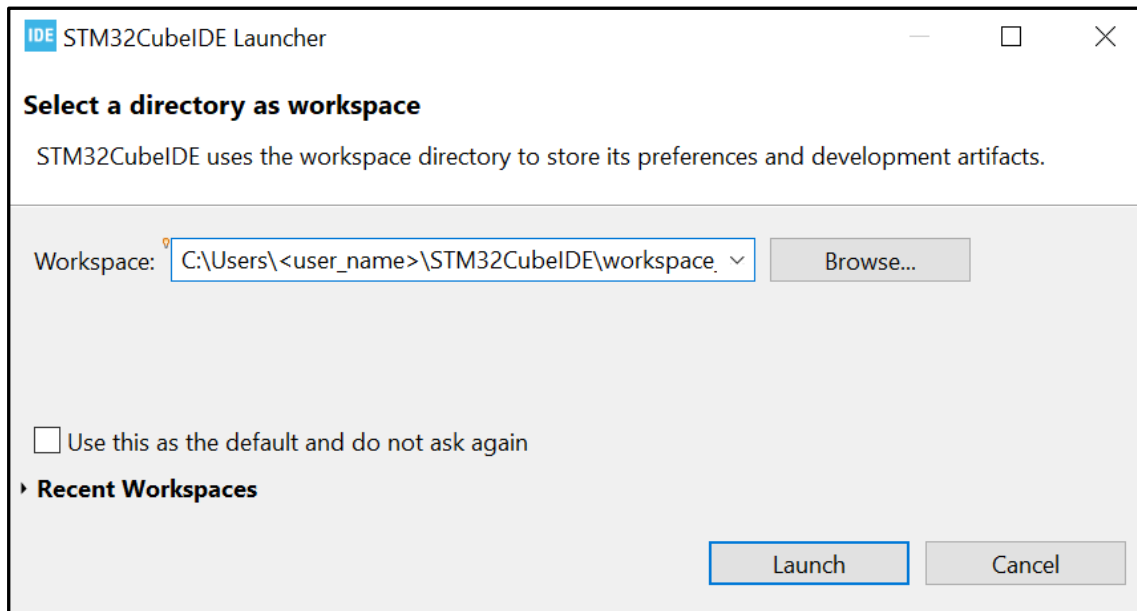


Now Go to Help -> Manage Embedded Software Packages

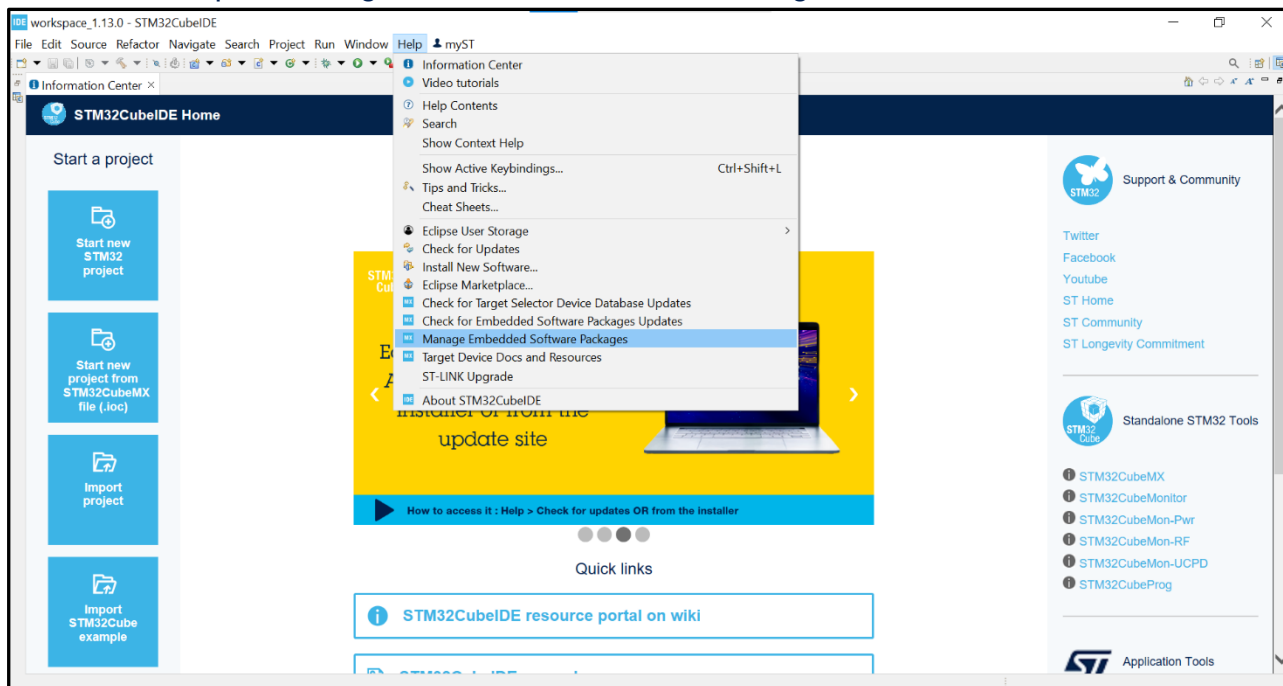


Now click on “From Local...”

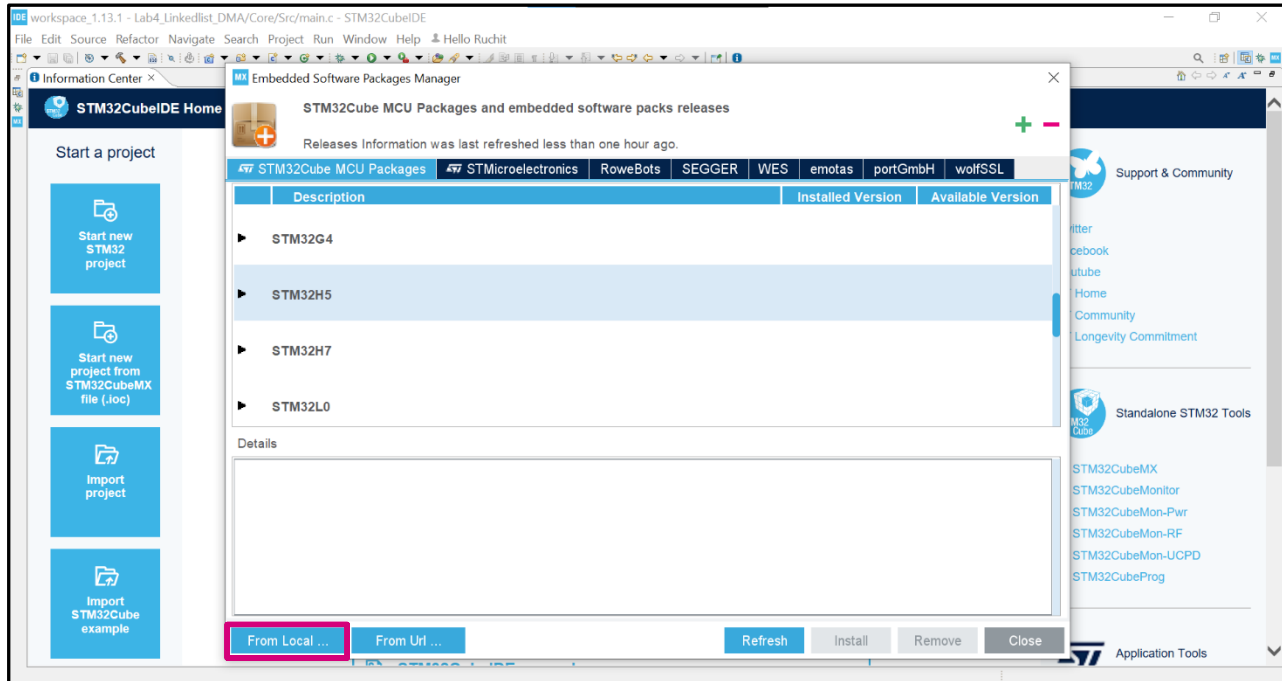


Select “en.stm32cubeh5-v1-1-0.zip” you have copied from the flash drive:

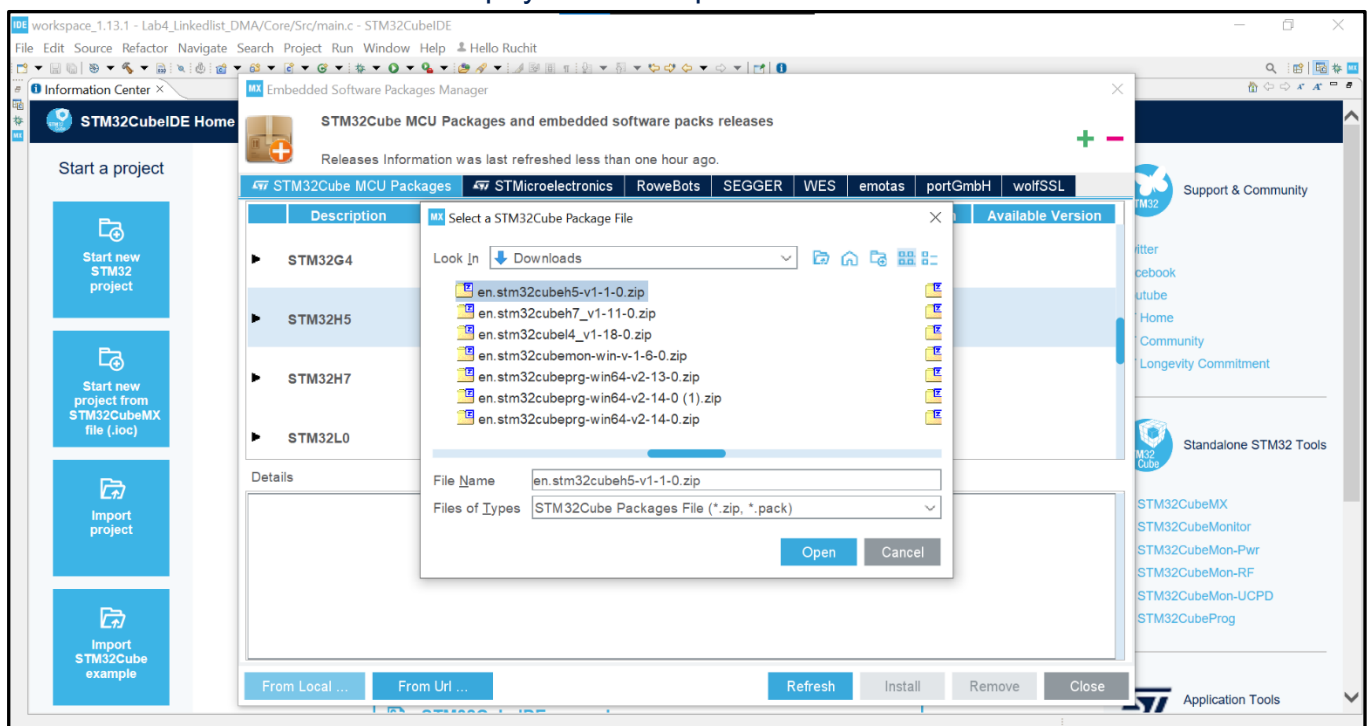

Acknowledge the Agreement and then click Finish:

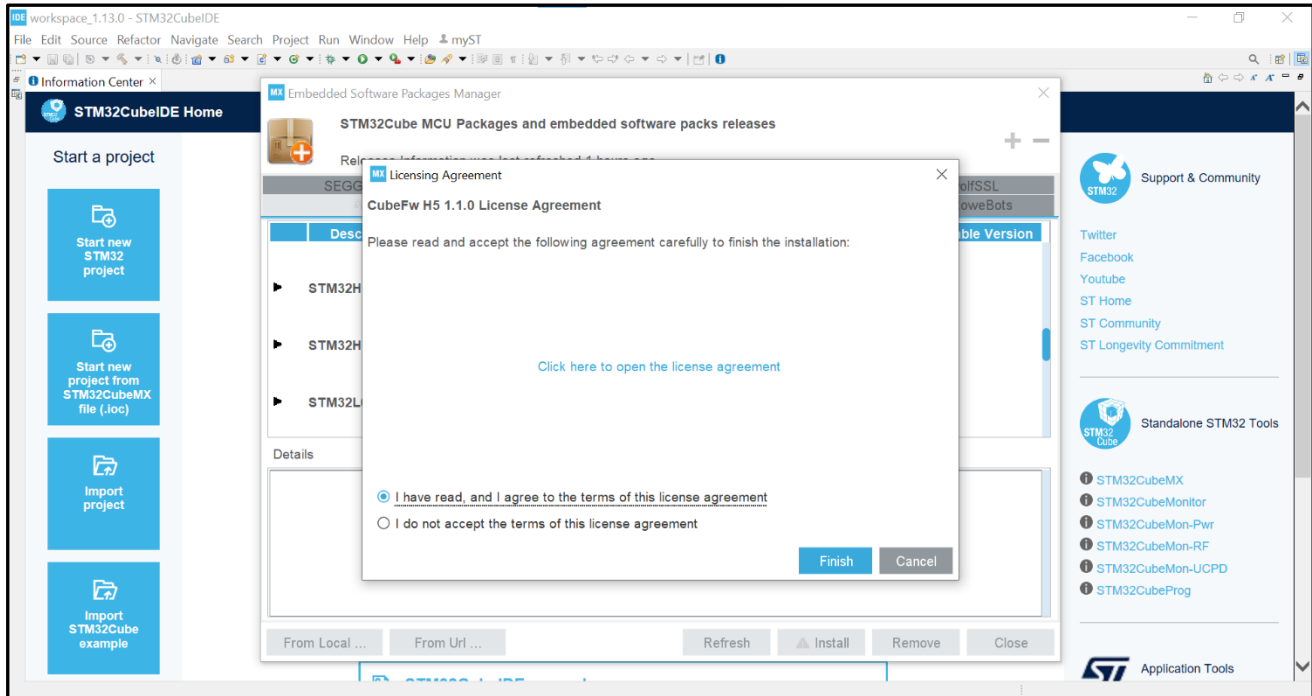

Now you should see that the STM32CubeH5 Library is installed properly as indicated by the green square as shown below:

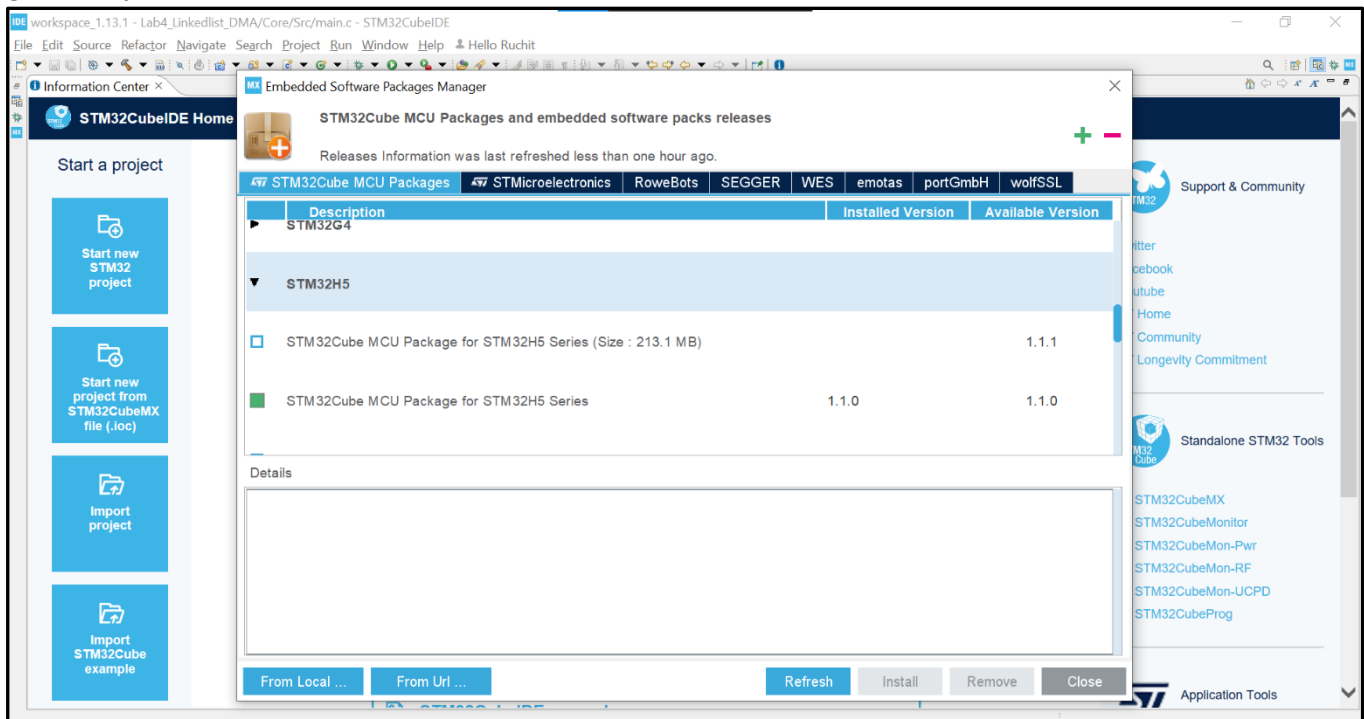

Now, to install the patch, follow the steps below to update the package from the local repository:

We will use en.stm32cubeH5-v1-1-1.zip already provided on the flash drive.

You can also go back to st.com to download the latest CubeH5 software package patch:

Get Software

Part Number	General Description	Latest version	Download	All versions
+ Patch_CubeH5	Patch for STM32CubeH5	1.1.1	Get latest	Select version ▾
+ STM32CubeH5	STM32Cube MCU Package for STM32H5 series	1.1.0	Download latest Get from GitHub	Select version ▾

Copy the zip file for the package previously downloaded for v1.1.0 and paste it in the STM32Cube Repository.


The default path in the filesystem is:

“c:\Users\\STM32Cube\Repository”


Now, rename the zip file to “stm32cube_fw_h5_v110.zip” as shown below. Make sure to rename it with the exact file name to avoid any errors in the further steps.

Name	Date modified	Type	Size
Packs	7/24/2023 4:42 PM	File folder	
STM32Cube_FW_C0_V1.0.1	6/27/2023 4:00 PM	File folder	
STM32Cube_FW_G4_V1.5.1	8/9/2023 11:38 AM	File folder	
STM32Cube_FW_H5_V1.1.0	8/28/2023 1:33 PM	File folder	
STM32Cube_FW_U5_V1.3.0	7/19/2023 11:31 AM	File folder	
en.prom-stm32h5-mcu-finder.jpg	6/27/2023 4:28 PM	JPG File	29 KB
stm32cube_fw_c0_v100.zip	6/27/2023 3:59 PM	zip Archive	58,674 KB
stm32cube_fw_c0_v101.zip	6/27/2023 4:00 PM	zip Archive	13,626 KB
stm32cube_fw_g4_v150.zip	8/9/2023 11:36 AM	zip Archive	201,771 KB
stm32cube_fw_g4_v151.zip	8/9/2023 11:38 AM	zip Archive	897 KB
stm32cube_fw_h5_v110.zip	8/28/2023 1:20 PM	zip Archive	194,538 KB


Go back to the STM32CubeIDE and open the “Embedded Software Package Manager”

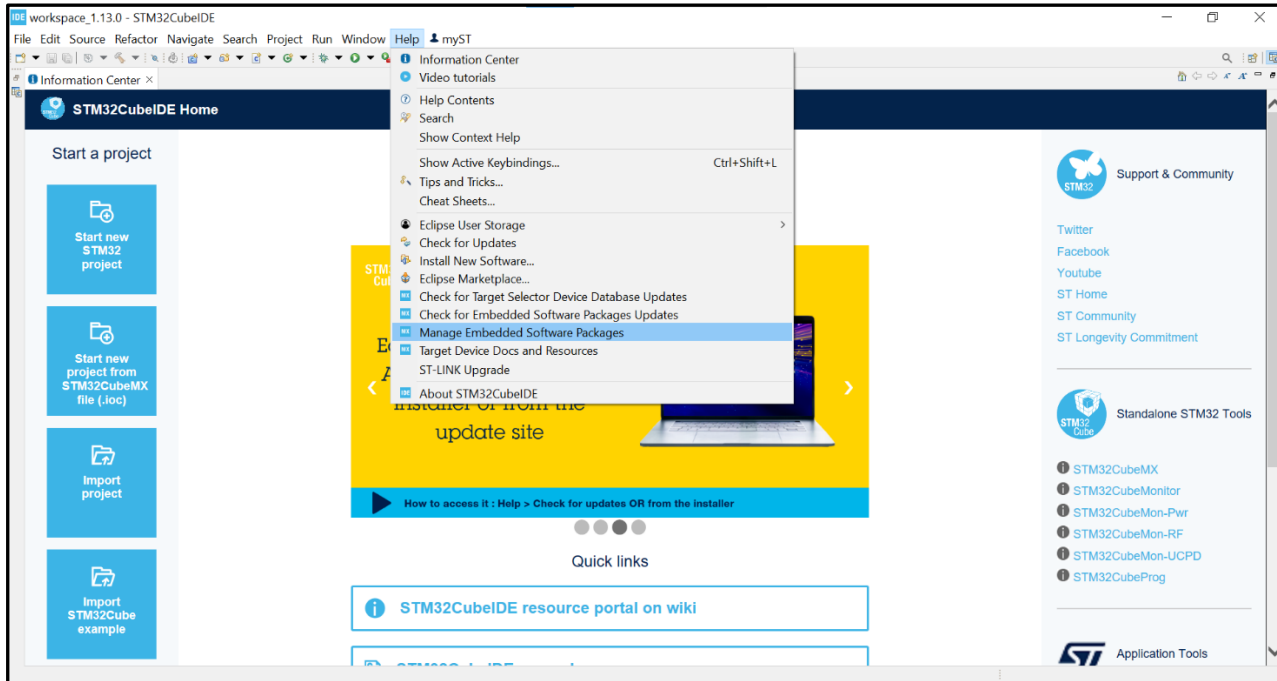


Now click on “From Local...”

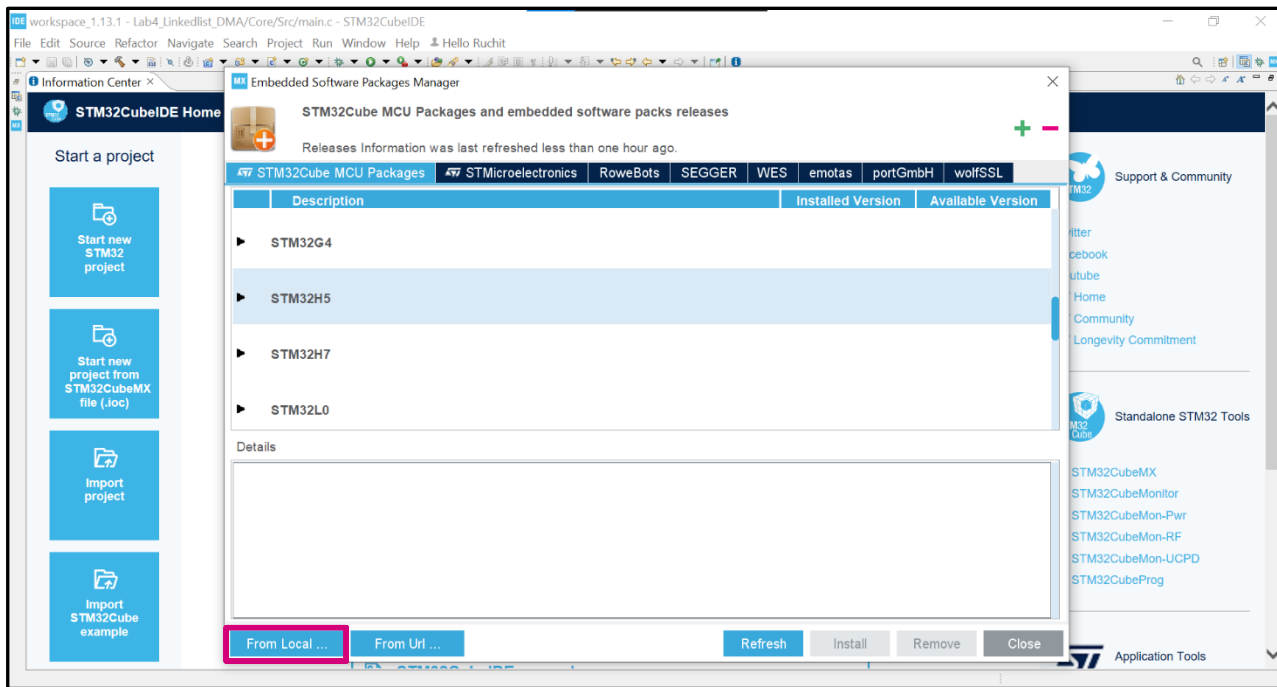


Select “en.stm32cubeh5-v1-1-1.zip” you have copied from the flash drive and press “Open”:

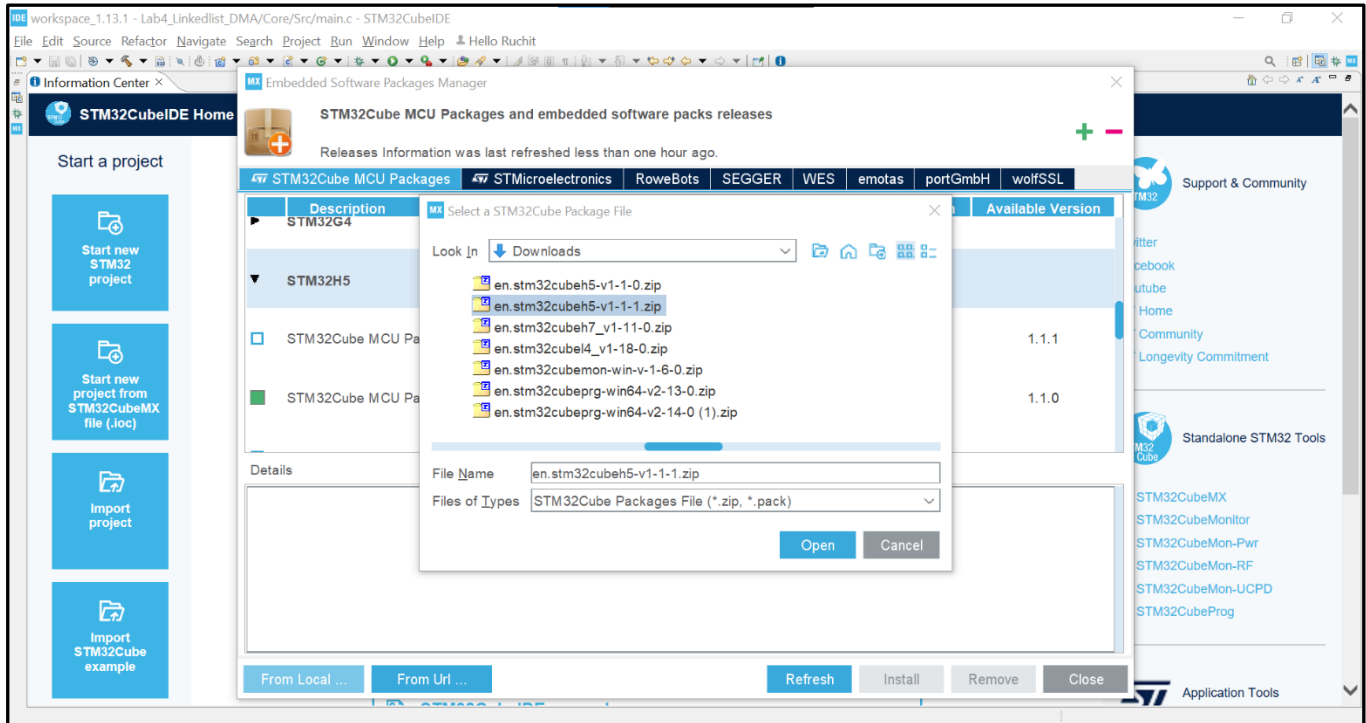

Acknowledge the Agreement and then click “Finish”:

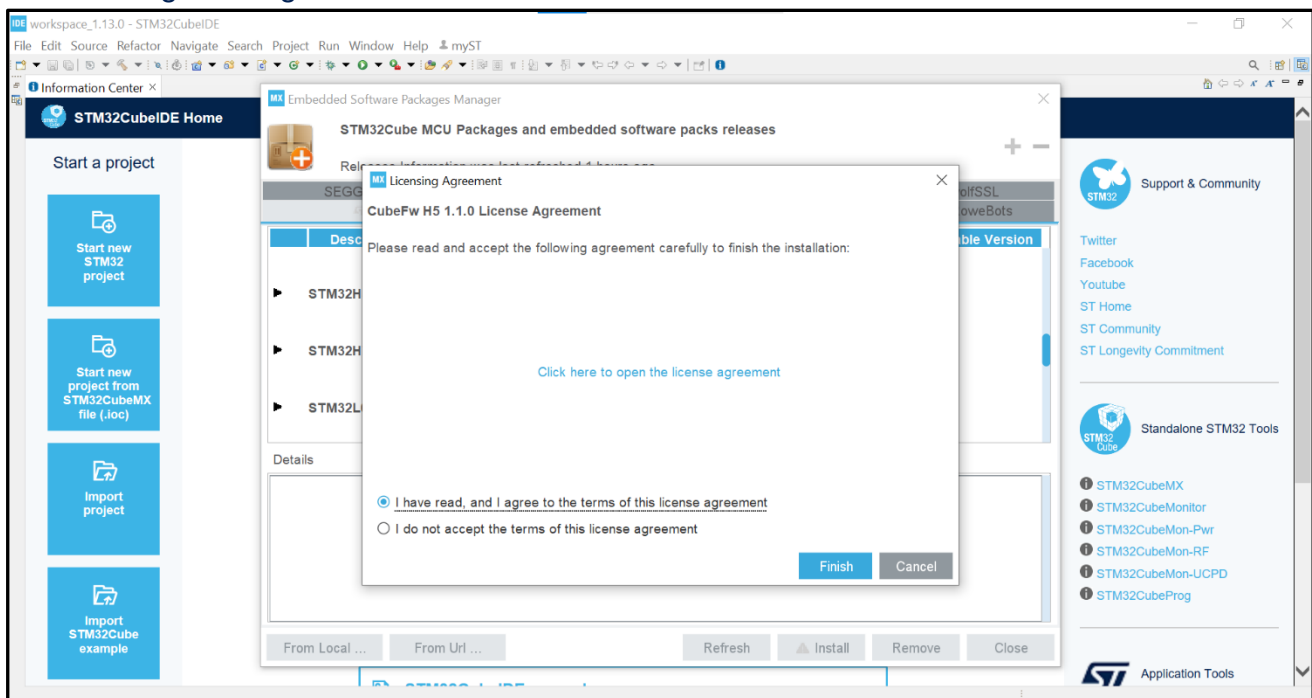

Now you should see that the STM32CubeH5 Library is installed properly as indicated by the green square as shown below:

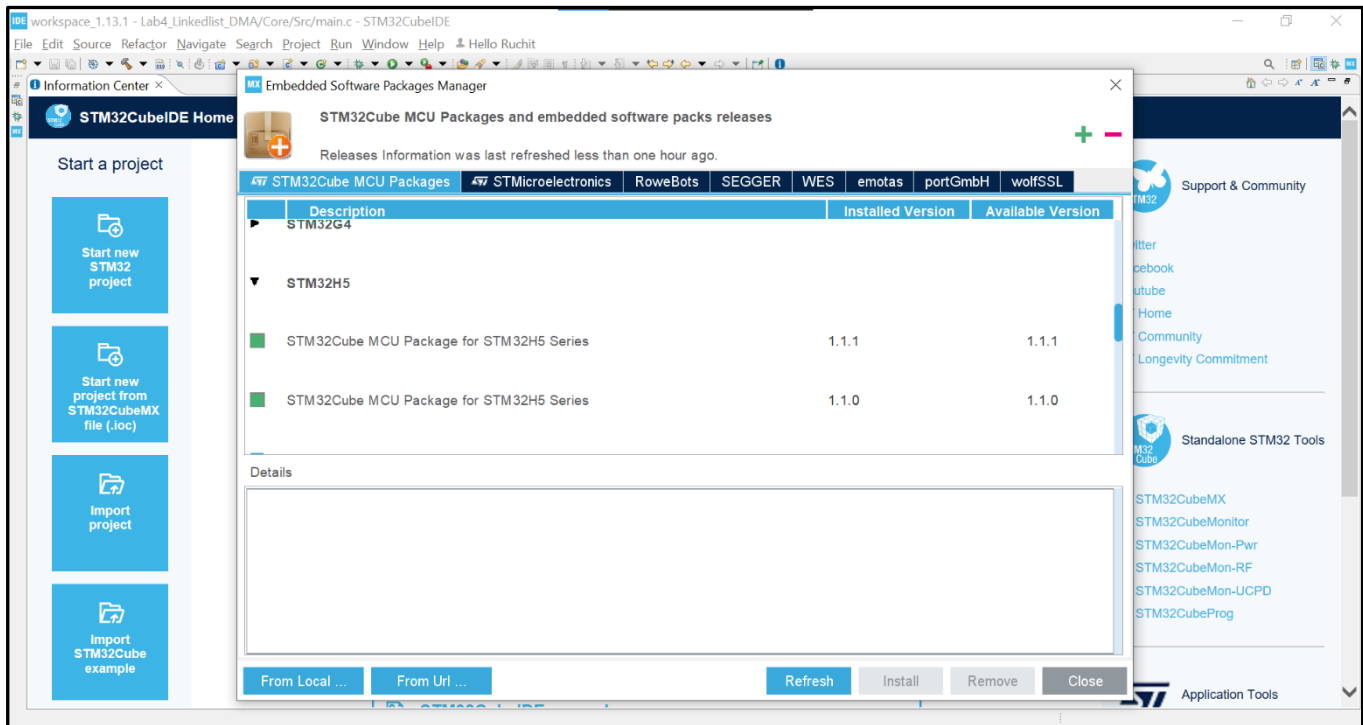

Appendix B: STM32CubeProgrammer Installation and Opening for macOS users

MacOS users might face some issues while installing or opening the already installed application for STM32CubeProgrammer. In such cases, please refer to the ST Community thread explaining the solution for similar issue, linked below:

<https://community.st.com/t5/stm32cubeprogrammer-mcu/how-to-download-stm32cubeprogrammer-on-macos-monterey-12-6/m-p/143983>

Please refer to the first solution posted by ST Employee.

Problem:

Listed below are some known issues which can be resolved by following the instructions in the linked mentioned above:

- Issue while installing the CubeProgrammer with an error “cannot be opened because the developer cannot be verified”.
 - Follow all the steps in the solution section below.
- Cannot open the installed application. To elaborate, the application tends to pop up in the “Dock” but never open.
 - Follow from step-3 in the solution section below.

Solution:

1. Install CubeProgrammer using the command:

```
sudo xattr -cr ~/SetupSTM32CubeProgrammer-macos.app
```

2. In case of using the .exe installer use this command:

```
sudo java -jar SetupSTm32CubeProgrammer-2.14.0.exe
```

Expect a popup during the installation indicating the following:

``

en/../../jre: No such file or directory

Continue Installation?

``

Press “Continue” to finish the installation of the tool.

3. Copy the jre folder from the downloaded setup package

4. Open the CubeProgrammer install folder
“../Applications/STMicroelectronics/STM32Cube/STM32CubeProgrammer”
5. Right click on STM32CubeProgrammer.app and select “Show Package Contents”
6. Paste the copied jre folder here.
7. After following the above installation steps, if CubeProgrammer couldn't be launched via GUI, please try to launch it via CLI as follows,
 - a. Navigate to the
“../Applications/STMicroelectronics/STM32Cube/STM32CubeProgrammer/STM32CubeProgrammer.app/Contents/MacOs/bin/”
 - b. Type the command;

```
java -jar STM32CubeProgrammer
```

- c. If the jre folder exists in CubeProgrammer install folder, type the following command:

```
../../../../jre/bin/java -jar STM32CubeProgrammer
```