Dante-BabelBox user guide

Dante-BabelBox is a cross-vendor Dante control bridge: it translates between manufacturers' control protocols, so you can set preamp gain and phantom power and read wireless-mic status across consoles, stageboxes and receivers that don't otherwise talk to each other.

Dante carries your audio and basic device discovery, and there it stops. Preamp gain, phantom power and wireless-mic status are left to each vendor, and each one runs its own proprietary control protocol over the same network, none of which understands the others. Hence the name: this does the translating, so the state of one vendor's device can be used from outside that vendor's own kit.

It does two separate jobs:

- **Preamp control:** gain and phantom power bridged across consoles and stageboxes from different vendors, with a patch-bay web UI.
- **Radio-mic telemetry:** battery, RF and audio level from wireless receivers, across vendors, **whether or not the hardware has a Dante audio option installed**, because the adapters only ever talk to a device's IP control channel and never touch Dante audio at all.

Before you rely on this: most adapters are built against official or community-authoritative vendor protocol specs. The rest are reverse-engineered, from captures of real gear or from the vendor's own software, and their status says so. **Almost all of them have only been tested against mock devices.** The **Lectrosonics mic adapter's wire format is an unverified placeholder**, so it's a scaffold rather than a working adapter.

What has run on real hardware, and it's worth knowing which:

- **Yamaha DM3 over SCP** (`yamaha-dm3-scp`), on a real DM3 (firmware V3.00) on 2026-09-15: identify, gain and phantom read and write, and a live change feed from the desk's own `NOTIFY` push, all through the full plugin stack. The router and the web UI drove the same desk that day. The older OSC adapter (`yamaha-dm3`) ran on it too, but is weaker. See yamaha-dm3-bench-2026-09-15.md.
- **Sennheiser EM 500 G3** (`sennheiser-ewg3`), the same day: a DM3's remote head-amp gain drove the receiver's AF-out level through the bridge. See sennheiser-ewg3-bench-2026-09-15.md.
- **The Yamaha R-series HA protocol**, captured from a real QL1 + Rio3224-D2, decoded, documented, rebuilt from that documentation and sent back, and the stagebox accepted it and changed its gain. That proves the *protocol*, not the *code*: the write came from a standalone script. The Rio adapter now exists and rebuilds that frame byte for byte, but it has never been run against a device, and no plugin loads it yet. See yamaha-ha-remote-over-dante.md.

This codebase was created with AI assistance, directed and reviewed by a human author.

Which devices are supported

Preamp control

Vendor	Device	Protocol	Status
Behringer / Midas	X32, M32, HD96	OSC	Done
Behringer	Wing	OSC	Done — **8 built-in preamps only**
Allen & Heath	AHM-series	NRPN over TCP	Done
Allen & Heath	dLive	NRPN over TCP (Socket addressing)	Done
Yamaha	DM3 / DM3S	SCP (TCP 49280)	**Validated on a real DM3** (2026-09-15). Kind `yamaha-dm3-scp`, and the one to use for a DM3
Yamaha	DM3 / DM3S	OSC (UDP 49900)	Works, and also ran on the real DM3, but an OSC `set` gets no reply and the desk pushes no OSC changes, so read-after-write and the change feed are weaker than SCP. Kind `yamaha-dm3`
Sennheiser	evolution wireless G3 (EM 300/500 G3)	Binary WSM protocol (UDP 8133)	**Validated on a real EM 500 G3** (2026-09-15). One channel, whose gain is the receiver's AF-out level (−24 to +18 dB in 3 dB steps). Reverse-engineered from Wireless Systems Manager. Kind `sennheiser-ewg3`
RME	Any interface TotalMix FX 2.1+ drives, e.g. Digiface Dante	TotalMix Global OSC (UDP 7001, replies on 9001)	Implemented, tested against a stand-in only. Channel N is TotalMix hardware output N and its gain is the output fader, from −65 dB (off) to +6 dB. Kind `rme-totalmix`
Any AES70 vendor	Focusrite RedNet (MP8R and any unit with AES70 enabled)	AES70/OCA (OCP.1 over TCP)	Implemented from the published standard, with the device's objects discovered when the bridge connects. Never run against any AES70 device. Kind `aes70`
Allen & Heath	DT168, DT164-W	`AllenHth` messages over Audinate ConMon	**Codec only, no transport.** Reverse-engineered from A&H's *DT Preamp Control* app and the SQ's Dante-card firmware, with no capture and no hardware. See allenheath-dt-preamp-over-dante.md

Vendor	Device	Protocol	Status
Allen & Heath	Qu, SQ	—	**Not implemented.** The SQ's Dante card registers the same `AllenHth` namespace as the DT expanders, so the DT codec is the likeliest route, pending a capture
Aphex	1788A	MIDI SysEx	**Codec only, no transport.** Built from Aphex's published command table; how the SysEx reaches the unit's Ethernet port isn't documented
Yamaha	Rio, Tio	`MBC` over Audinate ConMon	**Adapter written, not usable yet.** Gain, +48 V and metering, from a wire format proven on a real Rio3224-D2. Never run against a device, and no plugin loads it, so the bridge can't drive a Rio yet
Yamaha	Rio3224-D2, **emulated** (the bridge is the stagebox)	A Dante device (mDNS, ARC, ConMon), then `MBC` from the stagebox's side	**Built from a capture, never run against a console.** Kind `yamaha-rio-emulated`: a virtual Rio for a CL or QL to mount and control, 32 channels of gain and +48 V. No audio. See dante-emulation.md
Yamaha	CL, QL	`MBC` over Audinate ConMon	**Partial, and not usable yet.** A QL/CL is the controlling side of the captured protocol, and the Rio adapter addresses it too, so it's waiting on the same plugin. Driving a console's own local head amps was never seen on the wire
Yamaha	DM7	—	**Not implemented** — no public spec

Radio-mic telemetry

Vendor	Device	Protocol	Status
Shure	ULX-D	ASCII over TCP 2202	Done
Shure	Axient Digital	ASCII over TCP 2202	Wire framing done; field behaviour only spot-checked
Sennheiser	EW-DX EM 2 / EM 2 Dante / EM 4 Dante	SSC (JSON over UDP)	Done
Lectrosonics	DSQD / Duet	Ethernet control port	**Placeholder wire format — correct the bytes and the port before use**
Shure	QLX-D **mounted on a console**	ANSI E1.17 ACN (SLPv2 + SDT/DMP over UDP)	Discovery and passive telemetry, reverse-engineered from captures of a real QLXD4 on a QL1. **Read-only, needs a mirrored port**, and has no `mic-monitor` kind yet

The ULX-D, Axient Digital and EW-DX adapters are built from the vendors' published command documents. The QLX-D one isn't, because nothing published covers a receiver mounted on a console, so its decoder is tested against frames from those captures instead (the write-up lives in RFutils). It needs a mirrored port because the receiver unicasts its telemetry to the console. None of these telemetry adapters has been run against a live receiver yet.

The Lectrosonics adapter still won't make anything up in what it *reports* (audio dBFS and RF dBm stay unset rather than being invented), but treat it as a scaffold until the wire format is confirmed.

Getting a bridge running

1. See what's on the network.

```
cargo run --bin preamp-bridge -- discover
```

This browses Dante's own mDNS advertisements. It tells you what's there. Whether this bridge can drive it is another matter.

2. Generate a config.

```
cargo run --bin preamp-bridge -- init --output bridge.toml
```

`init` discovers devices and probes each one against the `identify()` of five kinds (X32, Wing, AHM, dLive and the OSC DM3) until one claims it. **How sure it is depends on the protocol, and it's worth knowing which you're getting:**

- **X32-family and Wing** confirm vendor *and* model, from documented replies.
- **AHM and dLive** confirm the protocol family only, because their specs have no model-string query.
- **DM3 is the weakest signal**: its spec documents no identify query at all, so a scene-status request is reused as a presence probe.

`init` doesn't probe for `yamaha-dm3-scp`, `sennheiser-ewg3` or `aes70`. Add those devices to `bridge.toml` by hand.

`[[mapping]]` entries aren't generated by default. Add them by hand, or see below.

3. Run it.

```
cargo run --bin preamp-bridge -- run --config bridge.toml
```

Editing `bridge.toml` while the bridge runs **hot-reloads the mapping table**.

Inferring mappings from live Dante patching


```
cargo run --bin preamp-bridge -- init --output bridge.toml --infer-mappings
```

With this flag, `init` also asks each identified device for its current Dante RX subscriptions, and writes a `[[mapping]]` for every subscription that points at another device in the file. It's a proper signal, read from live patching rather than guessed.

> **One catch, and it's why this is opt-in.** The channel numbers it writes are **Dante audio channel numbers**. On most gear those match the preamp/headamp channel a vendor adapter addresses, because out of the box Dante channel order mirrors physical I/O order 1:1. That's a *default-configuration convention*, **not a protocol guarantee**, and a console with customised Dante patching breaks the assumption without telling you.
>
> Treat inferred mappings as a first draft to check against each adapter's channel numbering.

The patch-bay web UI

`run` also serves a web UI, bound by default to `0.0.0.0:8080`, so any browser on the LAN can reach it at `http://<this-machine's-IP>:8080`.

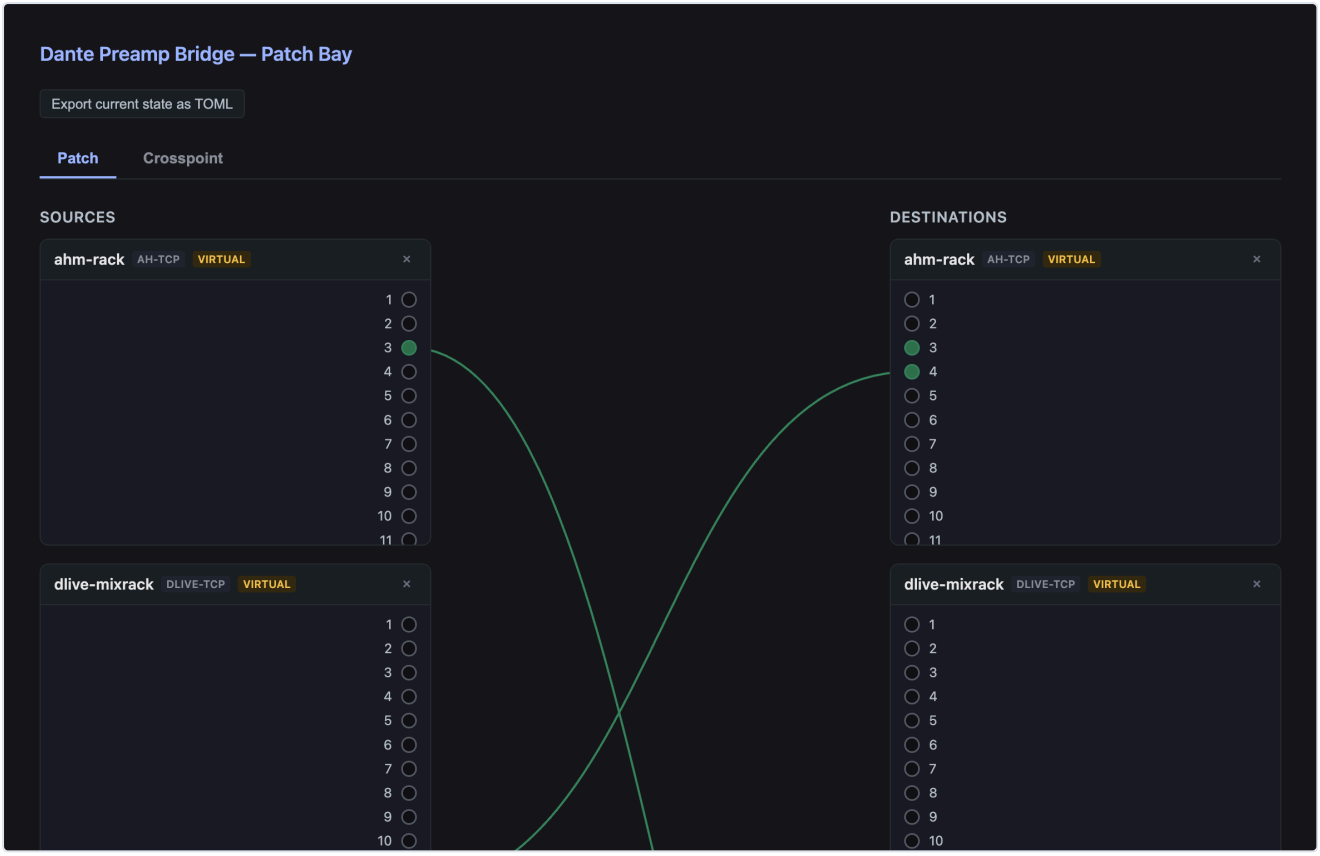

*An actual screenshot of the running web UI. The devices are **virtual** placeholders, so the UI can be shown with no hardware on the network.*

- **Patch tab:** click a source channel, then a destination channel, to connect them. Click a patch cable to disconnect.
- **Crosspoint tab:** the same mappings as a matrix, showing only channels that are actually mapped. A full grid of every channel across even two devices would run to tens of thousands of cells, so pin a device to bring all its channels into the grid when you need them.
- **Gain lock tab:** when `bridge.toml` has a `[gain_lock]` table, this is where you elect the leader desk, lock and unlock, set the leader's preamp gains, and see what the lock has done to each follower's trim. See Gain compensation below.
- **Device management:** add real devices (they connect straight away) or **virtual** ones.
- **Export as TOML:** devices and mappings added through the UI are **in memory only and don't survive a restart**. This button exports the current state so you can paste it into `bridge.toml` and keep it.

Change the bind with `--web-bind 127.0.0.1:8080` to restrict it to this machine, or turn it off with `--no-web`.

> **There's no authentication and no TLS.** It's the same trust model as a hardware router's control port, so it belongs on a trusted operations network, not the open internet.

What "virtual" means

A virtual device is a placeholder: a name and a channel count with nothing behind them and nothing on the network. It lets you design the topology you want before the device is there.

It isn't the same thing as an **emulated** device. Emulation is where the bridge answers as if it *is* a native device of a foreign brand, so a console's own preamp UI drives it directly. The first one exists: `yamaha-rio-emulated`, a virtual Rio3224-D2 for a Yamaha CL or QL. It's built from a packet capture of real gear and has never been in front of a console, and it carries no audio. dante-emulation.md has the settings, the limits and a checklist for a first bench session.

Emulating any other device needs packet captures of that device paired with its own console, because none of that handshake is in any public spec. If you can help with those captures, `docs/` has a non-technical field guide, one edition per OS: Windows · macOS · Linux.

The config file

```
[[device]]
id = "ahm-rack"
kind = "ah-tcp"        # osc-x32 | osc-wing | ah-tcp | dlive-tcp | yamaha-dm3 | yamaha-dm3-
scp | yamaha-rio-emulated | sennheiser-ewg3 | rme-totalmix | aes70
address = "10.0.0.10"
port = 51325           # optional — defaults to the protocol's standard port

[[device]]
id = "future-x32"
kind = "osc-x32"       # what this placeholder stands in for
virtual = true         # placeholder — no address needed
channels = 8

[[mapping]]
from = { device = "ahm-rack", channel = 3 }
to   = { device = "x32-monitors", channel = 7 }
bidirectional = true
# gain_offset_db = -60.0  # optional: added to the gain going from → to, taken off coming
back
```

Gain is copied in dB. `gain_offset_db` shifts it for two controls whose ranges don't line up: with −60, a preamp's −6 to +66 dB lands on an output fader's −66 to +6 dB, so +30 dB on the desk is −30 dB on the output. On a bidirectional mapping the offset comes off again going the other way. Phantom is never offset, and each device still clamps to its own range.

> `channel` **means whatever the underlying protocol's own addressing unit is:** an X32 headamp number (1–128: local 1–32, AES50-A 33–80, AES50-B 81–128), a dLive physical preamp **Socket** number (which is *not* the processing channel number), or a DM3 Local Input number. It's the thing you're most likely to get wrong. Check the relevant adapter's module doc comment for the exact ranges.

`kind` is an open string rather than a fixed list, so a loaded plugin can register more kinds. There's a fully worked example in `bridge.example.toml`.

A few kinds want more than an address:

- **`yamaha-dm3-scp`** uses the same channel and gain model as `yamaha-dm3` (Local Input 1–16, whole dB from 0 to 64). Leave out `port` and it uses 49280.
- **`sennheiser-ewg3`**: `address` is the receiver's IP (front panel, **Advanced > IP-Address**). `port` is ignored, because the protocol is fixed on 8133. **Close Wireless Systems Manager first.** It holds the receiver's single write-master slot, and the receiver quietly drops writes from anyone else.
- **`yamaha-rio-emulated`**: the bridge *is* the device. `address` is this machine's own address on the Dante network, where the virtual Rio appears, and `unit_id` (required) is the stagebox unit id the console mounts. `port` is ignored. **When a console finds it, the console writes its own gain and +48 V to all 32 channels, and the bridge relays them to whatever is mapped.** Never run against a real console; see dante-emulation.md.
- **`rme-totalmix`**: `address` is the computer running TotalMix FX (usually `127.0.0.1`), not the interface. `port` is TotalMix's incoming OSC port (7001 if left out), and `channels`, the number of hardware outputs to expose, is required. In TotalMix's OSC settings, turn OSC on in Global mode, set Remote IP to the machine running the bridge and leave the outgoing port at 9001: the bridge reads TotalMix's replies there, so nothing else (such as Companion's TotalMix module) can be listening on 9001. **Give a preamp-to-output mapping a `gain_offset_db`** (about −60): without one, a preamp at +30 dB puts the output at +6 dB, TotalMix's top.
- **`aes70`**: on RedNet, enable AES70 in RedNet Control's per-device Tools menu first (RedNet Control needn't stay running afterwards). `channels` is ignored, since the device reports its own. AES70 assigns no port: 65000 is the usual convention, but check the device's `_oca._tcp` mDNS record. Older configs that say `rednet-aes70` still work.

Gain compensation (the gain lock)

When several desks share one stage box, one desk owns the preamps, and every gain change it makes turns up on every other desk too, usually without warning. Declare that desk the **leader**, name the **signals** the desks share, and **lock**. From then on each follower desk's digital trim takes the opposite of every leader gain change, so the followers' levels stay put.

```
[gain_lock]
leader = "foh"

[[gain_lock.signal]]
name = "Kick In"
members = [
  { device = "foh", preamp = 1 },   # the leader's preamp
  { device = "mon", input = 1 },    # the follower's input channel, whose trim moves
]
```

What to know before you use it at a show:

- **Moves are relative.** The bridge reads each follower's live trim and moves it from there, so a trim change the monitor engineer makes mid-show is kept.
- **Nothing is lost at a limit.** A trim that runs out of range keeps the difference and takes it back when the leader comes down. A desk that drops off the network gets the missed amount when it comes back.
- **Followers today are X32/M32 and Wing.** They're the only protocols here that document a writable channel trim. Any device with a preamp can lead. On an X32 the documented trim covers digital sources only, so check it on a headamp-fed channel first.
- **Tested against mock desks only.** No real desk has followed a leader yet.

The full guide, with the rules, the desk survey and a first-rig checklist, is GAIN-LOCK.md.

Radio-mic telemetry

This is a separate binary, because the domain is a different shape. Telemetry is mostly reading (battery, RF and audio level are monitoring only, and mute is the only realistic write), so it has its own adapter trait rather than extending the preamp router.

```
cargo run --bin mic-monitor -- discover
cargo run --bin mic-monitor -- watch
```

mic-telemetry-architecture.md diagrams both vendors' wire protocols sequence by sequence, and shows what ends up in the reported state for each vendor.

Adding a device the bridge doesn't support

Device support loads two ways, and the router and the web UI can't tell them apart. The one that matters to you is **dynamic loading**: a plugin is a separate `.so` / `.dylib` / `.dll`, picked up from `--plugins-dir` (default `plugins`) at startup.

Adding a vendor needs no recompile of this project at all. Build your plugin, drop the file in and restart the bridge. All ten device kinds this repo ships already work this way.

plugin-development-guide.md has the full contract, two worked examples, and the pitfalls that turned up while building it.

Troubleshooting

Symptom	Cause
`discover` lists devices, `init` doesn't claim them	Discovery is Dante's mDNS; identification is per-adapter. A device can be visible and unsupported.
`init` identified a DM3 that isn't one	DM3 has no identify query; a scene-status request stands in as a presence probe. It is the weakest signal of the five.
`init` wrote a DM3 as `yamaha-dm3`, or missed a G3 or an AES70 device	`init` only probes five kinds, and its DM3 probe is the OSC one. For SCP, change the kind to `yamaha-dm3-scp` and the port to 49280 (or delete the port line). Add the others by hand.
A G3 receiver ignores gain changes	Wireless Systems Manager is running against it and holds the receiver's single write-master slot. Close it.
Gain moves the wrong channel	Channel numbering is per-protocol. On dLive especially, the Socket number is not the processing channel.
Inferred mappings are off by a channel or scrambled	The console has customised Dante patching, so Dante channel order no longer mirrors physical I/O.
Devices added in the web UI vanished after a restart	They are in-memory only. Use **Export as TOML** and keep it in `bridge.toml`.
A command bounces back and forth between two devices	Shouldn't happen — the router has echo suppression on bidirectional mappings. Worth reporting.
Web UI unreachable from another machine	`--web-bind` is set to loopback, or `--no-web` is on.
Wing preamps above 8 don't respond	Only the 8 built-in preamps are covered.
Lectrosonics receiver reports nothing	Expected — the wire format is an unverified placeholder.

See also

- plugin-development-guide.md: adding a device without a PR

- mic-telemetry-architecture.md: the telemetry domain in full
- yamaha-ha-remote-over-dante.md: the protocol note proven against real hardware
- yamaha-dm3-bench-2026-09-15.md and sennheiser-ewg3-bench-2026-09-15.md: the records of the hardware runs
- API.md · DEVELOPING.md
- Capture guides for helping build device emulation: Windows · macOS · Linux
- README: status tables, architecture and downloads
