Contourtonist user guide

Contourtonist is an equal-loudness compensation EQ that tracks how loud the room actually is. It measures the room from a calibrated measurement microphone or an SPL meter's live output, and applies the EQ curve that keeps the tonal balance the system was tuned for as the level moves.

So when a noise limit pulls the show down 8 dB, the bass doesn't go home with it.

> **Before you rely on this:** the ISO 226:2003 coefficients are transcribed from the standard and checked against it by the test suite; the filter bank's accuracy, the control loop's stability and the meter parsers are measured rather than asserted; the AU passes `auval`. But it has **never been used on a real system, with a real microphone, at a real show**. Nothing here has been checked against a reference sound level meter, and **no hardware calibrator has ever been connected**. Check it over before you use it on live gear.
>
> This codebase was created with AI assistance, directed and reviewed by a human author.

The idea

A mix balanced at 100 dB and played back at 88 dB hasn't just got quieter. Human hearing is less sensitive to low frequencies at low levels, and strongly so, which means a uniform 12 dB drop takes far more perceived bass away than it takes midrange. ISO 226:2003's equal-loudness contours describe that relationship.

Take the contour at the reference level, take the contour at the measured level, and the difference (normalised at 1 kHz) is the correction:

```
G(f) = (reference - current) - [ Lp(f, reference) - Lp(f, current) ]
```

At 1 kHz `Lp(1k, P) == P` by definition, so `G(1 kHz)` is identically zero.

> **The curve can only ever change tonal balance, never level.** That's arithmetic rather than a convention, and the test suite pins it. This is a system EQ, not a slow automatic fader.

How it is wired


The host owns the audio device, so a plugin instance can't open the measurement microphone itself. So Contourtonist comes in two halves:

- **The standalone owns the microphone and the calibration.** It measures a sliding short-term Leq and publishes the level over UDP.
- **Plugin instances subscribe to that level** and apply the curve to their own audio.

One microphone drives every instance in the session, which is what a live rig with several processing chains wants anyway.

A plugin *can* measure its own audio input instead. That's right in the standalone and usually wrong in a plugin, since a plugin listening to its own output is measuring the thing it's correcting. The GUI tells you so.

The window

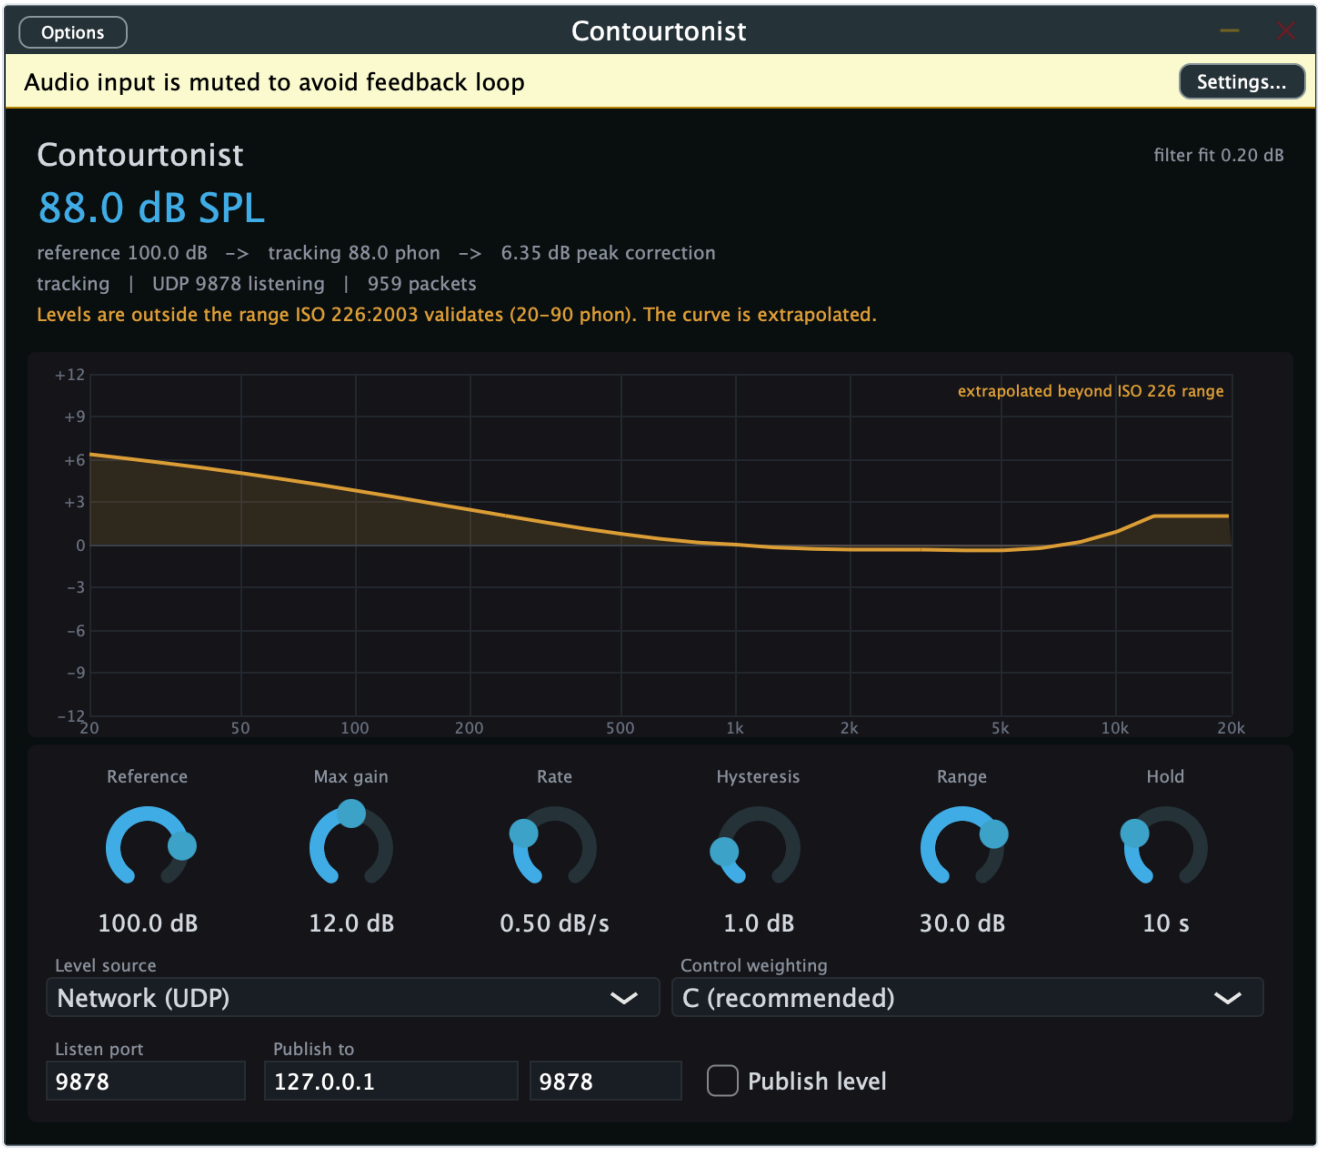

Reading from the top:

- **The big number** is the measured level, and the line under it is the whole chain in one sentence: `reference 100.0 dB → tracking 88.0 phon → 6.35 dB peak correction`.
- **The status line** (`tracking | UDP 9878 listening | 959 packets`) is where you find out whether levels are actually arriving. If the packet count has stopped moving, that's the fault.
- **The amber line** warns when the level is outside ISO 226's validated range and the curve is being extrapolated. See Known limits.
- `filter fit`, top right, is how closely the filter bank reproduces the ideal curve.
- **The curve** is the correction being applied, always passing through 0 dB at 1 kHz.

The banner at the very top, *"Audio input is muted to avoid feedback loop"*, appears in the standalone when it's both measuring and passing audio, which would otherwise be a microphone listening to the speaker it's driving.

The controls

Control	What it does
Reference	The level the system was tuned at. The curve is flat when the room reads this.
Max gain	Hard ceiling on the curve. Limiting **scales** the curve rather than clipping it, so its shape survives.
Rate	How fast the curve is allowed to move, in dB/s. Default 0.5. Audible EQ movement is worse than slightly stale compensation.
Hysteresis	Level change required before the curve responds at all. Stops it chasing normal programme variation.
Range	How far below the reference it will track. An unplugged microphone reads as a very quiet room; without this that becomes a demand for maximum boost.
Hold	How long the curve holds after levels stop arriving, before releasing to flat.

Level source picks where the measurement comes from; **Control weighting** picks the weighting used *for control*.

> **A-weighting is a poor control input.** It *is* an equal-loudness curve, so using it applies part of the correction twice. **C is the default, and the right answer.** Shows are still policed in dB(A), so the standalone measures what you need for compliance and controls on what's correct.

Listen port, **Publish to** and **Publish level** are the UDP plumbing between the standalone and the plugin instances.

Level sources

Source	Status
Generic UDP line protocol	**Tested**, over real sockets
This instance's audio input	Tested against synthetic signals
NTi XL2	Parser tested; **written from published docs, never seen an XL2**
Datalogger CSV	Parser tested, including European decimal separators
10EaZy	**Not implemented** — see meters.md

The UDP protocol

It's kept trivial on purpose, so any meter can drive it. One reading per datagram, as text:

```
95.3 A leq
```

A bare number works too. That means a meter Contourtonist has never heard of can drive it from a few lines of script, and `nc` makes a perfectly good diagnostic:

```
echo "88.0" | nc -u -w1 127.0.0.1 9878
```

To watch the curve move without a meter at all:

```
python3 -c "
import socket, time
s = socket.socket(socket.AF_INET, socket.SOCK_DGRAM)
for _ in range(120):
    s.sendto(b'88.0 C leq\n', ('127.0.0.1', 9878))
    time.sleep(0.25)
"
```

Safety

This sits across a live output and changes it based on a microphone listening to that same output. That's a closed loop, and it's built like one:

- **The loop is negative feedback.** More boost raises the measured level, which reduces the demanded boost. It converges rather than running away, and the controller tests simulate it across a range of acoustic couplings to show that it does.
- **Rate limited**, including on the very first measurement.
- **Hard ceiling**, applied by scaling the curve rather than clipping it.
- **Bounded tracking range**, so a dead microphone can't demand maximum boost.

- **Fails to flat.** If the level stops arriving, the curve holds for **Hold**, then releases to flat, which is the sound the system was tuned for.




It doesn't make up a measurement when it hasn't got one.

Known limits

- **ISO 226:2003 is validated from 20 to 90 phon** (80 phon above 5 kHz), and live sound runs above that. Strict conformance would mean no compensation at show level, so the default extrapolates beyond the validated range and says so, in the GUI and in the API. Turn **Extend past ISO 226** off for strict behaviour.
- **The contours are for pure tones in a free field**, and programme material is neither. Treating a measured broadband level as a loudness level is the approximation every loudness control has made since Fletcher and Munson, but it's still an approximation. A full loudness model (ISO 532) would be more correct and isn't implemented.

- **The filter bank fits the curve to about 0.44 dB** worst case at the 12 dB ceiling, 0.19 dB at 6 dB, concentrated at 20 Hz and above 10 kHz. Measured, not assumed.
- **The built-in weighting filters lose accuracy above 10 kHz** at 44.1/48 kHz, where a matched Z-transform aliases. It costs 0.31 dB on a broadband A-weighted reading of pink noise, which doesn't matter for the compensation and **does** matter if you're logging the number for compliance. Use a real meter for that, or run at 96 kHz. See weighting.md.

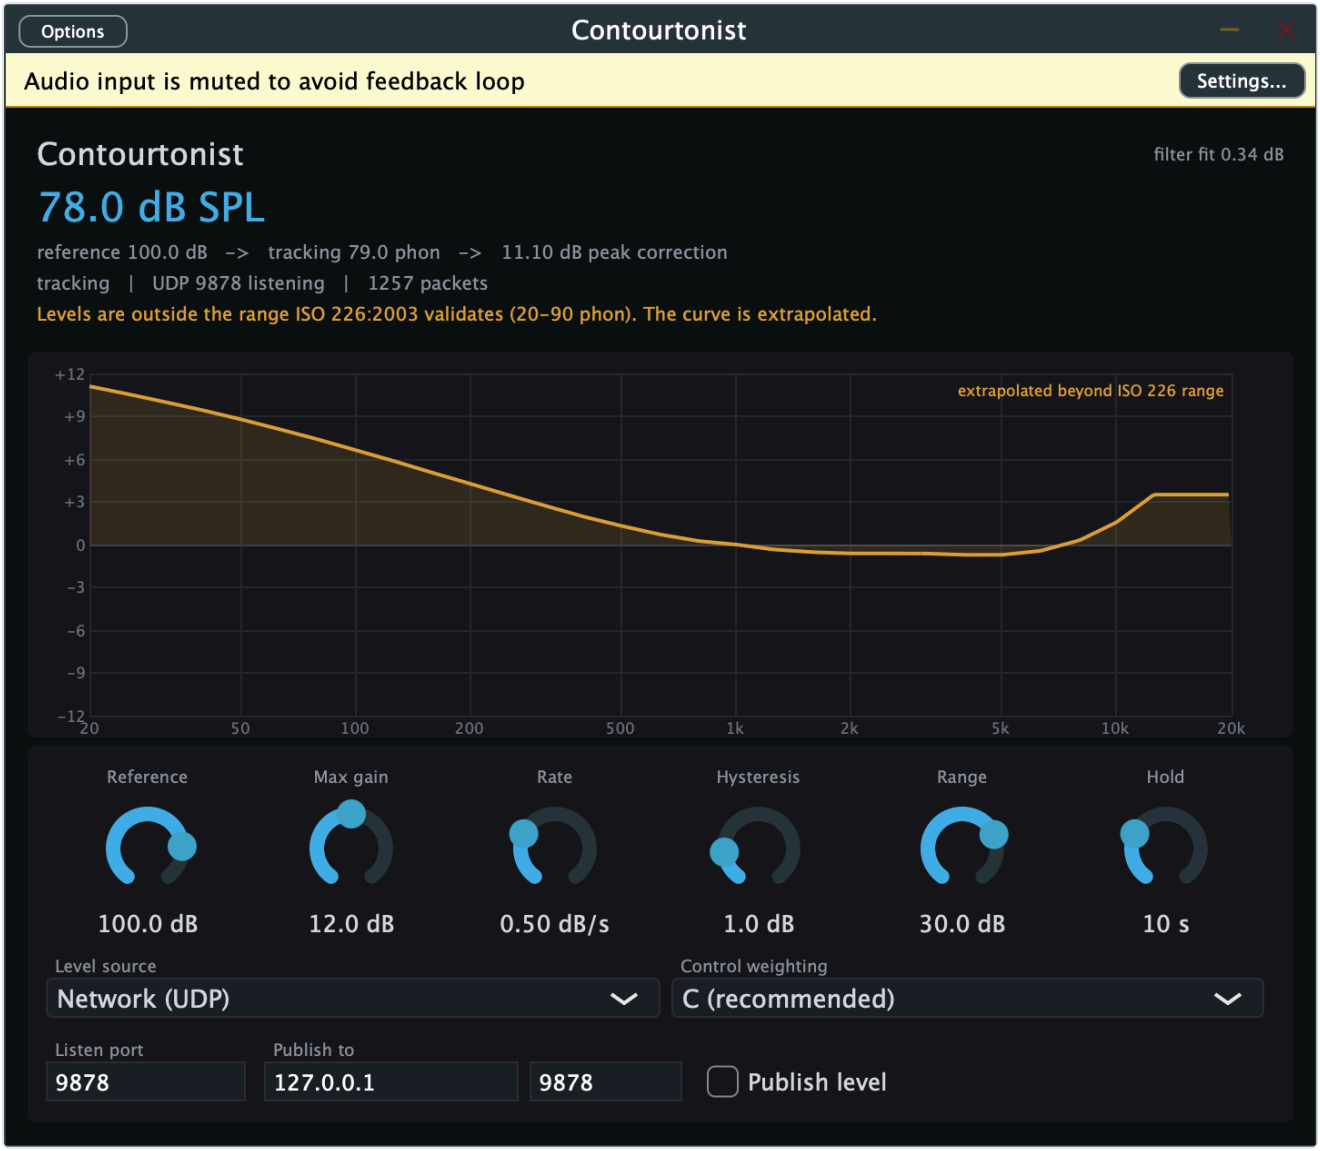

Installing the plugins on macOS

The macOS artefacts are **Developer ID-signed and notarised**, so a DAW's plugin scan accepts them and there's nothing to clear.

If you built the plugins yourself, or you're running a download from before that changed, they're quarantined instead, and a DAW *rejects* a quarantined plugin during its scan without telling you why. **Approving the outer bundle doesn't unquarantine what's nested inside it**, so clear each one yourself:

```
xattr -dr com.apple.quarantine "/Library/Audio/Plug-Ins/VST3/Contourtonist.vst3"
xattr -dr com.apple.quarantine "/Library/Audio/Plug-Ins/Components/Contourtonist.component"
xattr -dr com.apple.quarantine "/Applications/Contourtonist.app"
```

Installing the plugins on Windows

The installer puts the VST3 in `C:\Program Files\Common Files\VST3\`, which every VST3 host scans, and the standalone in `C:\Program Files\Contourtonist\`. From the `.zip`, copy `VST3\Contourtonist.vst3` into that VST3 folder yourself.

The v0.2.2 installer and older put the VST3 in `C:\Program Files\Contourtonist\VST3\` instead, where no host looks. Move it across by hand, or run a newer installer, which clears that copy away.

Troubleshooting

Symptom	Cause
Curve is flat and won't move	No levels arriving. Check the packet count in the status line, not the level readout.
Level reads dashes	Nothing has been received, or **Hold** has expired and it released to flat.
Curve moves too slowly to follow the show	That is **Rate**, and it is deliberate. Raise it knowing audible EQ movement is the cost.
Curve pegged at the ceiling	The room is far below **Reference**, or **Reference** is set too high for what you are actually running.
Amber "extrapolated" warning	Show levels are above ISO 226's validated 90 phon. Expected; turn off **Extend past ISO 226** for strict behaviour.
Plugin measures its own output and misbehaves	Level source is set to the instance's audio input. In a plugin you almost always want Network (UDP).
Standalone mutes its audio input	Deliberate — it is measuring and passing audio at once, which would be a feedback loop.
DAW's plugin scan rejects it on macOS	The releases are notarised, so suspect a self-built or older copy: quarantine, cleared on the `.vst3` and `.component` themselves, not just the app.
A-weighted compliance number disagrees with the meter	Above 10 kHz the built-in weighting aliases. Log from a real meter.

See also

- control-loop.md: the controller, its stability analysis and the simulation
- weighting.md: the weighting filters and where they lose accuracy
- meters.md: supported meters, and why 10EaZy isn't among them
- README: the idea, the status table and the download links
