



Stocker Online Requirement Document

Version. 2.31

Feb./8/2002

Issued by Selete

Contents

1	Introduction	5
1.1	Objectives	5
1.2	Back Ground.....	5
1.3	Reference Documents	6
2	Terminology	7
3	Compliance to SEMI standards	8
3.1	SECS communication	8
3.1.1	HSMS CONNECT MODE	8
3.2	Equipment Model	8
3.2.1	State Model List	9
3.2.2	Entities that have State Models	10
4	Data Items	11
4.1	SECS Data Items	11
4.2	Variable Table	14
4.2.1	VID Assignment of Variables	14
4.2.2	Variables For Stocker	15
4.2.3	PortTransferState and CurrentPort States	18
5	SECS Messages	19
5.1	Message List	19
6	Remote Commands.....	27
6.1	ABORT	27
6.2	CANCEL	28
6.3	INSTALL	29
6.4	LOCATE	30
6.5	PAUSE	31
6.6	REMOVE	31
6.7	RESUME	32
6.8	TRANSFER.....	33
7	Collection Events.....	35
7.1	CEID Assignment of Collection Events	35
7.2	Collection Events for Stocker	35
7.2.1	Control State Transition Events	35
7.2.2	SC State Transtion Events	36

7.2.3	Transfer Command State Transition Events	36
7.2.4	Carrier State Transition Events	36
7.2.5	Crane State Transition events	37
7.2.6	Other Events	37
7.2.7	Port State Transition events	37
7.3	Event Reports for Stocker	38
7.4	Supplements.....	40
7.4.1	CarrierWaitIn Event	40
7.4.2	ZoneCapacityChange Event	40
8	Carrier Location Information	41
8.1	Carrier Location Information in SECS Messages.....	41
8.1.1	Notation of Carrier Location in SECS Messages.....	41
8.1.2	Carrier Location in SECS Message	42
9	Interpretation of SEMI Standards.....	44
9.1	Control State Model for Stocker	44
9.2	VID, SVID and ECID.....	45
10	Distinction from SEMI Standards.....	46
11	Scenario.....	46
12	Revision History	47

List of Tables

Table 1 SEMI standards related to SECS communication	8
Table 2 SEMI standards related to Equipment Models	8
Table 3 SECS Data Items used by Stocker	11
Table 4 VID Assignment of Variables	14
Table 5 Variables used by Stocker, which are defined by GEM	15
Table 6 Variables used by Stocker, which are defined by Stocker SEM	16
Table 7 Values of PortTransferState	18
Table 8 SECS Messages Used by Stocker	19
Table 9 CEID Assignment of Collection Events	35

List of Figures

Figure 1 AMHS Framework	5
Figure 2 GEM Capabilities Required by Stocker SEM	9
Figure 3 Entities that Have State Model	10
Figure 4 Model for Stocker and Transfer Port	18
Figure 5 Control State Model of Stocker	44

1 Introduction

1.1 Objectives

This document specifies the Selete requirement for stocker online.

1.2 Back Ground

With 300mm semiconductor Fab line of the future, the fully automatic transport of the carrier in a line is demanded as a result of the request about the human engineering and the safety accompanied by the expansion of a wafer size, and the increase of the weight of 300mm wafer carrier. For this reason, AMHS equipment is required to be integrated organically and cost-effectively with a host system.

In order to attain this purpose, each AMHS equipment must use the common physical and logical interfaces so that AMHS equipment can be interoperable. In order to realize the logical interoperability, I300I and J300 proposed AMHS system configuration and AMHS integration system as shown in Figure 1 below at “6.2 AMHS framework” on CIM Global Joint Guidance. They also specified user requirement of AMHS integration system on “AMHS Framework User System requirement Document”.

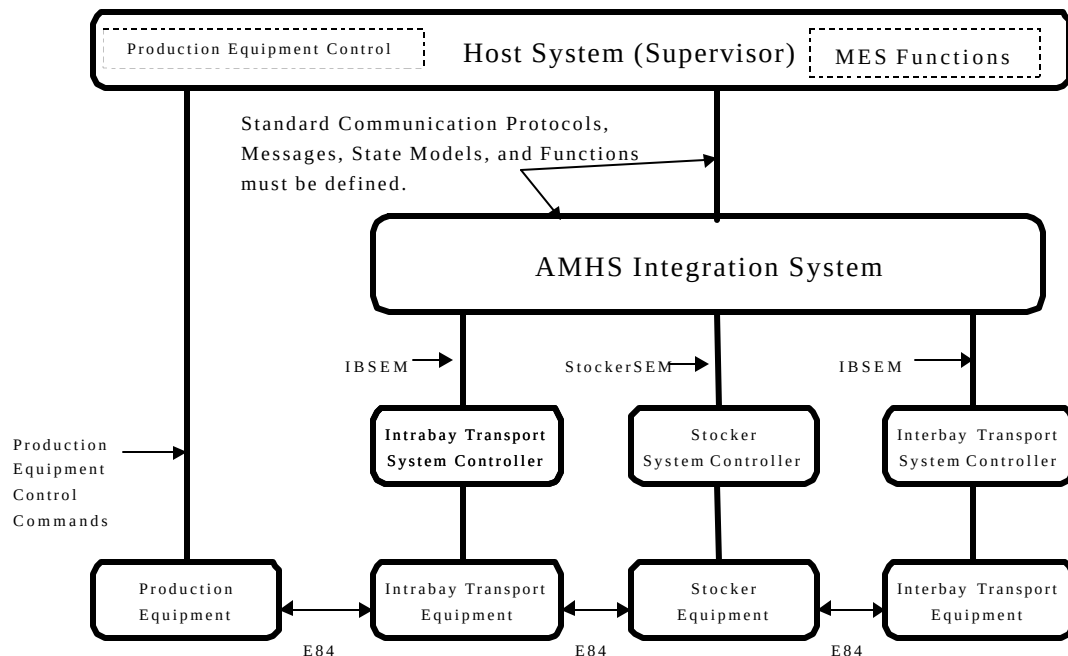


Figure 1 AMHS Framework

The above-mentioned AMHS framework specifies that the stocker should use Stocker SEM (SEMI E88 Specification for AMHS Storage SEM) as a communication interface with a host system (AMHS integration system).

In order to realize the interoperable stocker, Selete has analyzed the above-mentioned "AMHS Framework User System Requirement Document" and "SEMI E88 Specification for AMHS Storage SEM (Stocker SEM)." The result of analysis reveals the following.

- 1) In order to realize interoperability of a communication interface, additional specification is needed for Stocker SEM
- 2) Selete's interpretations must be fixed about the ambiguous points of the description of Stocker SEM itself.

This specification is intended to realize the online specification of interoperable stocker and to specify the additional Selete specification to Stocker SEM and the Selete interpretation.

1.3 Reference Documents

Selete AMHS Communications Scenario Document

Selete Intrabay/Interbay Transport System Online Requirement Document

Selete AMHS Communication Test Specification

Selete Integrator Requirement Document

I300I / J300 AMHS Framework User System Requirement Document

SEMI Doc E5 – SEMI Equipment Communications Standard2 Message Content (SECSII)

SEMI Doc E30 – Generic Model for Communications and Control of Manufacturing-Equipment(GEM)



SEMI Doc E37 – High-Speed SECS Message Services (HSMS) Generic Services

SEMI Doc E37.1 – HSMS Single Session Mode(HSMS-SS)

SEMI Doc E82 – Specification for Intrabay/Interbay AMHS SEM(IBSEM)

SEMI Doc E88 – Specification for AMHS Storage SEM (Stocker SEM)

2 Terminology

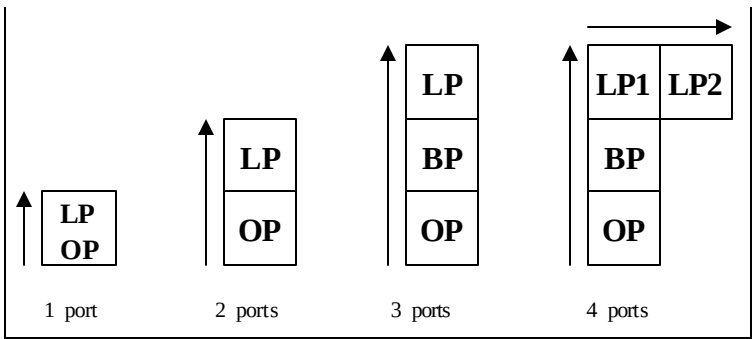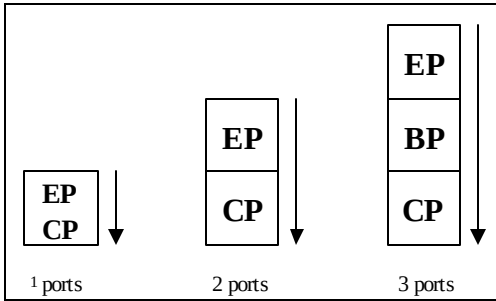Output Shuttle	It consist of OP (Output shuttle), BP (Buffer Port), and LP (Loading Port). According to the placement of port, it becomes as it is shown in the following figure.  The diagram illustrates four configurations of an Output Shuttle based on the number of ports. Each configuration is shown within a rectangular frame with an upward-pointing arrow on the left side. 1 port: A single box containing 'LP' and 'OP'. 2 ports: Two stacked boxes, the top one containing 'LP' and the bottom one containing 'OP'. 3 ports: Three stacked boxes, the top one containing 'LP', the middle one containing 'BP', and the bottom one containing 'OP'. 4 ports: Four stacked boxes. The top box is split into two sections, 'LP1' on the left and 'LP2' on the right, with a rightward-pointing arrow above it. Below this are three boxes containing 'BP' and 'OP' respectively. Below each frame is a label: '1 port', '2 ports', '3 ports', and '4 ports'.
Input shuttle	It consists of EP (Entering Port), BP (Buffer Port), and CP (Crane accessible Port). According to the number of ports, it becomes as it is shown in the following figure..  The diagram illustrates three configurations of an Input Shuttle based on the number of ports. Each configuration is shown within a rectangular frame with a downward-pointing arrow on the left side. 1 ports: A single box containing 'EP' and 'CP'. 2 ports: Two stacked boxes, the top one containing 'EP' and the bottom one containing 'CP'. 3 ports: Three stacked boxes, the top one containing 'EP', the middle one containing 'BP', and the bottom one containing 'CP'. Below each frame is a label: '1 ports', '2 ports', and '3 ports'.
Remote Command	It refers to "remote command" that is specified by Stocker SEM. TRANSFER command is one of the remote commands.
Buffer Port Crane Accessible Port	The location for the buffering at input and output of stocker. The port location that can be accessed by the stocker crane at the input shuttle of stocker.
Entering Port	The port location that can be accessed by the operator or the vehicle at the input shuttle of stocker.
Loading Port	The port location that can be accessed by the operator or the vehicle at the output shuttle of stocker.
Output Port	The port location that can be accessed by the stocker crane at the output shuttle of stocker.
Transfer Port	The location on the transport system at which a change of equipment ownership of the carrier occurs. Transfer Posts in a stocker are Entering Port. (EP) and Loading Port (LP).

3 Compliance to SEMI standards

3.1 SECS communication

- SECS communication between a stocker controller (SC) and a host system must be based on the following SEMI standards.

SEMI Standards	
SEMI Doc E5	SEMI Equipment Communications Standard2 Message Content (SECSII)
SEMI Doc E37	High-Speed SECS Message Services(HSMS) Generic Services
SEMI Doc E37.1	HSMS Single Session Mode(HSMS-SS)

Table 1 SEMI standards related to SECS communication

3.1.1 HSMS CONNECT MODE

- HSMS Connect Mode is required to perform in both active and passive mode.

3.2 Equipment Model

- A stocker controller (SC) must implement the equipment model based on the following SEMI standards.

SEMI Standards	
SEMI Doc E30	The Standard of SEMI is specified in the following sections listed in the standard of Generic Equipment Model(GEM) Chapter 1,2,3: All sections Chapter 4: Section 4.1,4.2.1,4.2.2,4.2.5,4.2.6,4.3,4.5,4.7,4.8,4.9,4.10,4.12 Chapter 8: All sections
SEMI Doc E88	Specification for AMHS Storage SEM (Stocker SEM)

Table 2 SEMI standards related to Equipment Models

[Note 1]

- The "14 GEM Capabilities" of Stocker SEM specifies GEM function specified by Stocker SEM. Refer to the table on the following page. When we show the description of performance that is marked by X, among the fundamental GEM requirements and the additional capabilities in the table on the following table, then the result will be as, shown in the above-mentioned table.

GEM fundamental requirements	Additional capabilities	
State Model	Establish Communications	X
Equipment Processing State	Dynamic Event Report Configuration	X
Host-initiated S1F13/F14 Scenario	Variable Data Collection	
Event report	Trace Data Collection	
Online Confirmation	Status Data Collection	X
Error Message	Alarm Management	X
Control(operator-initiated)	Remote Control	
Documentation	Equipment Constants	X
	Process Program Management	
	Material Movement	X
	Equipment Terminal Service	X
	Clock	X
	Limits Monitoring	
	Spooling	
	Control(host-initiated)	X

Figure 2 GEM Capabilities Required by Stocker SEM

3.2.1 State Model List

- The state models that SC should implement are described in both SEM and GEM, and since they are incomprehensible, they are listed here.
 - 1) Communication state model (refer to GEM 3.2 Communication State model)
 - 2) Control state model (refer to GEM 3.3 Control State model)
 - 3) SC state model (refer to SEM 8.2 SC State Model)
 - 4) Transfer command state model (refer to SEM 8.3 TRANSFER Command State Model)
 - 5) Carrier state model (refer to SEM 8.4 Stocker Carrier State Model)
 - 6) Crane state model (refer to SEM 8.5 Stocker Crane State Model)
- In addition to these, SC has the state model of HSMSSS
(Refer to 5. "Summary and State Machine of HSMSSS" in "SEMI DOC.E37.1 HSMS-SS")

3.2.2 Entities that have State Models

- The entity that owns the above-mentioned state model is shown in the following figures. For example, the above-mentioned 3) SC state model has one model for one SC. The 5) Carrier state model has one model for each carrier within a stocker. In that sense, the entity that owns SC state model is SC, while the entity that owns a carrier state model is a carrier.

This shows how it should be seen from a host, and it is outside this specification whether or not it is implemented actually in this way.

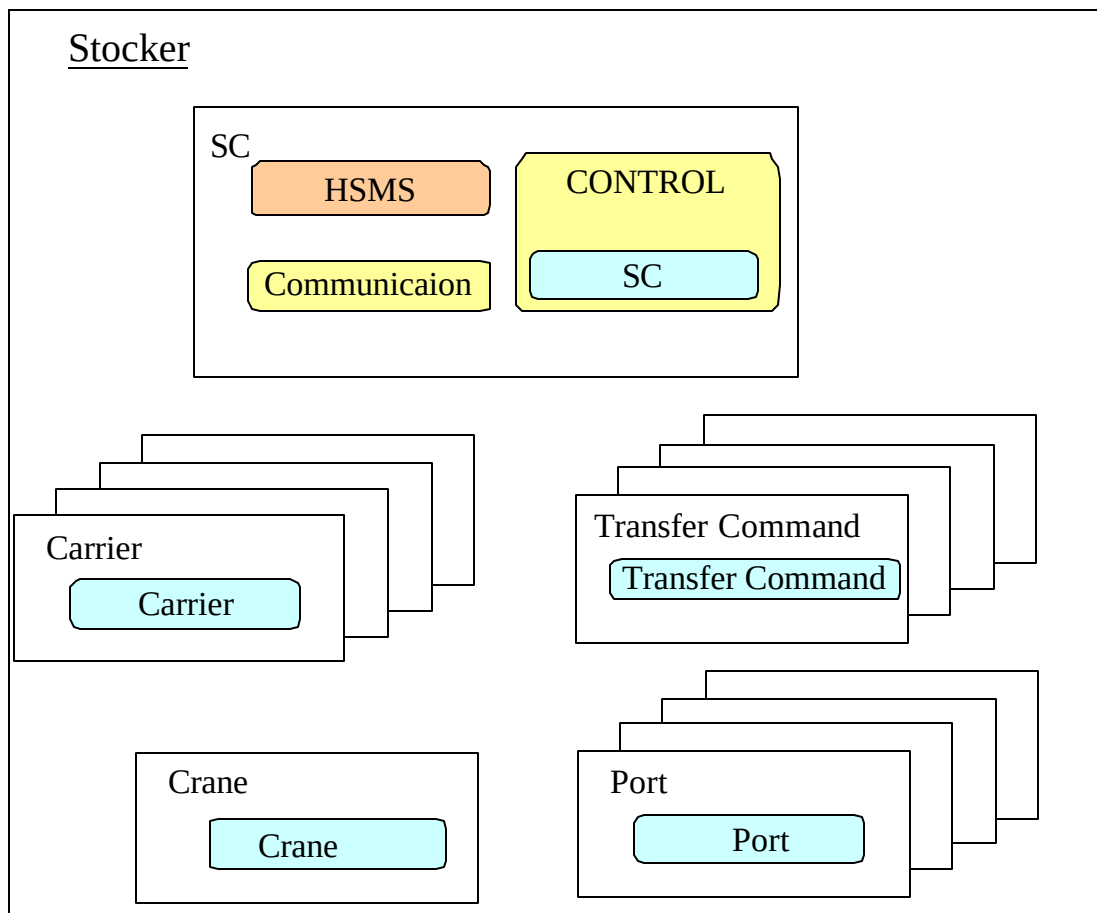


Figure 3 Entities that have State Model

4 Data Items

This chapter explains SECS message data item that is used by the stocker.

4.1 SECS Data Items

The data items of SECS message that are used by the stocker is shown in next table.

Item description of a table

Name : The name of a data item

Format : The format of the value of a data item

Size : The size of the value of a data item

Description : Description of a data item, or the range of data value

Table 3 SECS Data Items used by Stocker

Name	Format	Size	Description
ACKC5	B	1	0=Accepted >0=Error; Not accepted 1-63 Reserved
ACKC6	B	1	0=Accepted >0= Error; Not accepted 1-63 Reserved
ACKC10	B	1	0=Accepted 1=Messages will not be displayed 2=Terminal not available 3-63 Reserved
ALCD	B	1	bit8=1 Alarm Set bit8=0 Alarm Cleared bit1-7=0 Alarm not in use
ALED	B	1	bit8=1 Enable Alarm bit8=0 Disable Alarm
ALID	U4		Alarm identification
ALTX	A	Max40	Alarm text limited to 40 characters
CEED	BOOLEAN	1	False = Disable True = Enable
CEID	U4		Collected Event ID
CEPACK	L,U1		0=No Error 1=Parameter name (CPNAME) does not exist 2= Illegal value specified for CEPVAL 3=Illegal value specified for CEPVAL 4=Parameter name (CPNAME) not valid as used
CEPVAL	A,B,BOOLEAN, Fx,Ix,J,L,Ux		Command Enhanced Parameter Value
COMMACK	B	1	0=Accepted 1=Denied, Try Again 2-63 Reserved
CPACK	B	1	0=Accepted 1= Parameter name (CPNAME) does not exist 2=Illegal value specified for CPVAL 3=Illegal format specified for CPVAL >3=Other equipment -specific error 4-63 Reserved
CPNAME	A	Max40	Command Parameter Name
CPVAL	A,B,BOOLEAN, Fx,Ix,J,Ux		Command Parameter value
DATAID	U4		Data ID Integrator normally send messages with DATAID=0

Name	Format	Size	Description
DRACK	B	1	0=Accepted 1=Denied,Insufficient space 2=Denied,Invalid format 3=Denied,At least one RPTID already defined 4=Denied,At least VID does not exist >4=Other errors 5-63 Reserved
EAC	B	1	0=Accepted 1=Denied,At least one constant does not exist 2=Denied,Busy 3=Denied,At least one constant out of range >3=Other equipment – specific error 4-63Reserved
ECDEF	A,B,BOOLEAN, Fx,Ix,J,Ux		Equipment constant default value
ECID	U4		Equipment constant ID
ECMAX	A,B,BOOLEAN, Fx,Ix,J,Ux		Equipment constant maximum value
ECMIN	A,B,BOOLEAN, Fx,Ix,J,Ux		Equipment constant minimum value
ECNAME	A		Equipment constant name
ECV	A,B,BOOLEAN, Fx,Ix,J,Ux		Equipment constant value
ERACK	B	1	0=Accepted 1=Denied,At least one CEID does not exist >1=Other Errors 2-63 Reserved
HACK	B	1	0=Acknowledge,command has been performed (Stocker will use value of 4 instead of 0) 1=Command does not exist 2=Can not perform now 3=At least one parameter is invalid 4=Acknowledge,Command will be performed with completion signaled later by an event 5=Rejected, Already in desired condition 6=No such object exists 7-63 Reserved
LRACK	B	1	0=Accepted 1=Denied,Insufficient space 2=Denied,Invalid format 3=Denied,At least one CEID link already denied 4=Denied,At least one CEID does not exist 5=Denied,At least one RPTID does not exist >5= Other errors 6-63 Reserved
MDLN	A	Max6	Equipment model type, 6 bytes max
MEXP	A		SxxFyy
MHEAD	B		SECS message block header associated with message block in error
OBJSPEC	A		A test string that has an internal format and that is used to point to a specific object instance Integrator always have to set “Null” for OBJSPEC and send it
OFLACK	B		0=Off-line Accepted 1-63Reserved

Name	Format	Size	Description
ONLACK	B		0=Off-line Accepted 1=On-line not allowed 2=Equipment already On-line 3-63Reserved
RCMD	A		Remote command code or string
RPTID	U4		Report ID
SHEAD	B	Max6	Stored header related to the transaction timer
SOFTREV	A		Software revision code
SV	A,B,BOOLEAN, Fx,Ix,J,L,Ux		Status variable value
SVID	U4		Status variable ID
SVNAME	A		Status variable name
TEXT	A		Single line of characters
TIACK	B	1	Equipment Acknowledgement code 0=Correct 1=Error,Too many SVIDs 2-63 Reserved
TID	B	1	0=Single or main terminal >0=Additional terminals at the same equipment
TIME	A	16	YYMMDDhhmmsscc
UNITS	A		As allowed by SEMI E5 Section 9
V	A,B,BOOLEAN, Fx,Ix,J,L,Ux		Variable data
VID	U4		Variable

4.2 Variable Table

This section explains the variable and VID of stocker.

4.2.1 VID Assignment of Variables

The number system of VID that is assigned to the variable of stocker is shown in next table.

Table 4 VID Assignment of Variables

Variable type	VID
VID assigned by Selete Spec.	1--300
Variable defined by GEM	1--50
Variable defined by SEM	51--200
Variable defined by Selete Spec.	201--300
VID assigned by Supplier	301--

Note: Even if it is the variable defined by GEM or SEM, when VID is not defined by Selete specification but VID is defined uniquely by the supplier, the number after No. 301 is assigned.

4.2.2 Variables For Stocker

The variable for stocker is shown below.

Item description of a table

VID : ID of a variable
 Variable name : The name of a variable
 Class : The class of a variable data
 Format : The format of a variable data
 Description : Description of a variable

Table 5 Variables used by Stocker, which are defined by GEM

VID	Variable Name	Class	Format	Description
1	AlarmID	DVVAL	<U4>	Alarm ID
2	EstablishCommunicationsTimeout	ECV	<U2>	Time Interval for sending a S1F13 message when establishing communication
3	AlarmsEnabled	SV	<L <ALID> ...>	Enable Alarm list
4	AlarmsSet	SV	<L <ALID> ...>	ACTIVE Alarm list
5	Clock	SV	<A[16]>	Current Time
6	ControlState	SV	B,U1	1=Off-line/Equipment Off-line 2=Off-line/in the process of Off-line 3=Off-line/Host Off-line 4=On-line/Local 5=On-line/Remote
7	EventsEnabled	SV	<L <CEID> ...>	Enabled event list

Table 6 Variables used by Stocker, which are defined by Stocker SEM

VID	Variable Name	Class	Format	Description
51	ActiveCarriers	SV	<L <CarrierInfo> ...>	List current status of all carrier information in the SC Database
52	ActiveTransfers	SV	<L <TransferCommand> ...>	List current status of all active transfer commands
53	ActiveZones	SV	<L <ZoneData> ...>	List current status associated with all zones being used by the SC
54	CarrierID	DVVAL	<A[1..64]>	Unique ID of carrier
55	CarrierInfo	DVVAL	<L[2] <CarrierID><CarrierLoc>>	All database information associated with a particular carrier
56	CarrierLoc	DVVAL	<A[1..64]>	Unique location of the carrier within the stocker as reported by the SC
57	CommandName	DVVAL	<A[1..20]>	Name of Host issued remote command
58	CommandID	DVVAL	<A[1..64]>	Remote Command ID
59	CommandInfo	DVVAL	<L[2] <CommandID><Priority>>	Command information associated with a particular transfer command
60	Dest	DVVAL	<A[1..64]>	Destination location identifier
61	EmptyCarrier	DVVAL	<U2>	Flag which denotes whether the carrier is empty or not empty 0=Empty 1=Not Empty
62	EqpName	ECV	<A[1..32]>	Unique ID of the SC
63	ErrorID	DVVAL	<A[1..64]>	Unique ID of an error
64	HandoffType	DVVAL	<U2>	Denotes the type of handoff that occurred at the equipment ownership transfer point 1=MANUAL2=AUTOMATED
65	IDReadStatus	DVVAL	<U2>	Result Code of an ID read event 0=Success 1=Failure 2=Duplicate 3=Mismatch
66	PortType	DVVAL	<A[1..32]>	Definition of the type of port associated with the carriers current location OP/BP/LP
67	Priority	DVVAL	<U2>	Remote command priority 1--99 Available for use 1:Lowest,99:Highest
68	RecoveryOptions	DVVAL	<A[1..64]>	List of options that the Host may use to try to recover specific stocker error
69	ResultCode	DVVAL	<U2>	Result code of a stocker system command associated with the command completion event
70	Source	DVVAL	<A[1..64]>	Source location unique identifier
71	StockerUnitID	SV	<A[1..32]>	Unique identification of a stocker unit (Port, Transfer agent)

Stocker Online Requirement Document (Version. 2.31)

72	StockerUnitInfo	DVVAL	<L[2] <StockerDeviceID> <StockerDeviceState>>	Information associated with a particular stocker unit
73	StockerUnitState	DVVAL	<U2>	The state of the stocker unit
74	TransferCommand	DVVAL	<L[2] <CommandInfo> <TransferInfo>>	Information associated with a particular Transfer command
75	TransferInfo	DVVAL	<L[3] <CarrierID><CarrierLoc><Dest>>	Carrier information associated with a particular Transfer command
76	ZoneCapacity	DVVAL	<U2>	Available capacity of a particular zone
77	ZoneData	DVVAL	<L[2] <ZoneName><ZoneCapacity>>	Information associated with a particular zone
78	ZoneName	DVVAL	<A[1..64]>	Alphanumeric name of a particular zone
79	SCState	SV	<U2>	SCState 1=SCInit, 2=Paused, 3=Auto, 4=Pausing
80	PortID	DVVAL	<A[1..64]>	Transfer Port ID
81	CurrentPortStates	SV	<L <L[2] <A[1..64] PortID> <U2 PortTransferState> > ... >	The IDs and state of all Ports in a stocker are returned.

4.2.3 PortTransferState and CurrentPortStates

PortTransferState represents a state that Transfer Port has.

CurrentPortStates is a list of “PortID” and “PortTransferState” in all TransferPorts that a Stocker has.

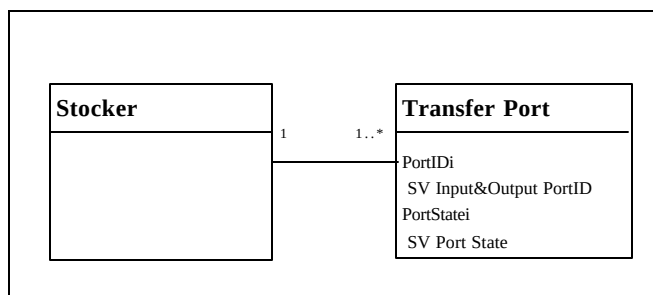


Figure 4 Model for Stocker and Transfer Port

The values that PortTransferState can take are shown in the following table.

Table 7 Values of PortTransferState

Variable	Value	State	
PortTransferState	2	Normal InService	A state in which input/output to and from the shelf can be performed normally.
	1	Abnormal OutOfService	An abnormal state Even when a carrier input from or output to the Transfer Port cannot be performed due to irregularities in portions other than the Transfer Port, SC regards the Transfer Port's PortTransferState as irregular. Example: When BP fails at an output port, SC regards the related LP1 and LP2 as out-of-service respectively, and performs an event-reporting. (See below)

5 SECS Messages

This chapter explains the stream and the function of SECS message that are used by the stocker.

5.1 Message List

SECS message that is supported by the stocker as a minimum is shown in the next table. A Selete's assuming integrator supports SECS messages that are marked by "X" in the column of "Use" in the table.

Item description of a table

- SECS : The stream and the function of a message.
- Use : The message used by a Selete's assuming integrator is marked with "X."
- Transmission : The message sent to a Stocker from an integrator is marked with "H."
The message sent to an integrator from a Stocker is marked with "E."
- Format : The message format that is shown in the message definition of SEMI E5.
- Example of data : The example of data of a message is described in SML* format.

Table 8 SECS Messages Used by Stocker

SECS	Use	Send	Format	Example
S1F1	X	H,E	S1F1 W . /* Header only */	S1F1 W .
S1F2	X	H	S1F2 <L>.	S1F2 <L>.
	X	E	S1F2 <L [2] <A MDLN > <A SOFTREV > >.	S1F2 <L [2] <A 'AMHS'> <A 'VER1.0'> >.
S1F3	X	H	S1F3 W <L <U4 SVID> ... >.	S1F3 W <L [2] <U4 6> /* ControlState*/ <U4 5> /* Clock */ >.

*SML (r) is a registered trademark, and SECS Message Language (tm) is a trademark of GW Associates, Inc.

SECS	Use	Send	Format	Example
S1F4	X	E	S1F4 <L <SV> ... >.	S1F4 <L [2] <U1 5> /* ControlState */ <A[16] '2002011710334600'> /* Clock */ >
S1F11	-	H	S1F11 W <L <U4 SVID> ... >.	S1F11 W <L [1] <U4 6> /* SVID(ControlState) */ >.
S1F12	-	E	S1F12 <L <L [3] <U4 SVID> <A SVNAME> <A UNITS> > ... >.	S1F12 <L [1] <L [3] <U4 6> /* SVID */ <A 'ControlState'> /* SVNAME */ <A "> /* UNITS */ > >.
S1F13	X	H	S1F13 W <L>.	S1F13 W <L>.

SECS	Use	Send	Format	Example
	X	E	S1F13 W <L [2] <A MDLN> <A SOFTREV> >.	S1F13 W <L [2] <A 'AMHS'> <A 'VER1.0'> >.
S1F14	X	H	S1F14 <L [2] <B COMMACK> <L> >.	S1F14 <L [2] <B 0x00> <L> >.
	X	E	S1F14 <L [2] <B COMMACK> <L [2] <A MDLN> <A SOFTREV> >.	S1F14 <L [2] <B 0x00> <L [2] <A 'AMHS'> <A 'VER1.0'> >.
S1F15	X	H	S1F15 W . /* Header only */	S1F15 W .
S1F16	X	E	S1F16 <B OFLACK>.	S1F16 <B 0x00>.
S1F17	X	H	S1F17 W . /* Header only */	S1F17 W .
S1F18	X	E	S1F18 <B ONLACK>.	S1F18 <B 0x00>.
S2F13	-	H	S2F13 W <L <U4 ECID> ... >.	S2F13 W <L [1] <U4 2> /* ECID(Establish Communication Timeout) */ >.
S2F14	-	E	S2F14 <L <Ux ECV> ... >.	S2F14 <L [1] <U2 10> /* ECV */ >.
S2F15	-	H	S2F15 W <L <L [2] <U4 ECID> <Ux ECV> > ... >.	S2F15 W <L [1] <L [2] <U4 2> /* ECID(Establish Communication Timeout) */ <U2 20> /* ECV */ > >.
S2F16	-	E	S2F16 <B EAC>.	S2F16 <B 0x00>.
S2F17	X	HE	S2F17 W . /* Header only */	S2F17 W .
S2F18	X	HE	S2F18 <A TIME>.	S2F18 <A '1999123123595999'>.
S2F29	-	H	S2F29 W <L <U4 ECID> ... >.	S2F29 W <L [1] <U4 2> /* ECID(Establish Communication Timeout) */ >.

SECS	Use	Send	Format	Example
S2F30	-	E	S2F30 <L <L [6] <U4 ECID> <A ECNAME> <Ux EDMIN> <Ux ECMAX> <Ux ECDEF> <A UNITS> > ... >.	S2F30 <L [1] <L [6] <U4 2> /* ECID */ <A 'Establish Communications Timeout'> /* ECNAME */ <U2 0> /* EDMIN */ <U2 XXX> /* ECMAX */ <U2 10> /* ECDEF */ <A "> /* UNITS */ >.
S2F31	-	H	S2F31 W <A TIME>.<	S2F31 W <A '1999123123595999'>.<
S2F32	-	E	S2F32 <B TIACK>.<	S2F32 <B 0x00>.<
S2F33	X	H	S2F33 W <L [2] <U4 DATAID> <L <L [2] <U4 RPTID> <L <U4 VID> ... > > ... > >.	S2F33 W <L [2] <U4 0> /* DATAID */ <L [2] /* Two kinds of report format */ <L [2] <U4 1> /* RPTID */ <L [1] <U4 62> /* VID(EqpName) */ > > <L [2] <U4 2> /* RPTID */ <L [2] <U4 62> /* VID(EqpName) */ <U4 74> /* VID(TransferCommand) */ > > > > >.
S2F34	X	E	S2F34 <B DRACK>.<	S2F34 <B 0x00>.<
S2F35	X	H	S2F35 W <L [2] <U4 DATAID> <L <L [2] <U4 CEID> <L <U4 RPTID> ... > > ... > >.	S2F35 W <L [2] <U4 0> /* DATAID */ <L [2] /* Two types of event */ <L [2] <U4 3> /* CEID(Control State Remote) */ <L [1] <U4 1> /* RPTID */ > > <L [2] <U4 108> /* CEID(TransferInitiated) */ <L [2] <U4 1> /* RPTID */ > > > > >.

SECS	Use	Send	Format	Example
S2F36	X	E	S2F36 <B LRACK>.	S2F36 <B 0x00>.
S2F37	X	H	S2F37 W <L [2] <BOOLEAN CEED> <L <U4 CEID> ... > >.	S2F37 W <L [2] <BOOLEAN T> /* CEED */ <L [2] /* Two types of event */ <U2 4> /* CEID(Control State Remote) */ <U4 108> /* CEID(TransferInitiated) */ > >.
S2F38	X	E	S2F38 <B ERACK>.	S2F38 <B 0x00>.
S2F41	X	H	S2F41 W <L [2] <A RCMD> <L <L [2] <A CPNAME> <A CPVAL> > ... > >.	S2F41 W <L [2] <A 'CANCEL'> /* RCMD */ <L [1] <L [2] <A 'COMMANDID'> /* CPNAME */ <A '1999110112000000'> /* CPVAL */ > > >.
S2F42	X	E	S2F42 <L [2] <B HBACK> <L <L [2] <A CPNAME> <B CPACK> > ... > >.	/*No Error exist S2F42 <L [2] <B 0x00> /* HBACK */ <L [0] > >. /*Invalid parameter exist S2F42 <L [2] <B 0x03> /* HBACK */ <L [1] <L [2] <A 'CPNAME1'> /* CPNAME */ <B 0x01> /* CPACK */ > > >.

SECS	Use	Send	Format	Example
				>.
S5F1	X	E	S5F1 W <L [3] <B ALCD> <U4 ALID> <A ALTX> >.	S5F1 W <L [3] <B 0x80> /* ALCD */ <U4 1> /* ALID */ <A 'ALARM TEXT'> /* ALTX */ >.
S5F2	X	H	S5F2 <B ACKC5>.	S5F2 <B 0x00>.
S5F3	X	H	S5F3 W <L [2] <B ALED> <U4 ALID> >.	S5F3 W <L [2] <B 0x80> /* ALED */ <U4 1> /* ALID */ >.
S5F4	X	E	S5F4 <B ACKC5>.	S5F4 <B 0x00>.
S5F5	-	H	S5F5 W <U4 ALID ...>.	S5F5 W <U4 [2] 1 2>. /* Two ALIDs */
S5F6	-	E	S1F12 W <L <L [3] <B ALCD> <U4 ALID> <A ALTX> > ... >.	S1F12 W <L [2] <L [3] <B 0x80> /* ALCD */ <U4 1> /* ALID */ <A 'ALARM TEXT'> /* ALTX */ > <L [3] <B 0x00> /* ALCD */ <U4 2> /* ALID */ <A 'ALARM TEXT2'> /* ALTX */ > >.

SECS	Use	Send	Format	Example
S6F11	X	E	S6F11 W <L [3] <U4 DATAID> <U4 CEID> <L <L [2] <U4 RPTID> <L <V> ... > > ... > >.	S6F11 W <L [3] <U4 0> /* DATAID */ <U4 3> /* CEID(Control State Remote) */ <L [1] <L [2] <U4 1> /* RPTID */ <L [1] <A 'AMHS001'> /* V(EqpName) */ > > > >.
S6F12	X	H	S6F12 <B ACKC6>.	S6F12 <B 0x00>.
S9F1	X	E	S9F1 <MHEAD>.	S9F1 <B 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00>.
S9F3	X	E	S9F3 <MHEAD>.	S9F3 <B 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00>.
S9F5	X	E	S9F5 <MHEAD>.	S9F5 <B 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00>.
S9F7	X	E	S9F7 <MHEAD>.	S9F7 <B 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00>.
S9F9	X	E	S9F9 <SHEAD>.	S9F9 <B 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00>.
S9F11	X	E	S9F11 <MHEAD>.	S9F11 <B 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00 0x00>.
S10F3	X	H	S10F3 W <L [2] <B TID> <A TEXT> >.	S10F3 W <L [2] <B 0x00> /* TID */ <A 'SCREEN TEXT'> /* TEXT */ >.
S10F4	X	E	S10F4 <B ACKC10>.	S10F4 <B 0x00>.

6 Remote Commands

This chapter explains the remote command that is supported by the stocker.

6.1 ABORT

CPNAME	CPVAL	
	Format	Comment
COMMANDID	A[1..64]	Command parameter name for transfer remote command

SECS communication format

```

S2F41 W
<L [2]
  <A 'ABORT'> /* RCMD */
  <L [1]
    <L [2]
      <A 'COMMANDID'> /* CPNAME */
      <A CommandID> /* CPVAL */
    >
  >
>.

S2F42
<L [2]
  <B 0x00> /* HCACK */
  <L [0]
  >
>.
```

6.2 CANCEL

CPNAME	CPVAL	
	Format	Comment
COMMANDID	A[1..64]	Command parameter name for transfer remote command

SECS Communication format

```

S2F41 W
<L [2]
  <A 'CANCEL'> /* RCMD */
  <L [1]
    <L [2]
      <A 'COMMANDID'> /* CPNAME */
      <A CommandID> /* CPVAL */
    >
  >
>.
```

```

S2F42
<L [2]
  <B 0x00> /* HCACK */
  <L [0]
  > >.
```

6.3 INSTALL

CPNAME	CPVAL	
	Format	Comment
CARRIERID	A[1..64]	Carrier ID for registering or alternating Carrier information
CARRIERLOC	A[1..64]	Carrier location for registering or alternating Carrier information

SECS Communication format

```

S2F41 W
<L [2]
  <A 'INSTALL'> /* RCMD */
  <L [2]
    <L [2]
      <A 'CARRIERID'> /* CPNAME */
      <A CarrierID> /* CPVAL */
    >
    <L [2]
      <A 'CARRIERLOC'> /* CPNAME */
      <A CarrierLoc> /* CPVAL */
    >
  >
>
>.
```

```

S2F42
<L [2]
  <B 0x00> /* HCAACK */
  <L [0]
  >
>.
```

6.4 LOCATE

CPNAME	CPVAL	
	Format	Comment
CARRIERID	A[1..64]	Set Carrier ID that you would like to know it's current location.

SECS Communication format

```

S2F41 W
<L [2]
  <A 'LOCATE'> /* RCMD */
  <L [1]
    <L [2]
      <A 'CARRIERID'> /* CPNAME */
      <A CarrierID> /* CPVAL */
    >
  >
>.

S2F42
<L [3]
  <B 0x00> /* HBACK */
  <L [0]
  >
>.
```

6.5 PAUSE

CPNAME	CPVAL	
	Format	Comment
None		

SECS Communication format

```

S2F41 W
<L [2]
  <A 'PAUSE'> /* RCMD */
  <L [0]
  >
>.

```

```

S2F42
<L [2]
  <B 0x00> /* HBACK */
  <L [0]
  >
>.

```

6.6 REMOVE

CPNAME	CPVAL	
	Format	Comment
CARRIERID	A[1..64]	

SECS Communication format

```

S2F41 W
<L [2]
  <A 'REMOVE'> /* RCMD */
  <L [1]
    <L [2]
      <A 'CARRIERID'> /* CPNAME */
      <A 'Carrier1'> /* CPVAL */
    >
  >
>.

```

```

S2F42
<L [2]
  <B 0x00> /* HBACK */
  <L [0]
  >
>.

```

6.7 RESUME

CPNAME	CPVAL	
	Format	Comment
None		

SECS Communication format

```

S2F41 W
<L [2]
  <A 'RESUME'> /* RCMD */
  <L [0]
  >
>.
```

```

S2F42
<L [2]
  <B 0x00> /* HCACK */
  <L [0]
  >
>.
```

6.8 TRANSFER

CPNAME	CPVAL	
	Format	Comment
COMMANDINFO	L[2]	
COMMANDID	A[1..64]	
PRIORITY	U2	0=Not valid 1=Lowest 99=Highest
TRANSFERINFO	L[3]	
CARRIERID	A[1..64]	
SOURCE	A[1..64]	Transfer Source(can be omitted) • input port • ZoneName • Location of Storage
DEST	A[1..64]	Destination • Loading port(LP) • ZoneName

SECS Communication format

```

S2F49 W
<L [4]
  <U4 0> /* DATAID */
  <A "> /* OBJSPEC */
  <A 'TRANSFER'> /* RCMD */
  <L [2]
    <L [2]
      <A 'COMMANDINFO'>
      <L [2]
        <L [2]
          <A 'COMMANDID'>
          <A CommandID>
        >
        <L [2]
          <A 'PRIORITY'>
          <U2 Priority>
        >
      >
    >
  >
  <L [2]
    <A 'TRANSFERINFO'>
    <L [3]
      <L [2]
        <A 'CARRIERID'>
        <A CarrierID>
      >
      <L [2]
        <A 'SOURCE'>
        <A Source>
      >
      <L [2]
        <A 'DEST'>
    >
  >

```

```
S2F50
<L [2]
    <B 0x00> /* HCACK */
    <L [0]
    >
>.
```

7 Collection Events

The stocker supports the event report that is based on "Dynamic Event Report Configuration" described in GEM. This chapter explains the event that is used by the stocker.

7.1 CEID Assignment of Collection Events

The number system of CEID that is assigned to the event of stocker is shown in next table.

Table 9 CEID Assignment of Collection Events

Event Type	CEID
CEID assigned by Selete Spec.	1--600
Event defined by GEM	1--50
Event defined by SEM	51--500
Event defined by Selete Spec.	501--600
CEID assigned by Supplier	601--

Note: Even if it is the event defined by GEM or SEM, when CEID is not defined by Selete specification but CEID is defined uniquely by the supplier, then the number after No. 601 is assigned.

7.2 Collection Events for Stocker

This section explains the classification of event that is used by the stocker.

7.2.1 Control State Transition Events

CEID	Event Name	Previous State	New State	Report ID
1	Equipment Off-line	ONLINE	Equipment OFFLINE	1
2	Control State local	OFFLINE	ONLINE-LOCAL	1
		ONLINE-REMOTE		
3	Control State Remote	OFFLINE	ONLINE-REMOTE	1
		ONLINE-LOCAL		

7.2.2 SC State Transtion Events

CEI D	Event Name	Previous State	New State	Report ID
51	AlarmCleared	ARARMS	NO ALARMS	1
	This specification does not require implementation of AlarmCleared event.			
52	AlarmSet	NO ARARMS	ALARMS	1
	This specification does not require implementation of AlarmSet event.			
53	SCAutoCompleted	PAUSED	AUTO	1
		PAUSING		
54	SCAutoInitiated	None	SC INIT	1
55	SCPauseCompleted	PAUSING	PAUSED	1
56	SCPPaused	SC INIT	PAUSED	1
57	SCPauseInitiated	AUTO	PAUSING	1

7.2.3 Transfer Command State Transition Events

CEI D	Event Name	Previous State	New State	Report ID
101	TransferAbortCompleted	ABORTING	None	3
102	TransferAbortFailed	ABORTING	ACTIVE	4
103	TransferAbortInitiated	ACTIVE	ABORTING	4
104	TransferCancelCompleted	CANCELING	None	3
105	TransferCancelFailed	CANCELING	QUEUED	4
106	TransferCancelInitiated	QUEUED	CANCELING	4
107	TransferCompleted	ACTIVE	None	2
108	TransferInitiated	QUEUED	TRANSFERRING	4
109	TransferPaused	TRANSFERRING	PAUSED	2
110	TransferResumed	PAUSED	TRANSFERRING	4

7.2.4 Carrier State Transition Events

CEI D	Event Name	Previous State	New State	Report ID
151	CarrierInstallCompleted	None	COMPLETED	5
152	CarrierRemoveCompleted	INSTALLED	None	5
153	CarrierRemoved	WAIT OUT	None	6
154	CarrierResumed	ALTERNATE	TRANSFERRING	7
155	CarrierStored	TRANSFERRING	COMPLETED	5
156	CarrierStoredAlt	TRANSFERRING	ALTERNATE	7
157	CarrierTransferring	WAIT IN COMPLETED	TRANSFERRING	8
158	CarrierWaitIn	None	WAIT IN	5
159	CarrierWaitOut	TRANSFERRING WAIT OUT	WAIT OUT	9
160	ZoneCapacityChange			10

7.2.5 Crane State Transition events

CEID	Event Name	Previous State	New State	Report ID
201	CraneActive	IDLE	ACTIVE	11
202	CraneIdle	ACTIVE	IDLE	11

7.2.6 Other Events

CEID	Event Name	Previous State	New State	Report ID
251	CarrierIDRead	None	None	12
252	CarrierLocateCompleted	None	None	13
253	IDReaderError	None	None	12

7.2.7 Port State Transition events

CEID	Event Name	Previous State	New State	Report ID
301	PortInService	OutOfService None	InService	14
	This event will be reported by SC when the state of the PortTransferService mentioned above has changed to InService.			
302	PortOutOfService	InService None	OutOfService	14
	This event will be reported by SC when the state of the PortTransferService mentioned above has changed to OutOfService.			

7.3 Event Reports for Stocker

The next table shows, as an example of a dynamic event report, a report format that is used by an Integrator for the stocker.

Report ID	Variable	Report Format
1	EqpName	<L[1] <A EqpName> >
2	EqpName TransferCommand CarrierLoc ResultCode	<L[4] <A EqpName> <L [2] /*TransferCommand>*/ <L[2] /* CommandInfo */ <A CommandID> <U2 Priority> > <L[3] /* TransferInfo */ <A CarrierID> <A CarrierLoc> <A Dest> > > <A CarrierLoc> <U2 ResultCode> >
3	EqpName TransferCommand CarrierLoc	<L[3] <A EqpName> <L[2] /*TransferCommand>*/ <L[2] /* CommandInfo */ <A CommandID> <U2 Priority> > <L[3] /* TransferInfo */ <A CarrierID> <A CarrierLoc> <A Dest> > > < A CarrierLoc > >
4	EqpName TransferCommand	<L[2] <A EqpName> <L[2] /*TransferCommand>*/ <L[2] /* CommandInfo */ <A CommandID> <U2 Priority> > <L[3] /* TransferInfo */ <A CarrierID> <A CarrierLoc> <A Dest> > > >

Report ID	Variable	Report Format
5	EqpName CarrierID CarrierLoc	<L[3] <A EqpName> <A CarrierID> <A CarrierLoc> >
6	EqpName CarrierID HandoffType	<L[3] <A EqpName> <A CarrierID> <U2 HandoffType> >
7	EqpName CarrierID CarrierLoc Dest	<L[4] <A EqpName> <A CarrierID> <A CarrierLoc> <A DEST> >
8	EqpName CarrierID	<L[2] <A EqpName> <A CarrierID> >
9	EqpName CarrierID CarrierLoc PortType	<L[4] <A EqpName> <A CarrierID> <A CarrierLoc> <A PortType> >
10	EqpName ZoneData CarrierID	<L[3] <A EqpName> <L[2] <A ZoneName> <U2 ZoneCapacity> > <A CarrierID> >
11	EqpName CommandID	<L[2] <A EqpName> <A CommandID> >
12	EqpName CarrierID CarrierLoc IDReadStatus	<L[4] <A EqpName> <A CarrierID> <A CarrierLoc> <U2 IDReadStatus> >
13	EqpName CarrierID CarrierLoc	<L[3] <A EqpName> <A CarrierID> <A CarrierLoc> >
14	EqpName PortID	<L[2] <A EqpName> <A PortID> >

7.4 Supplements

7.4.1 CarrierWaitIn Event

1. As CarrierID to be reported in CarrierWaitIn event, SC should report the following ID: either the ID that was acquired by IDReader, or the temporary ID that was generated by SC when abnormalities were detected by CarrierIDRead. (CarrierID should not be blank.)
2. Before CarrierWaitIn event, SC should generate CarrierIDRead event. (The operation of stocker after CarrierWaitIn will be as follows. If a carrier ID read is successful, it will follow a host's Transfer command. If a carrier ID read fails, it will not wait for a host's Transfer command, but will turn into the original operation [for example, an abnormal outgoing process operation] of stocker. For this reason, a host sees CarrierIDRead result and judges whether or not Transfer command is issued.

7.4.2 ZoneCapacityChange Event

1. A host does not positively use the Zone function of Stocker SEM. For this reason, a user should establish only one Zone by a stocker, and let the region be the entire rack. Moreover, Zone should not be set to a port.

8 Carrier Location Information

8.1 Carrier Location Information in SECS Messages

8.1.1 Notation of Carrier Location in SECS Messages

In case the location information that is used by the message is explained, the name of the location information shown below is used.

The location information showing a unit

Equipment Type	The name of location information
Stocker	Stocker ID

The location information showing the unique location (port) in equipment

Equipment Type	Port Type	The name of location information
Stocker	Input shuttle	Input port
	Port, where Crane place a carrier	Output port
	Area, where people or transfer equipment pick up carrier	Loading port
	Buffer port for carrier out -puts.	Buffer port
	Each port of a shelf	Location in a Storage

The location information showing a port group

Equipment Type	Port Type	The name of location information
Stocker	Plural (all) ports of a shelf	ZoneName

8.1.2 Carrier Location in SECS Message

The location data and the carrier location information that are used by the stocker are shown in next table.

Name of command or event	Data name of location	Location data of a message		
		Storage	Input Port	Output Port
TRANSFER Command	SOURCE	Blank (omitted)	Blank (omitted)	
	DEST	ZoneName		loading port
CarrierIDRead	CarrierLoc		input port	
CarrierInstallCompleted	CarrierLoc	Shelf Location		
CarrierLocateCompleted	CarrierLoc	The location information at present		
CarrierRemoveCompleted	CarrierLoc	The location information at present		
CarrierResumed	CarrierLoc	Shelf Location		
	DEST	The same data as TRANSFER command		
CarrierStored	CarrierLoc	Shelf Location		
CarrierStoredAlt	CarrierLoc	Shelf Location		
	DEST	The same data as TRANSFER command		
CarrierWaitIn	CarrierLoc		input port	
CarrierWaitOut	CarrierLoc			output port buffer port loading port
IDReadError	CarrierLoc	The location information at present		
TransferAbortCompleted	TransferInfo	The same data as TRANSFER command		
	CarrierLoc	The location information at present		
TransferAbortFailed	TransferInfo	The same data as TRANSFER command		
TransferAbortInitiated	TransferInfo	The same data as TRANSFER command		
TransferCancelCompleted	TransferInfo	The same data as TRANSFER command		
	CarrierLoc	Shelf Location	input port	

TransferCancelFailed	TransferInfo	The same data as TRANSFER command		
TransferCancelInitiated	TransferInfo	The same data as TRANSFER command		
TransferCompleted	TransferInfo	The same data as TRANSFER command		
	CarrierLoc	Shelf Location		output port buffer port loading port
TransferInitiated	TransferInfo	The same data as TRANSFER command		
TransferPaused	TransferInfo	The same data as TRANSFER command		
	CarrierLoc	The location information at present		
TransferResumed	TransferInfo	The same data as TRANSFER command		
ZoneCapacityChanged	ZoneName	ZoneName		

9 Interpretation of SEMI Standards

This chapter explains the matters that clarify interpretation out of SEMI standard.

9.1 Control State Model for Stocker

The function about the on-line/off-line of a general equipment system is specified in GEM as a control state model. Moreover, the state model of stocker is specified in Stocker SEM as a SC State model. These two state models are used as follows.

The state model of stocker is shown in the following figure.


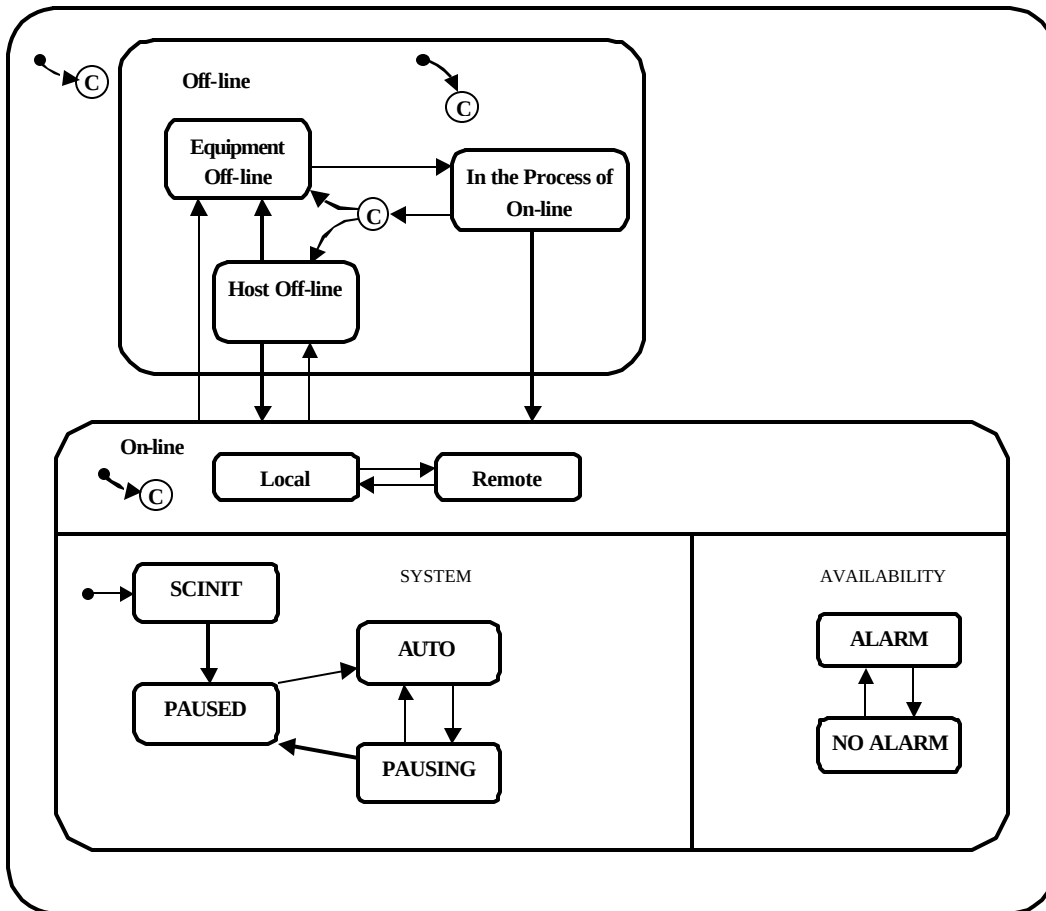


Figure 5 Control State Model of Stocker

9.2 VID, SVID and ECID

Variable data (V) show 3 kinds of data as follows.

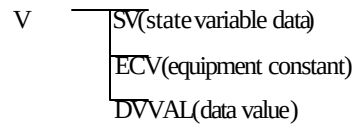

The relation of VID, SVID, and ECID is as follows.

- Among VIDs, VID that points out SV is called SVID.
- Among VIDs, VID that points out ECV is called ECID.

10 Distinction from SEMI Standards.

This section represents the distinction of this Document from StockerSEM.

1. Terminology is added. (Refer to 2. Terminology)
2. Both active and passive modes are required for HSMS Connect Mode. (Refer to 3.1.1. HSMS Connect Mode)
3. Formats of Ux of Data Items are altered to U4. (Refer to 4.1. SECS Data Items)
4. VIDs are specified. (Refer to 4.2. Variable Table)
5. CEIDs are specified. (Refer to 7.2. Collection Events for Stocker)
6. Formats of EventReports are specified by Selete Specification. (Refer to 7.2. Collection Event for Stocker, 6.3. Event Report for Stocker) However, it does not deny the function of "Dynamic Event Report Configuration" described in GEM. Furthermore, if GEM has its function, automatically it is satisfied with this specification. It explains how Host uses event reports.
7. Additional specification to CarrierWaitIn Event. (Refer to 7.4.1. CarrierWaitIn Event)
8. Use of Zone function is not positively recommended. (Refer to 7.4.2. ZoneCapacityChange event)
9. Carrier Location Information is added. (Refer to 8. CarrierLocationInformation)
10. Interpretations of SEMI Standard are clarified. (Refer to 9. Interpretation of SEMI Standards)

11 Scenario

For the communication scenario of stocker, refer to the following chapters of AMHS communication scenario specification.

Chapter 2 Common scenario

Chapter 3 Stocker scenario

12 Revision History

Version	Date	Updating part
0.5	99/12/08	New
1.0	99/12/27	The following chapters are added. 2.3. Subsidiary Condition 7. Interpretation of SEMI standard The followings are updated. 3.2.2. Variable that is used by stocker: Control State, EmptyCarrier, and HandoffType, 6.2.3. Transport Command StateTransition Event: TransferAbortCompleted (Revision), TransferCancelCompleted (Revision), and TransferCancelFailed (Addition) 6.2.7. Event of Selete Original Specification Definition 8.1.13. PAUSE and RESUME 8.1.14 Re-connection from Communication Failure 8.2.5. Shelf =>Outgoing process multiport BP transfer completed ID Reader is present.
1.1	2000/2/25	The following chapter is deleted. 2.3 subsidiary conditions The following chapters are added. 2. Terminology 74 Supplement 8 Location Information The followings are updated. 3.2.1 Description about State about Alarm is deleted. 3.2.2 Description about State about Alarm is deleted. 3.2.2 Figure of "Entity That Owns State Model" is altered. 3.2.2 Explanation of "Service State" and "Port State" is added. 4.1 Explanation of "DATAID", "HCACK", and "OBJESPEC" of SECS Data Item is altered. 4.1 DATALENGTH, GRANT, and GRANT6 of SECS Data Item are deleted. 4.2.2 Explanation of Priority in Table is altered 4.2.2 Explanation of IDReadState in Table is deleted 4.2.2 Table of Selete Specification Original Definition is altered. 4.2.3 Explanation of Selete Specification Original Definition Variable is altered 5.1 S2F39/F40 and S6F5/F6 are deleted from Message List. 5.1 Data Examples of S2F42 and S2F50 are altered. 6.1, 6.2, 6.3, 6.4, 6.6 S2F42 format examples are altered. 6.4 ZoneName and CarrierLoc of Locate Command variables are deleted. 6.8 S2F50 format example is altered. 7.2 Report ID of Event is revised 7.2.7 Classification of Event is deleted/added. 7.3 Report of Event is added/altered. 8.1.2 Table of Location Information for Every Message is altered.

		9.1 Figure of Event Report of Outgoing Process is added. 10 Contents of Scenario is shifted to AMHS Communication Scenario Specification.
1.2	2000/5/23	The followings are updated. 4.1 Explanation of Format of "Item Description in Table" is altered. 4.2.2 Table. class name of (VID=71) is revised 4.2.2 Table of "Variable That Is Used by Stocker and That Is Uniquely defined by Selete Specification " has two variables added. 4.2.3 Figure of "Stocker and Transfer Port Model". Variables of PortID and PortState have a suffix (i) added. 4.2.3.2 Title and Explanation. are altered. 5.1 Transmission Directions of S9F1, S9F3, S9F5, S9F7, S9F9, and S9F11 are revised.. 7.1 Note of Figure "Event CEID System" is revised. 7.2.1 New State of (CEID=3) of Table is revised 7.2.2 Event Name of (CEID=53, 54, 55, 56, 57).of Table is revised. 7.2.4 Event Name and New State of (CEID=151) of Table are revised 7.2.4 Old State of (CEID=157) of Table is revised 7.2.6 Event Name of (CEID=252) of Table is revised. 7.3 Report Format of (Report ID=9, 13) of Table is revised. 8.1.2 Table is sorted by Event Name. 8.1.2 CarrierLocateCompleted Event is added.
1.3	2000/10/23	The followings are updated. 3.2.2 SCState and ControlState in the Figure6 are altered to be independent. 4.1 ECNAME is added into the SECS data items. 4.2.2 The explanation between 64 and 67 for the VID6 in figure5 are deleted. VID79 SCStaet is added into Figure6. 9.2 The sentence of "SCSate model replaces the "On-line remote" of the control state model of GEM " is deleted. Figure6 are altered.
2.0	2000/10/31	The following chapters are added. 3.1.1 "HSMS Connect Mode" 4.2.3.2 "AllPortState and PortIDList" 10 "The Distinction from SEMI Standards" ("Scenario" is shifted to Chapter11 and "Revision History" is sifted to Chapter12.) The followings are updated. 4.1 "(However, when a host sends Ux item, it sends them as U2 format)" is deleted. 4.1 The format of ALID, CEID, DATAID, ECID, RPTID, SVID, VID is altered to U4. 4.2.2 The following contents of Table7 are altered. 201 StockerAvail is deleted and to be missing number. 5.1 S6F15/16,S6F19/20 in table9 are deleted from Message List.

		5.1 The formats related from 4.1 are altered. 7.2.7 The following contents of the table are altered. 501 StockerAvailChanged and 502PortStateChange are deleted and to be missing number. 503 PortsAvailable, 504 PortsUnavailable are added.
2.1	2001/1/9	The followings are updated. 1.2 "In addition, this requirement document..." and the proceeding parts are deleted. 1.3 "Selete AMHS Integration System Emulator Requirement Document" in the Reference Documents is deleted. "Selete AMHS Communications Scenario Document" is added. 4.2.2 Table 7 of "201 StockAvail" is added and "205 PortIDList" is deleted, "PortState" is altered to "StockerPortAvail," and "AllPortState" is altered to "AllStockerPortAvail." 4.2.3 is entirely arranged. 5.1 "emulator" is altered to "integrator." 7.2.7 "501 StockerPortAvailChanged" and "502 StockerAvailChanged" are added, and "503 PortsAvailable" and "504 Ports Unavailable" are deleted. 7.3 Repport ID 14 and 15 are updated
2.2	2001/2/22	The followings are updated. Use word "integrator" instead of "emulator" in whole the document. 1.3. Reference Document Add "Selete Integrator Requirement Document" and "Selete AMHS Communication Test Specification" Table 7 "PortID" is altered to "StockerPortID". 4.2.3.2 StockerPortAvail and AllStockerPortAvail "PortID" is altered to "StockerPortID". 6.4 LOCATE 'All carrier information will be returned, when A[0] is set.' is removed from 'comment'. 7.3. "PortID" is altered to "StockerPortID" of Report ID 14
2.3	2001/8/31	3.2 "Variable Data Collection" in Figure2 GEM Capabilities is altered to space. 3.2.2 "Entity that have State Model" is altered. Description of "Service State" and "Port State" are deleted. 4.2.2 Table6 VID80 and 81 are added in Variable used by Stocker; which are defined by StockerSEM. 4.2.2 Table7 "Variable used by Stocker, which are defined by Selete Specification" is deleted. 4.2.3 "Variable defined by Selete Specifications for Stocker" is altered to Explanation of "PortTransferState and CurrentPortStates" 7.2.2 Comment is added to CEID 51 and 52. 7.2.7 "Event defined by Selete" is deleted.

		7.2.7 “Port State Transaction events” is added. 7.3 Report14 is altered. 7.3 Report15 is deleted. 9.1 “Carrier Transfer to a Stocker Output Port” is deleted. 10 “Addiitional variables are defined by ...” is deleted. 10 “ Additional EventReports are defined by ... ”is deleted
2.31	2002/2/8	5.1. Table 8, Change Examples of S1F3/4