


Fitting Instructions

This guide takes you through the steps for installing a LOHO natural stone bathtub.

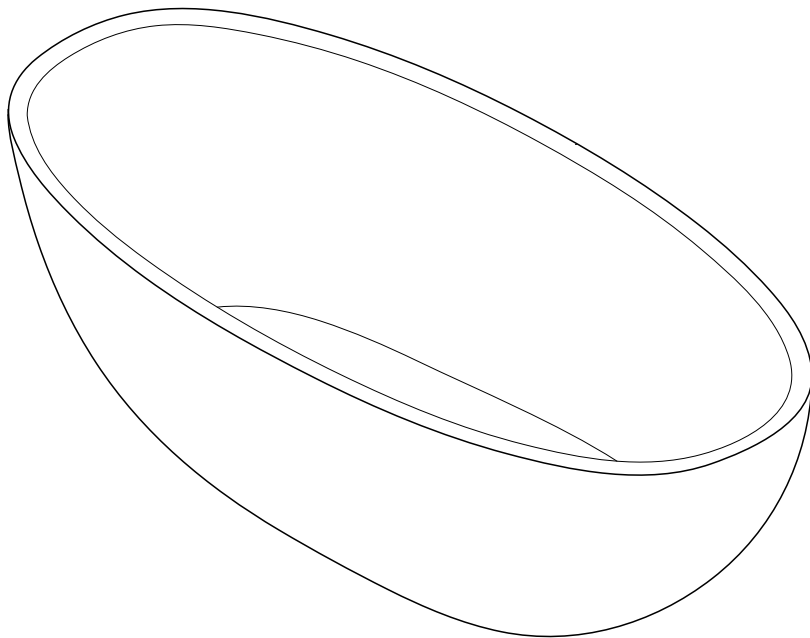

LOHO

Including our recommendations for a safe and practical installation of our natural stone bathtubs — Large & Extra Large (±600 kg). It describes two proven installation methods, as well as specific guidelines for lifting, positioning, connecting the drain, and the electrical installation. These instructions are intended to support installers, logistics teams, and project managers, regardless of the location or building type.

1. Before the Installation	04
A. Preparatory Work	05
B. Electrical Diagram	08
C. Installation Options	10
2. Bathtub Installation	22
3. Frequently Asked Questions	30

1. Before the Installation

In this section, we walk you through the step-by-step connection of the integrated heating system type Schlüter® DITRA-HEAT-E-HK 4.

A. Preparatory Work

Step 1. General preparation

Heating specifications

Cable length: ± 4 m | Power: ± 50 W (12.5 W/m) | Current draw: ± 0.22 A

- Ensure access to a 230 V single-phase power supply in the room.
- Reserve a location in the wall for the thermostat.
- Provide a floor build-up or wall conduit for cable routing between the bathtub and the thermostat.

Step 2. Electrical protection

- Install a 6 A miniature circuit breaker in the distribution board (overload protection).
- Add a 10 mA RCD (additional protection for wet areas), in addition to the general 30 mA RCD.
- Bond the metallic sheath of the heating cable to earth (PE).

Step 3. Thermostat connection

Recommended model: DITRA-HEAT-E-R analog thermostat (230 V controlled)

- Bring 230 V to the thermostat (L + N, earth if applicable).
- Mount the thermostat in the same room as the bathtub, but not within 1.60 m of the tub itself.

⚠ Setting the correct control mode

The thermostat is equipped with a built-in air sensor (room temperature) and an external floor sensor. The floor sensor limits the maximum temperature of the heating cable. Set a maximum temperature (45°C) as a limiter. For this application (heating beneath a natural stone bathtub), it is important that the thermostat is set to room temperature control (air mode), to prevent the heating from switching off too early.

🔧 To change the setting:

In the thermostat menu, go to Control Type or Sensor Settings.

Select: Air or Air Sensor.

Save the settings.

Step 4. Connecting the heating system

A “cold lead” (non-heating) runs from the thermostat to the bathtub.
This lead is factory-connected to the internal heating system in the tub.
The standard cold lead length is ± 4 m.

- Connect the cold lead to the thermostat’s Load terminals.
- If required, the lead may be extended, provided the conductor cross-section is correct and the joint is watertight.
- Connect the floor sensor to the designated terminals.
- The sensor cable must not run in the same conduit as the 230 V power supply, to avoid interference/induction.
- If necessary, the cable may be extended, provided the correct wire section is used and the connection is watertight.

Step 5. Cable routing & position

The cable exits at the bottom of the tub (near floor level).
The routing direction is flexible: floor, wall, or cable tray/duct.
A reference photo can be provided on request to assist placement.

- Avoid tight bends.
- Allow sufficient movement/play.


Step 6. Checks & commissioning

- Verify the entire electrical connection for continuity, correct earthing, and proper load.
- Set the thermostat to the desired temperature.

Test the system operation:
After a few minutes, the tub surface should start to warm perceptibly.
Check that the sensor switches correctly with temperature changes.

B. Electrical Diagram

In this section we discuss the electrical diagram for connecting the integrated heating system type Schlüter® DITRA-HEAT-E-HK 4.

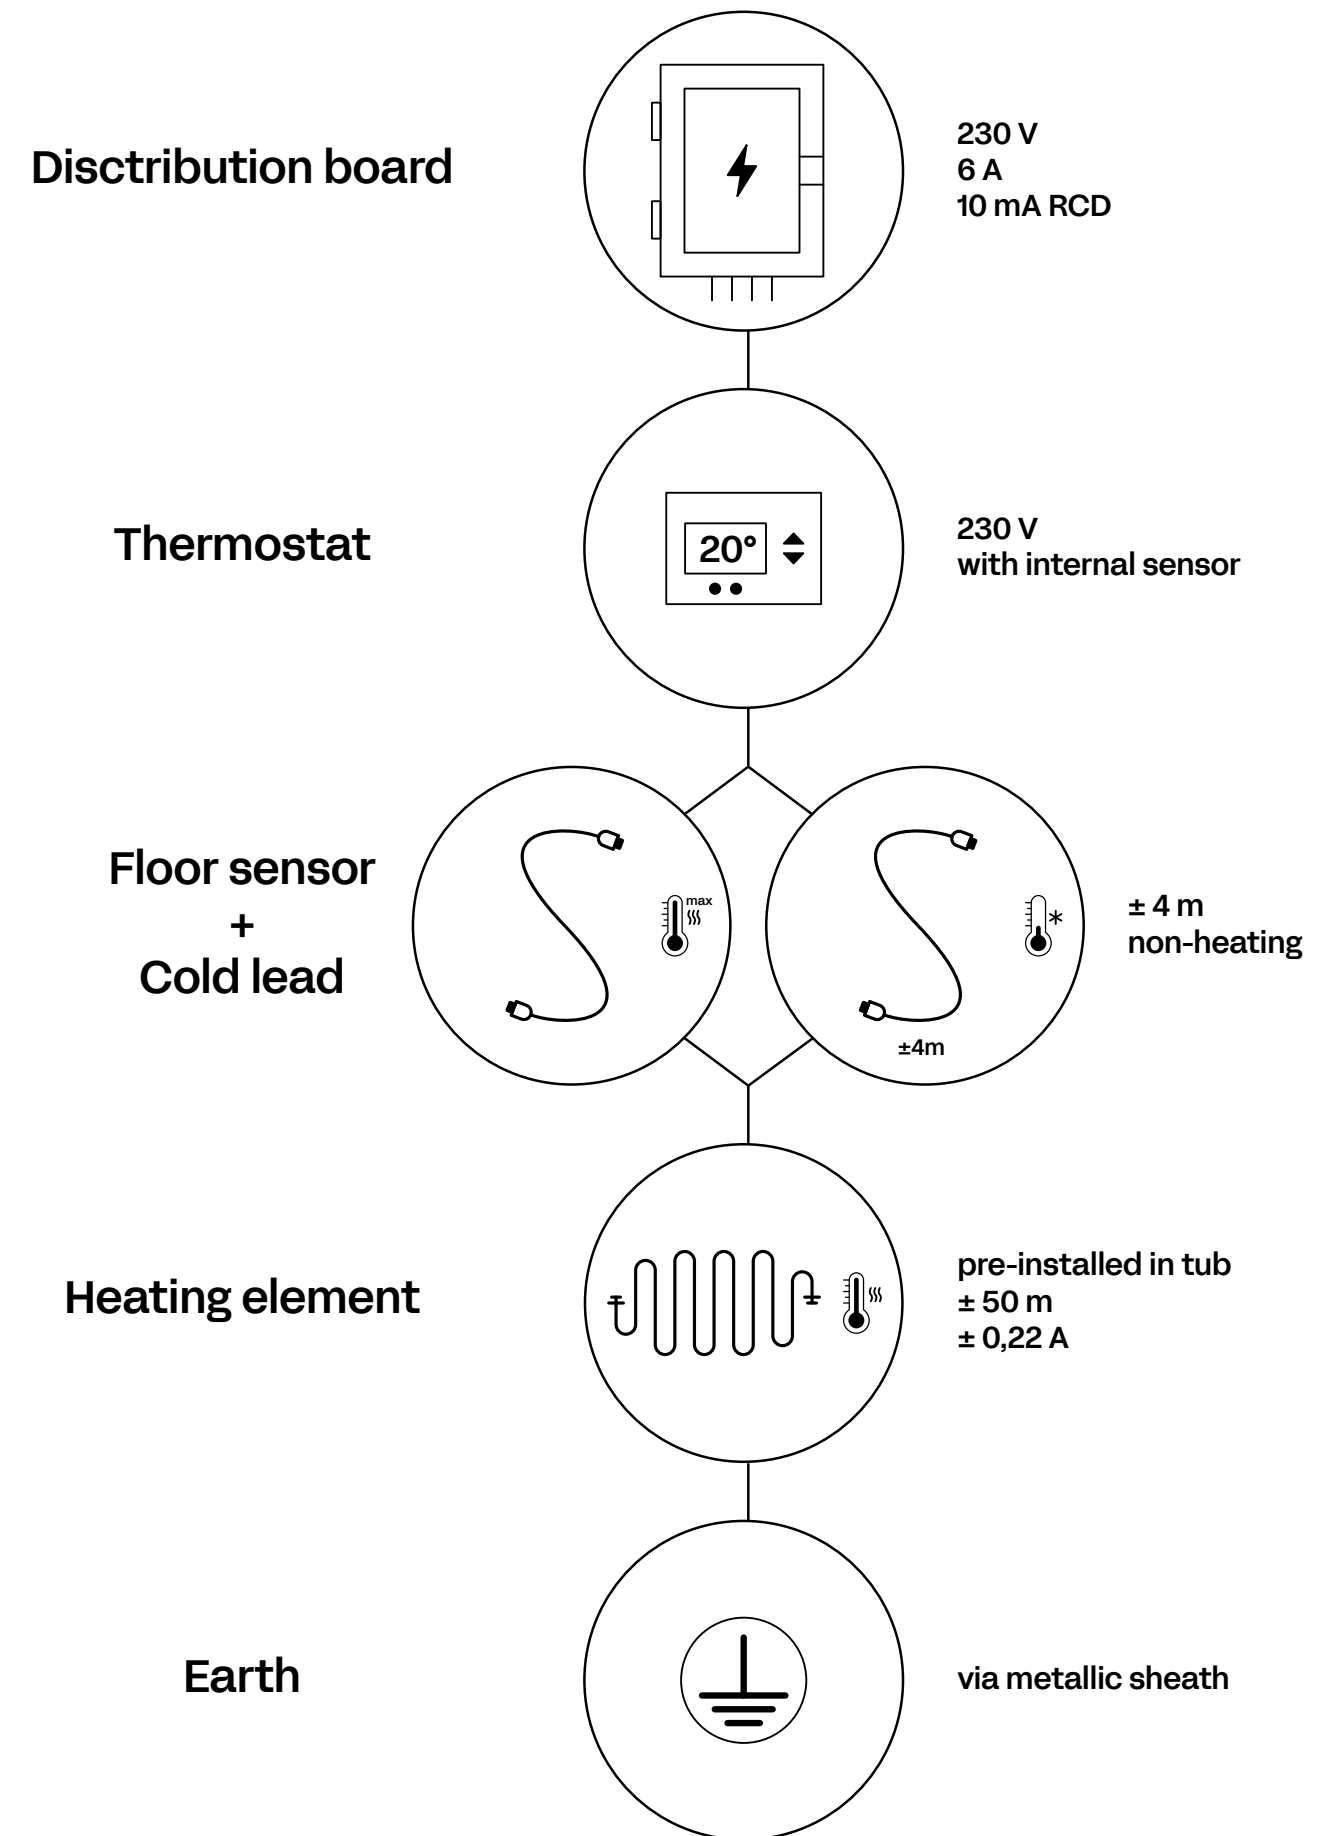

C. Installation Options

In this section we go through the different options available for installing the heating system type Schlüter® DITRA-HEAT-E-HK 4

C1. Basic Setup

12

C2. Setup with External Switch

14

C3. Setup met Externe Schakelaar & Vertraging

16

C4. Setup met Smart Controle

18


C5. Setup met Flow Switch

20


C1. Basic Setup

Thermostat
DITRA-HEAT-E-R4
analog thermostat


Heating element
Schlüter® DITRA-HEAT

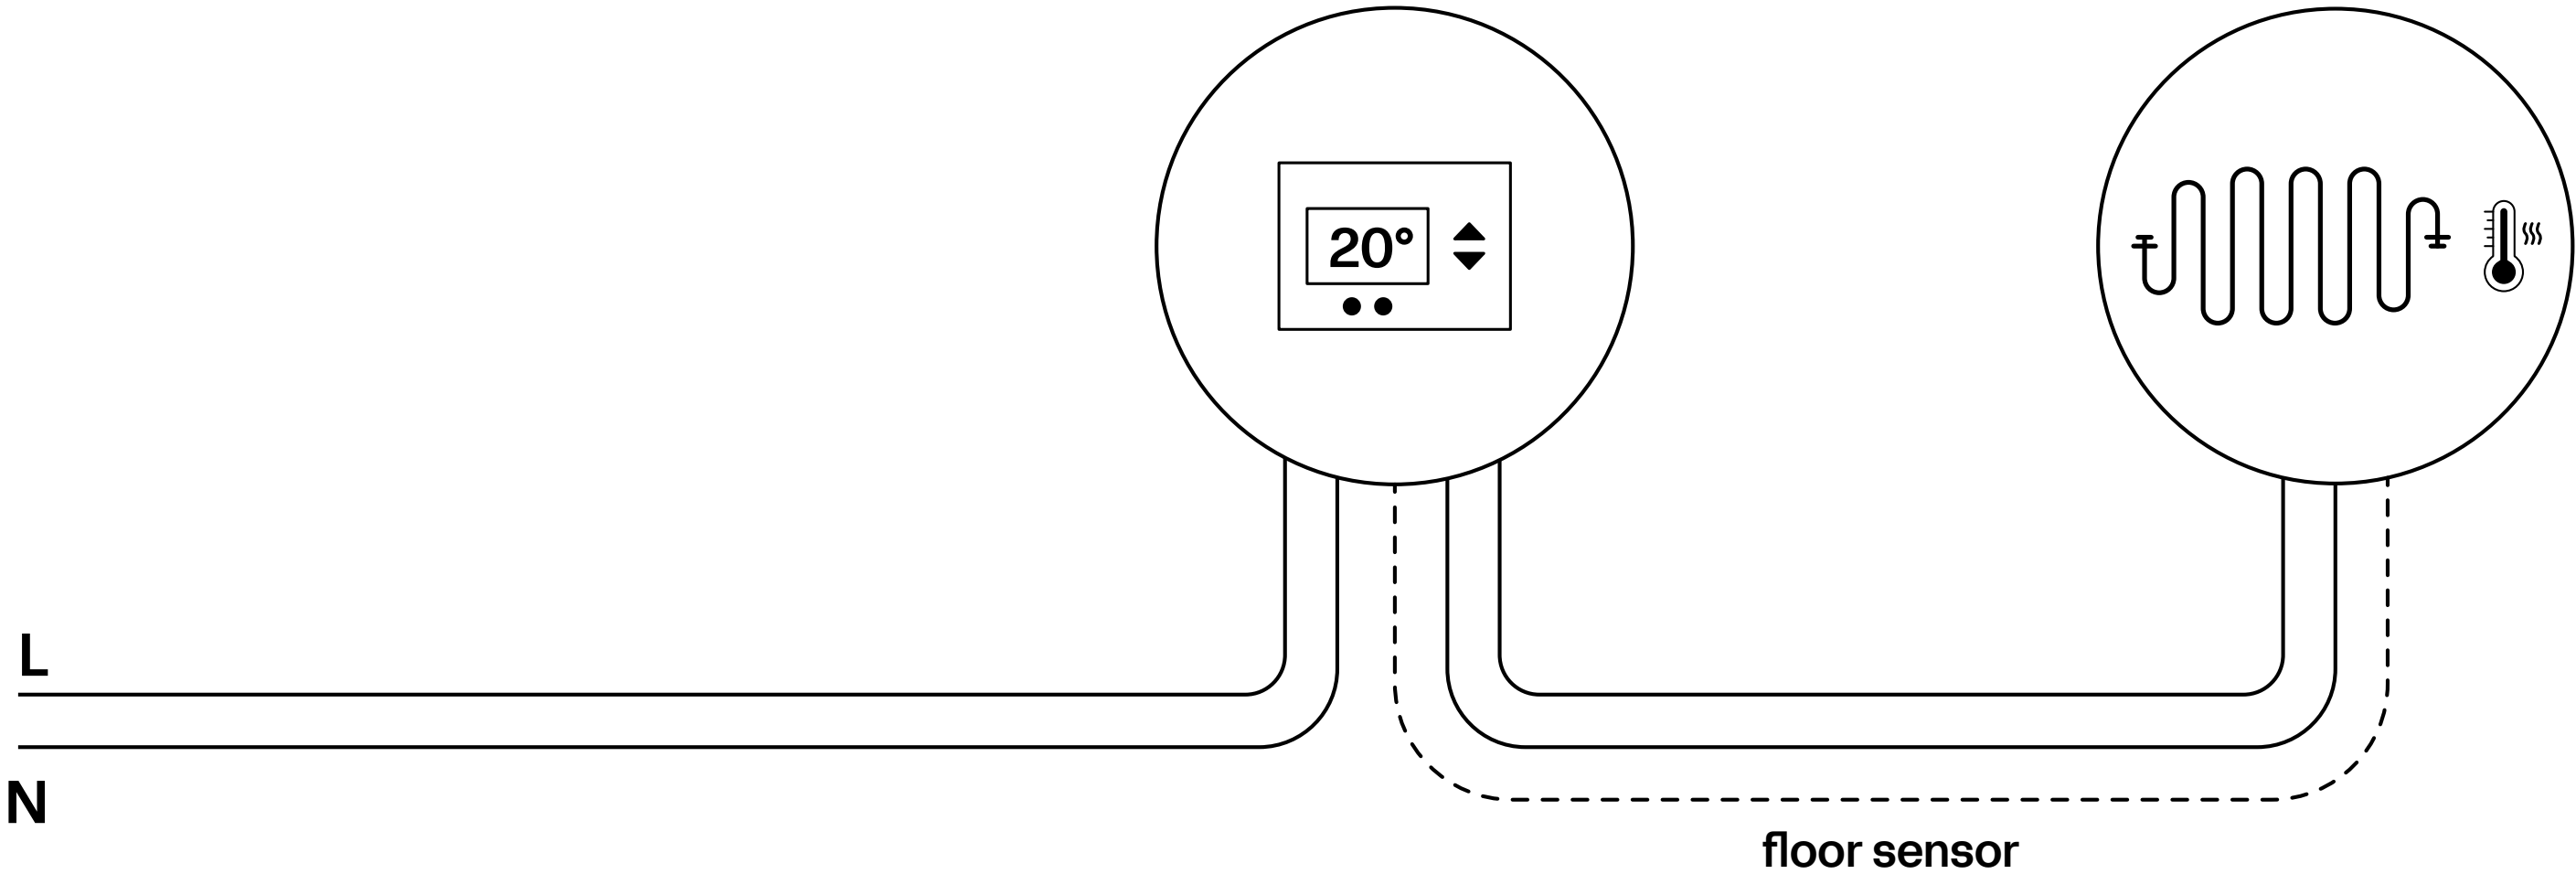


C2. Setup with External Switch

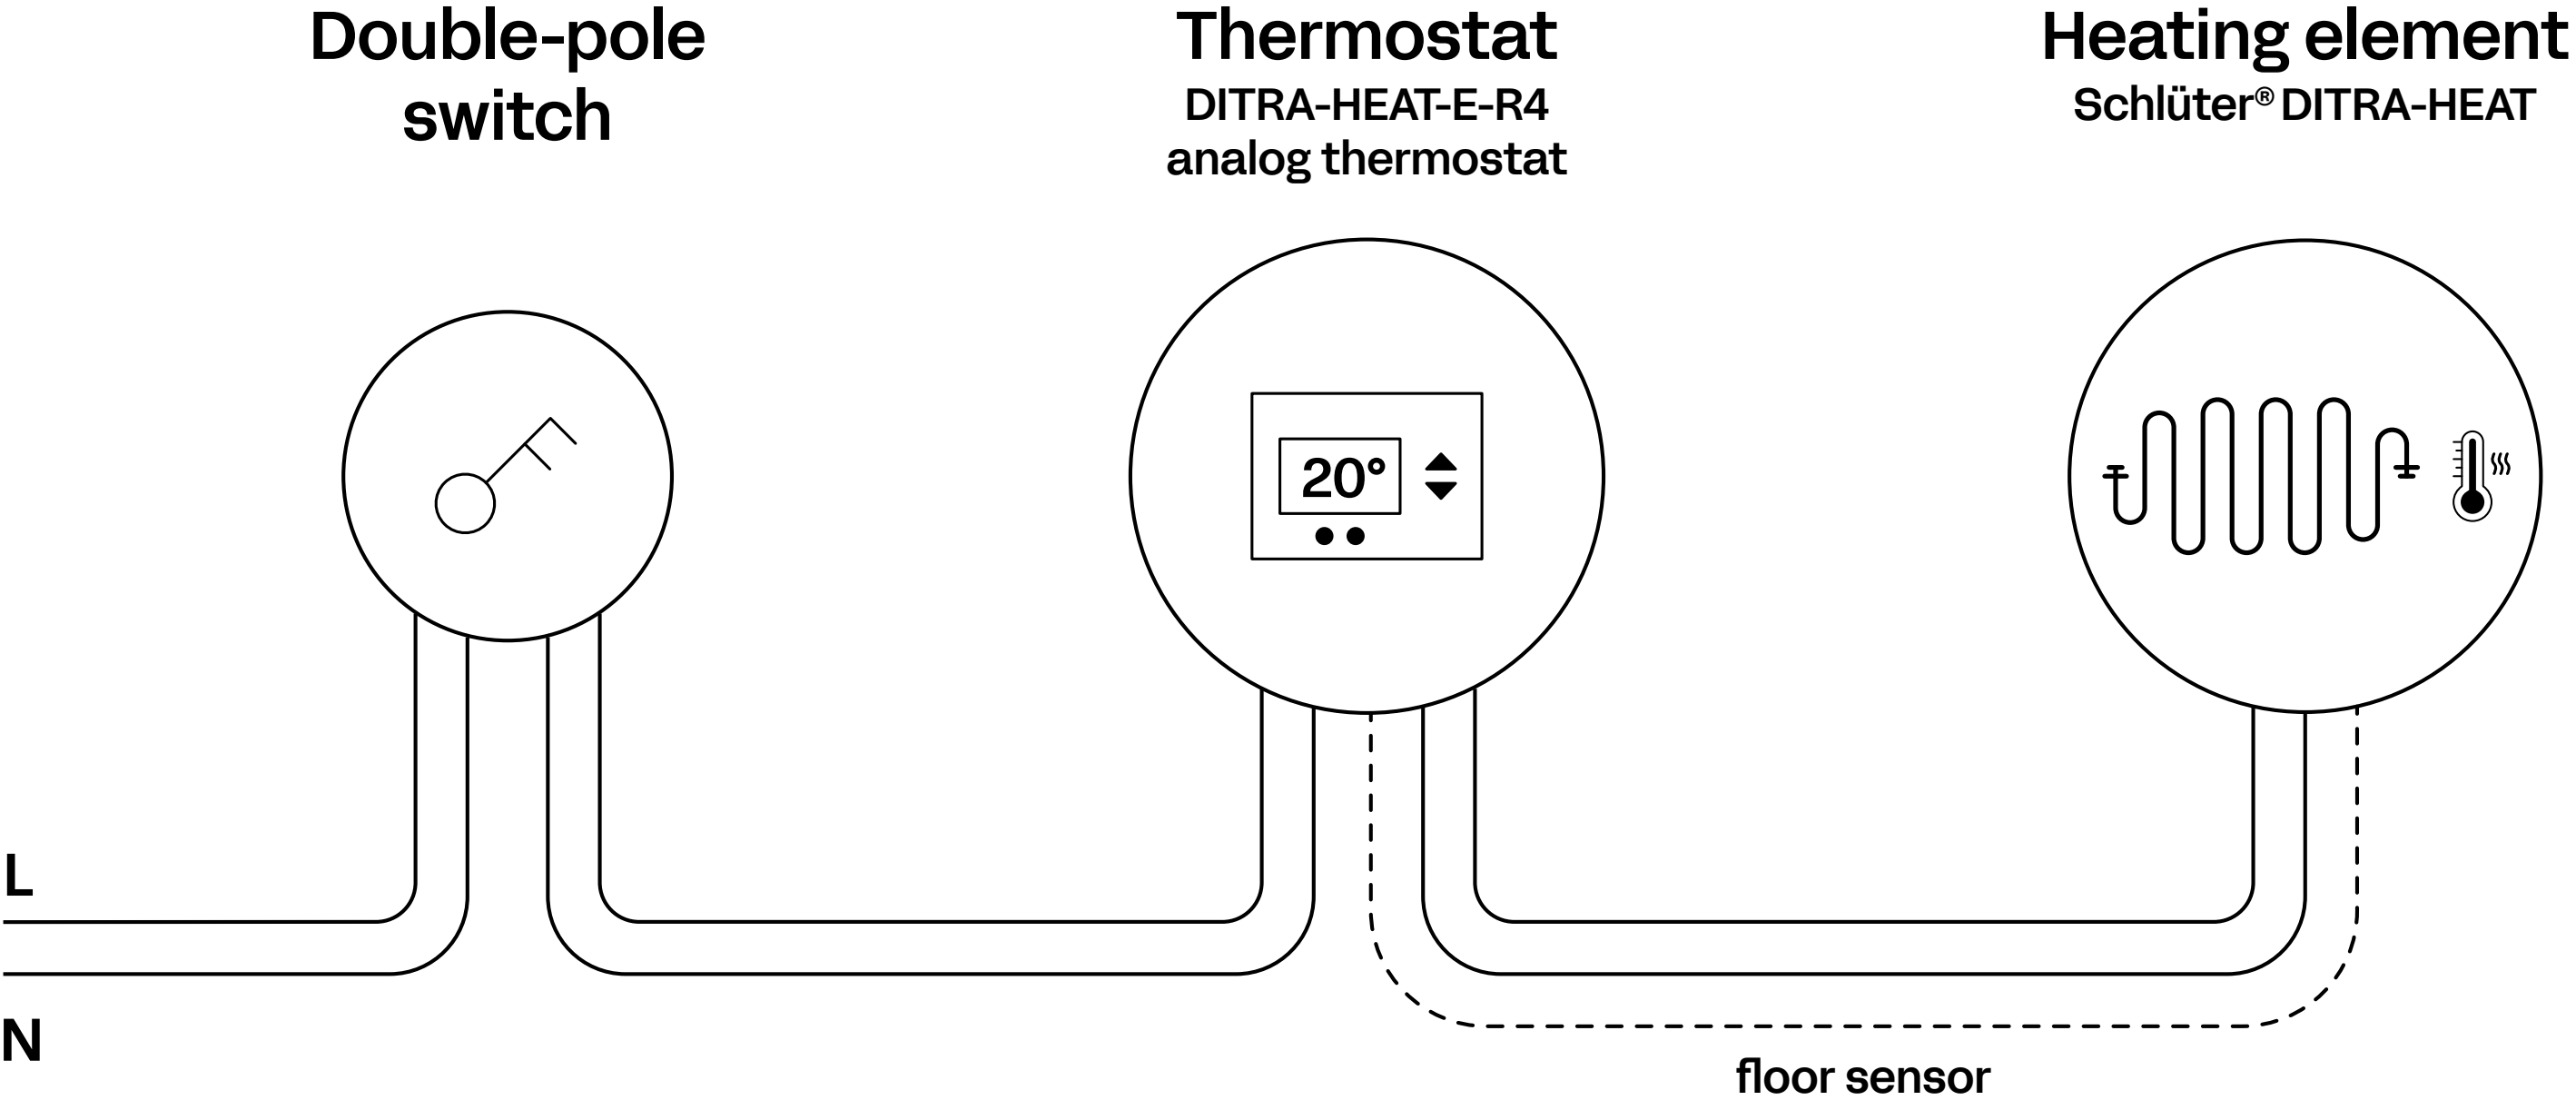


C3. Setup with External Switch & Time Delay

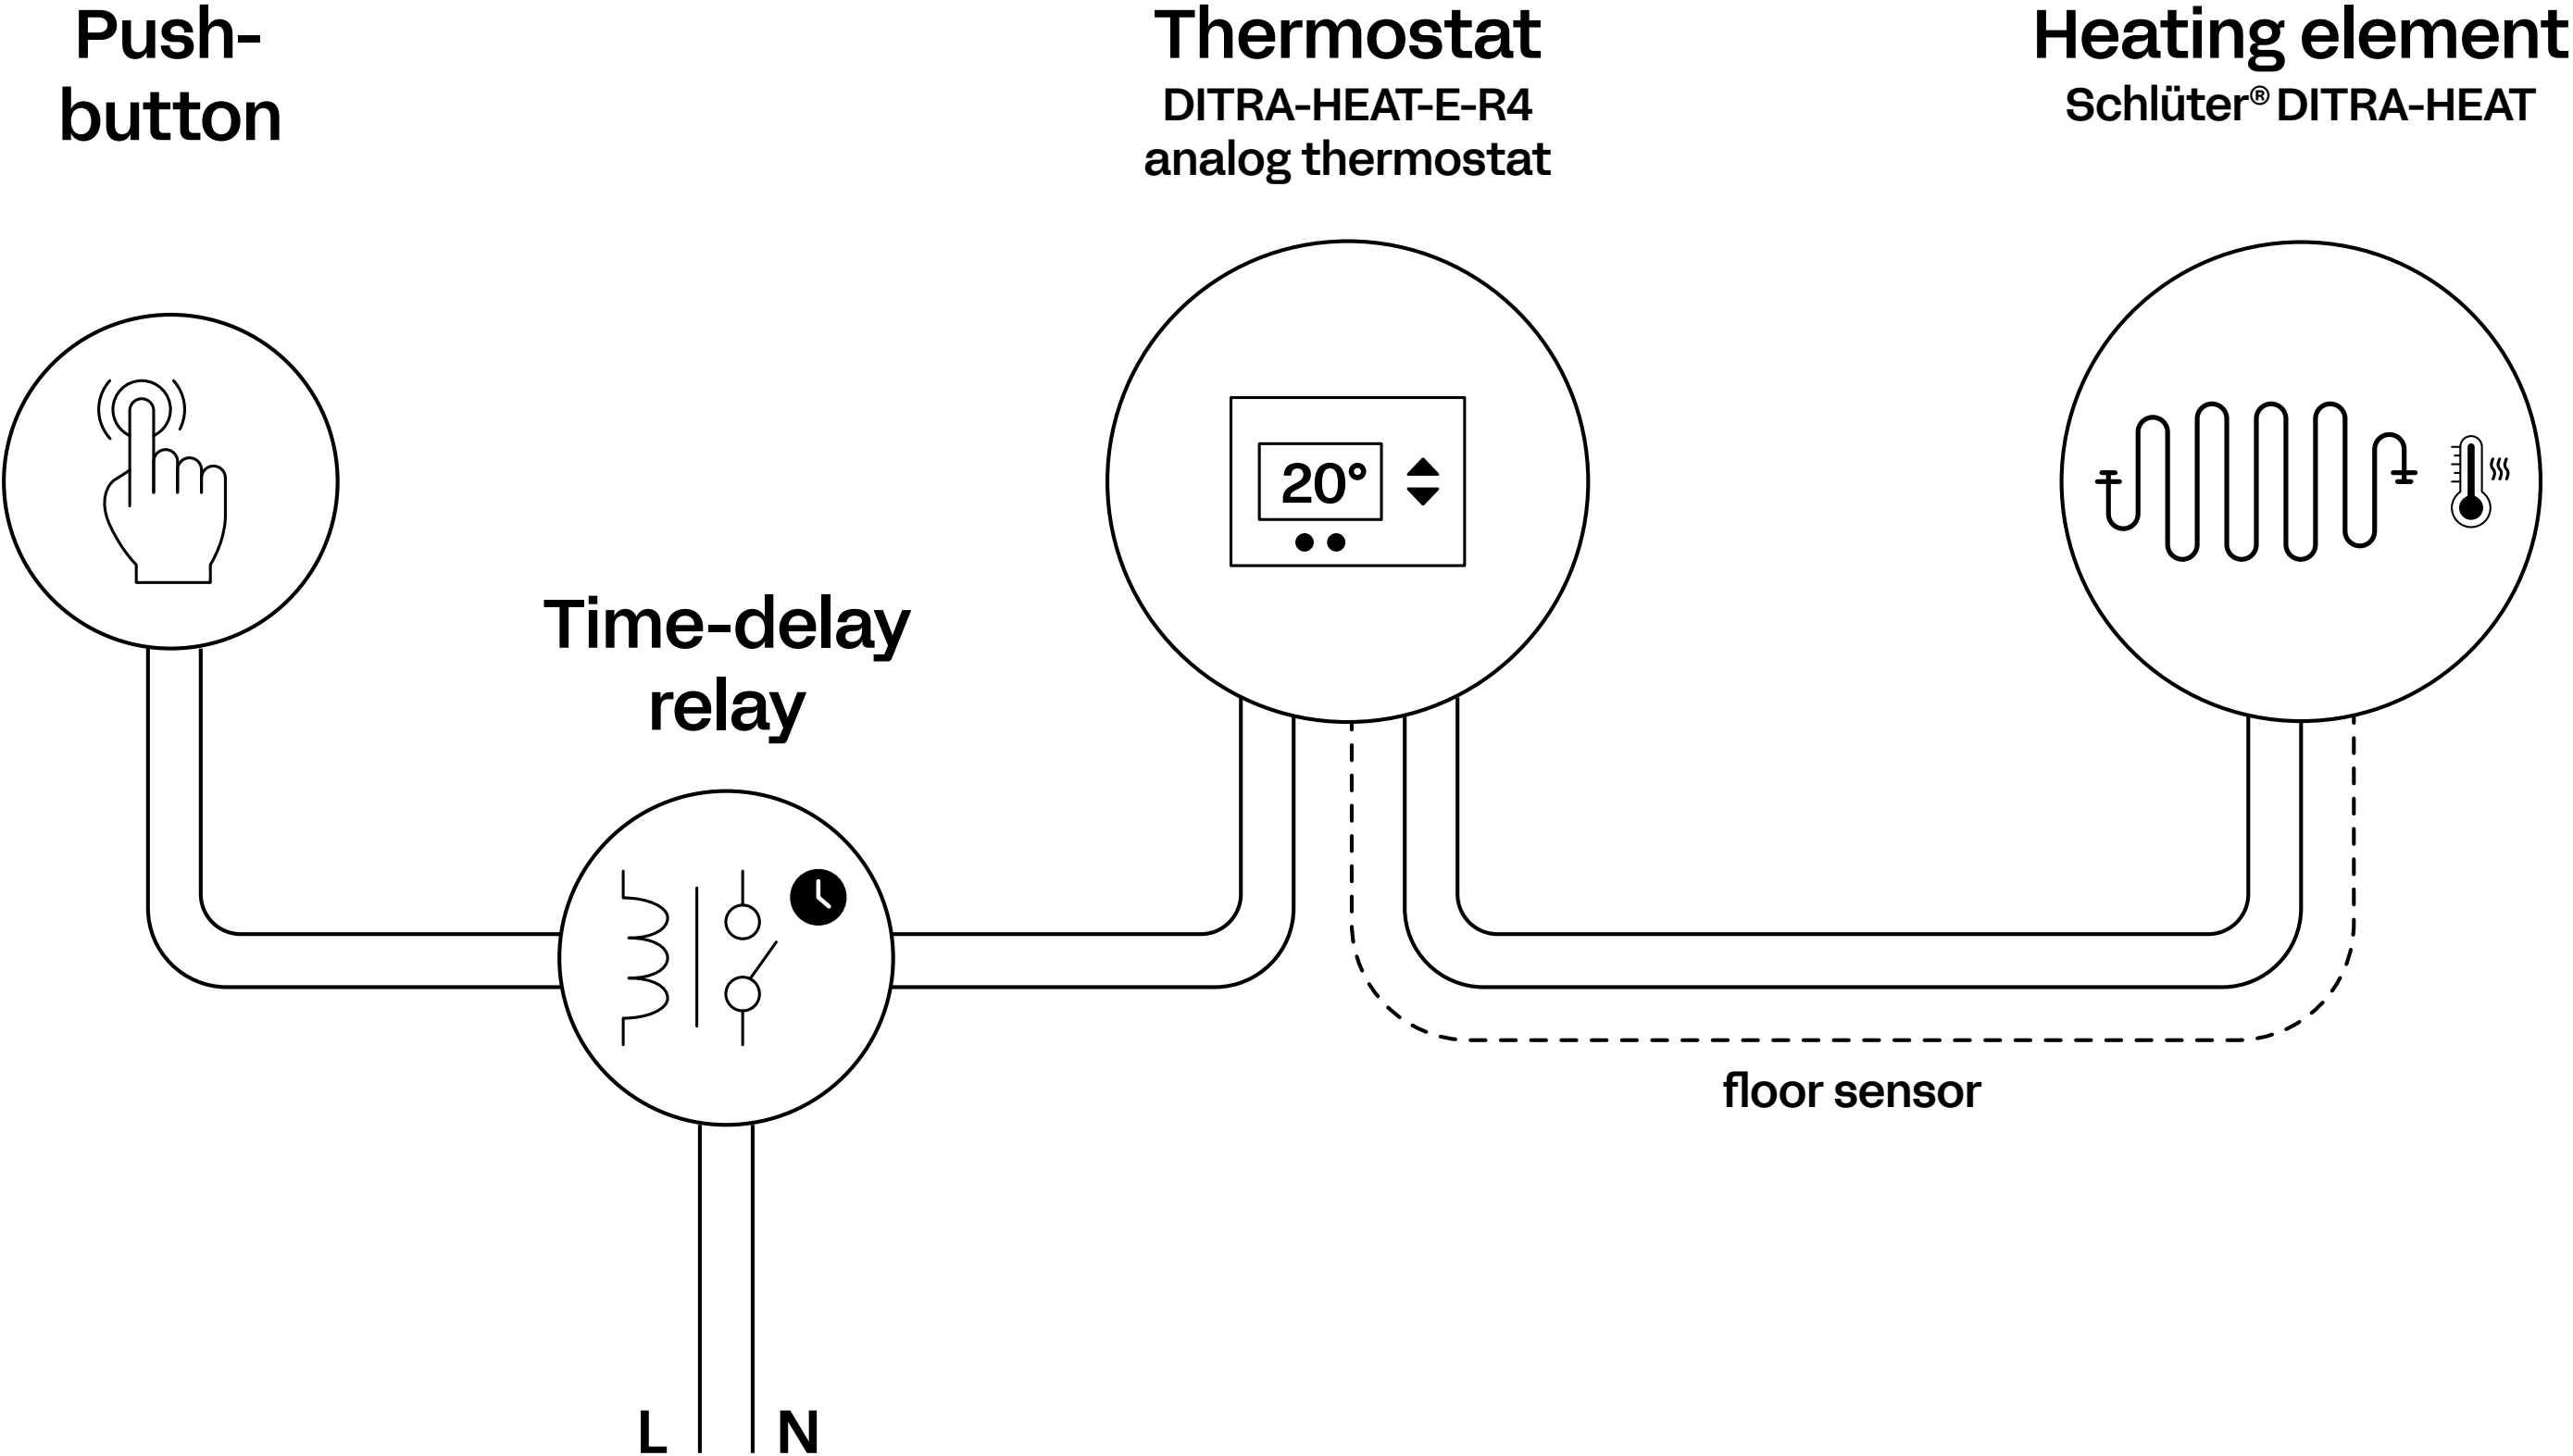

C4. Setup with Smart Control

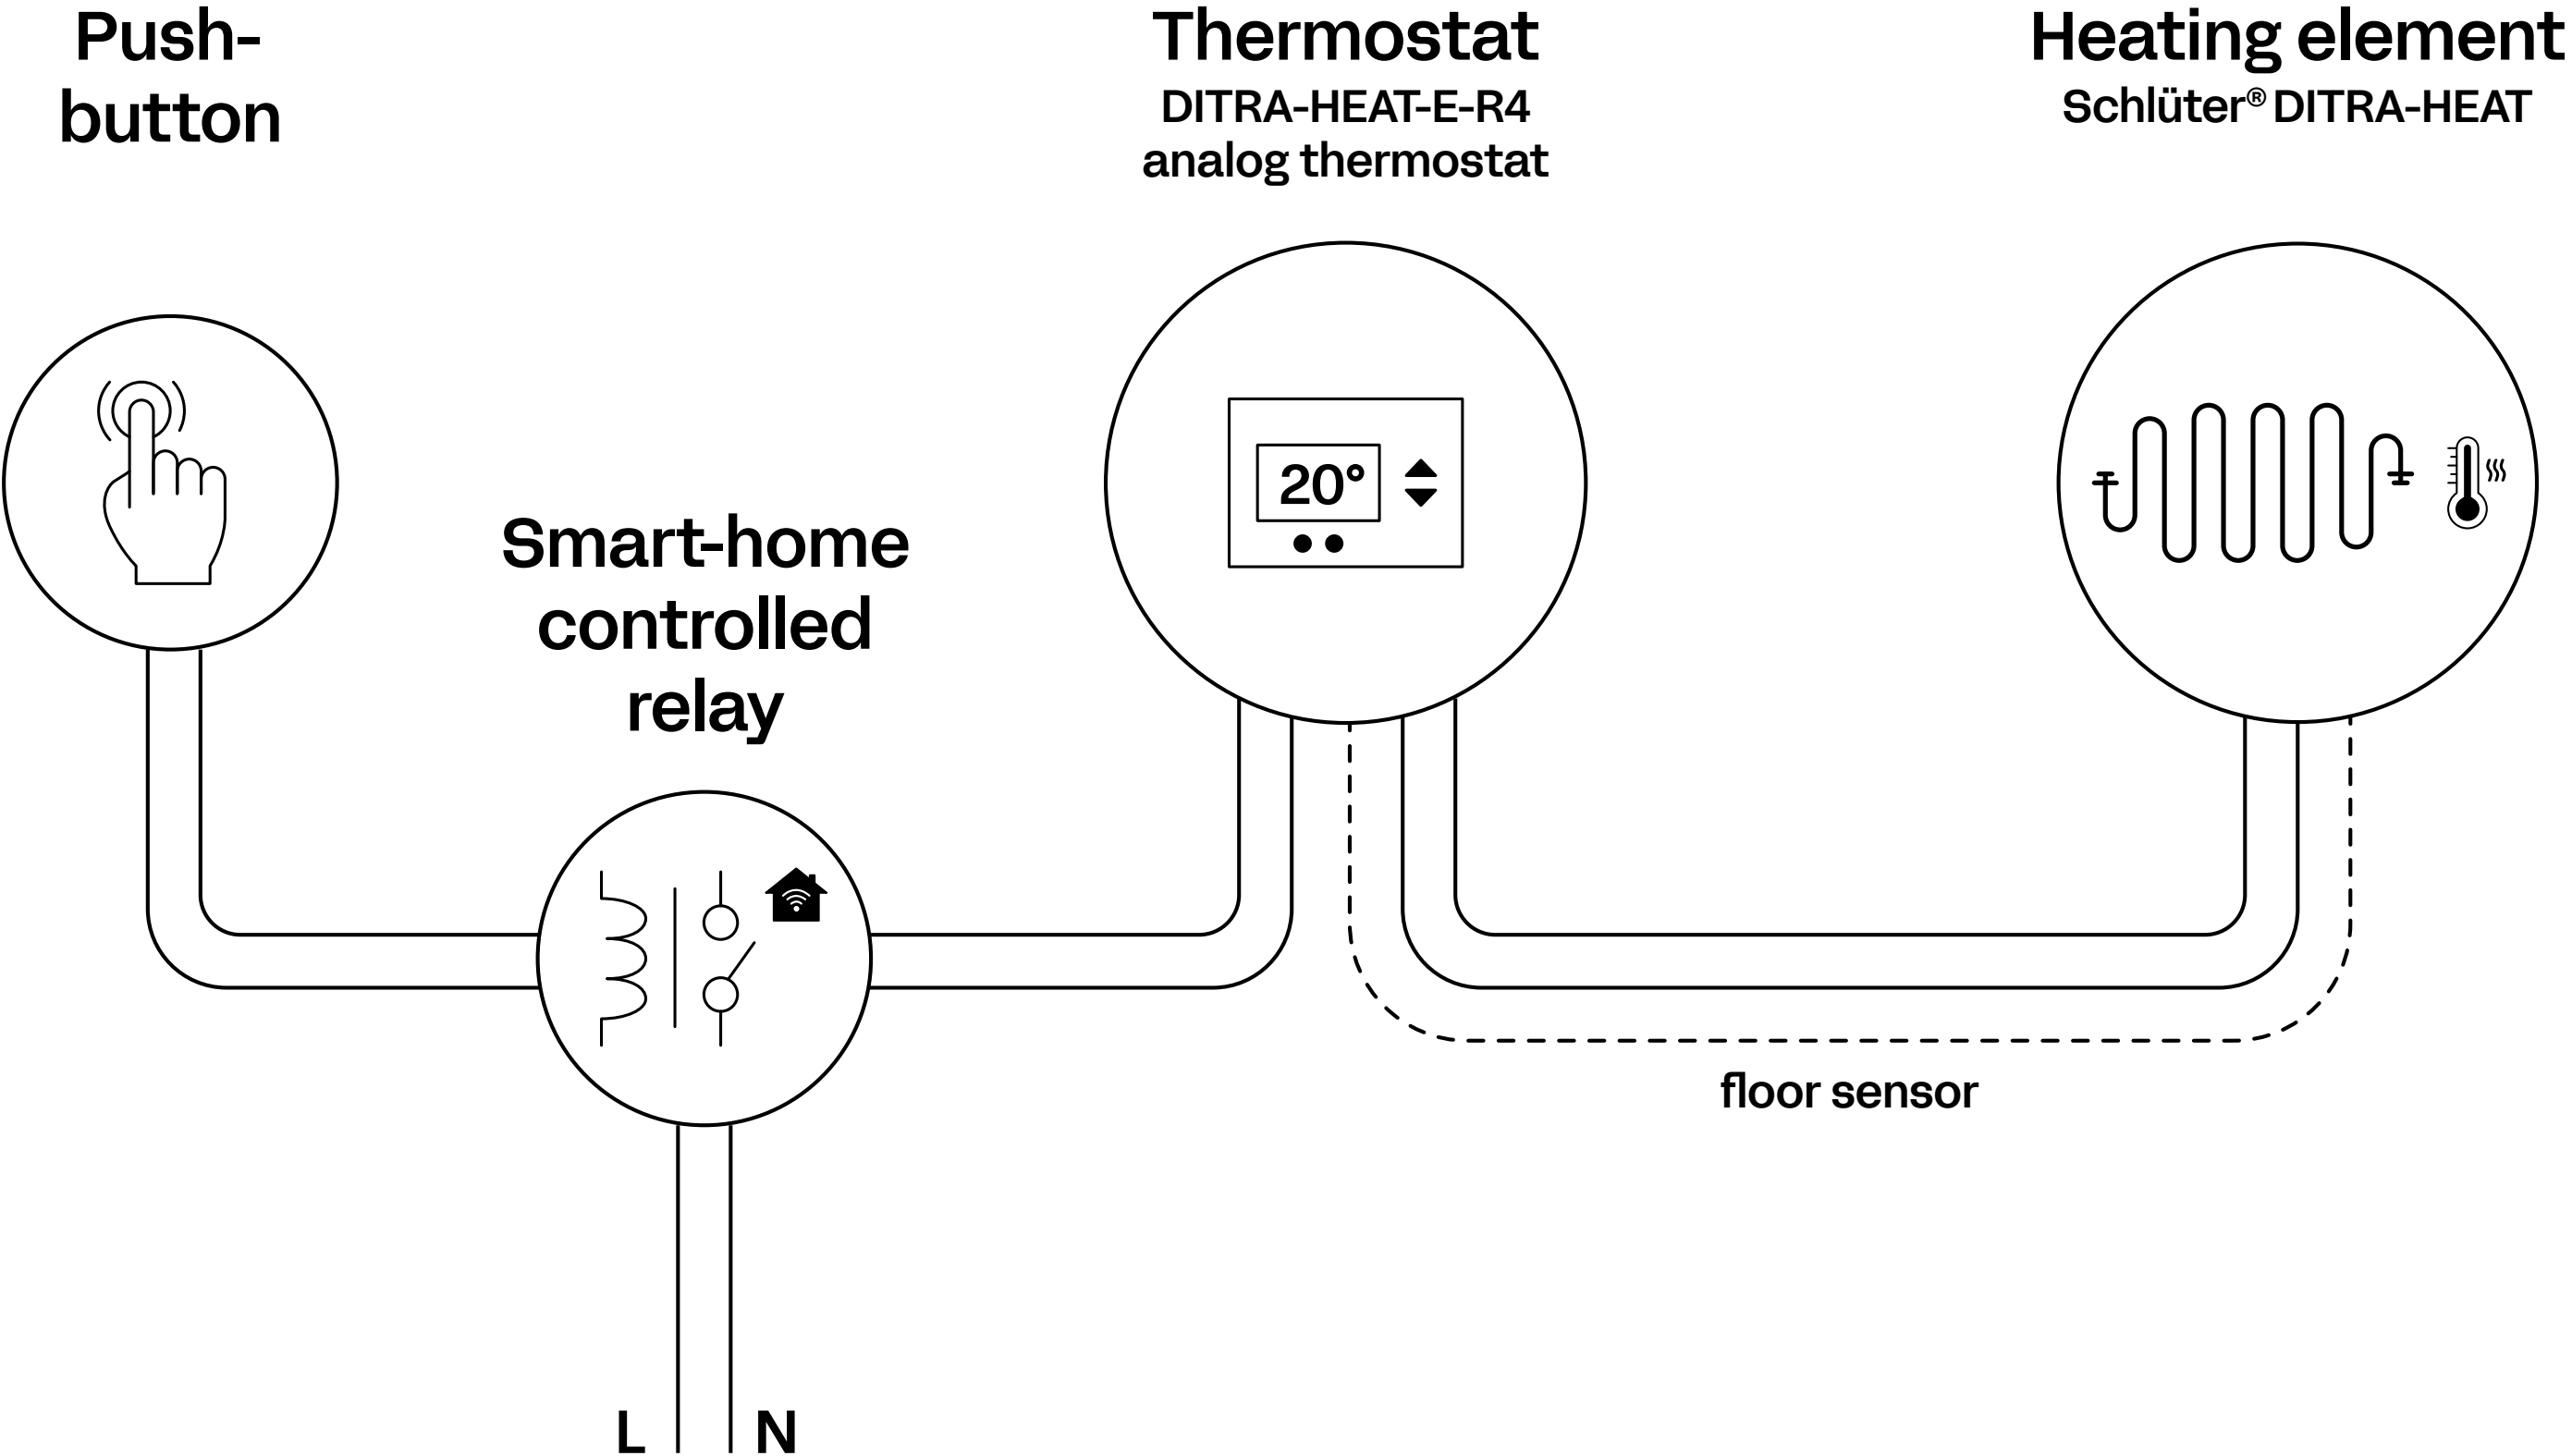

C5. Setup with Flow Switch

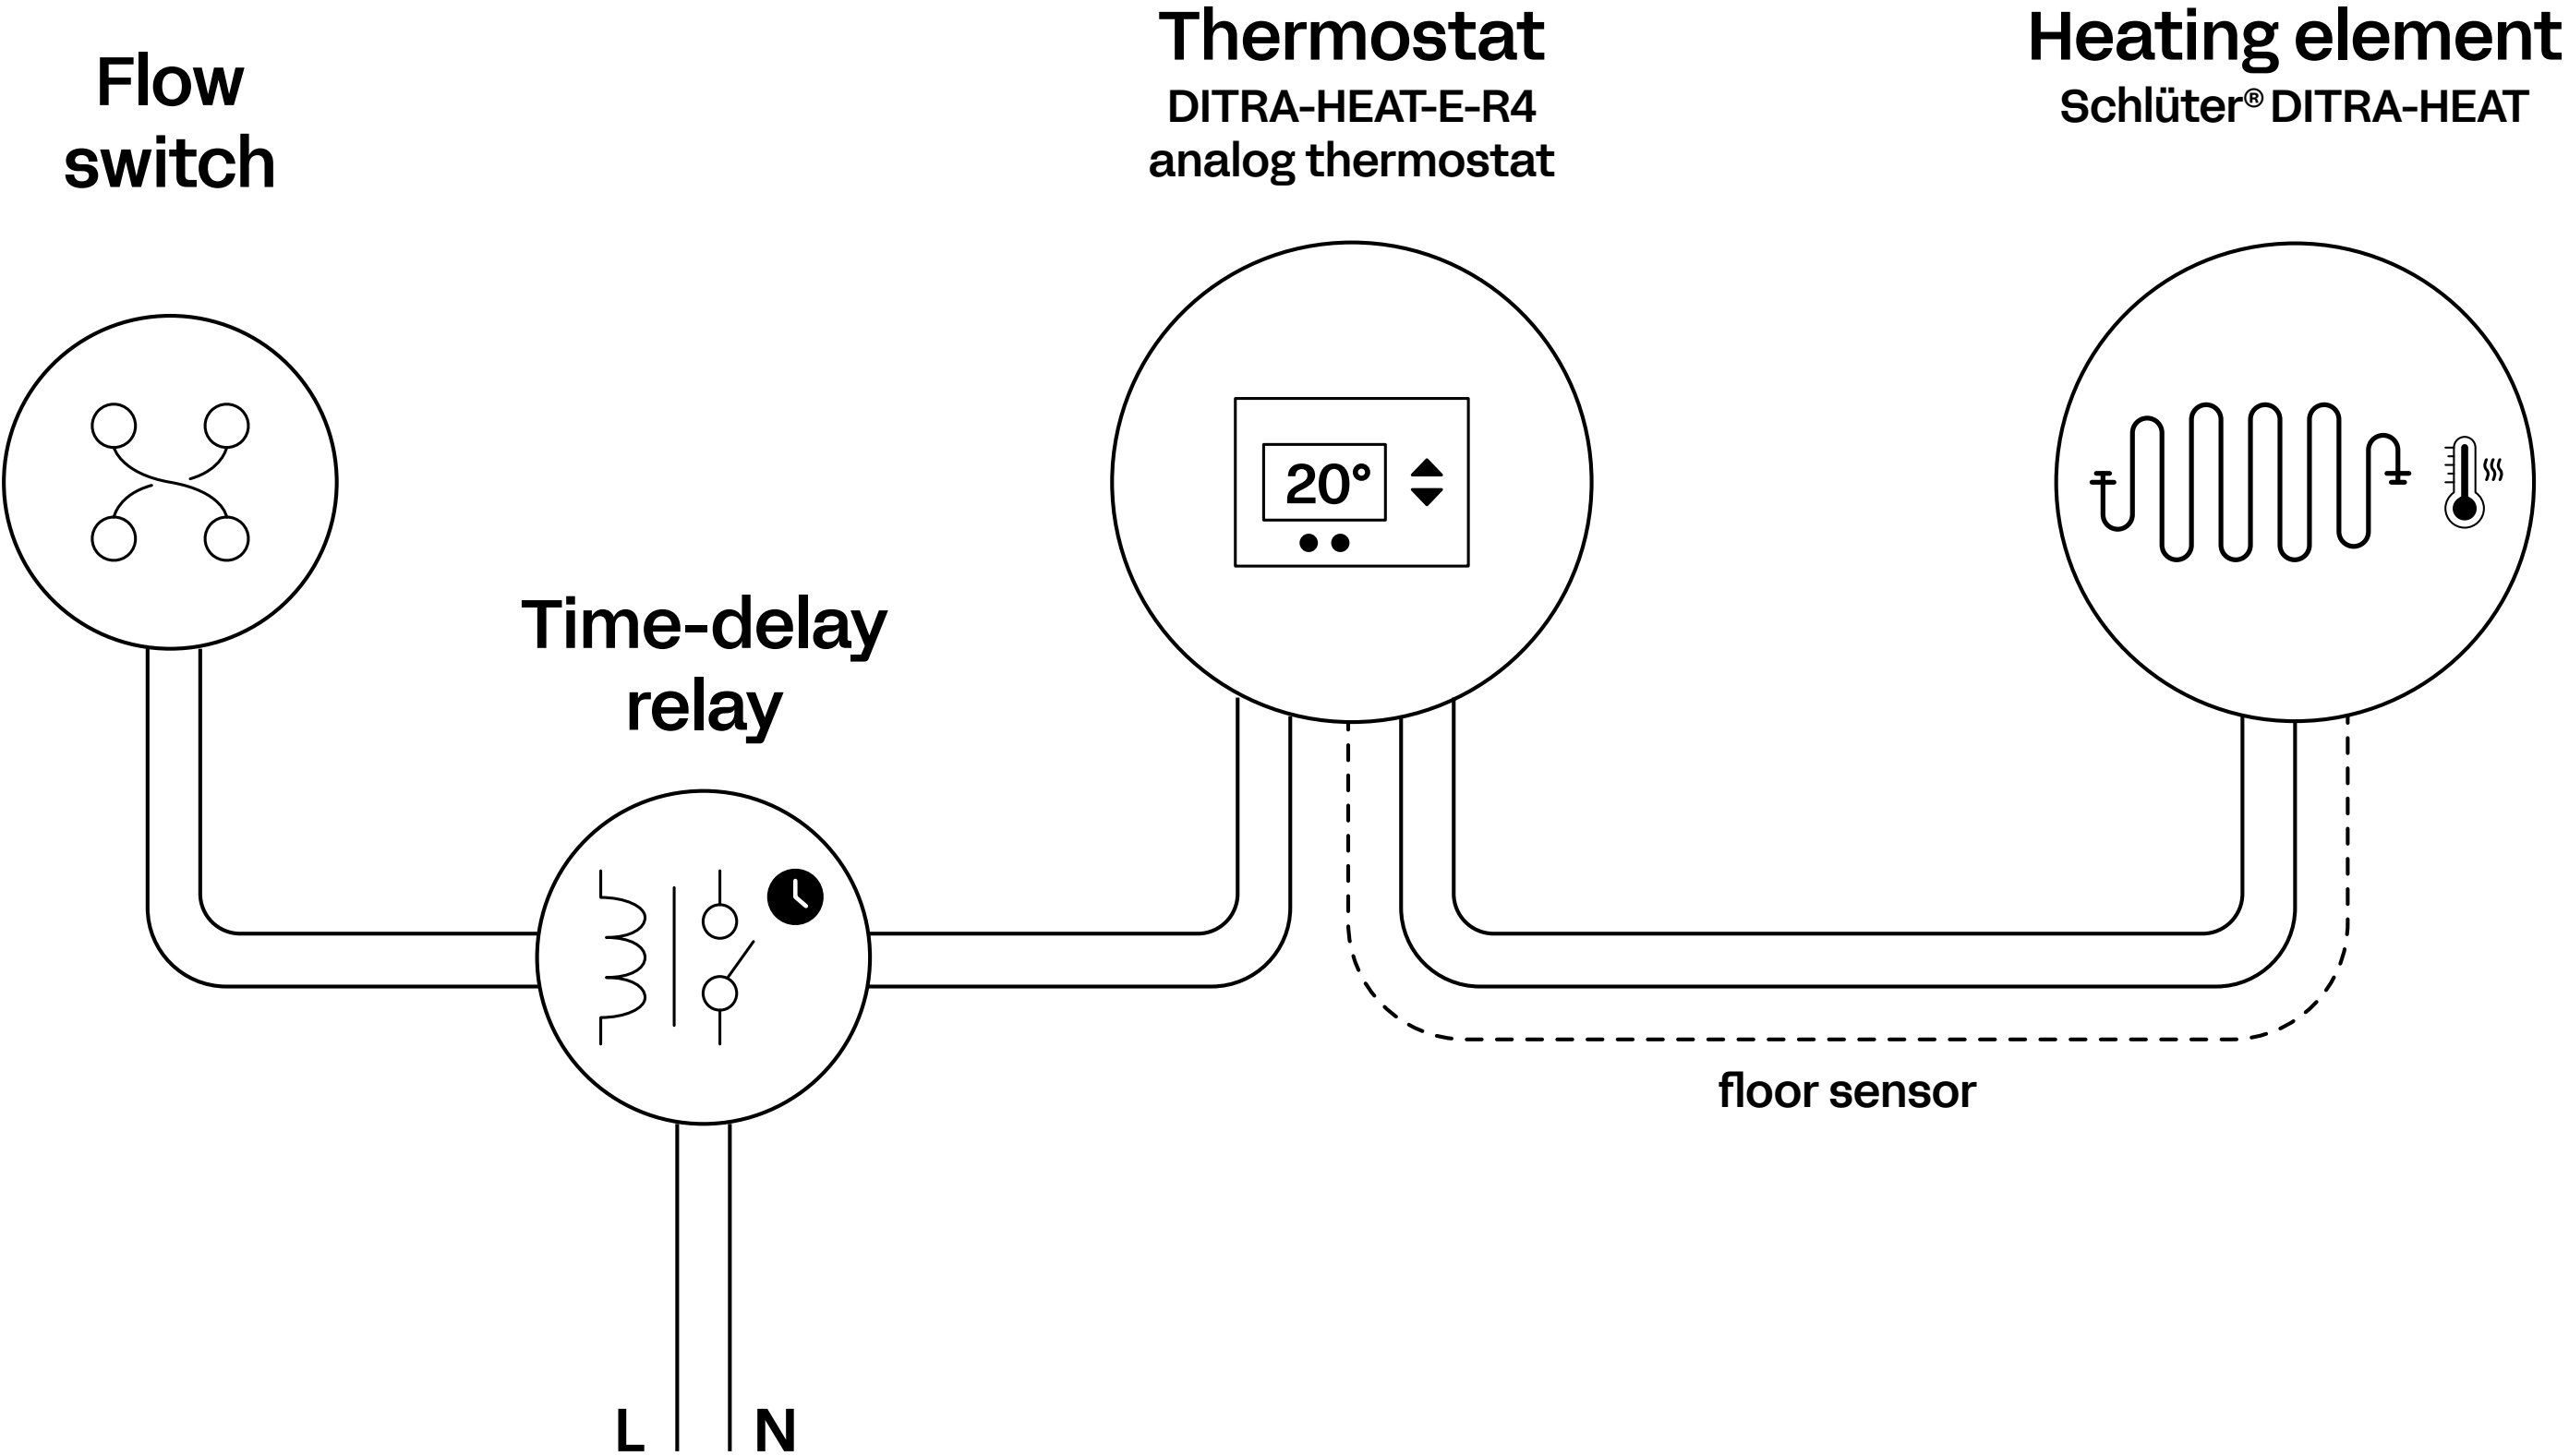


2. Bathtub Installation

Our recommendations for a safe and practical installation of our natural stone bathtubs, models Large & Extra Large (± 450 kg)


1. Packaging & lifting slings

Our bathtubs are always delivered with 3 lifting slings, which are placed under the tub during production. These slings remain under the tub during transport up to the final installation room. They are used to handle the tub safely and can be easily removed after installation without risk of damage.

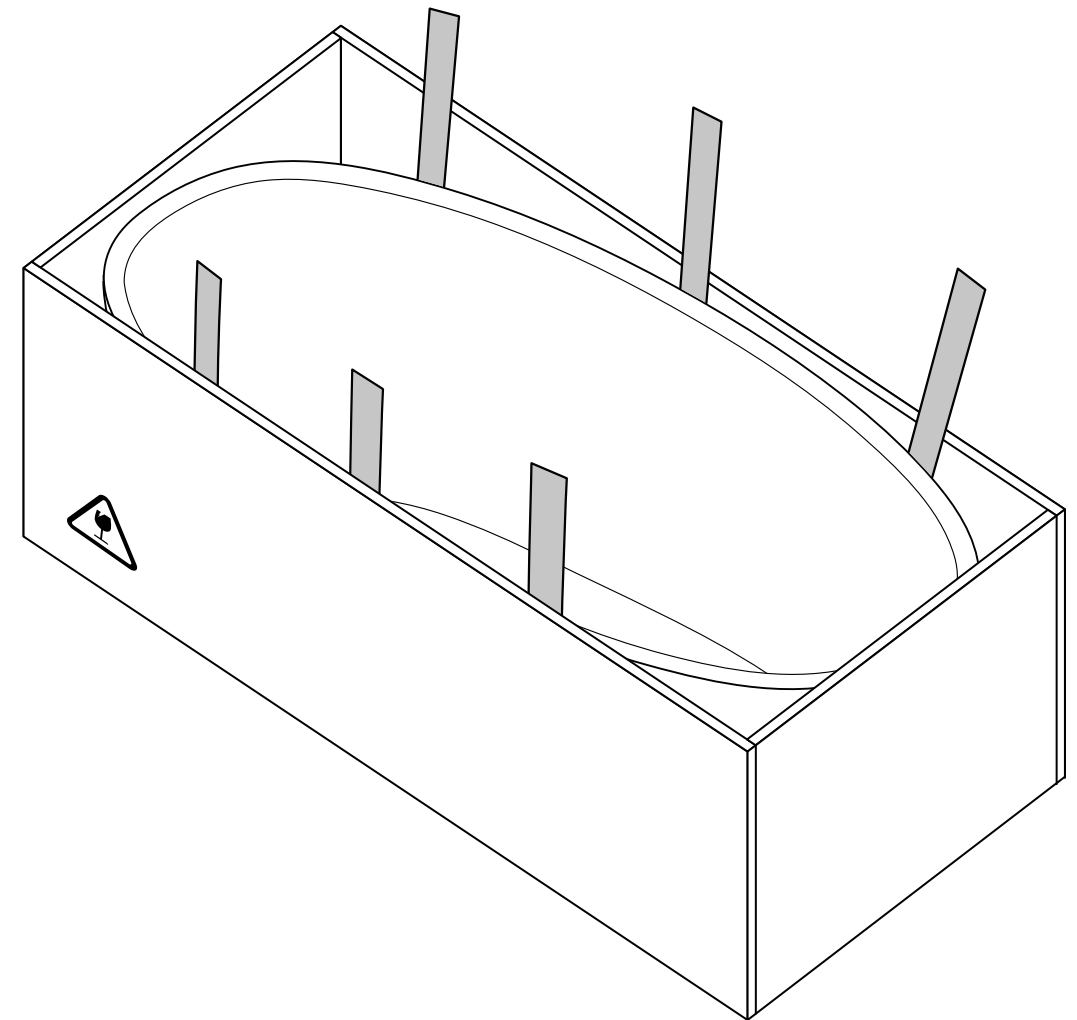


2. Placement Option 1: Installation with a gantry crane (recommended)

- Step 1: Transport into the bathroom
- Place the tub on moving dollies using the supplied slings.
 - Roll it as close as possible to the connection point.
- Step 2: Vertical lift with gantry crane
- Use a gantry crane to lift the tub (available for hire from professional rental companies).
 - Cross the slings during lifting so they don't get pinched between tub and floor; this allows easy removal after placement without tilting the tub.
- Step 3: Connect first, then lower
- Connect the drain and power while the tub is still suspended.
 - Then gently lower the tub into its final position.

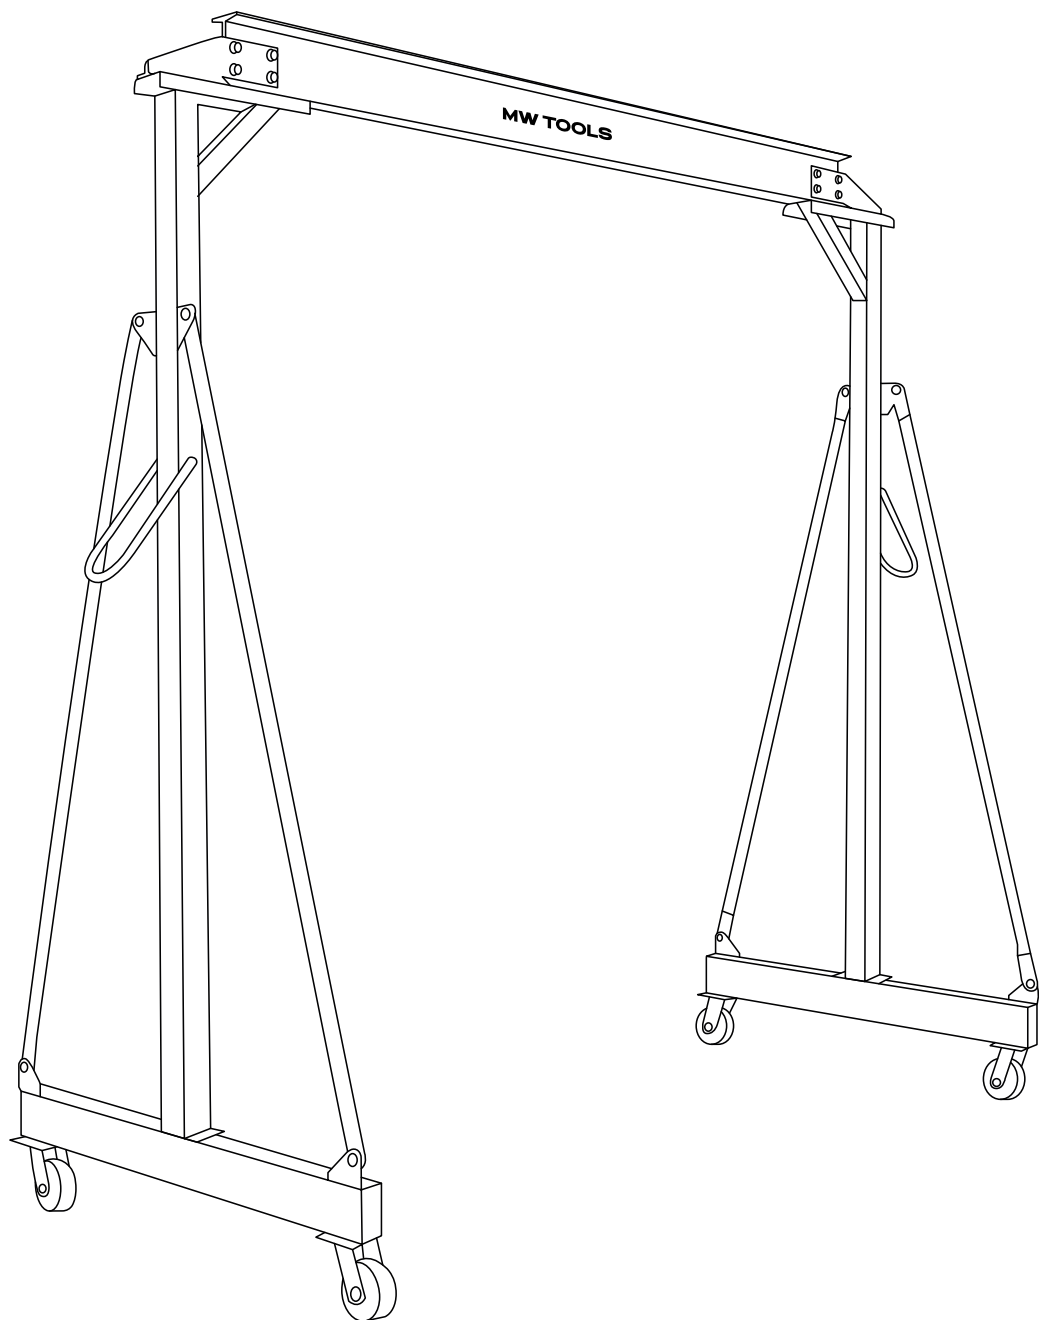


3. Placement Option 2: Rolling the tub into position


- Step 1: On moving dollies
- Roll the tub on dollies to directly above the drain connection.
- Step 2: Fine positioning with a wooden stick
- If necessary, place a round wooden stick (e.g., a broom handle) under the tub to roll it a few additional centimetres.
- Step 3: Removing the slings
- The tub may be tilted slightly on one side to pull the slings out. This can be done safely without risk of damaging the tub surface.

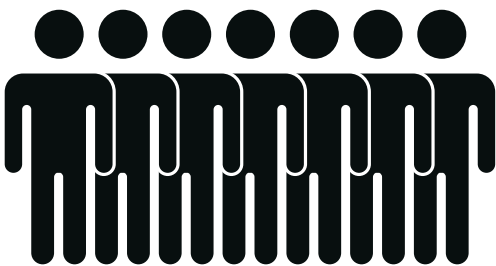

6x

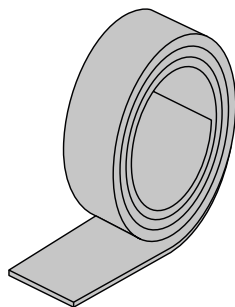


3x

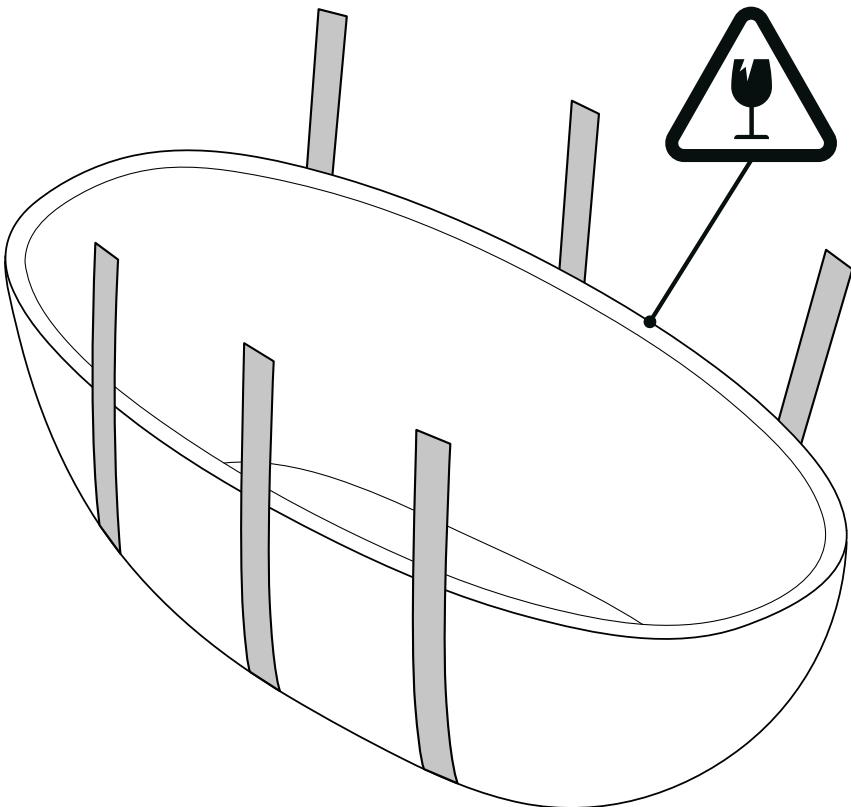


4. Drain connection

Studio LOHO supplies each natural stone bathtub with a flexible drain hose. This can serve as a trap if installed in a loop, or you can connect a traditional trap. Provide about ±10 cm of space beneath the tub so the tub's weight does not rest on the trap. Preferably make the connection while the tub is not yet on the floor (see Placement Option 1).

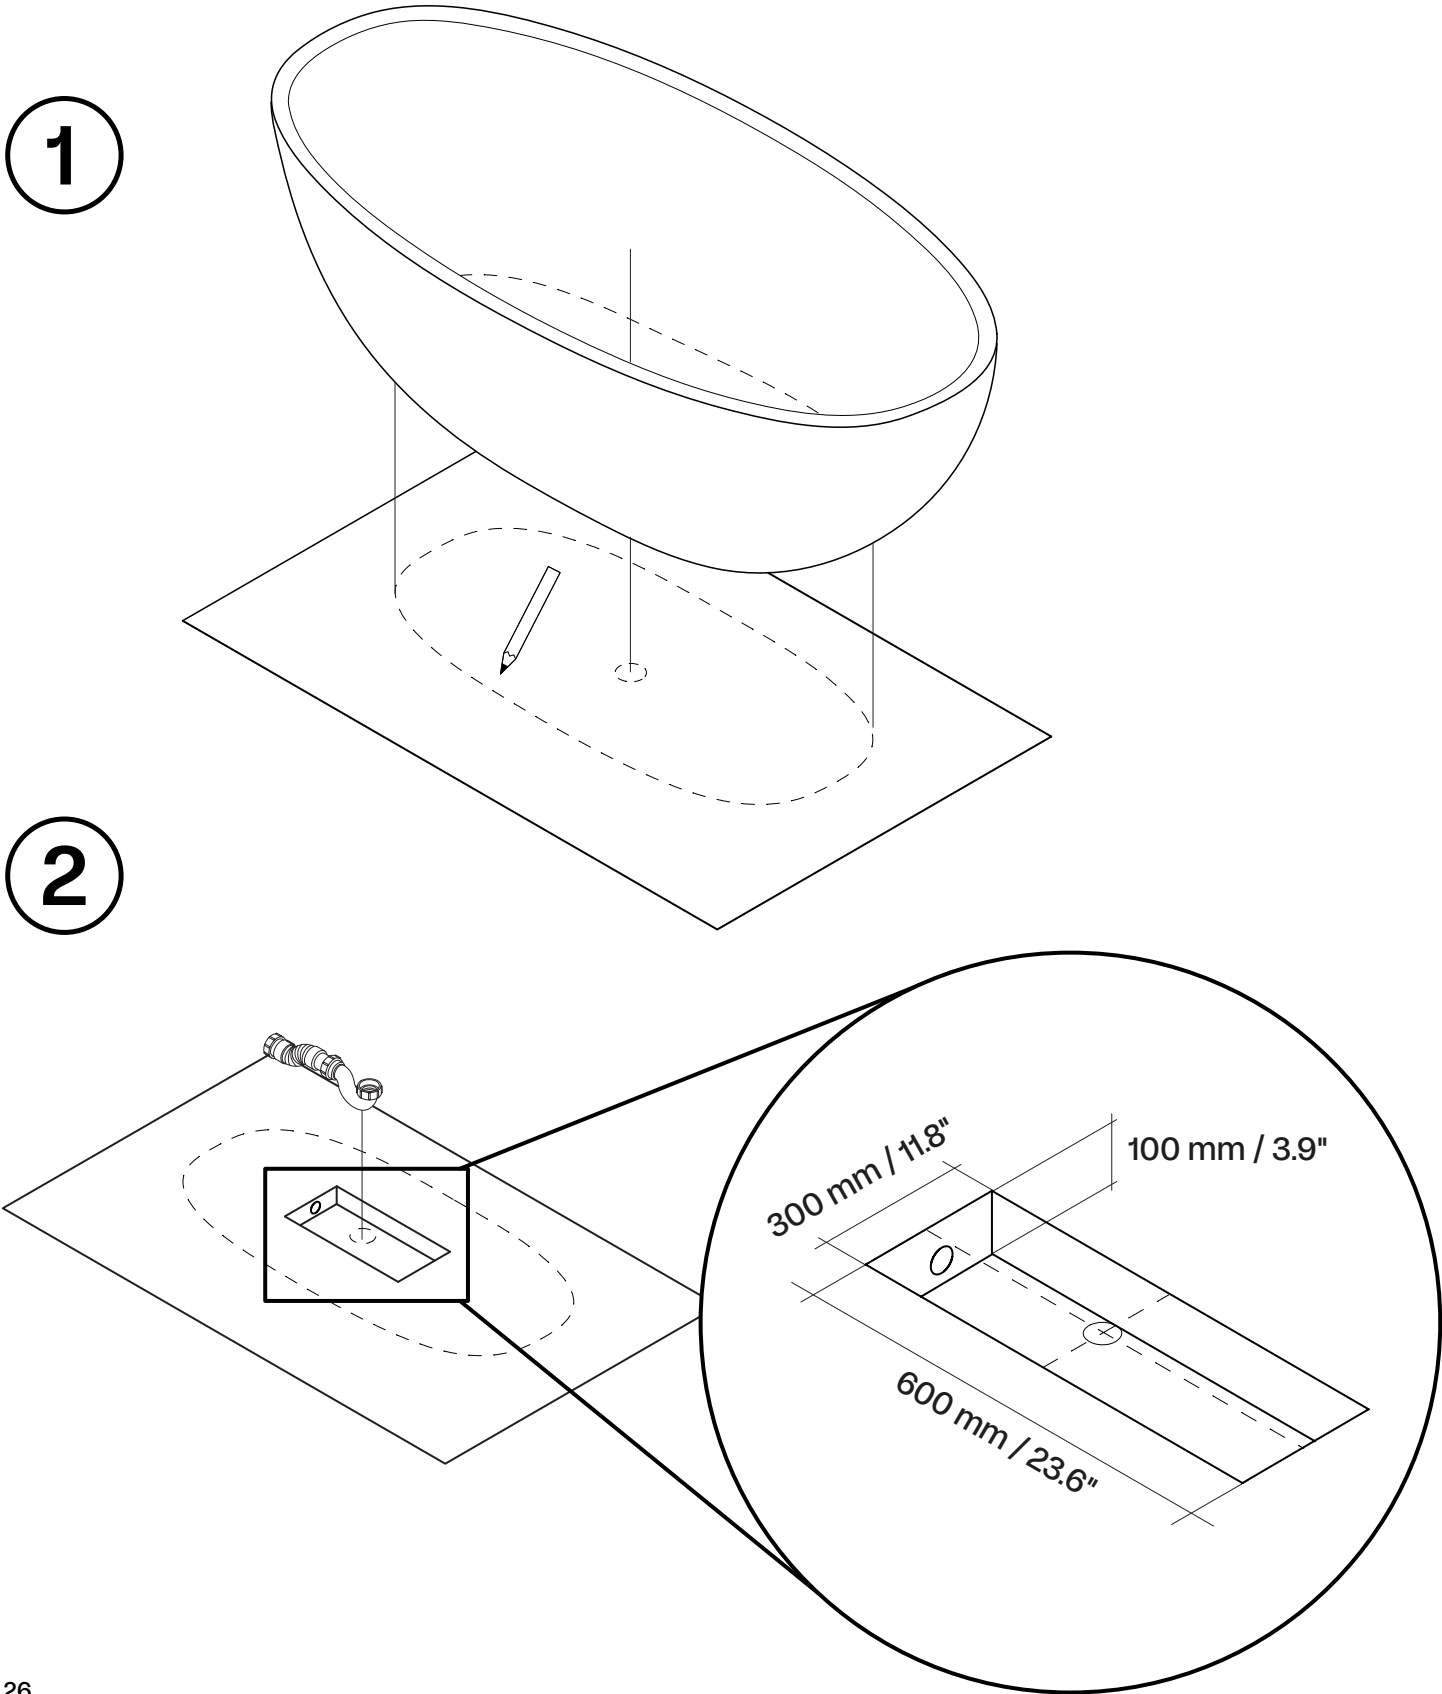

5. Electrical connection

Our natural stone tubs come standard with an integrated electric heating system. The cold supply lead (±4 m) exits at the bottom of the tub (see technical drawing). This cable can be extended and rerouted, provided the work is done correctly and watertight. There is sufficient space under the tub to guide the cable to the desired connection point.

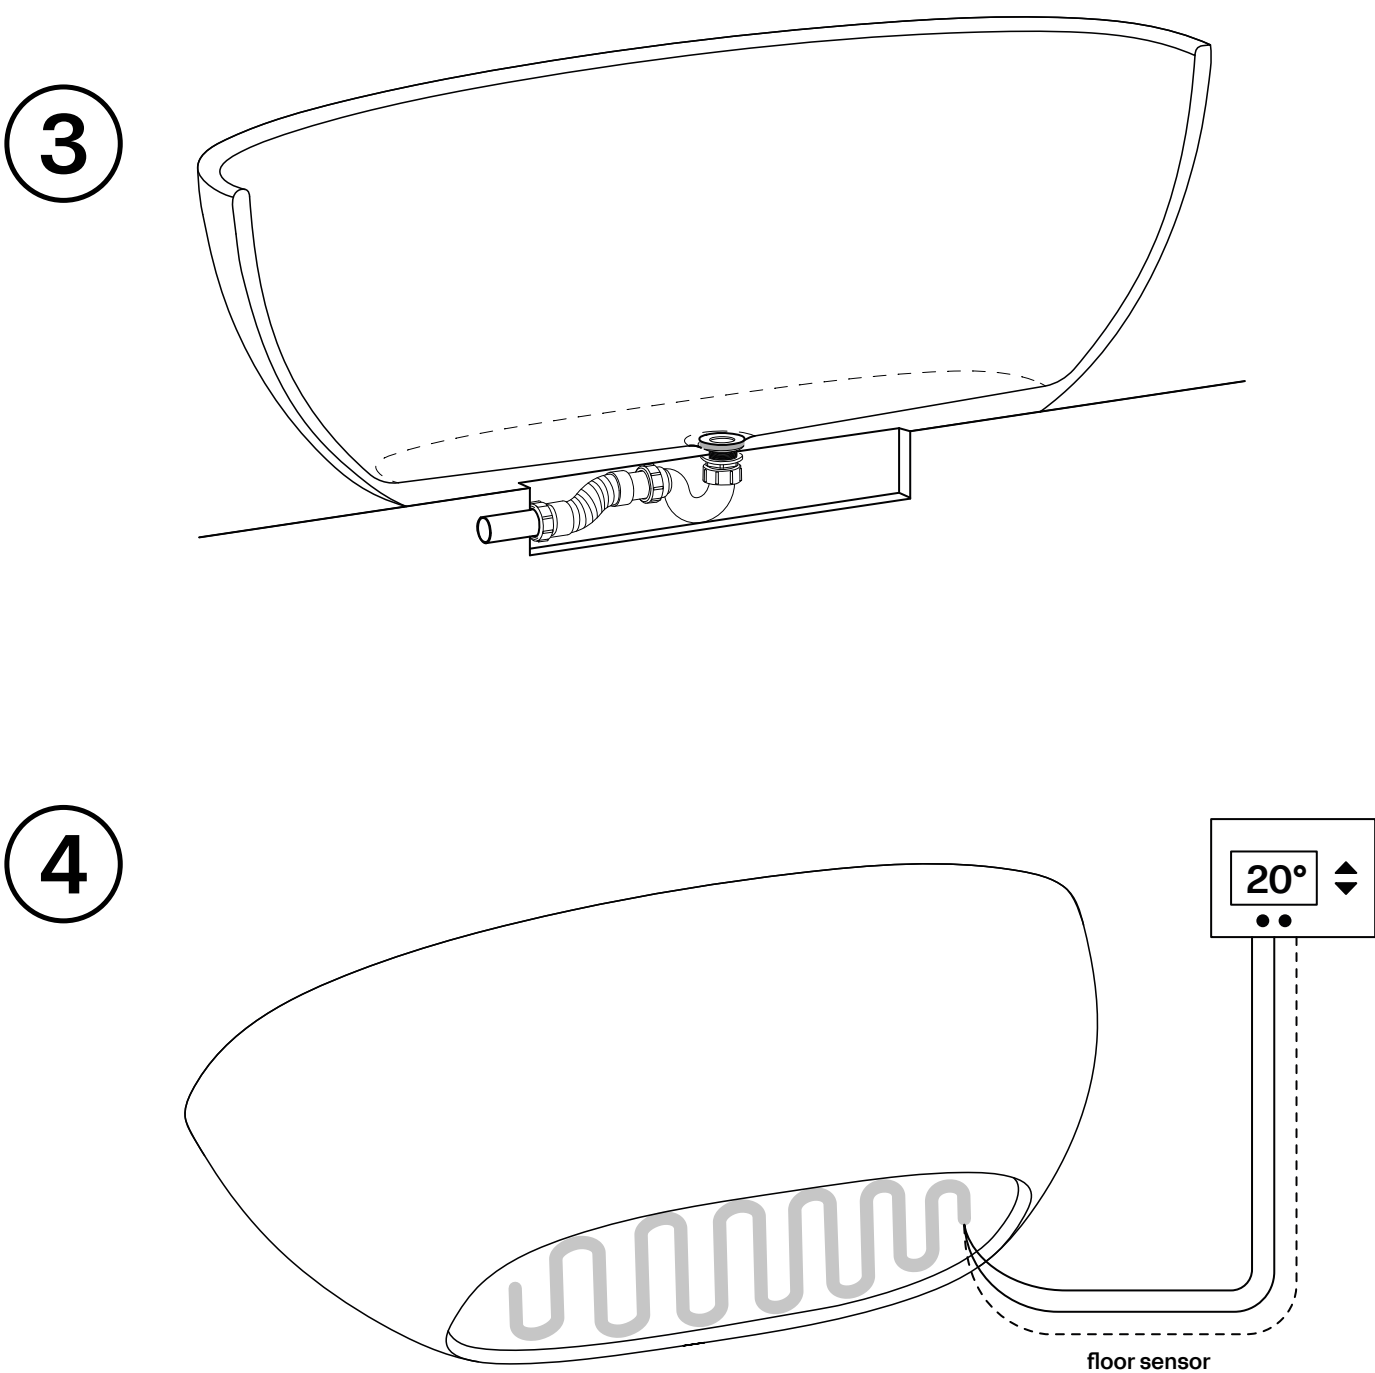

6. Maintenance

Daily care

1 AKEMI Crystal Clean
Spray and wipe with a soft cloth or sponge. Use 3 out of 4 times.

2 AKEMI Triple effect
Spray and wipe with a soft cloth or sponge. Use 1 out of 4 times.



! IMPORTANT: Make sure to not use a scouring pad.

Annual care


3 AKEMI Stain Repellant Super
Apply with a clean cloth.
The interior surface and rim will absorb where needed within 5 min. Not absorbed area's should be wiped clean after 5 min.



! IMPORTANT: Do not fill the bathtub or basin after treatment for at least 24 hours.

OPTIONAL

4 Bleach

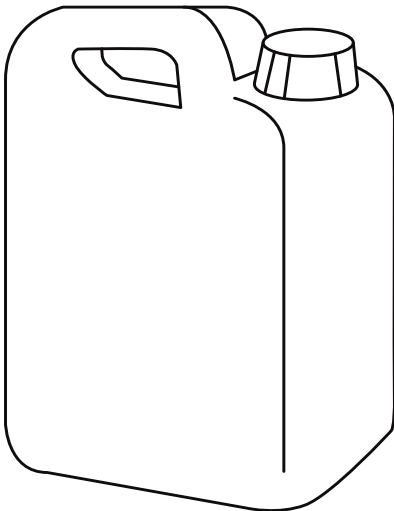

3. Frequently Asked Questions

1. Can the cold cable of the heating be extended?

Yes, the cold cable (the non-heating section) may be extended, provided this is done correctly and safely.

Recommended method and cable types:

Cable type:

- XVB or YMvK (fixed installation cable)
- H05VV-F or H07RN-F (flexible cable if installed in a conduit)
- Number of cores: 3-core (phase, neutral and earth)

Cross-section:

- 1.5 mm² for cable lengths up to approx. 20 meters
- 2.5 mm² for longer distances or higher loads
- Voltage: Suitable for 230 V AC

Installation:

- In a conduit or protective sleeve
- Connection in a junction box, outside the heating zone
- Accessible for inspection

2. What type of cable should be used between the switch and the thermostat?

Between the switch and the thermostat, a 3G1.5 mm² cable is recommended.

- L (phase) is switched via the switch
- N (neutral) is connected directly
- Earth (yellow/green) if required for grounding the housing

In this setup, the switch interrupts the phase conductor to the thermostat.

3. Can the floor sensor be extended?

Yes, it can be extended using an equivalent cable.

4. Is the heating equipped with a time delay?

This is not provided as standard. However, it is possible to use a time relay ("delay relay").

This allows the heating to switch off automatically after a preset time, without user intervention. The time relay is installed in the electrical panel. The choice of type depends on the other electrical components in the project and is therefore not supplied by us.

Installation and configuration are carried out by the electrician. In many cases, the set time can be easily adjusted afterwards, although the intention is to maintain the initial setting.

5. Where does the cold cable exit in the bathtub?

De exacte positie van de uitgang van de koude kabel wordt verduidelijkt in de technische tekening die bij dit document is toegevoegd.

We're here to help
info@studioloho.com

OBJECTS

Natural Stone Bathtubs
Fitting Instructions
©2025

STUDIOLOHO.COM