QUICK GUIDE

# Aire+ T2 Thermostat

Install it, connect it to the app and program your home in under half an hour.




Figure 1. The four parts of the thermostat.

## 1 Meet your thermostat

1. **Status light.** Solid green when connected to the network; flashes while pairing.
2. **Current temperature** of the room, in degrees Celsius.
3. **Target temperature.** The orange dot marks the one you have chosen.
4. **Dial.** Turn it to raise or lower the temperature and press it to change mode.

## 2 In the box

| | | |
|---|---|---|
| **1 Aire+ T2 thermostat** with its wall plate | **2 screws and 2 wall plugs** 3.5 × 30 mm | **1 quick guide** the one you are reading |

**WARNING**

Installation must be carried out by a qualified person. Before touching any wire, switch off the power at the electrical panel and check with a voltage tester that there is no voltage.

## 3 Installation

1. Remove the old thermostat and note which terminal each wire goes to.
2. Separate the wall plate from the thermostat by gently prying at the bottom.
3. Screw the plate to the wall, **1.5 m** from the floor and away from drafts and heat sources.
4. Connect the wires to the terminals following the diagram below and tighten the screws firmly.

5. Fit the thermostat onto the plate and restore the power: it will switch on by itself.

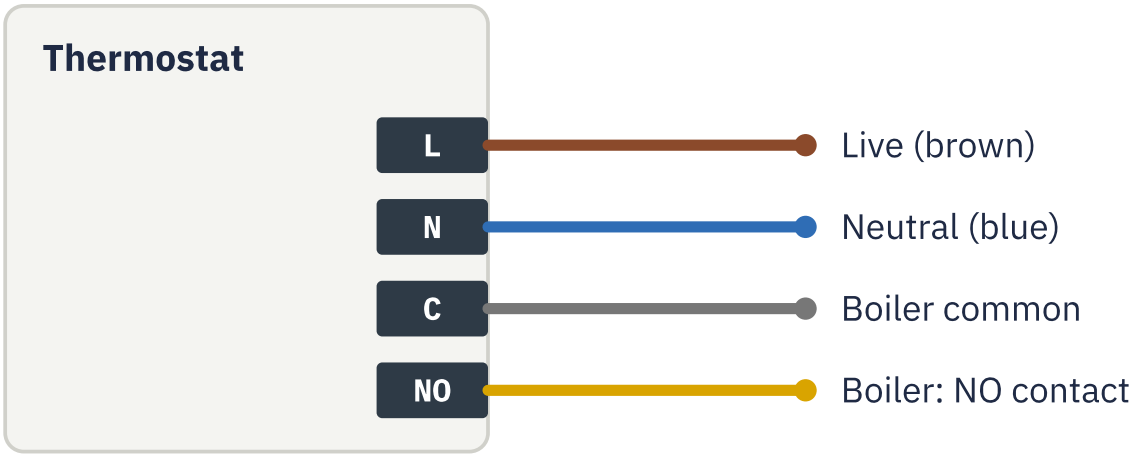



Figure 2. Wiring diagram of the four terminals.

### 3.1 If your installation has no neutral

The thermostat can run on batteries in homes without a neutral wire. Leave terminal `N` free and see section 7 to find out which batteries to use. In that case the screen turns off when it is not touched.

### 3.2 Check the connection

Once installed, the screen should show the time and the temperature. You can check the state of the terminals from the settings menu, with the following sequence:

```
> Settings > Service > Terminals

L     230 V      [ OK ]
N     0 V        [ OK ]
C     closed     [ OK ]
NO    open       [ OK ]
```

> **TIP**
> If a terminal shows in red, check the wire and repeat the check before closing the cover.

### 3.3 Terminal reference

Table 1. Thermostat terminals and usual wires.

| Terminal | Function | Usual wire |
|---|---|---|
| **L** | Power supply, live | Brown |
| **N** | Power supply, neutral | Blue |
| **C** | Boiler common contact | Gray |
| **NO** | Normally open contact | Yellow |

## 4 Connect the app

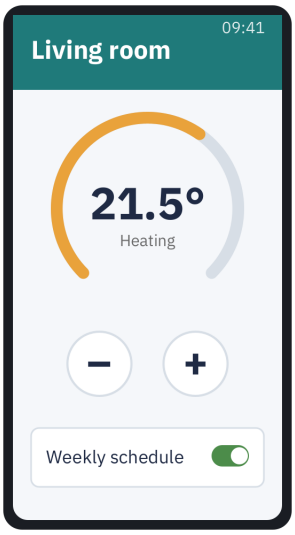



Figure 3. The main screen of the app.

1. Download the **Aire+** app from your phone's app store.
2. Create an account or sign in with the one you already have.
3. Tap **Add thermostat** and press and hold the thermostat dial for five seconds.
4. When the light flashes green, choose your Wi-Fi network and enter the password.
5. Give the room a name, for example “Living room”. Done!

If pairing fails, bring the phone closer to the thermostat and check that you are using a **2.4 GHz** network: 5 GHz is not supported.

## 5 Set your weekly schedule

The thermostat comes with an energy-saving schedule that you can change from the app or from the dial menu. These are the factory time slots (table 2):

Table 2. Time slots of the factory schedule.

| Time slot | Monday to Friday | Weekend |
|---|---|---|
| Morning · 06:30–08:30 | 21 °C | 18 °C |
| Day · 08:30–17:00 | 17 °C | 20 °C |
| Evening · 17:00–23:00 | 21.5 °C | 21.5 °C |
| Night · 23:00–06:30 | 16 °C | 16 °C |

## 6 Troubleshooting

| Symptom | Probable cause | What to do |
|---|---|---|
| The screen does not turn on | No power or a loose wire | Check the panel and terminals L and N |
| Status light in red | No Wi-Fi connection | Move the router closer or pair again |
| The boiler does not start | C/NO contact wired wrong | Check figure 2 (page 2) |
| Wrong temperature | It is near a heat source | Move it 1.5 m from the floor |

# 7 Technical specifications

Table 3. Specifications of the Aire+ T2.

| | |
|---|---|
| Power supply | **230 V AC, 50 Hz, or 2 AA batteries** |
| Output contact | **6 A / 250 V, potential-free** |
| Temperature range | **5 to 30 °C, in 0.5 °C steps** |
| Connectivity | **Wi-Fi 2.4 GHz (IEEE 802.11 b/g/n)** |
| Dimensions | **86 × 86 × 24 mm** |

# 8 Warranty and support

## 8.1 Warranty

The Aire+ T2 has a **three-year** warranty from the date of purchase, covering any manufacturing defect. It does not cover damage from incorrect installation or damage caused by moisture or impacts. Keep the invoice: we will ask for it to process the warranty.

## 8.2 Recycling

At the end of its useful life, do not throw the thermostat away with household waste. Take it to a recycling center or hand it in at any store when you buy a new one. Batteries are recycled separately.

**PHONE**
**900 100 200**
Weekdays, 9 a.m. to 6 p.m.

**EMAIL**
**soporte@airemas.example**
We reply in less than 24 hours

**WEB**
**airemas.example/ayuda**
Videos, FAQs and forum

# 9 List of figures and tables

**FIGURES**

Figure 1. The four parts of the thermostat. . . . . 1
Figure 2. Wiring diagram of the four terminals. . . . . 2
Figure 3. The main screen of the app. . . . . 3

**TABLES**

Table 1. Thermostat terminals and usual wires. . . . . 2
Table 2. Time slots of the factory schedule. . . . . 3
Table 3. Specifications of the Aire+ T2. . . . . 4