


# 1 -Preliminary checks

## Running-in precautions

### Maximum engine speed

Rpm limits to be observed during the running-in period and in normal use:

- 1 up to **1000** km;
- 2 from **1,000** to **2,500** km.

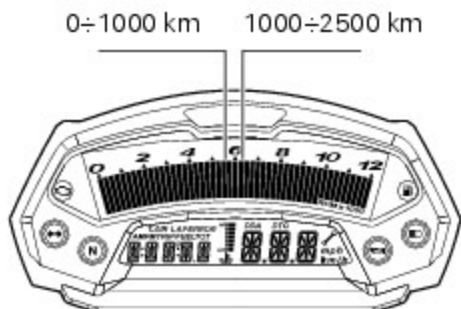

### Maximum engine speed up to 1000 km

During the first **1,000** km keep an eye on the rev counter. The engine speed must not exceed **5,500-6,000** rpm. During the first hours of riding, it is advisable to continuously vary the load on the engine and the rpm, though still keeping within the above limits.

To this end, roads with plenty of bends and even slightly hilly areas are ideal for a most efficient running-in of engine, brakes and suspension. For the first **100** km, use the brakes gently. Do not brake violently or keep brake applied for too long. This will enable a correct break-in of friction material on brake pads against brake discs. To allow all the mechanical moving parts of the motorcycle to adapt to one another and above all to avoid adversely affecting the life of basic engine parts, it is advisable to avoid harsh acceleration and not to run the engine at high rpm for too long, especially uphill. It is also advisable to check the drive chain frequently and ensure that it is lubricated as required.

### Maximum engine speed from 1000 to 2500 km

At this point you can ask more of your engine; be careful, however, never to exceed **7,000** rpm. Keeping strictly to these recommendations will extend the life of your engine and reduce the likelihood of overhauls or tune-ups.



### Important

During the whole running-in period, the maintenance and service rules recommended in the Warranty Card should be observed carefully. Failure to follow these instructions releases Ducati Motor Holding S.p.A. from any liability whatsoever for any engine damage or shorter engine life.

## Pre-ride checks



### Warning

Failure to carry out these checks before riding may result in damage to the motorcycle and serious injury to the rider.

Before starting, check the following points:

#### Fuel level in the tank

Check fuel level in the tank. Fill the tank if needed (Sect. C 2, [Fuel, lubricants and other fluids](#)).

#### Engine oil level

Check the oil level in the sump through the sight glass. Top up with recommended oil if necessary (Sect. C 2, [Fuel, lubricants and other fluids](#)).

#### Brake and clutch fluid

Check the fluid levels in the respective reservoirs.

## Tyres

Check tyre pressure and condition (Sect. C 1.1, [Front wheel](#)/[Rear wheel](#)).

## Controls

Operate the brake, clutch, throttle and gear change controls (levers, pedals and twistgrip) to check that they function correctly.

## Lights and indicators

Make sure the lights, indicators and horn work properly. Replace any burnt-out bulbs with new bulbs of the same rating (Sect. C 1.1, [Lights/instrument panel](#)).

## Key locks

Check that the fuel filler cap and the seat are locked.

## Side stand

Make sure the sidestand operates smoothly (Sect. P 6, [Checking the side stand switch](#)) and is in the correct position (Sect. H 5, [Removing of the sidestand](#)).