


3 -Seat

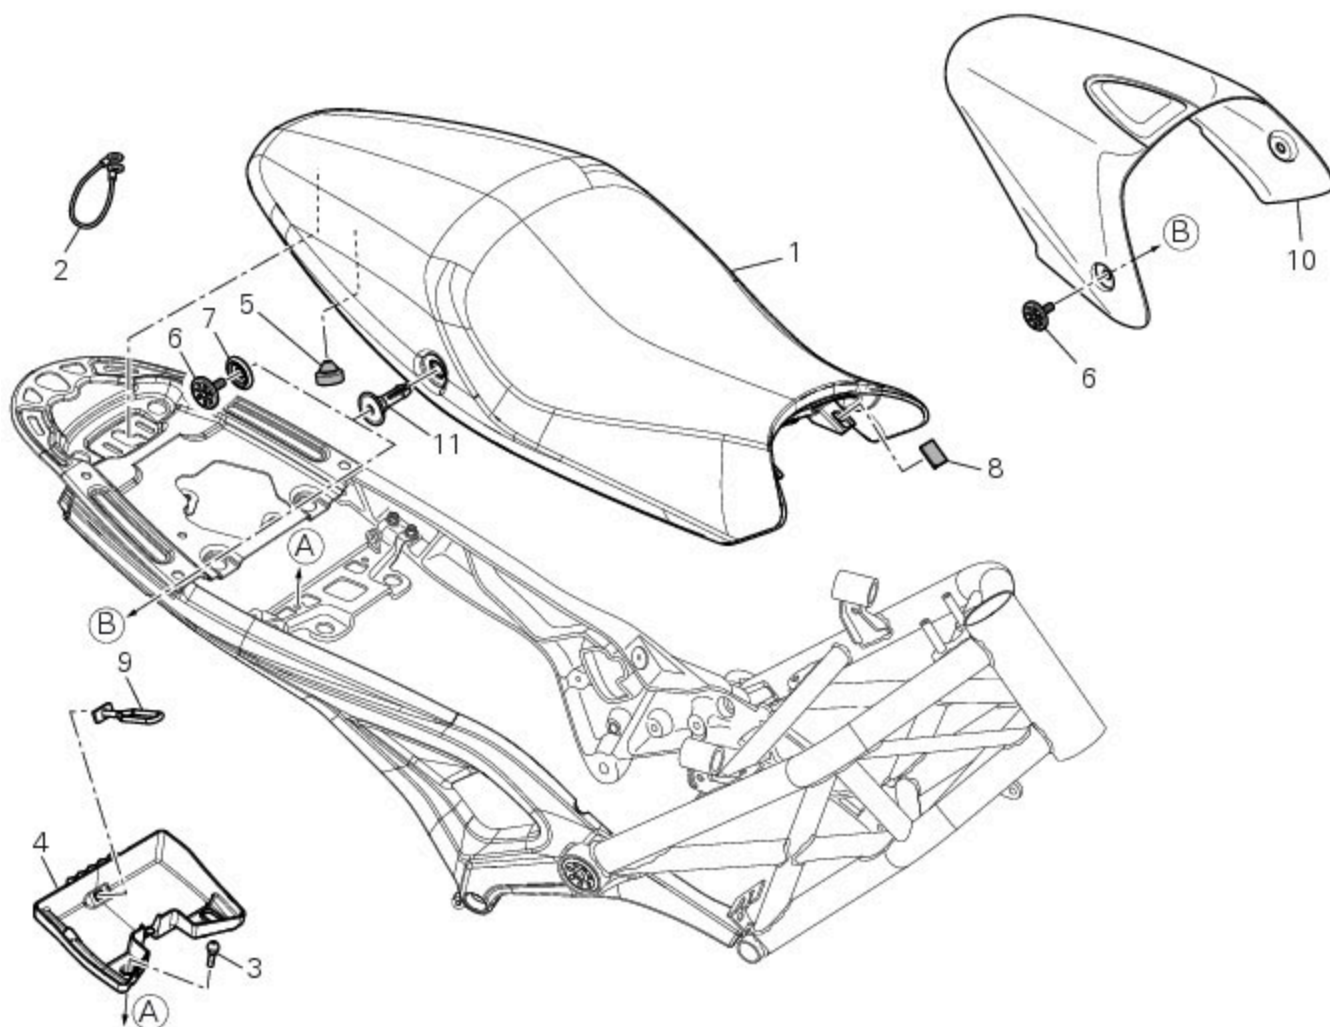

- 1 Seat
- 2 Helmet lock cable
- 3 Screw
- 4 Tool tray
- 5 Rubber pad
- 6 Banjo bolt
- 7 Spacer
- 8 Rubber pad
- 9 Elastic strap
- 10 Seat cover
- 11 Stud bolt

 Spare parts catalogue

1100 ABS [SEAT](#)


1100 S ABS [SEAT](#)

Important

Bold reference numbers in this section identify parts not shown in the figures alongside the text, but which can be found in the exploded view diagram.


Removal of the seat

Insert the key in the lock and simultaneously apply downward pressure in the area of the catch to release the pin. Pull the seat backwards to release it from the front catches and remove it from the frame.

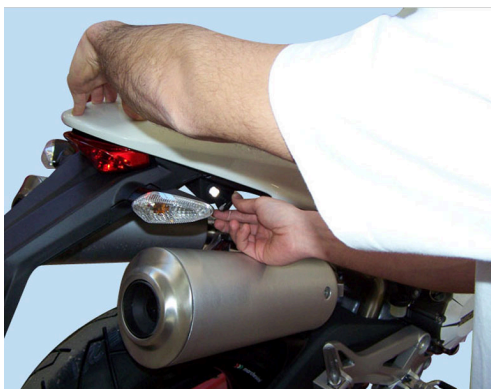


Disassembly of the seat

Unscrew the two special screws (6) and slide out the seat cover (10).

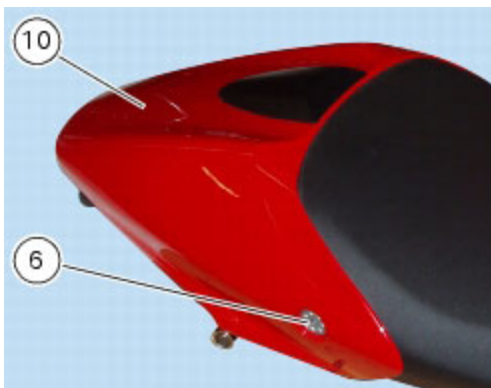


Reassembly of the seat


Refit the seat cover (10) to the seat inserting and tightening the special screws (6) to the specified tightening torque (Sect. C 3, [Frame torque settings](#)).

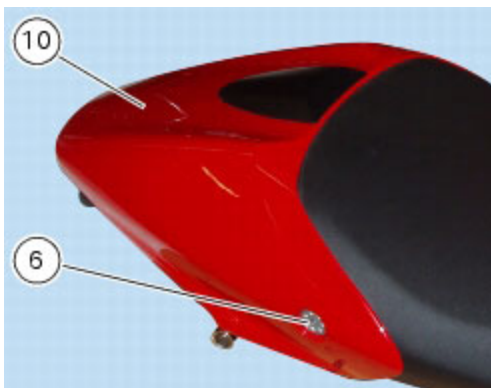

Refitting the seat

Refit the seat inserting the front ends of the seat base into the tabs (A) on the tank, then push the rear end of the seat until you hear the bolt in the lock click into place.

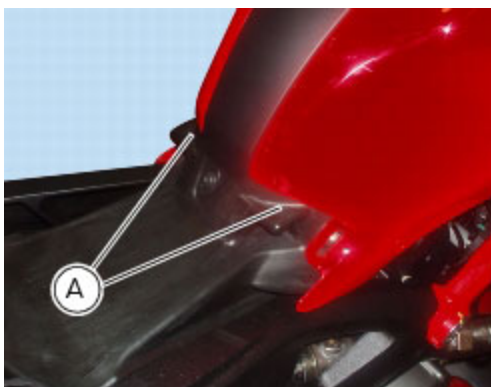

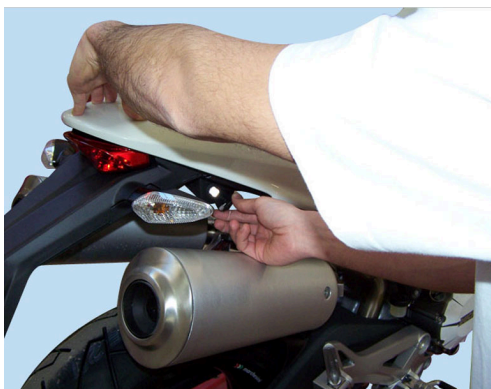

Removal of the tool tray

Remove the seat, as described in the paragraph "[Removal of the seat](#)" of this section. Unscrew the screws (3) and remove the tool tray (4).



Refitting the tool tray

Refit the tool tray (4) by fitting the screws (3) and tightening them to the specified torque (Sect. C 3, [Frame torque settings](#)).

Refit the seat, as described in the paragraph "[Refitting the seat](#)" of this section.

