


1 - Throttle twistgrip

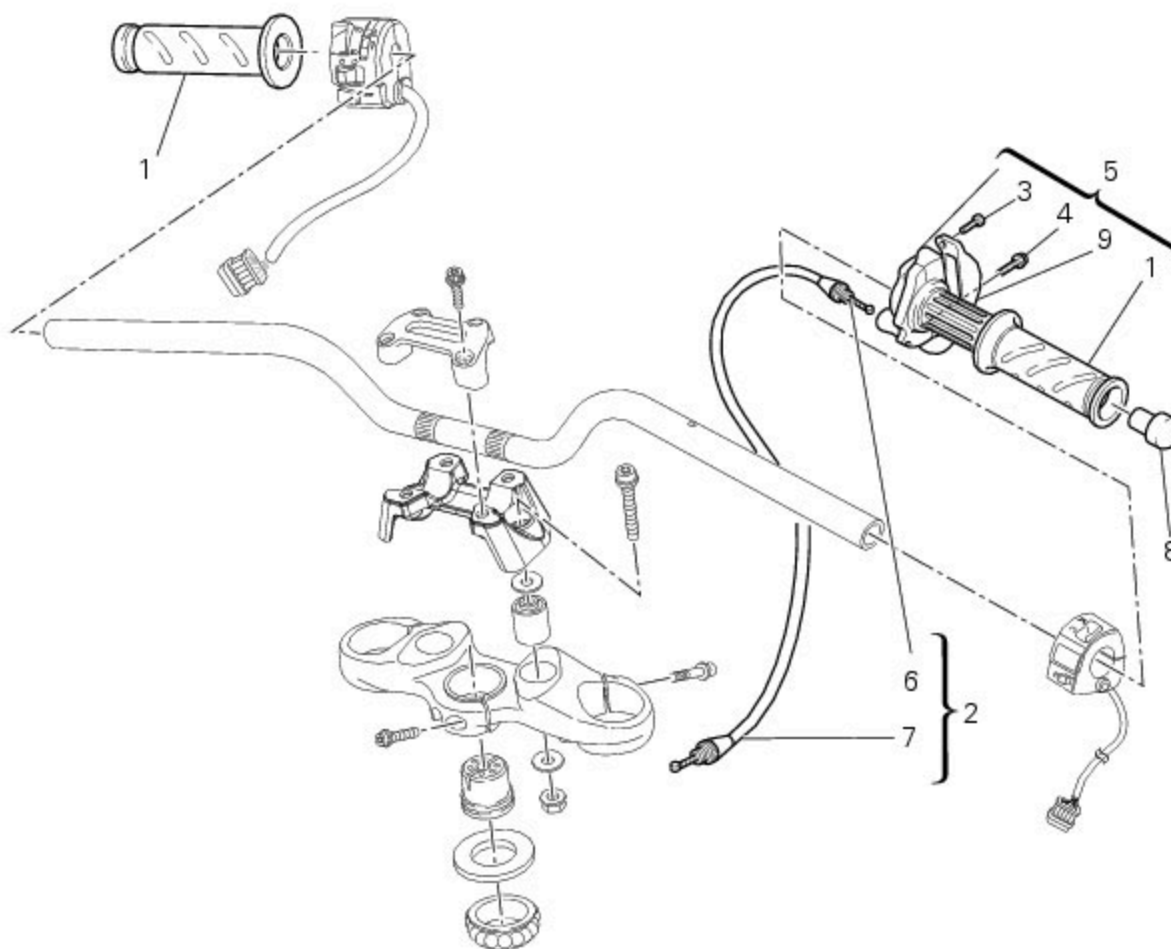

- 1 Grips
- 2 Throttle cable
- 3 Screw
- 4 Screw
- 5 Throttle twistgrip
- 6 Throttle cable adjuster on handlebar
- 7 Throttle cable adjuster on throttle body
- 8 Plug
- 9 Cover

 Spare parts catalogue

1100 ABS [HANDLEBAR AND CONTROLS](#)

1100 S ABS [HANDLEBAR AND CONTROLS](#)


 **Important**
Bold reference numbers in this section identify parts not shown in the figures alongside the text, but which can be found in the exploded view diagram.

Adjusting the throttle cable


To operate on the set screws of the throttle grip cables, consult Sect. D 4, [Adjusting the throttle cable](#).

Removal of the throttle twistgrip



Turn throttle control pulley so as to disengage cable stop pin (A) from pulley.

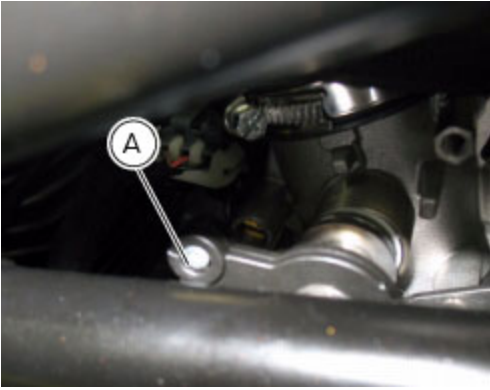

Raise gaiter (B), loosen lock nut (C) and adjuster (7) until sliding it off the throttle control pulley on throttle body.

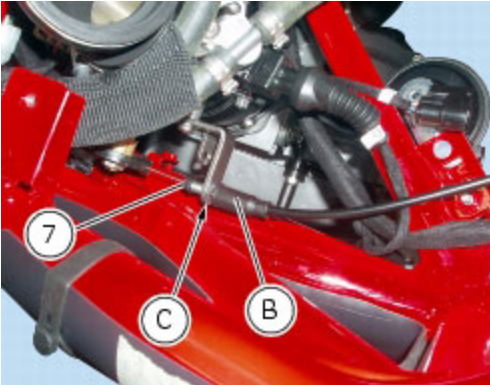


Loosen and remove the screws (4) and cover (9), then disconnect the throttle cable from the throttle control, by sliding off the cable stop pin (D) from the pulley and loosening adjuster (6) until removing it.

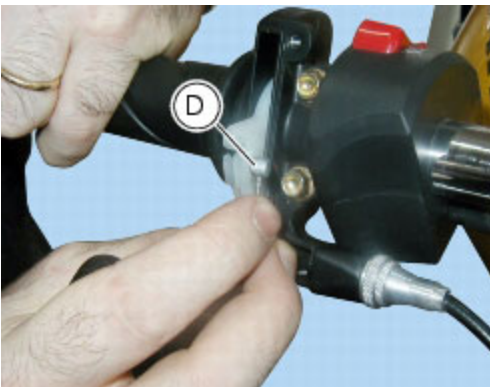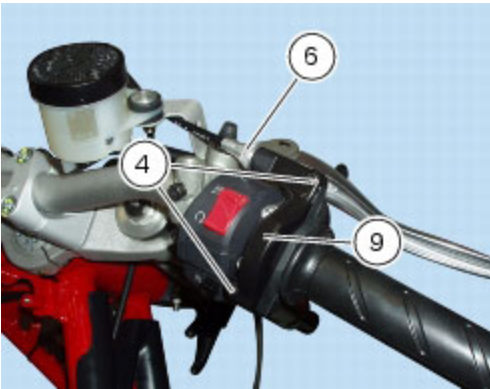


Remove the throttle cable (2) from the vehicle.

Remove the plug (8) from the handlebar.

Loosen the two screws (3) fixing the throttle twistgrip to handlebar.

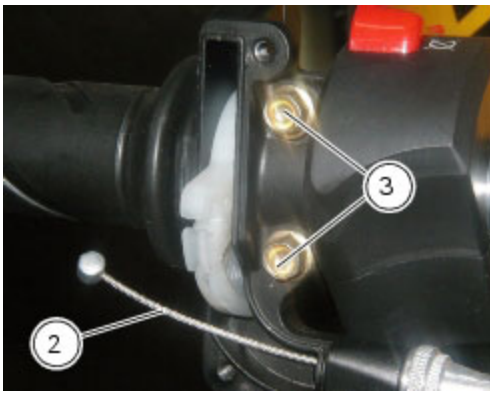

Remove the throttle twistgrip (5) from the handlebar.


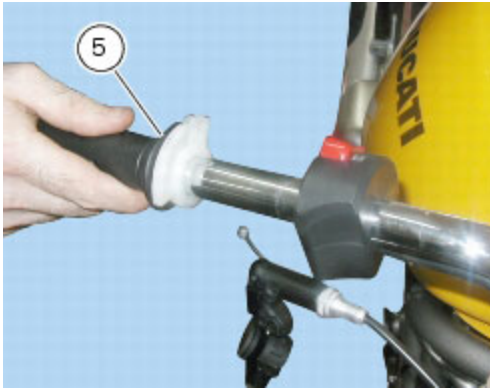


Refitting the throttle twistgrip

To refit the throttle control components, proceed in inverse order to the removal procedure, making sure that the twistgrip housings locate in the reference hole in the handlebar.

Apply the recommended grease to the throttle cable (2).

Tighten the screws (3), (4) to the specified tightening torque (Sect. C 3, [Frame torque settings](#)).

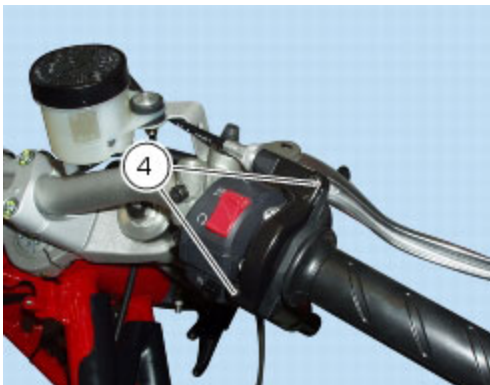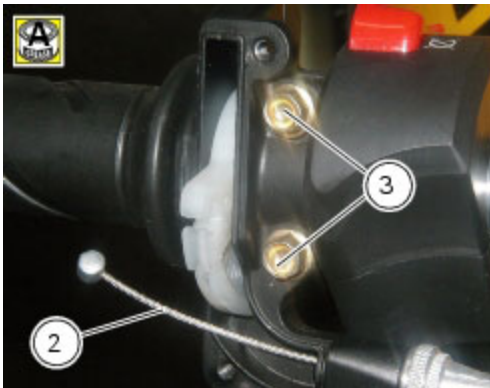

Note

Refer to the tables on the next page for correct routing of the throttle grip cable.

Routing the throttle cables

