


5 -Gearchange mechanism

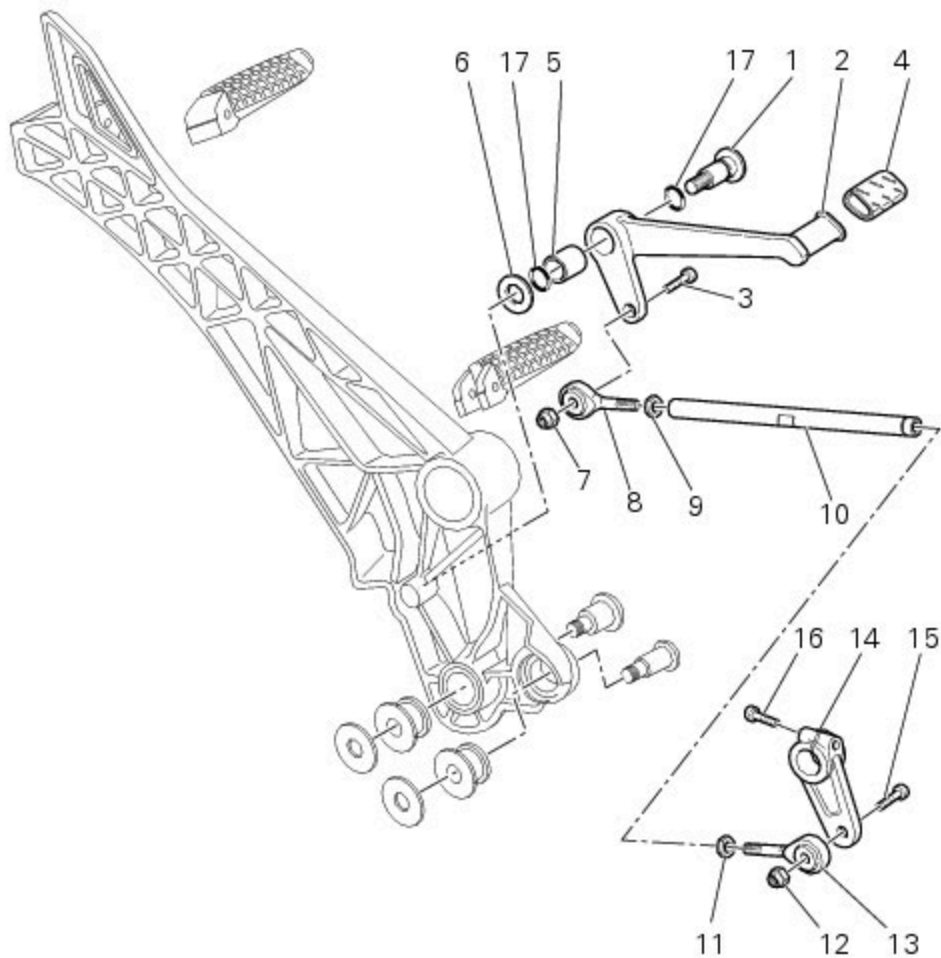

- 1 Bolt
- 2 Gearchange pedal
- 3 Screw
- 4 Rubber pad
- 5 Bush
- 6 Washer
- 7 Nut
- 8 Ball joint
- 9 Nut
- 10 Gearchange lever tie-rod
- 11 Nut
- 12 Nut
- 13 Ball joint
- 14 Gearchange lever
- 15 Screw
- 16 Screw
- 17 O-ring


 Spare parts catalogue

1100 ABS [GEARCHANGE LEVER - FOOTREST](#)
1100 S ABS [GEARCHANGE LEVER - FOOTREST](#)

Bold reference numbers in this section identify parts not shown in the figures alongside the text, but which can be found in the exploded view diagram.

Removal of the gearchange control

Unscrew and remove the pivot screw (1) securing the gearchange pedal (2) and recover the washer (6) and the O-ring seals (17).

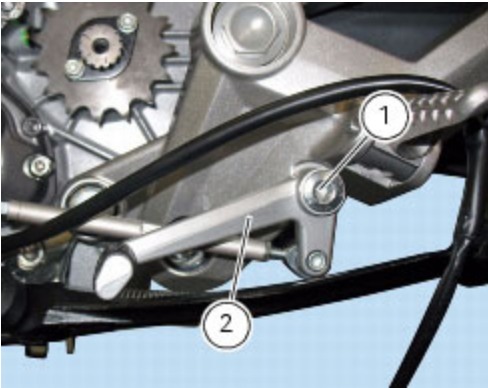


Unscrew and remove the clamp screw (16) securing the gearchange lever (14) to the gear selector shaft. Withdraw the lever (14) complete with the gearchange control assembly.



Note

Mark the position of lever (14) relative to the gear selector shaft.


To remove the lever (14) from the gearchange assembly, remove the bolt (15).

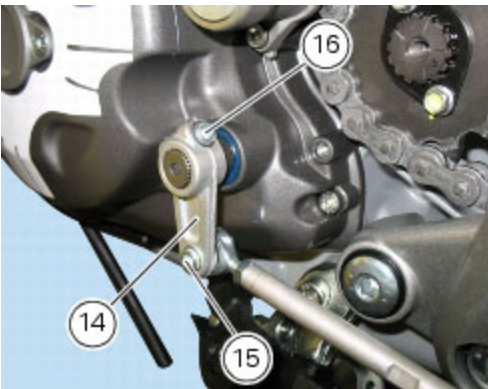

Disassembly of the gearchange mechanism

Refer to the exploded view at the beginning of this section for indications on disassembly and renewal of gearchange components.

If the bush (5) inside the pedal (2) needs replacing, drive the new bush into place using a press. The bush must be seated **2 mm** below the outer face of the pedal.

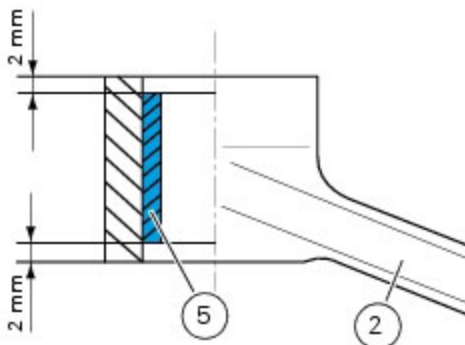

Warning

After working on the gearchange mechanism, check the position of the gear pedal.

To adjust the gearchange pedal position, follow the instructions indicated in Sect. D 4, [Adjusting the position of the gear change and rear brake pedals](#).

Refitting the gearchange mechanism

To refit the gearchange control, reverse the operations of the removal procedure.



Note

Fit new O-rings (**17**) on each reassembly.

In particular, apply threadlocker to the screw (16), pivot bolt (1) and screw (15) and then tighten them to the specified torque (Sect. C 3, [Frame torque settings](#)).

