


4 -Rear wheel

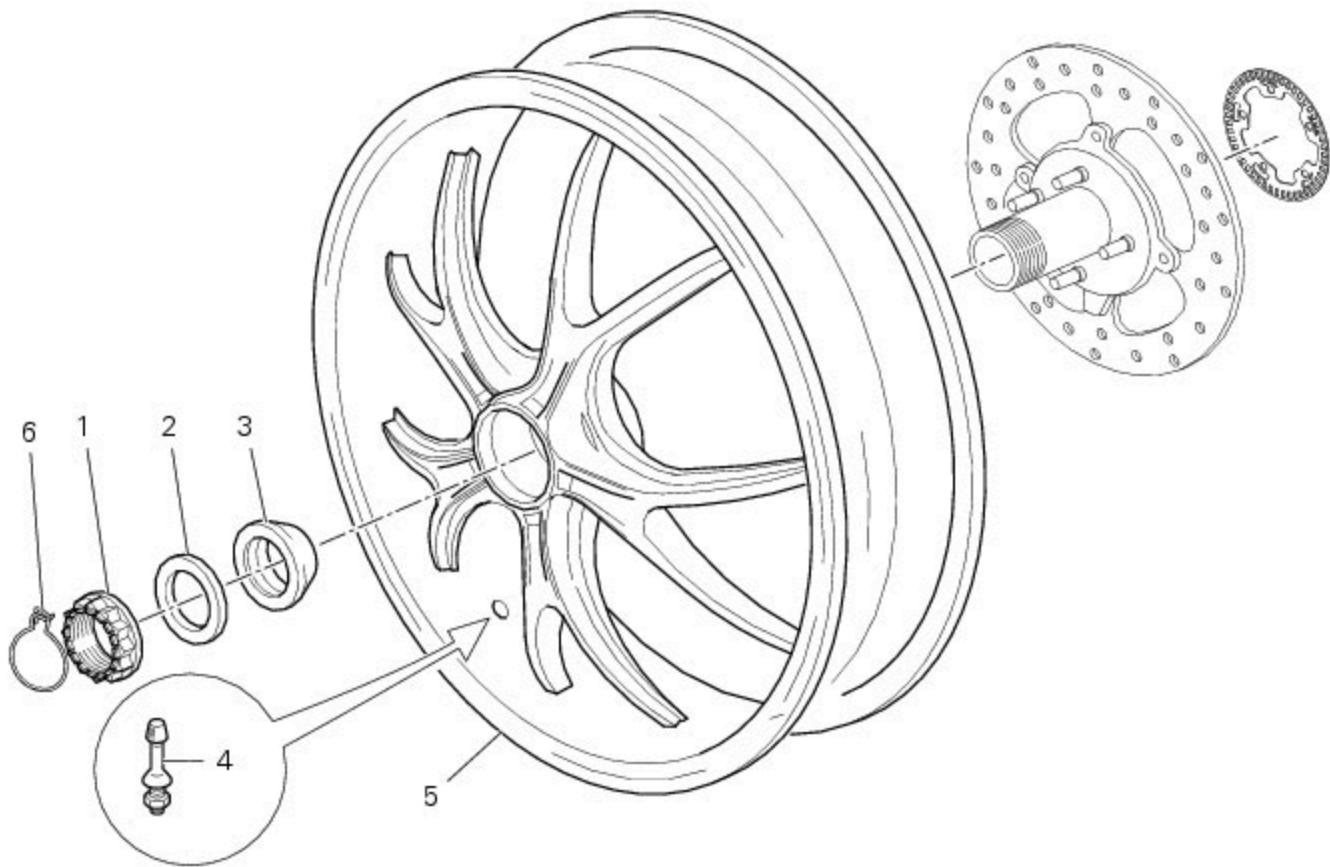

- 1 Right-hand wheel nut
- 2 Washer
- 3 Bush
- 4 Valve
- 5 Wheel
- 6 Circlip

 Spare parts catalogue

1100 ABS [FRONT AND REAR WHEELS](#)
1100 S ABS [FRONT AND REAR WHEELS](#)

Important

Bold reference numbers in this section identify parts not shown in the figures alongside the text, but which can be found in the exploded view diagram.


Removal of the rear wheel

Place the motorcycle on the rear service stand and engage the 1st gear.

Remove the circlip (6) securing the wheel nut.

Using a suitable socket wrench, loosen the wheel nut (1).

Fully unscrew the nut (1), then slide off the washer (2) and the bush (3).

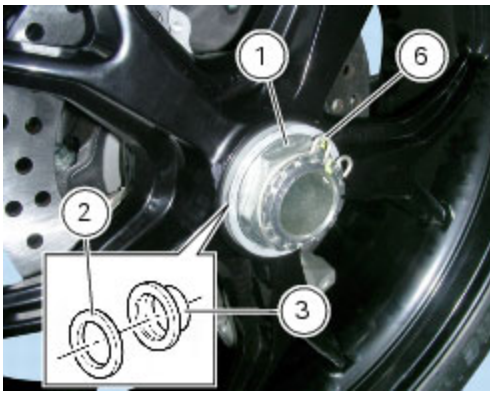

Remove the rear wheel from the motorcycle.

Overhauling the rear wheel


Inspect the condition of the rear wheel.

As the rear wheel has no bearings, it should be supported on the service tool part no. **88713.1073**.



Note

This service tool can also be used to install the wheel on a balancing machine.

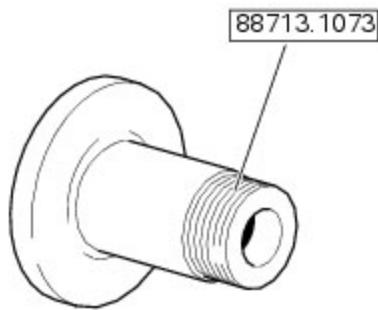

Overhauling the wheel


Inspect the wheel as follows:


Visually inspect the wheel for cracks, scoring and deformation; change the wheel if damaged.

Fit the wheel on service tool no. **88713.1073** using the original fasteners.

Using a dial gauge, appropriately supported, measure wheel rim runout and out-of-round according to the wheel shaft (Sect. C 1.1, [Rear wheel](#)).

If the values measured are not within the tolerance limits, renew the wheel.

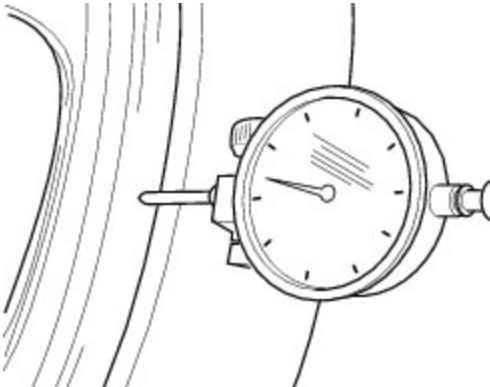

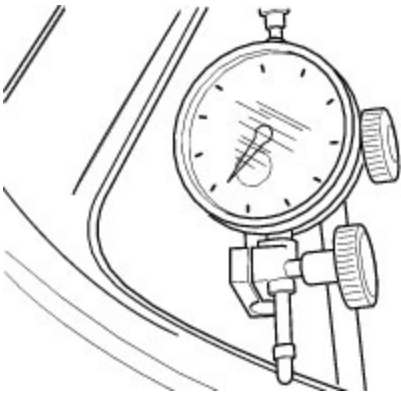


Refitting the rear wheel

Clean the mating surfaces and lubricate the threaded end of the wheel shaft with the recommended grease.
Fit the rear wheel centring it in the shaft and engaging pegs (A) into holes (B) on wheel.



Fit the bush (3) on shaft, setting it with the taper side facing the wheel, fit the washer (2) and insert nut (1) by hand.

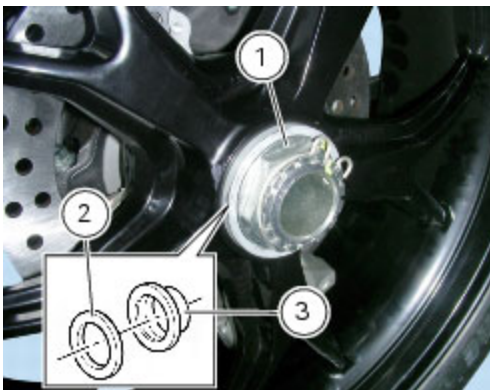


Tighten the nut to the specified tightening torque (Sect. C 3, [Frame torque settings](#)) checking that the hole on the nut is aligned with one of those in the wheel shaft.

Possibly obtain this condition by slightly turning the nut.

Install clip (6) on nut, with the bent end (A) toward the wheel.

Insert clip (6) bent end (A) into nut hole (1) and wheel shaft hole.

Then push circlip (6) inside nut groove (1).

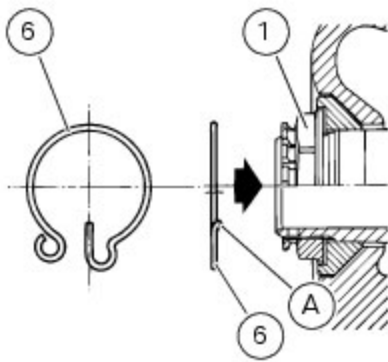

Operation	Section reference
Check the AIR-GAP	G 9.3, Adjusting of the AIR-GAP phonic wheel sensor