


2 -Steering

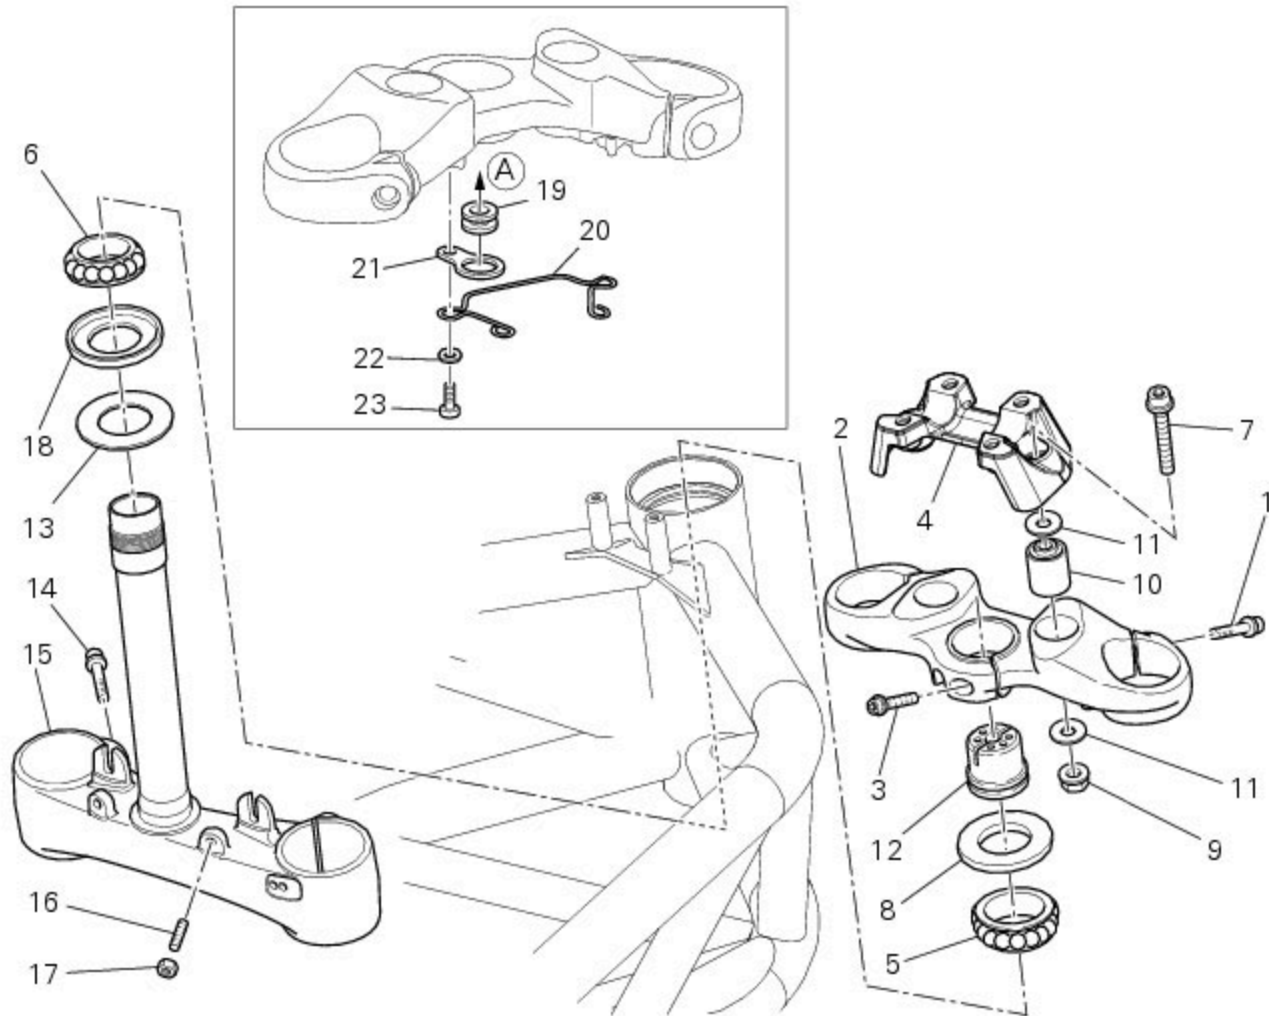

- 1 Screw
- 2 Steering head
- 3 Screw
- 4 Lower U-bolt
- 5 Bearing
- 6 Bearing
- 7 Screw
- 8 Sealing ring
- 9 Nut
- 10 Spacer
- 11 Washer
- 12 Nut
- 13 Washer
- 14 Screw
- 15 Bottom yoke
- 16 Dowel
- 17 Nut
- 18 Sealing ring
- 19 Vibration damper mount
- 20 Guide
- 21 Bracket
- 22 Washer
- 23 Screw

1100 ABS	HANDLEBAR AND CONTROLS
1100 ABS	HEADLIGHT
1100 S ABS	HANDLEBAR AND CONTROLS
1100 S ABS	HEADLIGHT



Important

Bold reference numbers in this section identify parts not shown in the figures alongside the text, but which can be found in the exploded view diagram.


Adjusting the steering head bearings



Note


To adjust the steering bearing clearance, follow what is described in Sect. D 4, [Adjusting the steering head bearings](#).

If the problems found are not solved, check the wear of steering bearings (5) and (6) and replace them, if necessary, as described in paragraph "[Removal of the steering head components](#)" of this section.

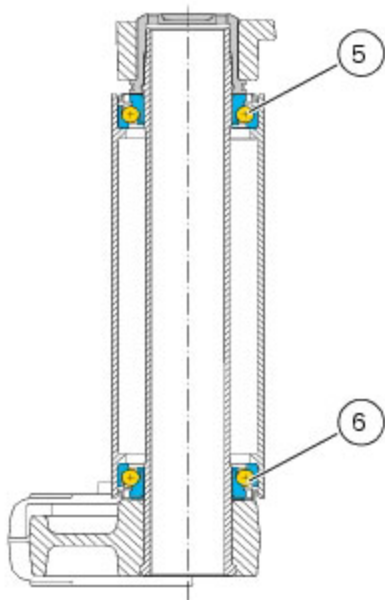

Steering angle adjustment


Loosen the nuts (17) and adjuster screws (16) on both sides of the bottom yoke.

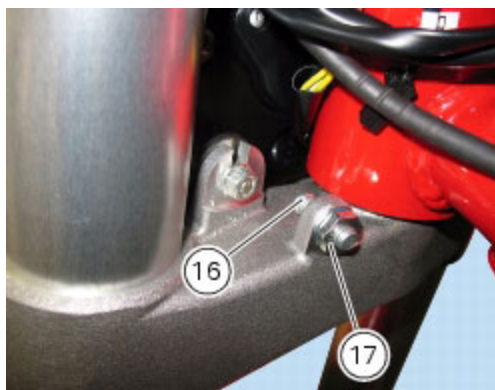

Use a **6** to **6.5** mm spacer (A) fitted to the fork outer tube, or use a gauge.



Turn the front forks to the right until the spacer (A) is seated against the frame top tube.
 Turn the adjuster screw (16) on the opposite side to bring it into contact with the stop on the steering head.
 Apply threadlocker to the thread of nut (17). Hold the adjuster screw (16) firm and tighten the nut (17). Turn the forks to the opposite side; and repeat the process to adjust the other dowel and tighten the relative lock nut.

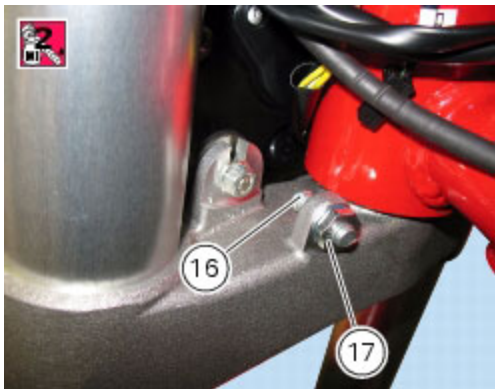

Once adjusted, set handlebar completely turned right and ensure that the gap between front brake line and lower frame trellis is at least **1** mm. If it is not so, decrease steering angle by working the right-hand adjuster.



Removal of the steering head components


Operation	Section reference
Remove the headlight fairing	E 1, Removal of the headlight fairing
Remove the headlight	P 4, Renewal of the headlight
Removal of the front mudguard	E 4, Removal of the front mudguard
Removal of the front wheel	G 1, Removal of the front wheel

Note


All parts fitted to the top and bottom yokes, including the wiring and control cables, can remain on the motorcycle provided they do not hinder the following operations.

Loosen the clamp screws (A) holding the fork legs to the steering head (B).


Loosen the clamp screws (C) securing the fork legs to the bottom yoke (D).
Slide down the fork legs (E) and (F).

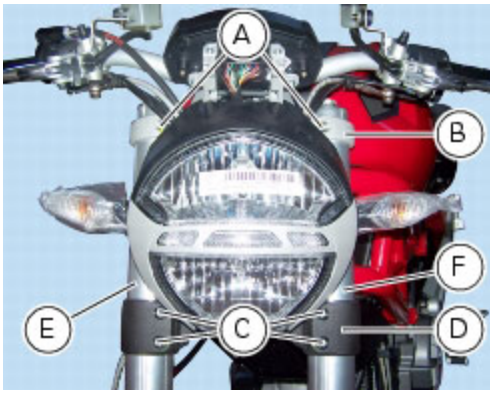


Unscrew and remove the screws (G) securing the top U-bolt (H).
Remove the upper clamp (H).
Remove the handlebar from its seat on the steering head.

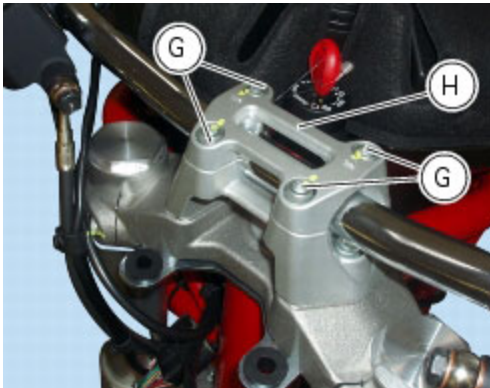

Loosen the screw (3) securing the steering head (2) to the steering head nut (12).
Remove the steering head (2).

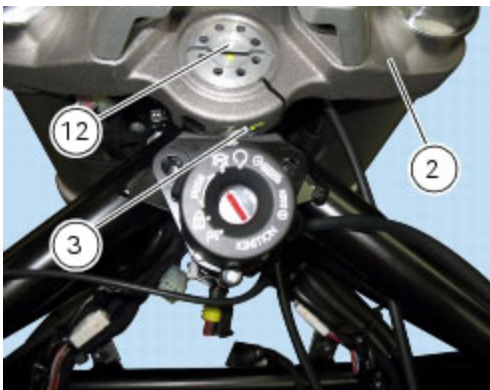


With the service tool no. **88713.1058** loosen the nut (12) and unscrew it from the steering shaft.
Slide the sealing ring (8), the inner ring (L) and the ball race (M) of the upper bearing (5) off the steering shaft.

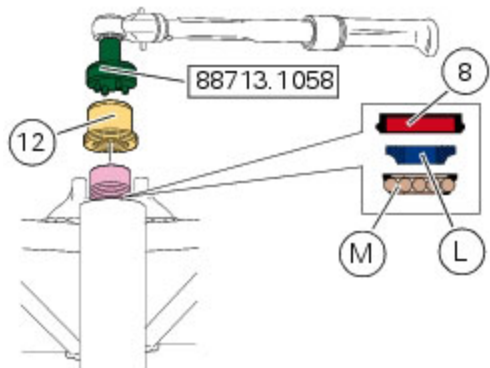

Remove the bottom yoke (15) complete with the steering shaft from the frame tube.

Remove the ball race (M) of the lower bearing (6).

The inner race (L) of the lower bearing (6) and the relative oil sealing ring (18) will remain on the steering shaft.

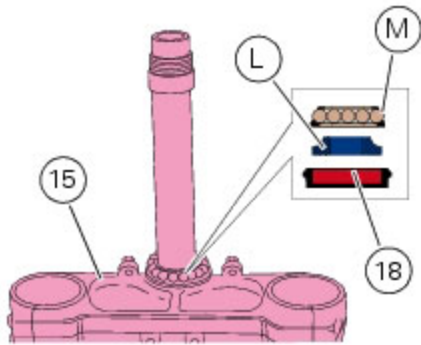


Using a universal puller (see figure) remove the inner race (L) and the spacer (13) from the steering shaft, taking care not to damage the seat.



Important



Once disturbed, the oil seals (8) and (18) and bearings (5) and (6) must not be refitted.

Using a suitable drift, remove the outer bearing races (N) from the steering head. Proceed with extreme care to avoid damaging the seats.

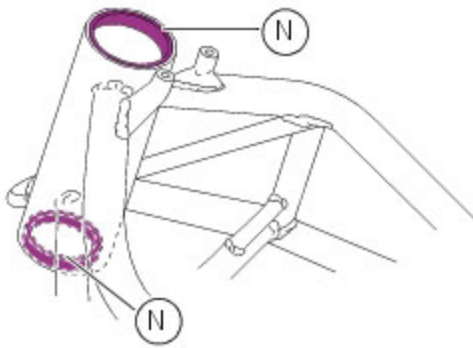


Disassembly of the steering head

While holding the nuts (9), unscrew and remove the screws (7), washers (11) and the lower clamp (4) from the steering head.

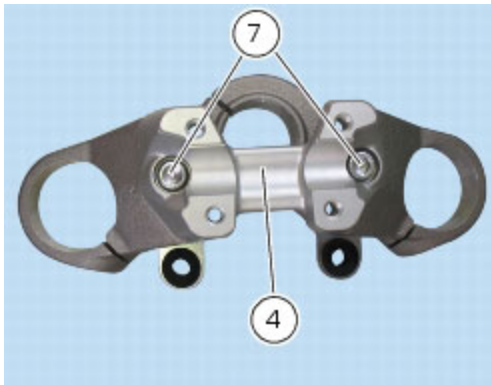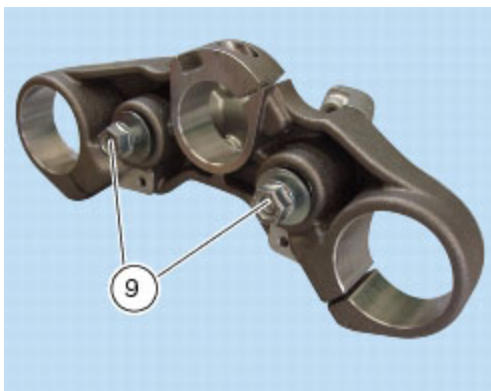


Unscrew the screws (23) and remove the guide (20).
Recover the washers (22) and the headlight support bracket (21).

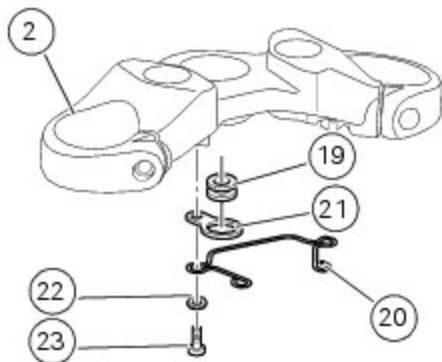

Reassembly of the steering head


If the spacers (10) were removed from the steering head, lubricate with silicone spray.
Seat the spacers (10) in the bores (O) in the steering head orienting them as shown in the figure.

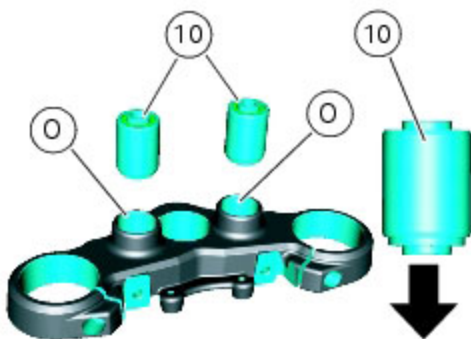


Important

To drive in the spacers (10), use a drift that bears only on the outer ring (P) while counterholding zone (Q) on the underside of the steering head.



On completion of the operation, clean all excess lubricant from the components.

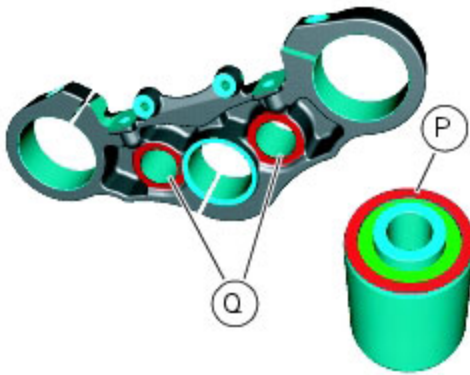

Fit the rubber mountings (19) on the headlight support brackets (21).
Fit the headlight support brackets (21), the guide (20) and the washers (22) with the screws (23).
Tighten the screws (23) to the specified torque (Sect. C 3, [Frame torque settings](#)).

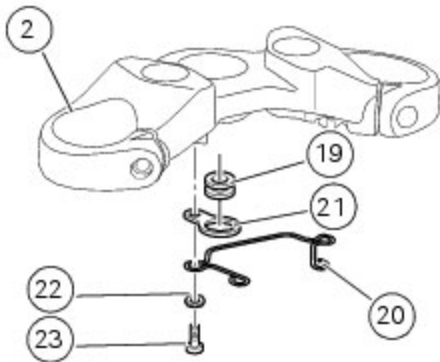

Locate the lower clamp (4) on the steering head.
Fit the screws (7) complete with the washers (11) in the lower clamp (4).
Tighten the screws (7) to the specified torque (Sect. C 3, [Frame torque settings](#)) while holding the nuts (9).

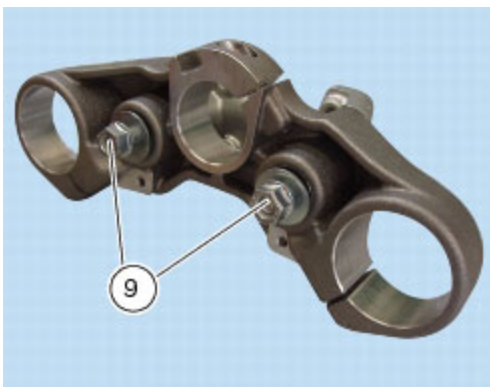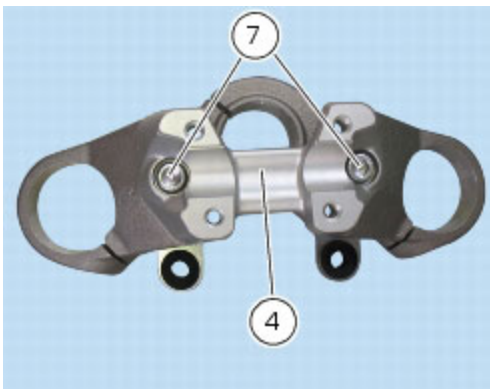


Refitting the steering head components

Important


The steering head bearings (5) and (6) are identical but in no case may their components be swapped around during reassembly.

Clean all contact surfaces and lubricate with the recommended grease.

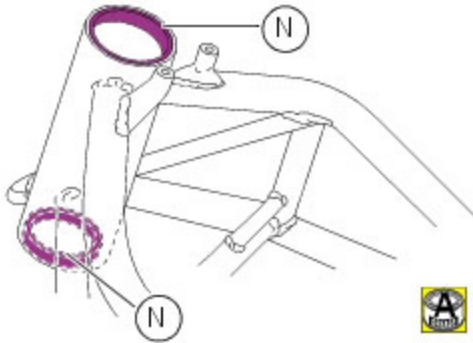

To fit the outer rings (N) of the bearings (5) and (6) to the steering head, use the service tool no. **88713.1062**; and proceed as follows:

- heat the steering head to **150 °C**;
- fit the outer races (N) in their seats on the steering head;
- fit the fixed bush (R, with threaded hole) of the tool into the lower race;
- fit the other movable bush (S) into the upper end of the tool and drive it fully home against the upper bearing race;
- tighten the nut (T) and use a wrench to seat the outer rings (N) fully in the steering head;
- leave the tool assembled until the steering head has cooled down to ensure that bearings are properly seated.

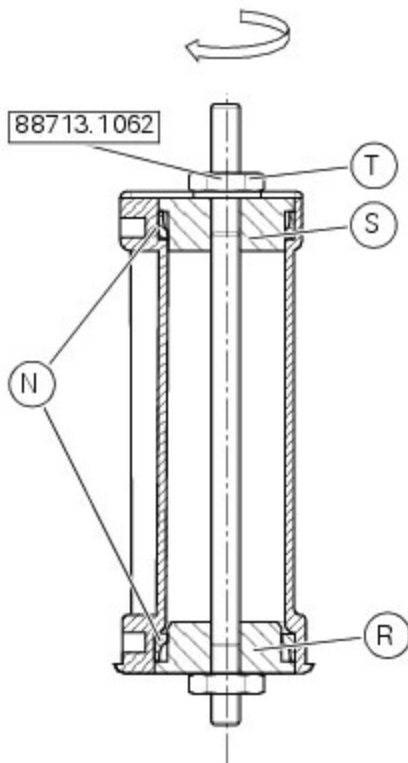


Insert the washer (13), sealing ring (18) (with the rim facing upwards) and inner ring (L) of bottom bearing (6) onto the steering shaft after heating it for about 10 minutes to **120 °C**.

Fit tool no. **88713.1072** into the steering shaft. Push the inner bearing race (L) onto the sealing ring (18), manually pushing for at least 10-15 seconds.

Lubricate the inner bearing race (L) with the recommended grease.

Fit the ball race (M) on the steering shaft with the smaller diameter of the cage facing upwards and grease the ball race.

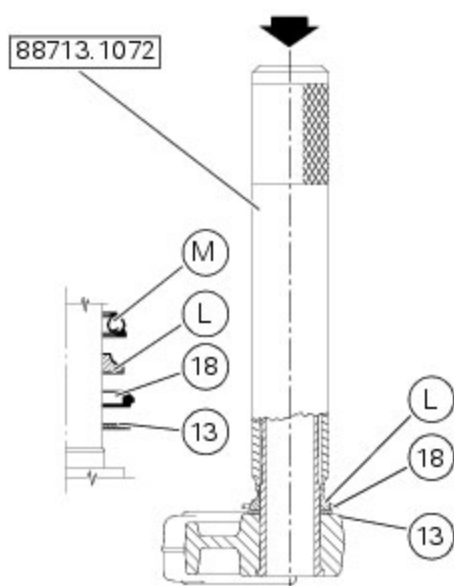


Insert the steering shaft in steering head and push it in until it is axially seated.

Fit the bottom yoke assembly to frame.

Grease the ball race (M) and fit it to outer race (C) of the top bearing.

Fit the inner ring (L) of the upper bearing (5) to the steering head, with the larger diameter side of the race facing upwards.

Install the sealing ring (8) with the flat side facing upwards.

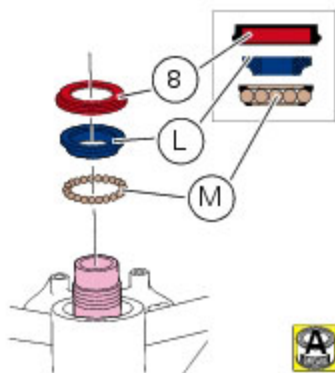


Grease the nut (12).

Tighten the steering shaft nut (12) by hand until it seats against the oil sealing ring (8).

Fit service bush no. **88713.1058** to the steering shaft nut (12) and fit the torque wrench to the bush.


Tighten the set ring nut (12) to the specified torque (Sect. C 3, [Frame torque settings](#)).

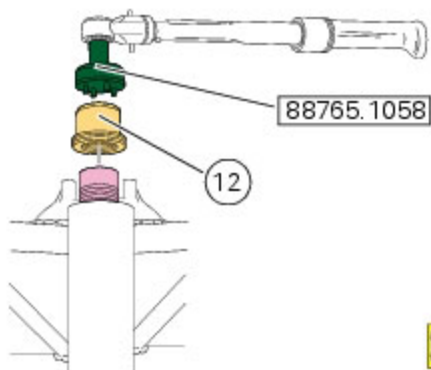

Fit the steering head (2) on the steering head nut (12), aligning the fork leg bores with the corresponding bores on the bottom yoke. Relocate the fork legs as described in Sect. G 2, "[Refit the front fork \(1100 ABS\)](#)" or "[Refitting the fork \(1100S ABS\)](#)".

Grease the screw (3).

Tighten the screw (3) on the steering head to the specified torque (Sect. C 3, [Frame torque settings](#)).

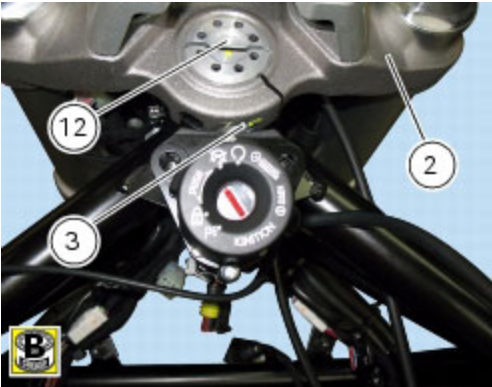


Apply the recommended grease to the threads and undersides of the heads of the screws (G).

Important

Set the upper U-bolt (H) so that arrows are pointing to the tank.

Refit the upper u-bolt (H) and insert the screws (G).

Tighten the screws (G) to the specified torque (Sect. C 3, [Frame torque settings](#)), applying sequence 1-2-3-4-1-2, as indicated in the figure.

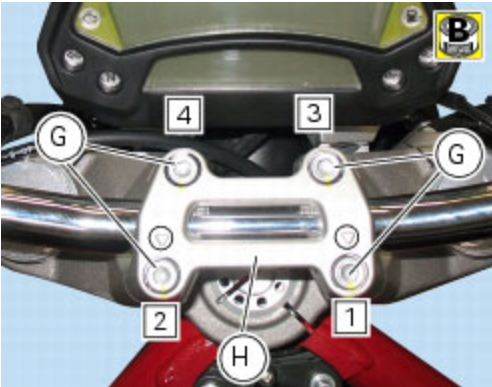

Operation	Section reference
Refit the front wheel	G 1, Refitting the front wheel
Refit the front mudguard	E 4, Refitting the front mudguard
Refit the headlight	P 4, Renewal of the headlight
Refit the headlight fairing	E 1, Refit the headlight fairing