


10 Evaporative emissions canister

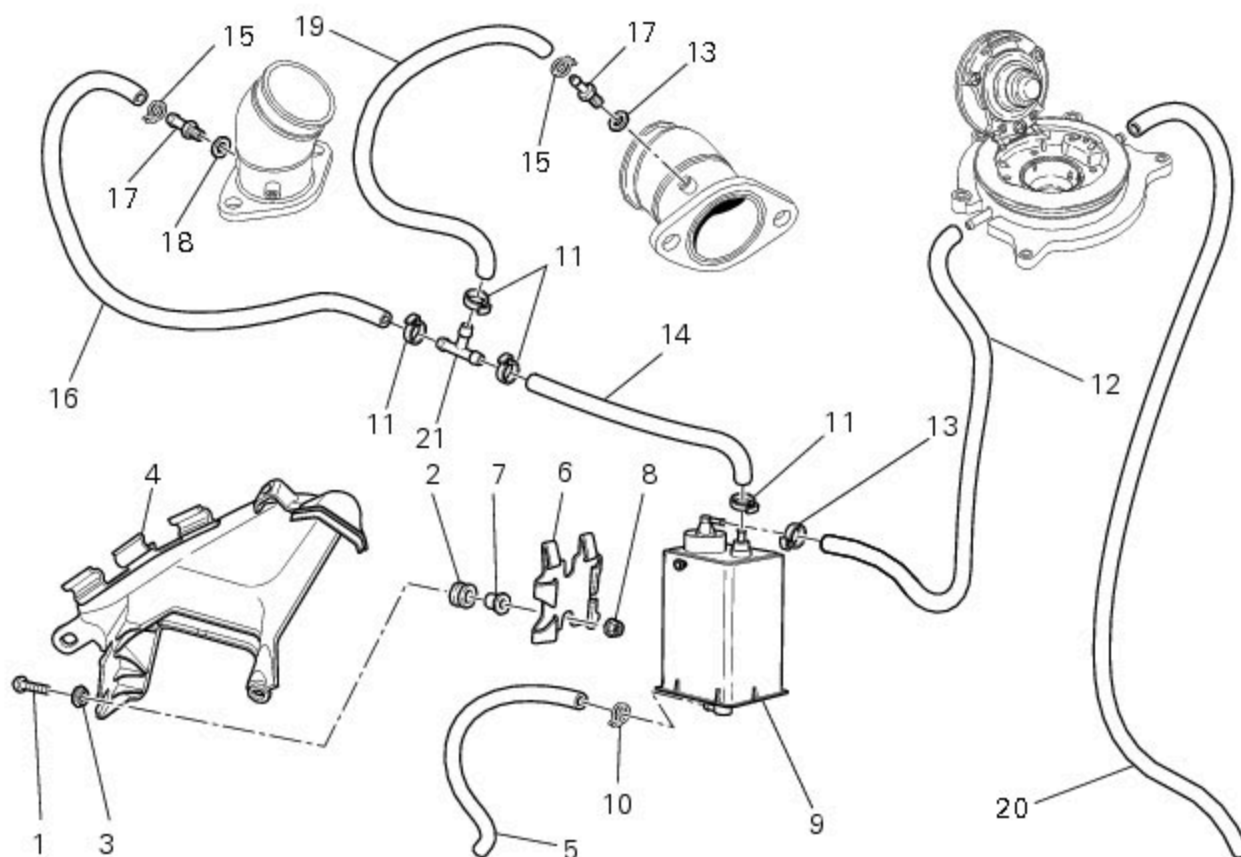

- 1 Screw
- 2 Rubber pad
- 3 Spacer
- 4 LH air deflector
- 5 Hose
- 6 Plate
- 7 Spacer
- 8 Nut
- 9 Evaporative emissions canister
- 10 Hose clip
- 11 Hose clip
- 12 Filter/oil reservoir hose
- 13 Hose clip
- 14 Union/filter pipe
- 15 Hose clip
- 16 Hose
- 17 Union
- 18 Aluminium gasket
- 19 Hose
- 20 Breather hose
- 21 Tee fitting

 Spare parts catalogue

1100 ABS [EVAPORATIVE EMISSIONS CANISTER](#)
1100 S ABS [FUEL TANK](#)
1100 S ABS [EVAPORATIVE EMISSIONS CANISTER](#)


Important

Bold reference numbers in this section identify parts not shown in the figures alongside the text. Refer to the exploded view diagram.

Evaporative emissions canister system (USA versions only)

USA models are equipped with an additional system with an evaporative emissions canister that prevents fuel fumes from being discharged into the atmosphere.

The hose (12) is connected to the evaporative emissions canister (9); when the fuel has been filtered, it is returned through the hose (14) to the intake manifolds via the hoses (16) and (19). Hoses (5) and (**25**) vent to the ground. For correct positioning of the connection hoses see the pictures below.

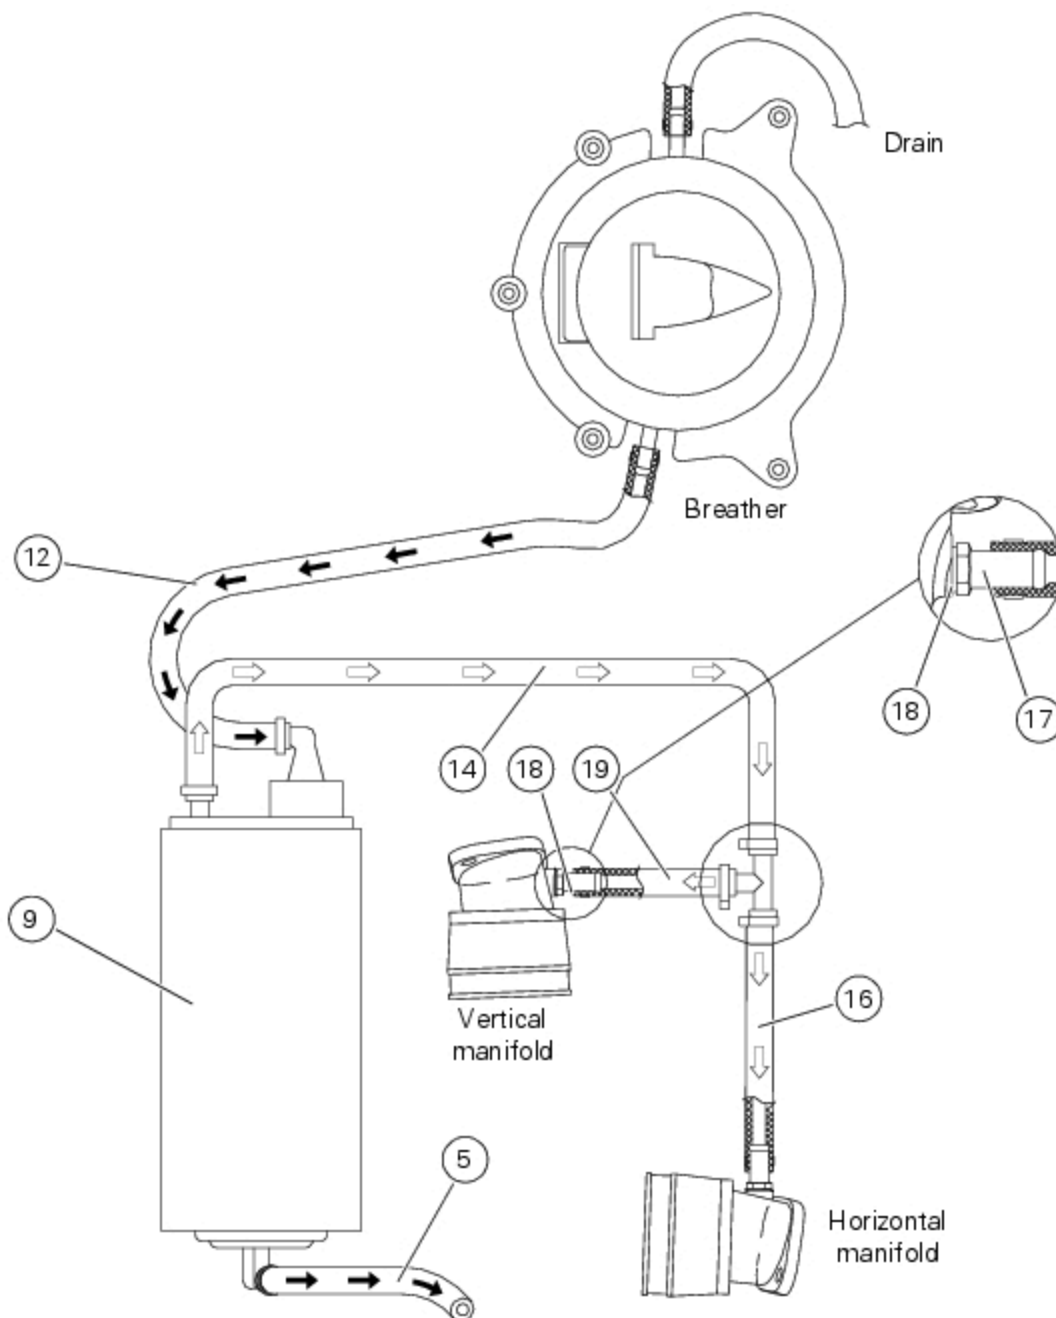


Removal of the evaporative emissions canister

Operation	Section reference
-----------	-------------------

Remove the seat	E 3, Removal of the seat
Remove the tank covers	E 2, Removal of the fuel tank fairings
Raise the fuel tank	L 2, Removal of the fuel tank


Disconnect the hose (12) connecting the evaporative emissions canister (9) to the fuel filler cap. Release the hose (12) from the drain hose (20) by removing the strap (A).


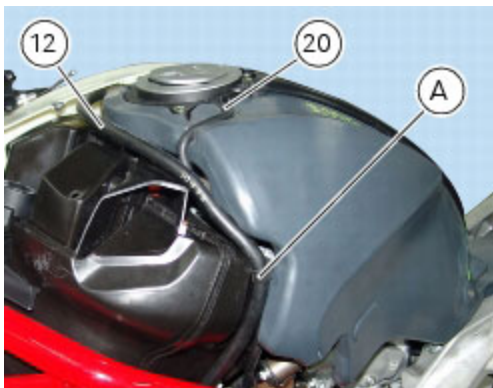


Loosen the hose clamps (15) connecting the canister (9) to the horizontal and vertical cylinders.




Undo the screws (B) and remove the LH air deflector (4), taking care to release the clutch hose (C) from the clips.

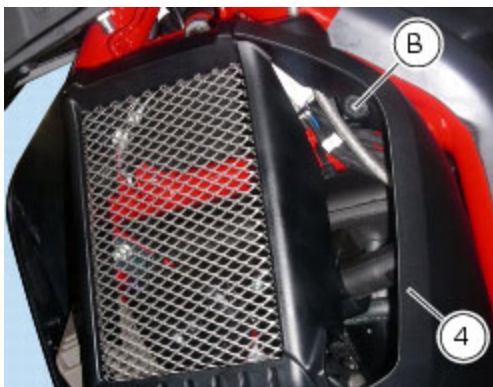

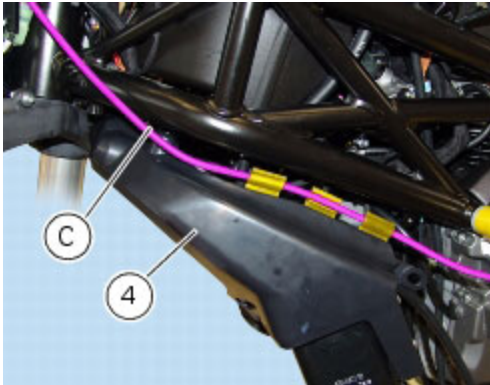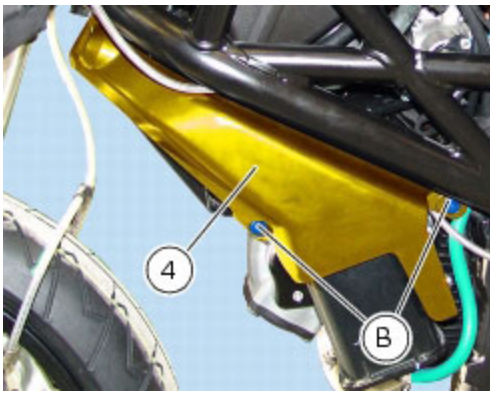



Remove the canister (9) from the LH deflector (4) by releasing it from the plate (6).

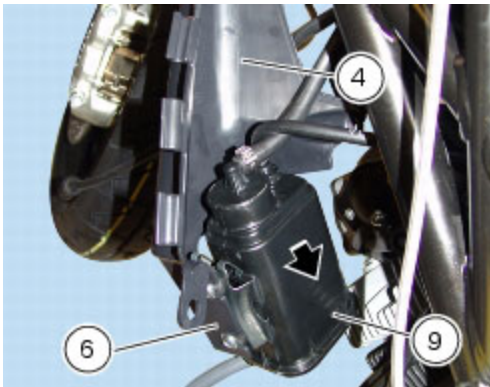

Refitting the evaporative emissions canister


Refitting is the reverse of removal; paying attention to tighten the screws (B) to the specified torque (Sect. C 3, [Frame torque settings](#)).

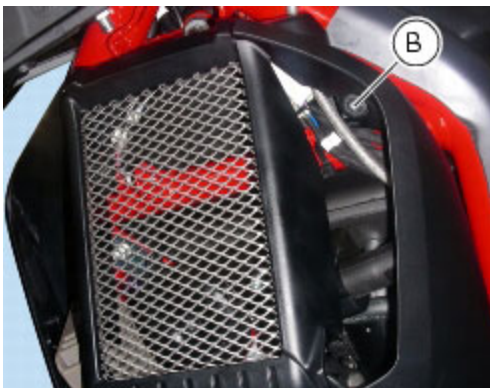


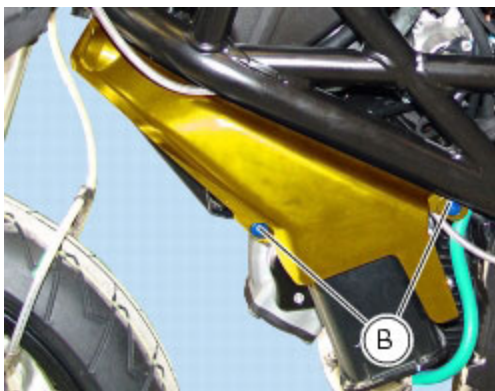


Operation	Section reference
Refit the fuel tank	L 2, Refitting the fuel tank
Refit the tank covers	E 2, Refitting the fuel tank fairings
Refit the seat	E 3, Refitting the seat


Positioning the hoses, clamps and evaporative emissions canister

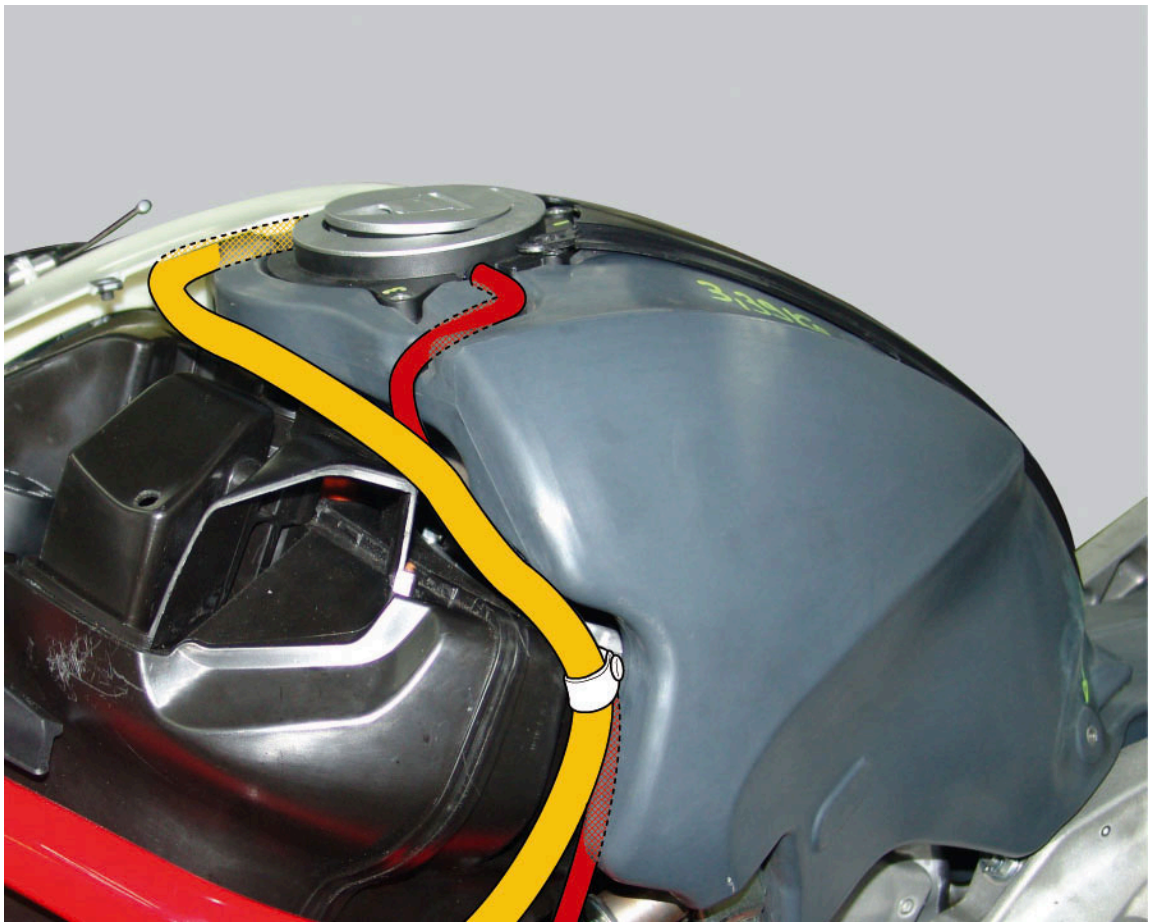

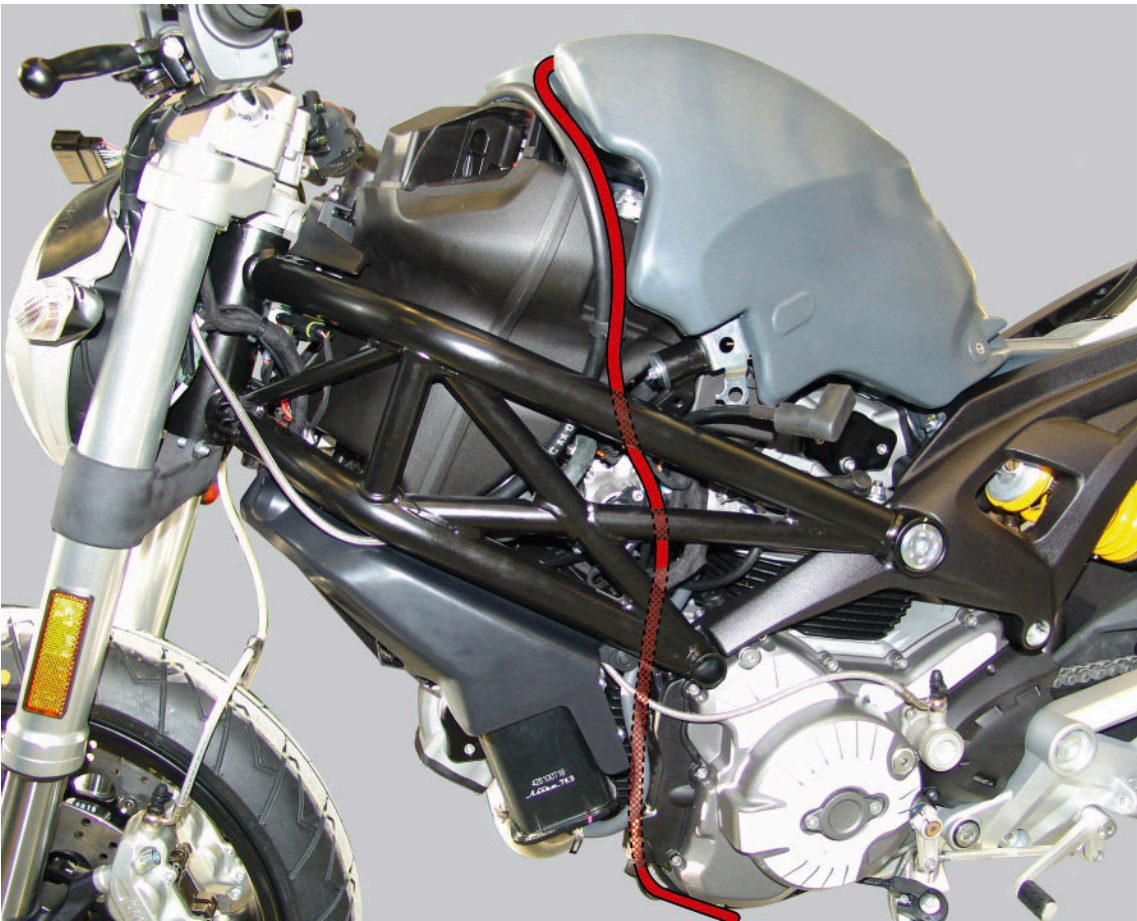

Positioning the hoses, clamps and evaporative emissions canister

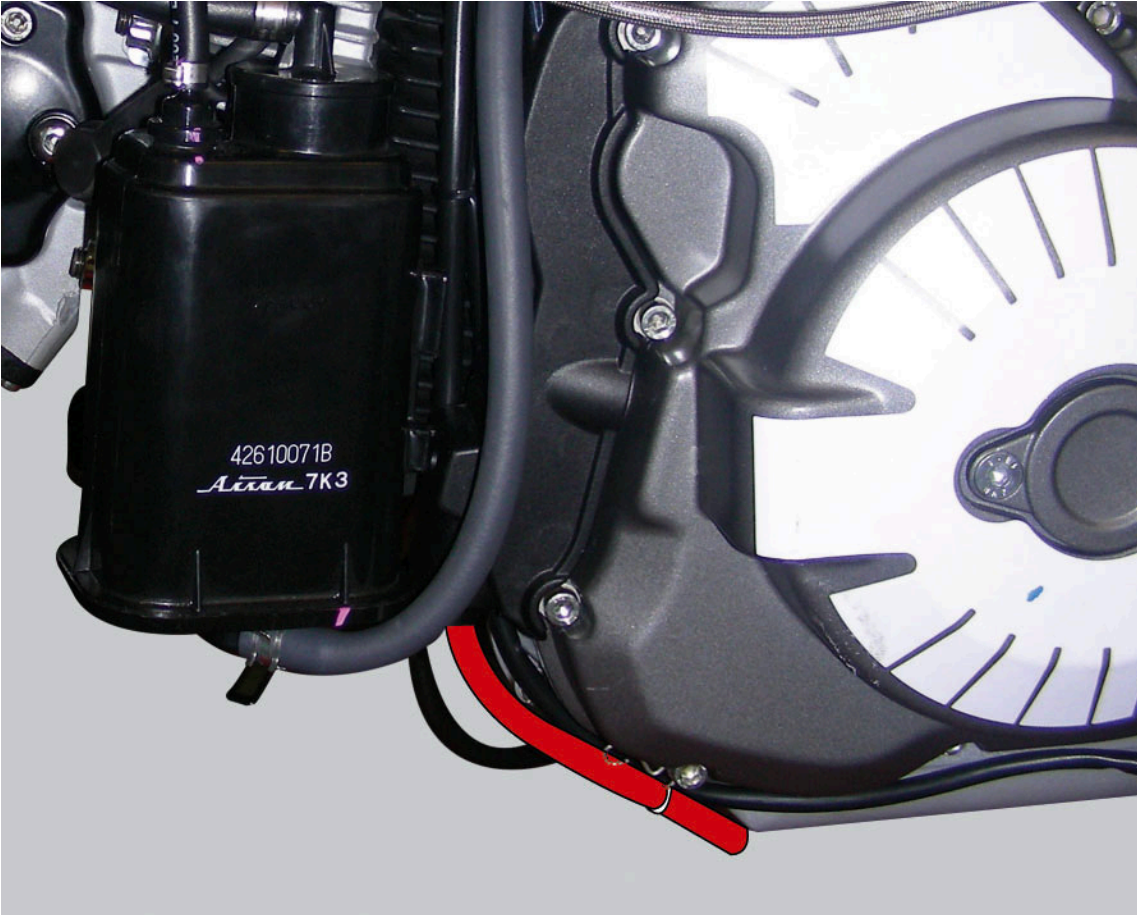

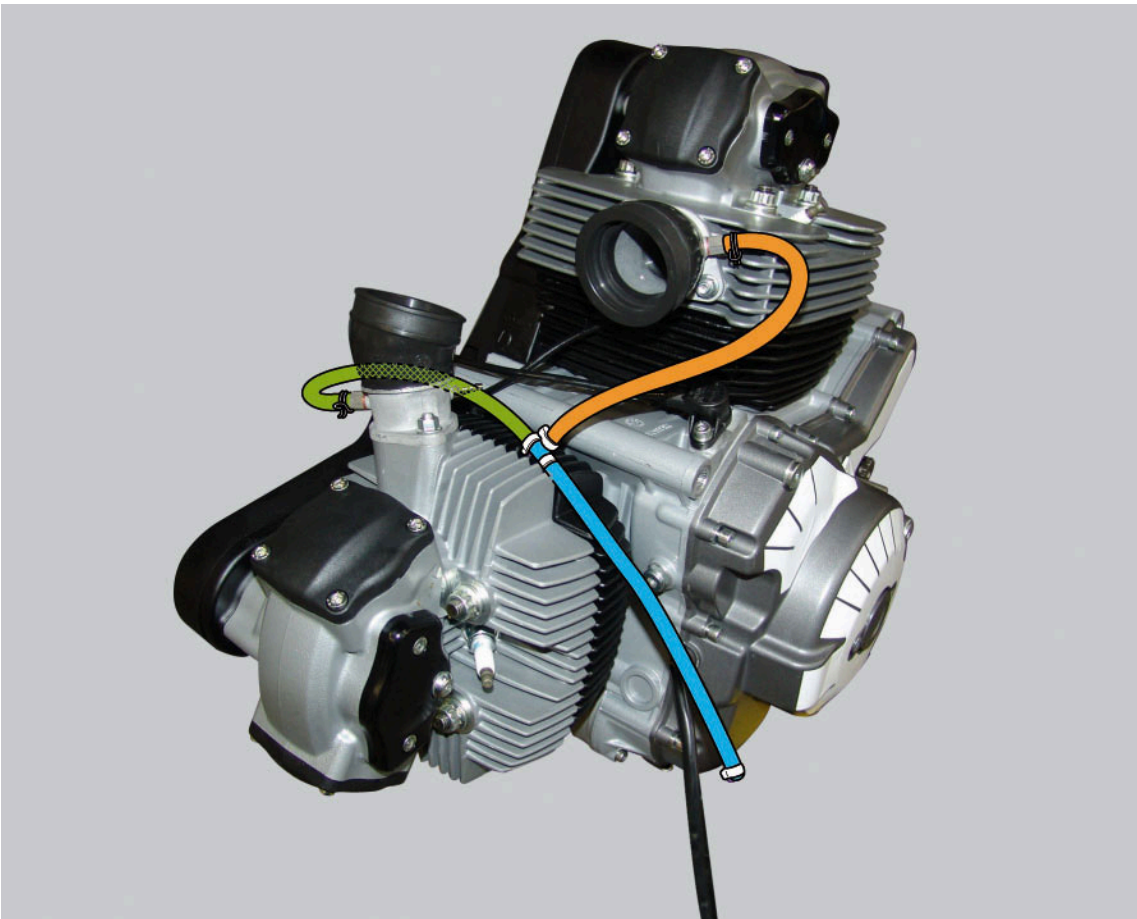

Positioning the hoses, clamps and evaporative emissions canister

