


1 -Wiring diagram

[WIRING DIAGRAM](#) 

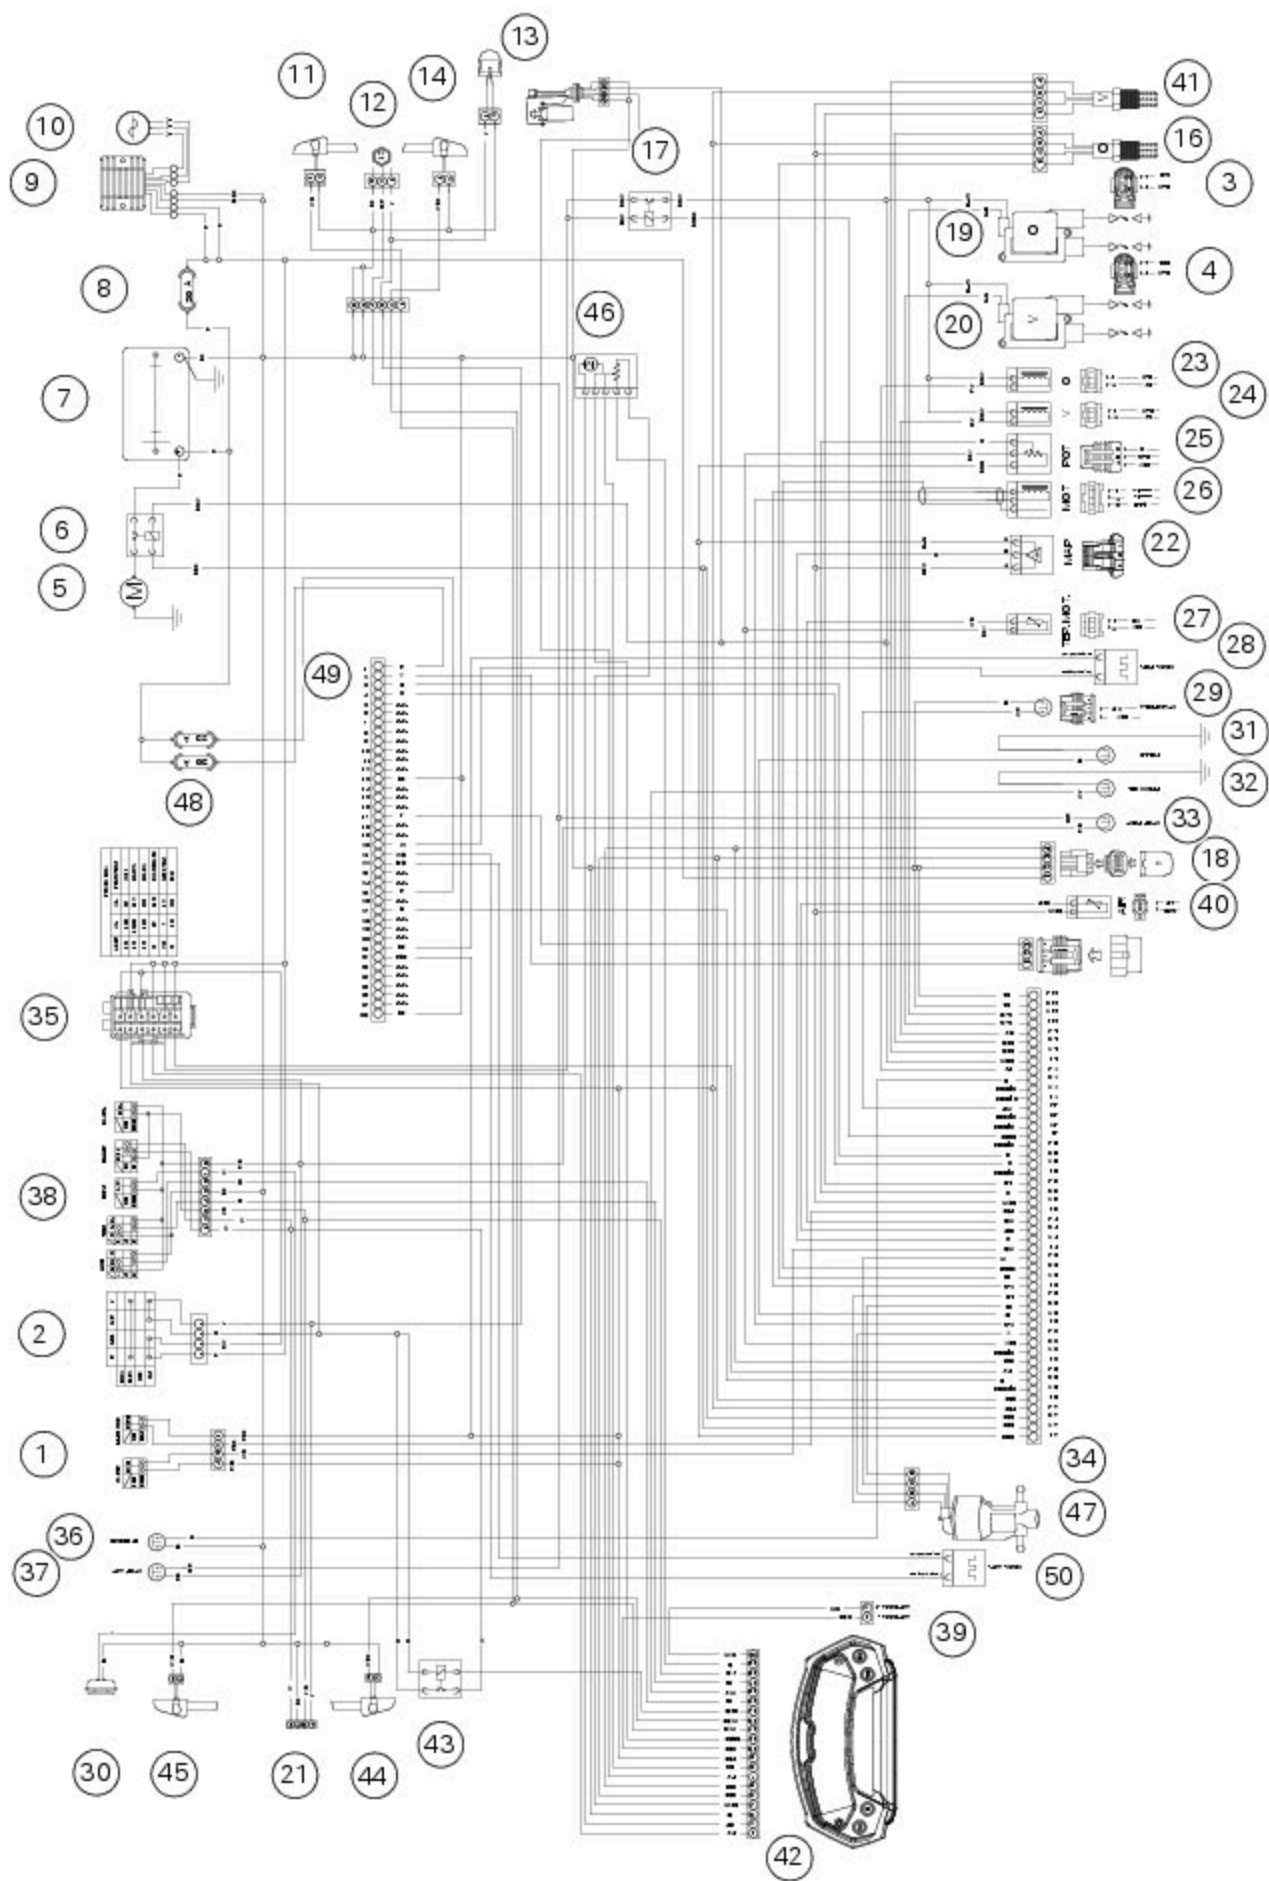

Key to wiring diagram


- 1 Right-hand handlebar switch
- 2 Ignition switch
- 3 Horizontal cylinder spark plug
- 4 Vertical cylinder spark plug
- 5 Starter motor
- 6 Solenoid starter
- 7 Battery
- 8 Main fuse
- 9 Regulator
- 10 Generator
- 11 RH rear turn indicator
- 12 Tail light
- 13 Number plate light
- 14 LH rear turn indicator
- 15 Fuel tank
- 16 Horizontal cylinder exhaust lambda sensor
- 17 Injection relay
- 18 Self-diagnosis/DDA
- 19 Horizontal cylinder coil
- 20 Vertical cylinder coil
- 21 Headlight
- 22 MAP sensor
- 23 Horizontal cylinder injector
- 24 Vertical cylinder injector
- 25 Throttle position sensor
- 26 Timing/rpm sensor
- 27 Cylinder temperature sensor
- 28 Rear speed sensor
- 29 Side stand
- 30 Horn
- 31 Neutral switch
- 32 Oil pressure switch
- 33 Rear stop switch
- 34 ECU
- 35 Fuses
- 36 Clutch switch
- 37 Front stop switch
- 38 Left-hand handlebar switch
- 39 Transponder antenna
- 40 Air temperature sensor
- 41 Vertical cylinder exhaust lambda sensor
- 42 Instrument panel
- 43 Light relay
- 44 LH front turn indicator
- 45 RH front turn indicator
- 46 Valve motor
- 47 Stepper motor
- 48 ABS fuses
- 49 ABS ECU
- 50 Front speed sensor

Wiring diagram colour codes

- B** Blue
- Bk** Black
- Bn** Brown
- G** Green
- Gr** Grey
- Lb** Light blue
- O** Orange
- P** Pink
- R** Red
- V** Violet
- W** White

Y Yellow

Key to fuse box

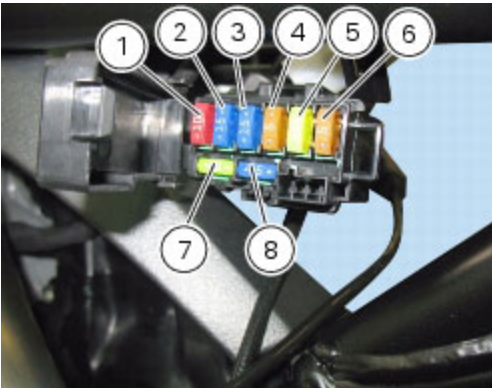

Position	Consumer	Rating
1	Key ON	10 A
2	Side lights, high/low beam	15 A
3	El. item	15 A
4	Instrument panel	5 A
5	Injection	20 A
6	ECU	5 A
7	Spare	20 A
8	Spare	15 A

Routing of wiring on frame

The routing of the wiring has been optimised to ensure the minimum obstruction. Each section is designed to prevent interference with parts that might damage wires or cause operating failures when riding. The plates on the following pages show the origins ("0" points) for correct re-routing of wiring and the locations of cable ties.

Each figure includes references to the plates showing the wiring routing or the item to which it must be connected.

Position		Description
1	Table A	Main wiring branch
2	Table B/ Table C	Left-hand handlebar switch connector
3	Table B	Clutch connector
4	Table B/ Table C	Clutch wire
5	Table B	Front brake light connector
6	Table B/ Table C	Right-hand handlebar switch connector
7	Table B/ Table C	Front brake light wire
8	Table B	Immobilizer antenna connector
9	Table B	Key switch connector
10	Table B	Immobilizer antenna wire
11	Table B	Key-switch
12	Table D	Front right turn signal connector
13	Table D	Front left turn signal connector
14	Table D	Headlight connector
15	Table D	Instrument panel connector
16	Table E	Vertical cylinder injector connector

17	Table E	Air/temperature sensor
18	Table E	Horizontal cylinder injector connector
19	Table F	Engine earth
20	Table F	Side stand connector
21	Table F/Table P	Battery negative terminal
22	Table F/Table P	Side stand wire
23	Table H	Alternator cable
24	Table G	Horn connector
25	Table H/Table E	Regulator/alternator connector
26	Table H/Table E	Regulator/main wiring harness connector
27	Table H/Table E	Voltage regulator
28	Table J/Table F	Potentiometer connector
29	Table K	Horizontal cylinder coil connector
30	Table L	Horizontal cylinder exhaust lambda sensor
31	Table L	Horizontal exhaust lambda sensor connector
32	Table L	Vertical exhaust lambda sensor connector
33	Table L	Fuel tank flange connector
34	Table L	Vertical cylinder exhaust lambda sensor
35	Table M	Data acquisition (DDA) connector
36	Table N	Rear wiring harness connector
37	Table N	Number plate light connector
38	Table N	Rear left turn signal connector
39	Table N	Right rear turn signal connector
40	Table N	Rear brake light connector
41	Table O	Fuse box
42	Table O	Throttle pressure/vacuum sensor
43	Table P	Contactor/battery positive terminal cable
44	Table P	Injection/lights relay
45	Table P	ECU connector
46	Table P	Vertical cylinder coil connector
47	Table P	Starter contactor connector
48	Table Q/Table R	Vertical cylinder temperature sensor
49	Table R/Table Q	Pickup connector
50	Table R	Pick-up sensor
51	Table P	Solenoid/starter motor cable
52	Table S	Oil pressure switch connector
53	Table T	Neutral cable switch connection
54	Table U	Rear brake light sensor connector
55	Table U	Rear speed sensor connector
56	Table U	Rear speed sensor
57	Table E	Stepper motor
58	Table M	Exhaust valve motor connector
59	Table V	Front speed sensor connector
60	Table V	Front speed sensor cable (see Sect. G 9.2, Flexible wiring/hoses positioning)
61	Table M	ABS diagnosis
62	Table M	ABS diagnosis

63	Table P	ABS ECU connector
64	Table P	Regulator fuse and ABS fuses
65	Table P	ABS Positive
66	Table P	ABS Negative